

BTMS Installation Instructions

BTMS 安装说明

1、Installation requirements for BTMS on vehicles


- 1) The coolant needs to be vacuumed and filled;
- 2) The placement direction of BTMS should not exceed 10° relative to the horizontal line;
- 3) BTMS needs to be grounded firmly;
- 4) Avoid throwing mud at the installation location. If unavoidable, protective measures need to be taken;
- 5) Ensure that the air inlet and outlet of the BTMS are clear to avoid affecting performance;
- 6) Avoid putting your fingers into the fan under any circumstances to prevent personal injury from sudden start of the fan.

1、BTMS 在车辆上的安装要求


- 1) 冷却液需抽真空加注；
- 2) BTMS 放置方向相对水平线，不得超过 10° ；
- 3) BTMS 需接地牢靠；
- 4) 安装位置避免甩泥，如无法避免则需要做好防护；
- 5) 确保 BTMS 进出风口畅通，以免影响性能；
- 6) 任何情况下避免手指伸入风扇内，防止风机突然启动造成人身伤害。

2、Installation steps of BTMS on vehicles

- 1) Place the BTMS in the installation position of the vehicle. It is recommended to install the BTMS in an unsealed compartment. The air inlet and outlet should be smooth, and the exhaust should face outward. It should not be completely shielded by other components. When there is a hatch door, it is necessary to arrange an exhaust grille on the hatch door;
- 2) Use M10 bolts (double nuts and washers) to fix BTMS to vehicle bracket, and tighten the double nuts based on 20% compression of rubber pad;

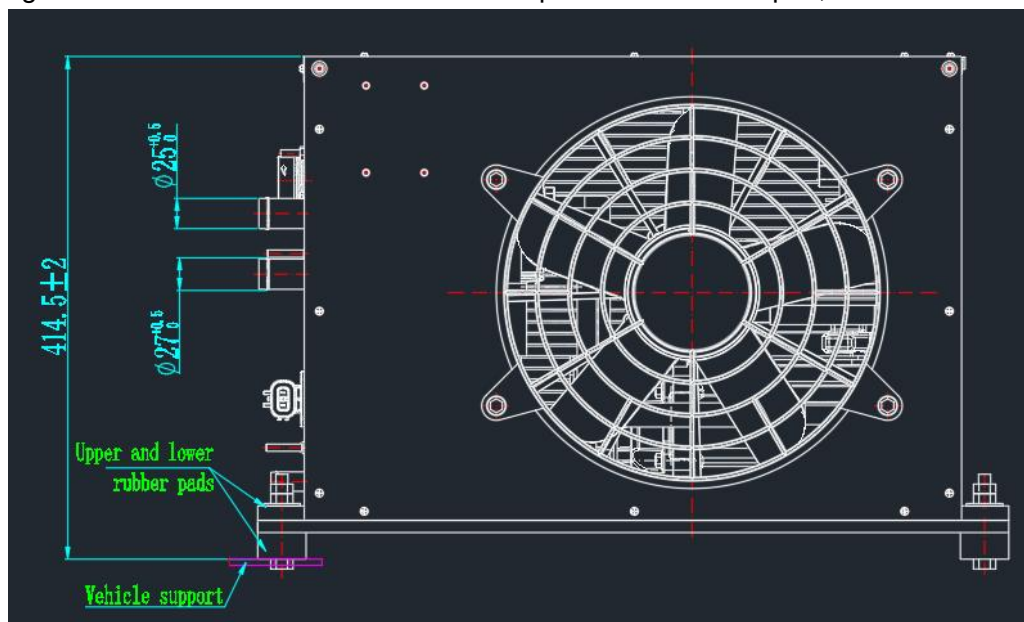

- 3) Connect the water inlet and outlet pipe according to the drawing;
- 4) Connect the BTMS grounding bolt according to the drawing;
- 5) Connect high and low voltage harnesses according to drawings;

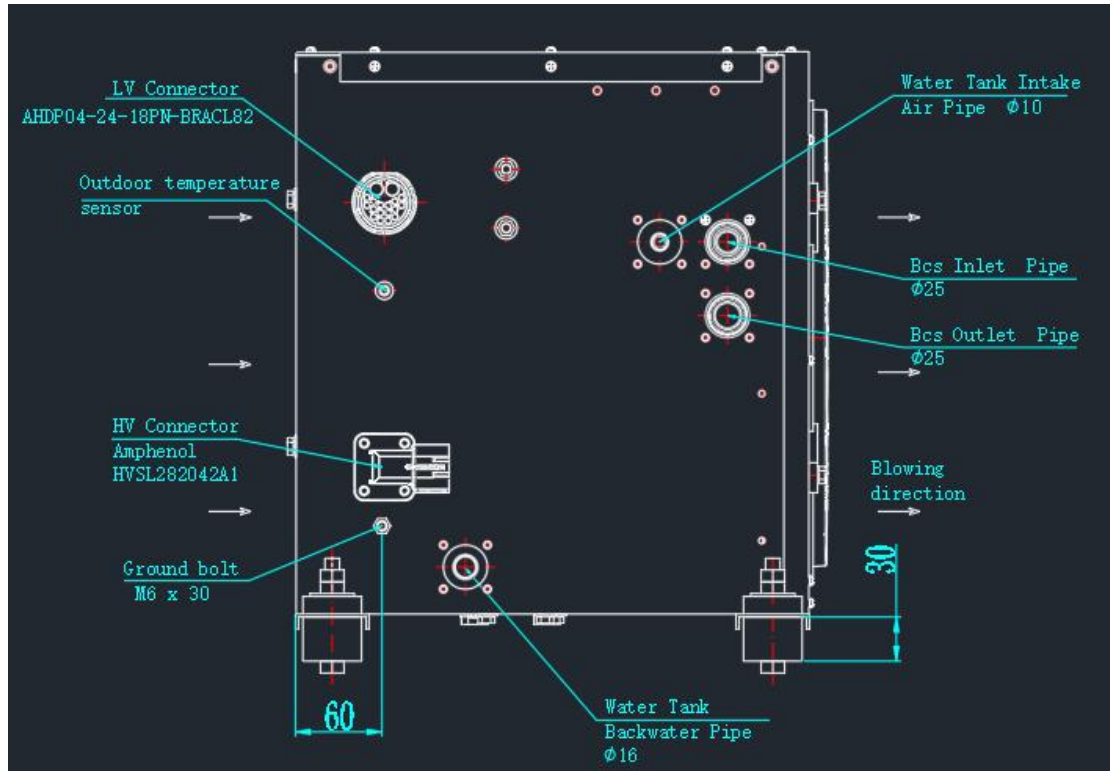


- 6) Conduct commissioning according to vehicle control.


2、BTMS 在车辆上的安装步骤

1) 将 BTMS 放置到车辆的安装位置，建议安装在非密封舱体内，进出风顺畅，排风朝向外侧，不能被其他部件完全遮挡。有舱门时需要在正对排风处舱门上开格栅；

2) 使用 M10 的螺栓（双螺母、垫片）将 BTMS 固定到车辆支架上，以橡胶垫压缩 20% 为准紧固双螺母；

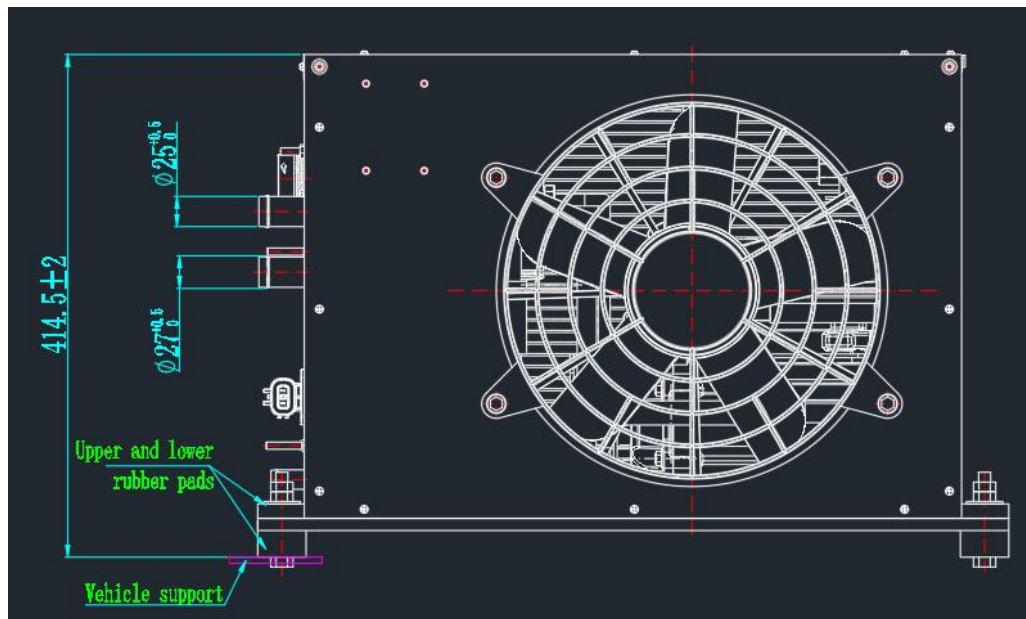

- 3) 按照图纸连接进出水管;
- 4) 按照图纸连接 BTMS 接地螺栓 (M6);
- 5) 按照图纸连接高低压线束;

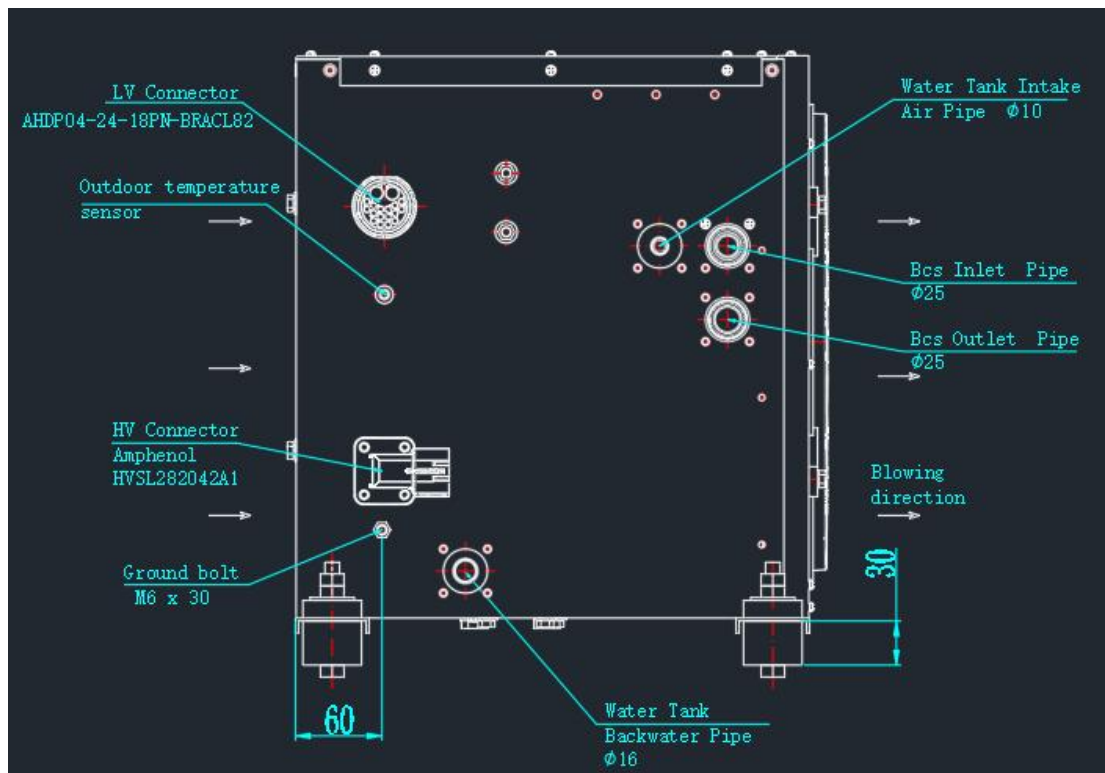

- 6) 按照车辆指令, 进行调试。