# s110\_nrf51822 migration document

## Introduction to the s110\_nrf51822 migration document

This document describes how to migrate to new versions of the s110\_nrf51822. The s110\_nrf51822 release notes should be read in conjunction with this document.

There is one main section for each new version of the s110\_nrf51822. Within each main section,

- "Required changes" decribes how an application would have used the previous version of the SoftDevice, and how it must now use this
  version for the given change.
- "New functionality" describes how to use new features and functionality offered by this version of the SoftDevice. Note: Not all new functionality may be covered; the release notes will contain a full list of new features and functionality.

Copyright (c) 2013 Nordic Semiconductor ASA. All rights reserved.


#### s110 nrf51822 4.0.0

This section describes how to migrate to s110\_nrf51822\_4.0.0 from s110\_nrf51822\_3.0.0

### **Required changes**

The flash requirements for the S110 SoftDevice have changed from 128kB to 80kB as of this version. All future releases of the S110 SoftDevice will require 80kB of flash memory (i.e. CODE\_R1\_BASE = 0x00014000). To adapt to this new size, applications will need to redefine their base addresses from 0x00020000 to 0x00014000.

In Keil, you can achieve this by changing the IROM1 value in the target options:

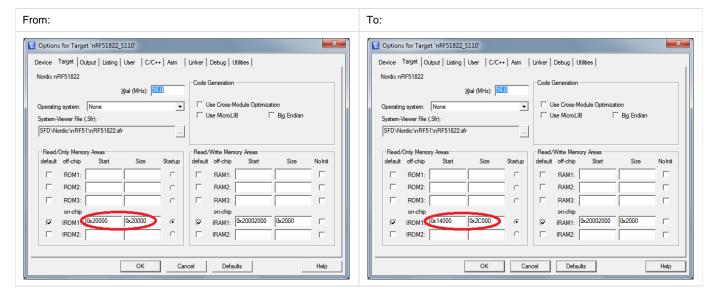

All SuperVisor Calls have been renamed in the 4.0.0 SoftDevice according to the following rules:

```
- nrf_* calls are now sd_*- ble_* calls are now sd_ble_*- SVC_* SVC IDs are now SD *
```

Application source files that invoke SuperVisor Calls will have to be modified accordingly to match the new naming convention. When debugging an application the presence of an "sd\_" prefix now signals the jump to a SoftDevice function in the form of an SVC.

The sd\_power\_pof\_enable() function no longer uses a callback. Instead, use sd\_power\_pof\_enable(true) to enable power failure detection; the NRF\_EVENT\_POWER\_FAILURE\_WARNING event will be returned by sd\_event\_get() if a power failure occurs.

UUID conversion functions are now in the SoftDevice. All UUIDs are represented in the S110 SoftDevice as a structure named ble\_uuid\_t containing 2 fields (uuid and type). This representation achieves better speed and memory efficiency than standard 2 and 16 byte arrays and makes it easier to interface with APIs using a unified UUID type. Starting from 4.0.0, the encoding and decoding functions are now inside the BLE stack instead of being in the SDK, and the table population function has changed. To be able to use the new functionality, the application will have to first add all the required 128-bit UUIDs so that they can be referenced later by the ble\_uuid\_t instances, calling the population function as many times as necessary.

This used to be achieved with the ble\_uuid\_vs\_assign() function, which has now been removed in favor of sd\_ble\_uuid\_vs\_add():

```
const ble_uuid128_t vs_uuids[] = {{0x11, 0x22, 0x33, 0x44, 0x55, 0x66, 0x77, 0x88, 0x99, 0xAA, 0xBB, 0xCC,
0x00, 0x00, 0xFF, 0x17},
{0xA1, 0xB2, 0xC3, 0xD4, 0xE5, 0xF6, 0x07, 0x18, 0x29, 0x3A, 0x4B, 0x5C, 0x00, 0x00, 0x6F, 0x77}};
uint8_t type;
uint32_t i, errcode;
```

<del>erreode = ble\_uuid\_base\_set(NUMELTS(vs\_uuids), vs\_uuids)</del>

or

erreode = ble\_uuid\_vs\_assign(NUMELTS(vs\_uuids), vs\_uuids);

errcode = sd\_ble\_uuid\_encode(&ble\_uuid, &uuid\_len, raw\_output);

```
for(i = 0; i < NUMELTS(vs_uuids); i++)
{
  errcode = sd_ble_uuid_vs_add((ble_uuid128_t const *) &vs_uuids[i], &type);
  ASSERT(errcode == NRF_SUCCESS);
  ASSERT(type == BLE_UUID_TYPE_VENDOR_BEGIN + i);
}</pre>
```

Later the code can call the encoding and decoding functions to convert 16 or 128-bit UUIDs into or from ble\_uuid\_t structures:

```
const ble_uuid128_t raw_sig_uuid = {0xFB, 0x34, 0x9B, 0x5F, 0x80, 0x00, 0x00, 0x80, 0x00, 0x10, 0x00, 0x00, 0x08, 0x82, 0x00, 0x00};
const ble_uuid128_t raw_vs_uuid = {0x11, 0x22, 0x33, 0x44, 0x55, 0x66, 0x77, 0x88, 0x99, 0xAA, 0xBB, 0xCC, 0x34, 0x12, 0xFF, 0x17};
uint8_t raw_output[16];
ble_uuid_t ble_uuid;
uint8_t uuid_len;
errcode = ble_uuid_decode(16, raw_sig_uuid.uuid128, &ble_uuid);
errcode = sd_ble_uuid_decode(16, raw_sig_uuid.uuid128, &ble_uuid);
```

```
errcode = ble_uuid_decode(16, raw_vs_uuid.uuid128, &ble_uuid);
errcode = sd_ble_uuid_decode(16, raw_vs_uuid.uuid128, &ble_uuid);
errcode = ble_uuid_encode(&ble_uuid, &uuid_len, raw_output);
errcode = sd_ble_uuid_encode(&ble_uuid, &uuid_len, raw_output);
```

**Applications can now check directly for characteristic properties** in the corresponding bitfield included in the characteristic discovery response:

```
ble_evt_t ble_evt;
if((ble_evt.evt.gatte_evt.params.char_dise_rsp.chars[0].properties & 0x1)
&& (ble_evt.evt.gatte_evt.params.char_dise_rsp.chars[0].properties & 0x10))
{...}

if(ble_evt.evt.gattc_evt.params.char_dise_rsp.chars[0].char_props.write_wo_resp && ble_evt.evt.gattc_evt.params.char_dise_rsp.chars[0].char_props.notify)
{...}
```

The characteristic properties types are now shared between client and server and so GATTS service population has changed slightly:

```
ble_gatts_char_md_t char_md;
char_md.char_properties.notify = 1;
char_md.char_properties.broadcast = 1;
char_md.char_properties.wr_aux = 1;
char_md.char_props.notify = 1;
char_md.char_props.broadcast = 1;
char_md.char_ext_props.wr_aux = 1;
```

# **New functionality**

It is now possible to clear the advertising data and/or the scan response data, and the combinations stand today as shown below: