

flink




Upozorenje: Maksimalni domet je 50m


5. Postavljanje nosača termostata



Odvojite nosač od termostata i pričvrstite ga na visinu od 1.5m.

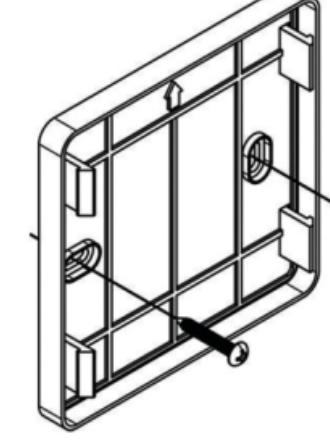


Postavite nosač tako da strelica pokazuje prema gore.

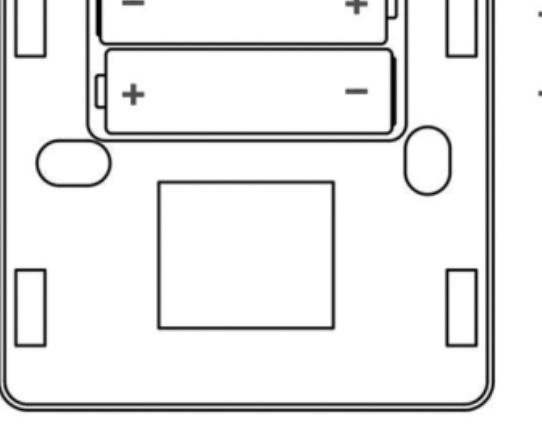

6. Postavljanje baterija



Postavite 2 x AA baterije u otvor za baterije.

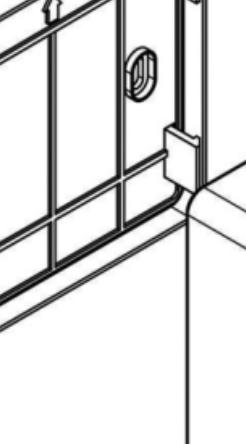

7. Postavljanje termostata



Postavite termostat na nosač i provjerite da li su termostat i nosač uredno sklopljeni.



8. Provjera komunikacije Termostat-Prijemnik



- ▶ Budite sigurni da simbol signala ne trepće na termostatu.
- ▶ Podesite temperaturu termostata tako da se aktivira grijanje. Provjerite da li su na prijemniku uključene zelena i crvena lampica.
- ▶ Termostat i prijemnik su uspješno povezani.

