


Install & Test Network Interface Card.


Step 1 : Install **Network Interface Card**



Step 2 : Open **Settings**

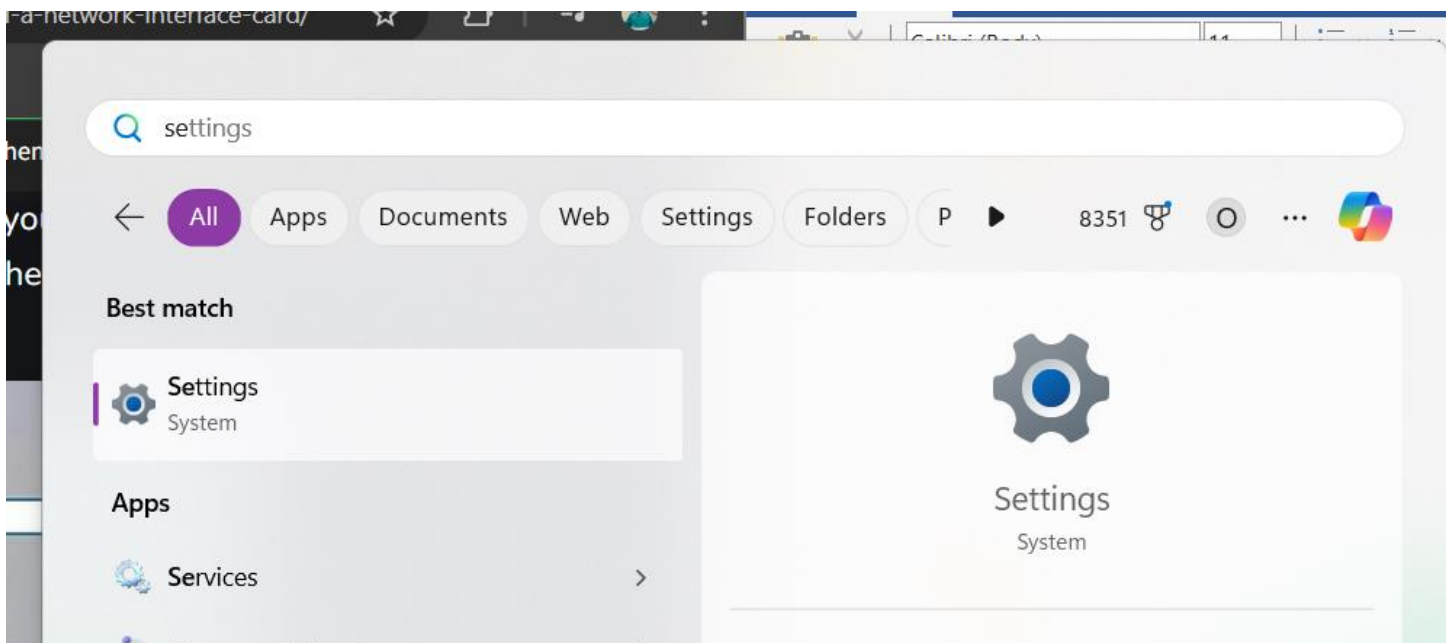

Step 3 : Click on **Network & Internet**

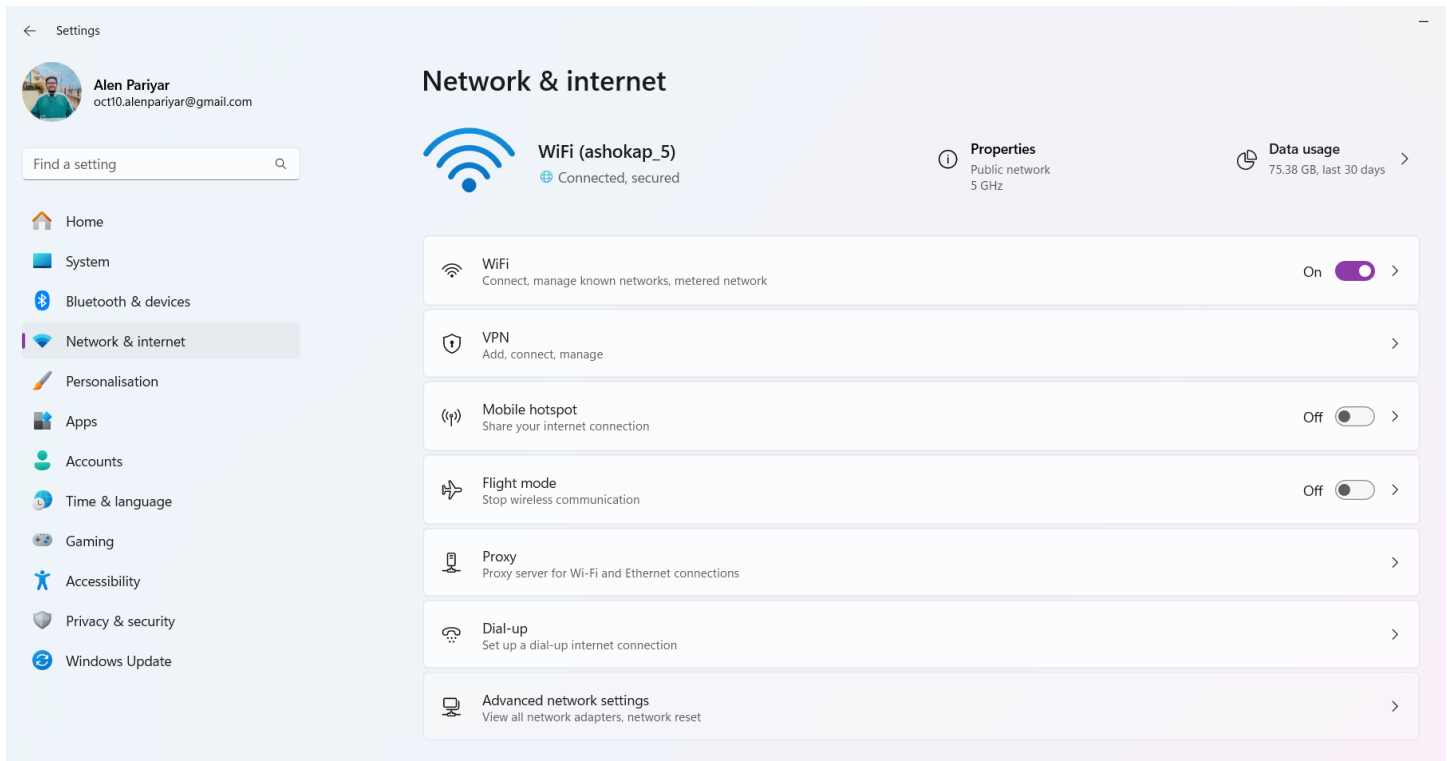

Step 4 : Click on **WiFi**



Step 5 : Click on **Hardware properties**


Network & internet > **WiFi** > **WiFi**

DNS server assignment:	Automatic (DHCP)	Edit
SSID:	ashokap_5	Copy
Protocol:	Wi-Fi 5 (802.11ac)	
Security type:	WPA2-Personal	
Manufacturer:	Realtek Semiconductor Corp.	
Description:	Realtek 8821CE Wireless LAN 802.11ac PCI-E NIC	
Driver version:	2024.0.10.135	
Network band:	5 GHz	
Network channel:	161	
Link speed (Receive/Transmit):	433/433 (Mbps)	
IPv6 address:	2400:1a00:b012:b275::2 2400:1a00:b012:b275:a603:9e66:f875:flcd	
Link-local IPv6 address:	fe80::3298:ea8c:d167:eea8%18	
IPv6 DNS servers:	2400:1a00:0:32::165 (Unencrypted) 2400:1a00:8000:4::73 (Unencrypted)	
IPv4 address:	192.168.1.68	
IPv4 DNS servers:	100.127.255.165 (Unencrypted) 100.127.255.73 (Unencrypted)	
DNS suffix search list:	worldlink.com.np	
Physical address (MAC):	90-E8-68-D7-1D-F7	


More adapter options

Edit

Step 6 : Click on **More adapter options**

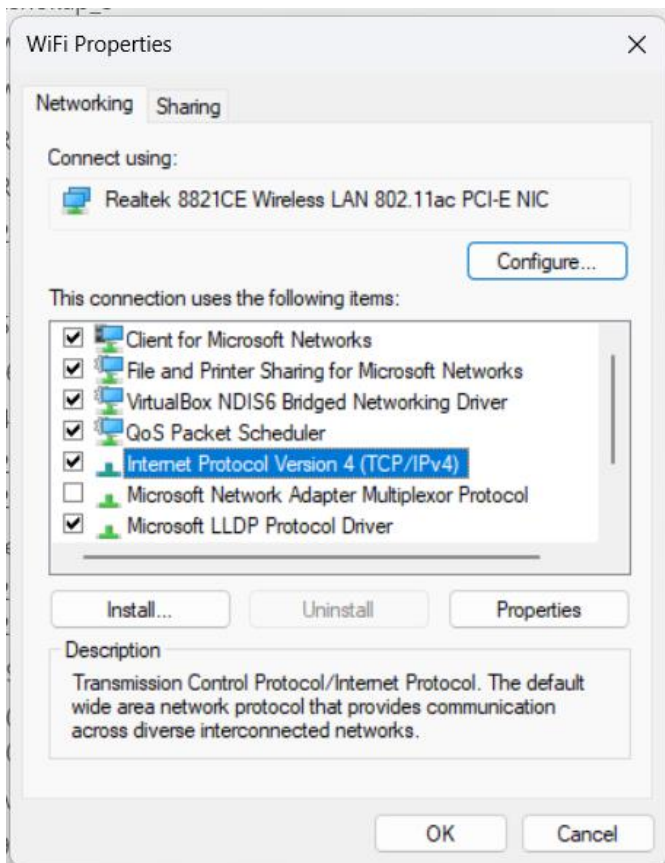

Step 7 : Select **Internet Protocol Version 4 (TCP/IPv4)** and Click on Properties

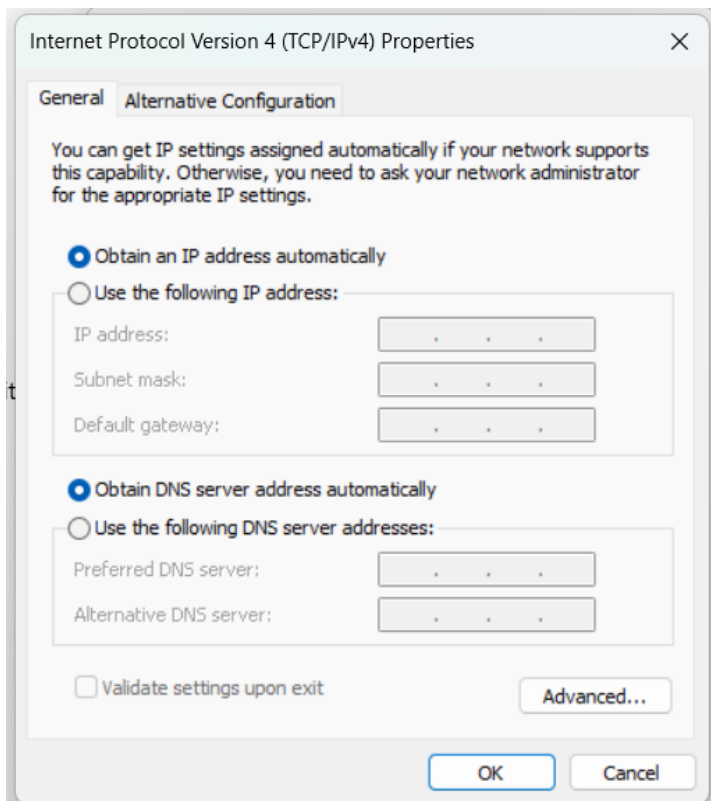

Step 8: Check WiFi status

