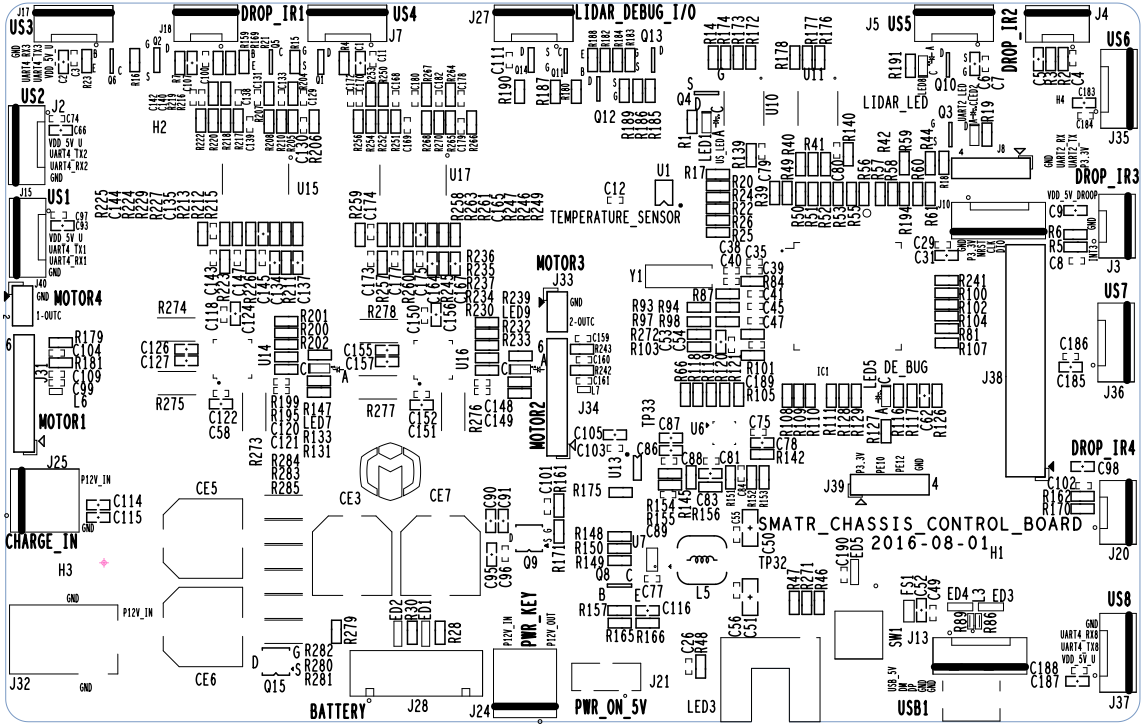
DROP_IR1
US4
LIDAR_DEBUG_I/O
US5
DROP_IR2
US3
US6
US2
US1
LIDAR_LED
DROP_IR3
TEMPERATURE_SENSOR
MOTOR3
MOTOR4
MOTOR1
MOTOR2
US7
DE_BUG
DROP_IR4
CHARGE_IN
SMATR_CHASSIS_CONTROL_BOARD
2016-08-01
US8
PWR_KEY
BATTERY
PWR_ON_5V
USB1