Troubleshooting Internet Connectivity – Archer C80 Router

Purpose

This guide provides basic troubleshooting steps to restore internet connectivity for users of the Archer C80 router.

Before You Begin

- Ensure the router is powered on
- Ensure all cables are securely connected
- Confirm that your internet service is active

Step 1: Check Router Status Lights

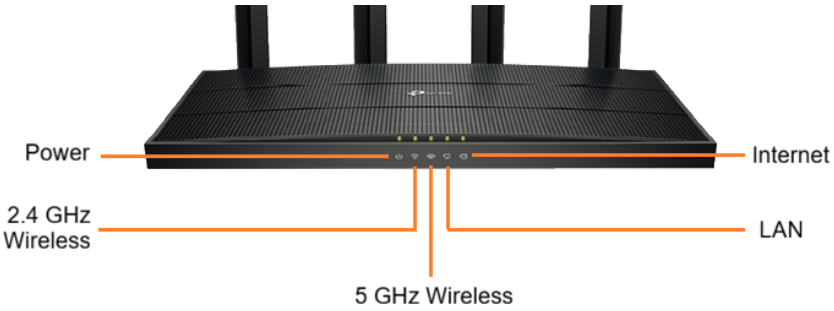

Verify the LED indicators on the router:

- **Power**: Solid on (no blinking)
- **Internet (WAN)**:
  - Green = Connected
  - Orange = No internet access
  - Off = No connection
- **Wi-Fi**: Solid or blinking

If the Power light is off, check the power adapter and outlet, as well as the power button on the router.

Step 2: Restart the Router

1. Turn off the router using the power button
2. Unplug the power cable
3. Wait for **30 seconds**
4. Plug the power cable back in
5. Turn the router on
6. Wait **3 minutes** for full startup

Step 3: Check Physical Connections

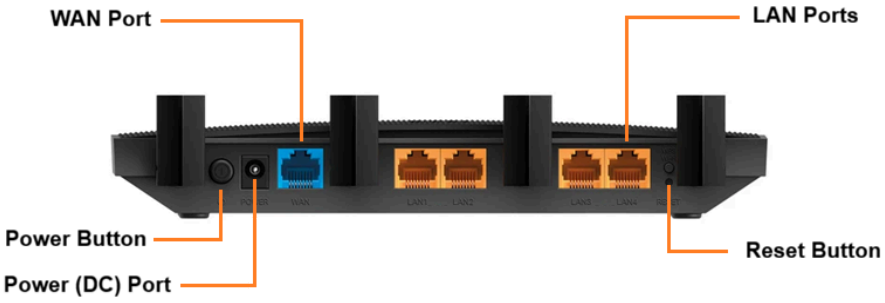

Verify the following:

- Ethernet cable **from wall or the modem** is connected to the **WAN (Internet) port**
- LAN cables are securely connected
- No visible damage to cables or connectors

If possible, try a different Ethernet cable such as a CAT5e or CAT6 cable.

Step 4: Test Connection on Another Device

- Connect a second device (phone/laptop) to the Wi-Fi network
- Check if the issue persists

If only one device is affected, the issue may be device-specific and not related to the router.

Step 5: Reconnect to Wi-Fi Network

1. Forget the Wi-Fi network on your device
2. Reconnect using the correct password

Step 6: Check for IP Address Issues

- Ensure the device is set to obtain an IP address automatically (DHCP)
- Refer to your device's network settings (Wi-Fi or Ethernet) to verify this.
- Steps may vary depending on your device (Windows, Android, iOs)
- Disable and re-enable Wi-Fi
- Reconnect to the network

Step 7: Log in to the Router Interface

1. Open a browser
2. Go to: **http://192.168.0.1** or **http://tplinkwifi.net**
3. Log in with your credentials

Check:

- Internet status = Connected
- No error messages

Step 8: Power Cycle the Modem (if applicable)

If you are using a modem:

1. Turn off the modem
2. Unplug it for **30 seconds**
3. Turn it back on
4. Wait until fully connected
5. Restart the router

Step 9: Check for Firmware Updates

In the router interface (refer to Step 7):

- Navigate to **System Tools > Firmware Upgrade**
- Install updates if available

Step 10: Reset the Router (Last Resort)

> ⚠️ This will erase all settings

1. Press and hold the **Reset button** for **10 seconds**
2. Wait for the router to reboot
3. Reconfigure the router