
FLOORS INDICATOR

LC100-L2

Wyltor SA

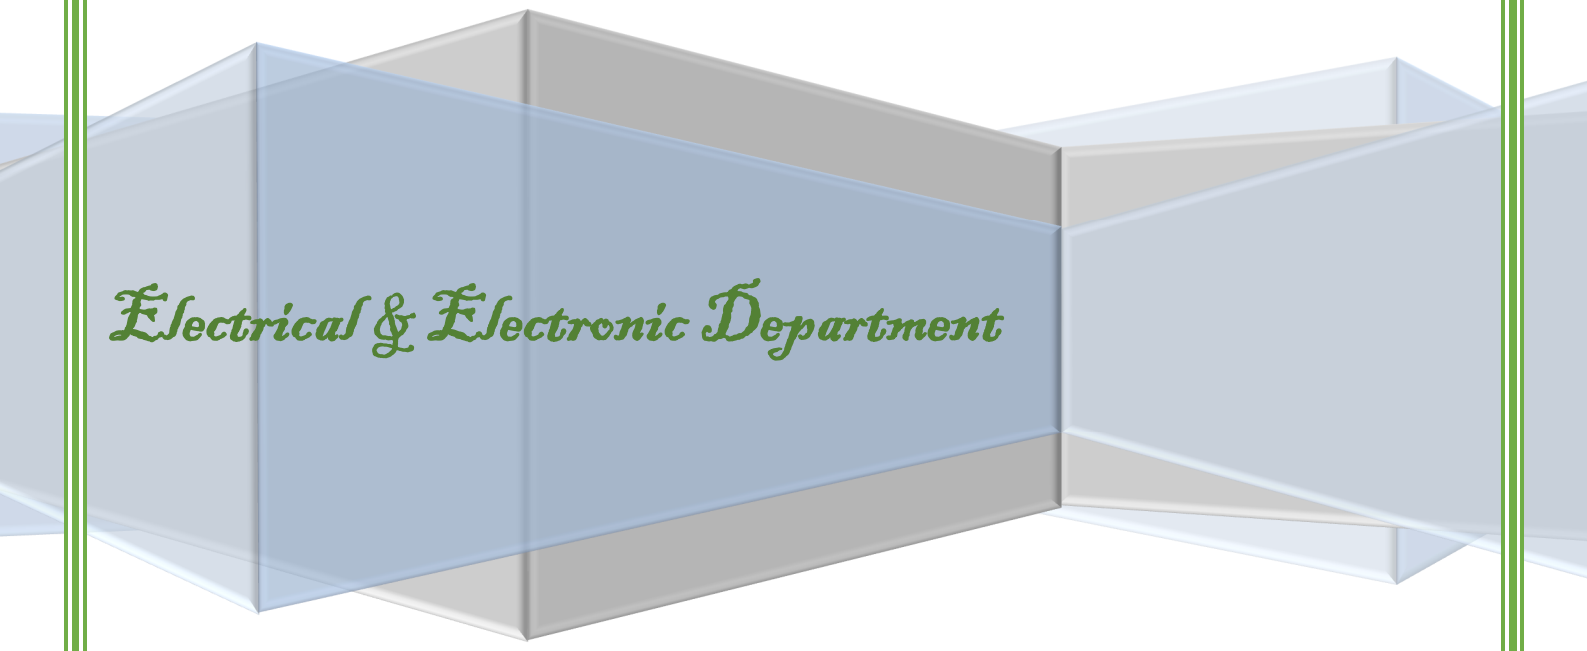

Electrical & Electronic Department

A lift display refers to digital information screens installed in elevators, lobbies, hallways, and other public spaces. These displays serve various purposes, such as providing visitor guidance, directions, and sharing multimedia content like videos, animations, or images. In elevators, the display panel typically shows the current floor, direction of travel, and other relevant information about the elevator's operation.

Either the MLC one with CAN-BUS communication or any other aftermarket devices can fit to the controller. There are some specifications that need to match with the system for the smooth operation of the device. For more information, please refer to the factory.


At this document, connection and setup of the voice announcer of MLC, LC100-L2 is described step by step.



LC100-L2

CONNECTIONS:

At the picture above the connector (X1) must be connected to any CAN1 point of the system. In most cases the easiest way to get access to CAN1 line is the COP call register board, LC100-E5. Typical connection of LC100-L2 in a lift with LC100-E5 pcb is shown below.

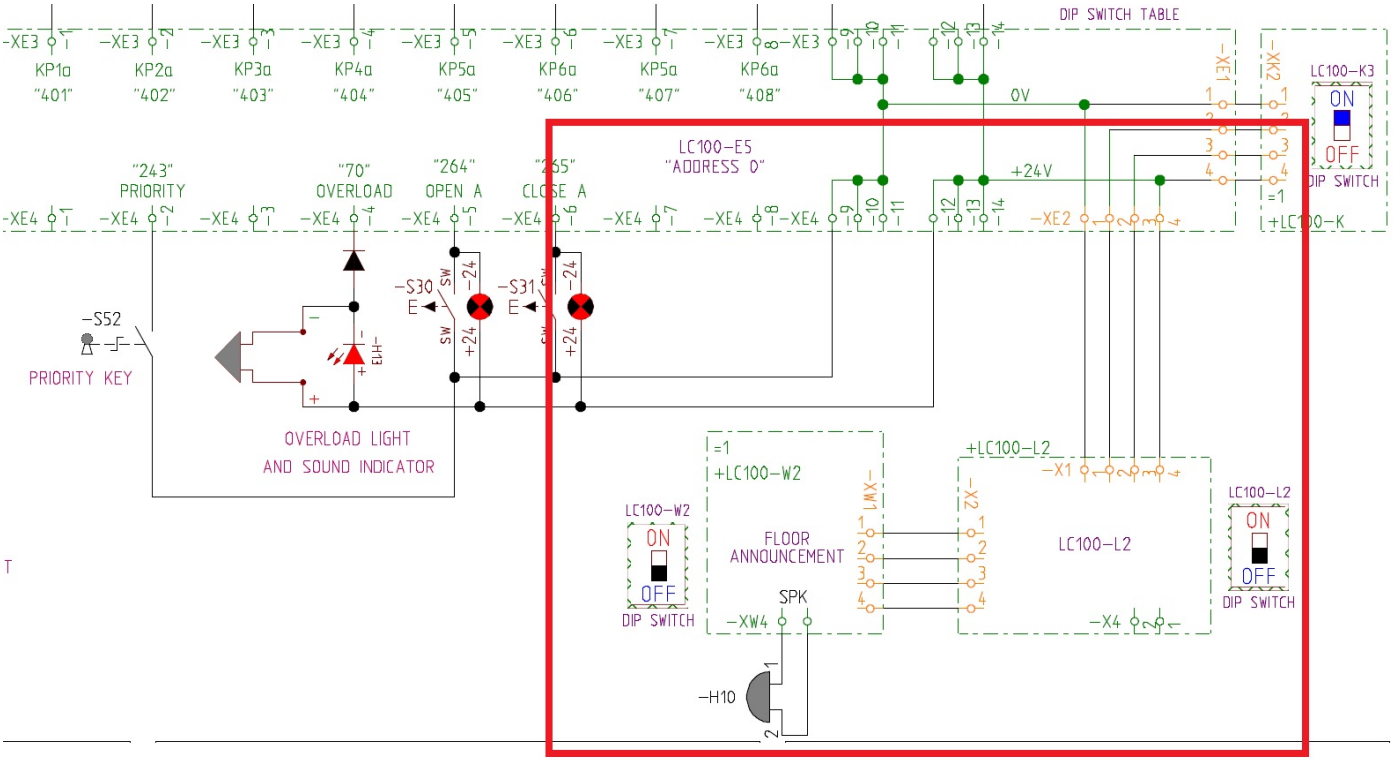

CONNECTION

FILES MANAGMENT:


By default, setup or if display is resettled a blue back round with typical symbols of the floor level and the direction of the car appear. This can change.

For this it is needed to have a cable. From one side must fit to the input of the display and other side is a simple USB connector. Like the one below,



L2-CONNECTOR

Connect the cable to the display as shown at the picture below,

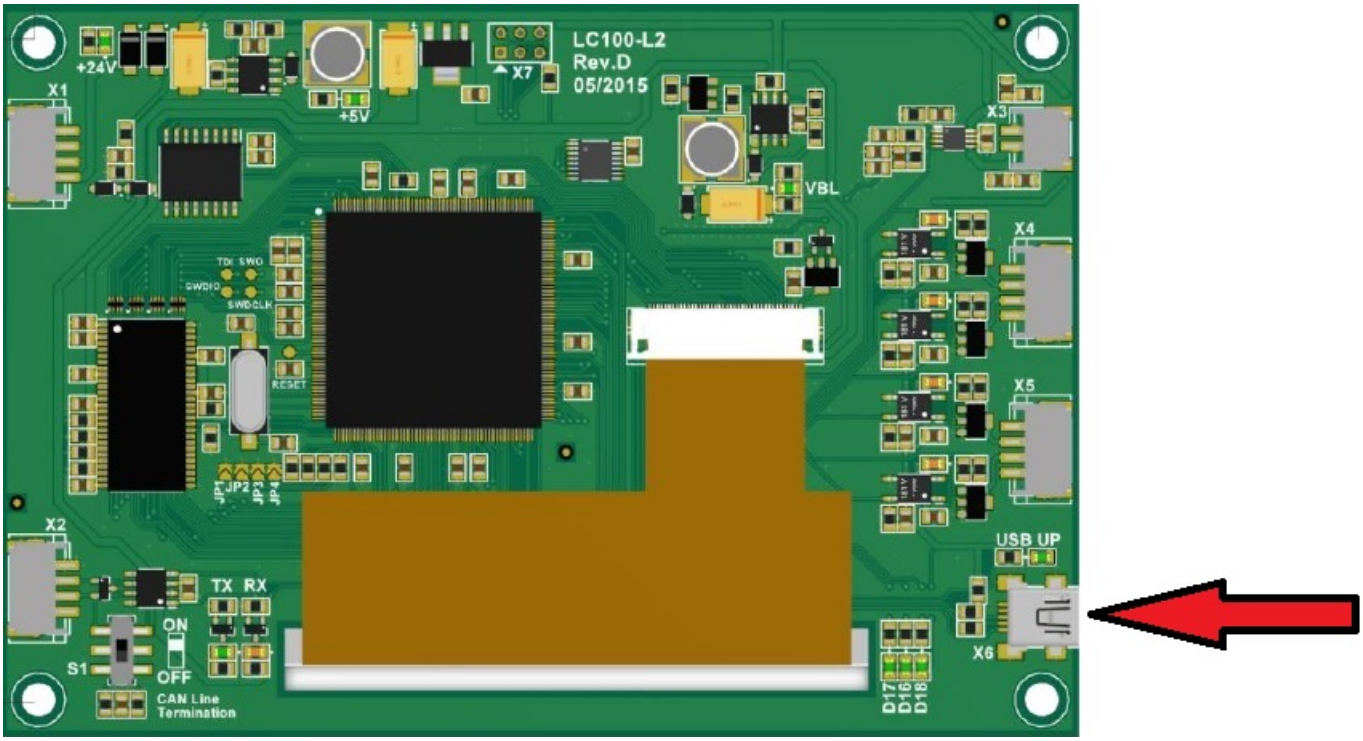


L2-CONNECTION

Connect the USB cable to your computer. Computer operating system will open the display as a normal USB file storage device. Select all and delete everything. Device must be totally empty.

Please contact wyltor after sales department so they create the following files according to your needs.


You must receive three files (usually is three, depending the needs might end up more) that look like below,

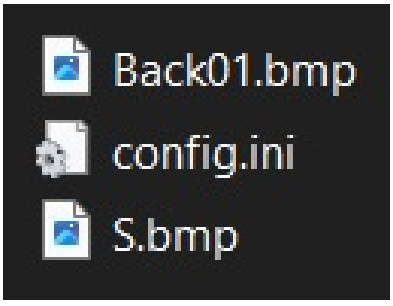

L2-FILES

Copy and paste the files sent to the device. In the device must be only the files sent by wyltor and not any self-generated by the L2 device.

Don’t disconnect the device hardware-way or it might reset to the initialize point. You have to add/remove device from your PC like shown below,

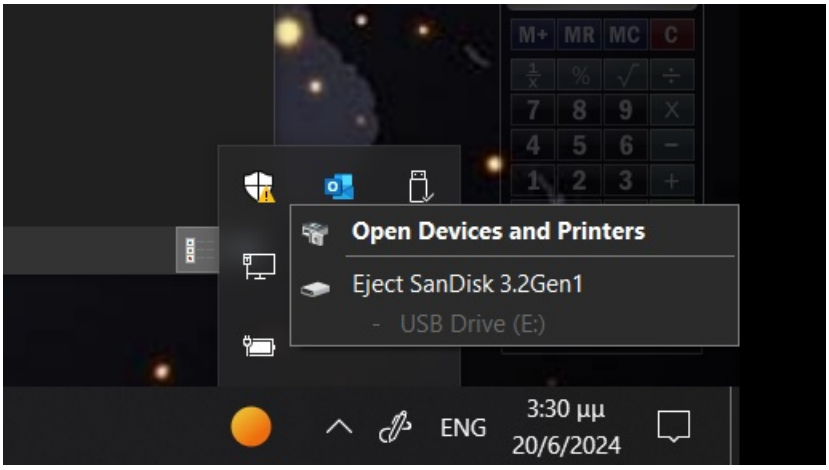


L2-REMOVE


Find and select LC100-L2 device and “Eject” from the system. Then cut off supply. Then disconnect everything and connect display back to the COP. Supply of the lift better remain off until all connections are finished.

ADJUSTMENTS:


Turn lift to inspection. Then get the service tool and connect it to any CAN1 point and at main screen press ENTER and find sub-menu PARAMETERS.

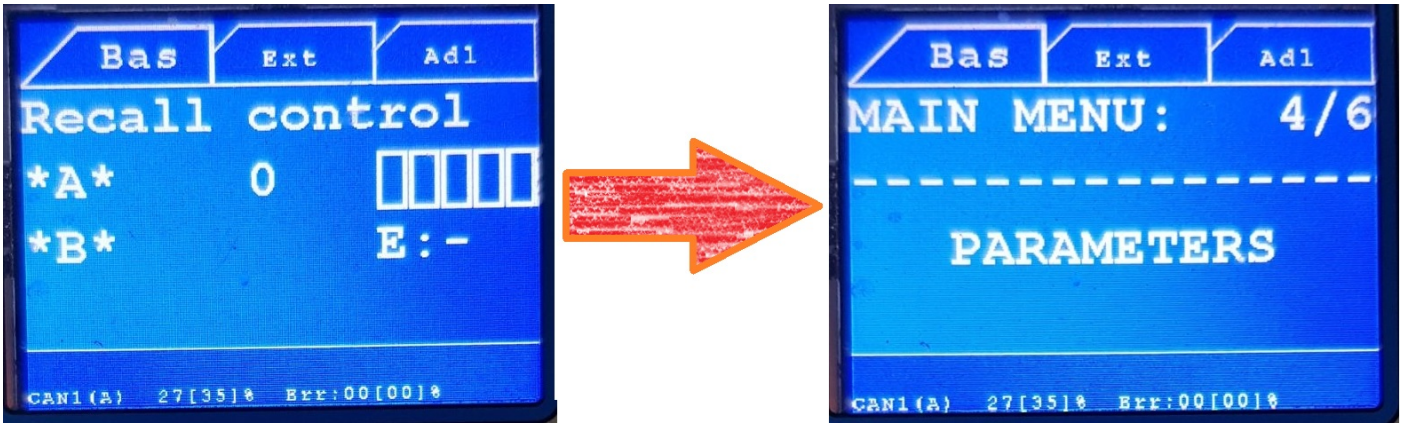


At PARAMETERS menu press ENTER and find sub-menu TYPE P. Picture below:

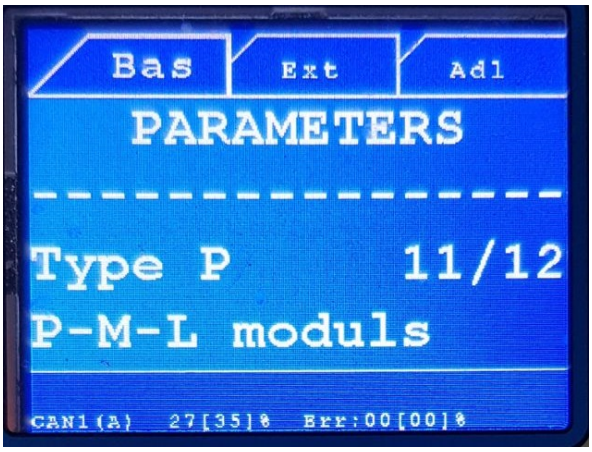


Press ENTER once again and screen becomes like shown below:

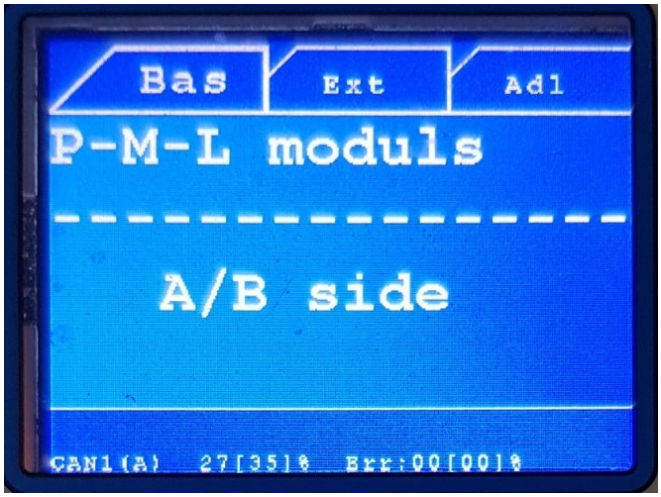

Hit ENTER once again and menu becomes like shown below:

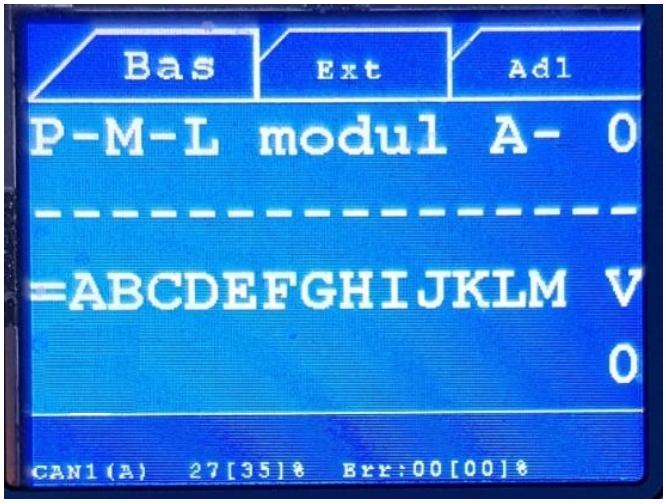


Now by pressing the ENTER button again TYPE P becomes like shown below. A small censor appears below letter A. Using down arrow, you can add/remove the stars below the letters. Using right/left arrow you can navigate in the menu in order to pick the desired letter. Make menu look like the picture above.

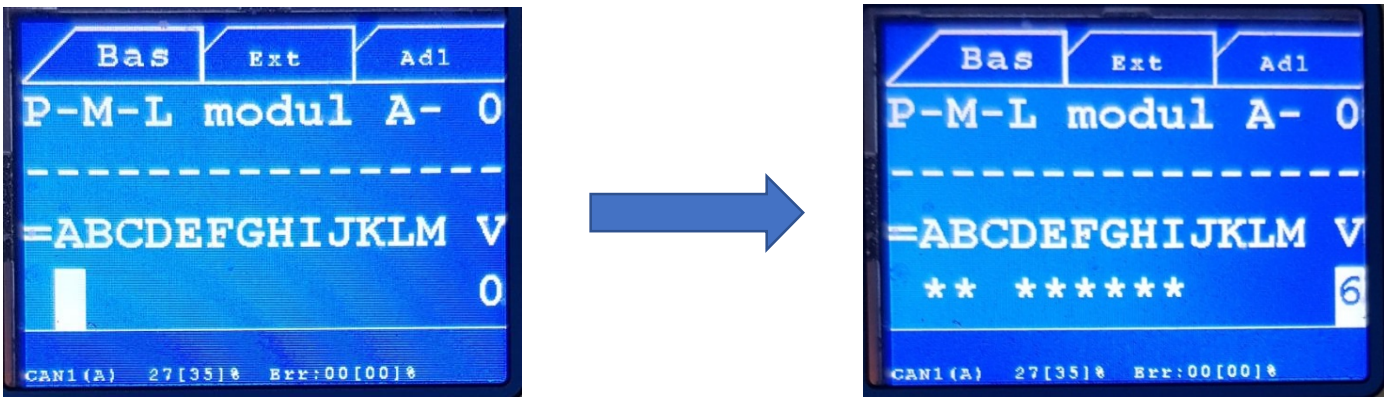

Since everything is set you need to press the ENTER button once again in order the censor to disappear. Then the new setup is stored in MLC parameters list. Menu now looks like below:



It is really important that this setup must be done at the function set at A–0 at the right top corner f the main screen of the service tool. A–0 refers to the cabin display and announcers and the rest refer to each floor separately. For example, A-1 is the lowest floor, A-2 is the floor above etc.…

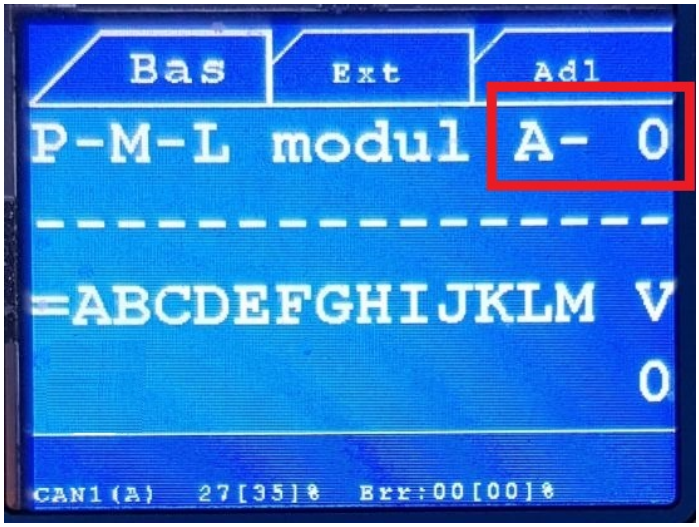

The number under the letter "V" is the volume of the voice announcements. Depending under which letter you add the star (*) system activates a new function. For example, a * below "A" means the display will show the floor level, while with a * below "B" too will show the direction the cabin is travelling. More functions available. Full list of the functions is shown below.

Every letter in this menu is activating/deactivating a different function. A list of all available functions is shown below:


4.11 P-M-L Modul - Type P

4/6 Parameters	11/12 P-M-L Modul	Type P

In the PML modul menu it is possible to set the work of the signalization modules LC100-P, LC100-M or LC100-L. Sign „*“ under the letter means that for that module is activated mode which is explained in the description:

Example shows setting of the cabin signalization module (adress 0) which will display:

Cabin position	(A)
Car travel direction	(B)
Sound signal for stopping	(D)
Sound and light signal for STOP	(G)

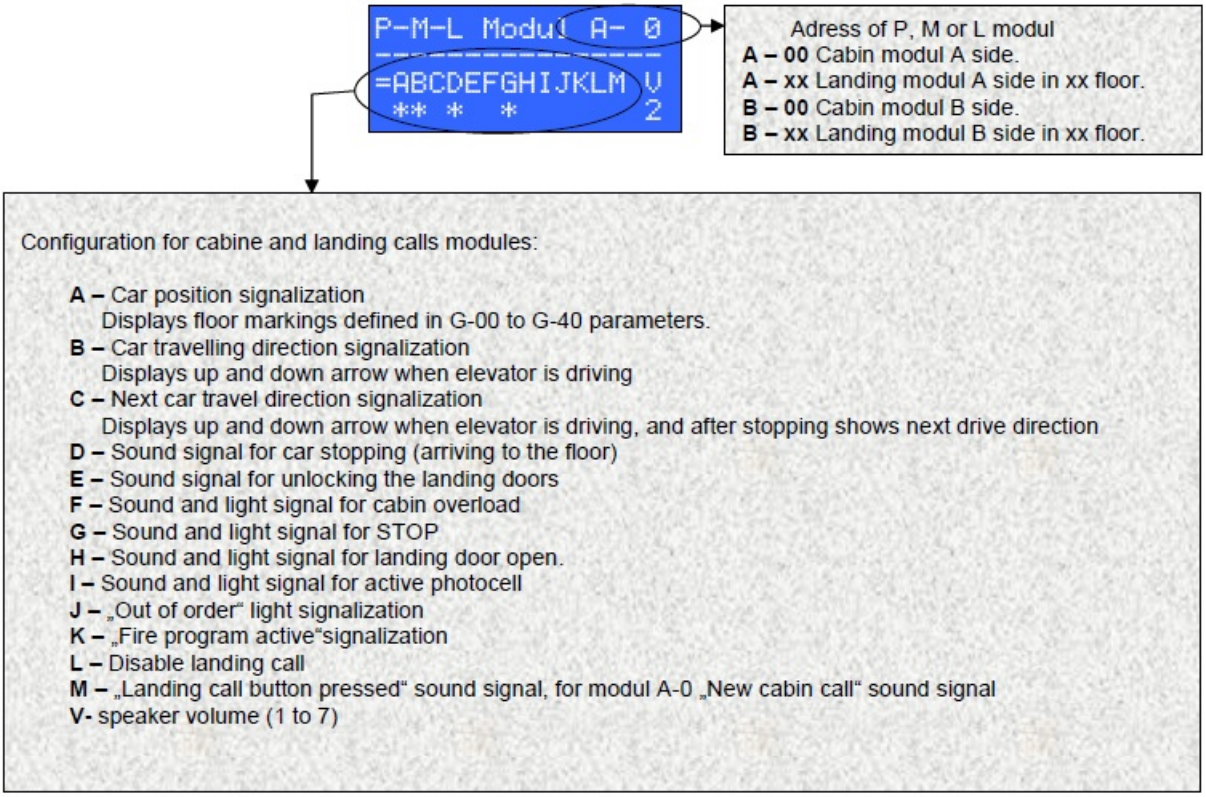

Since everything is set use ESC button at the service tool and return to the main screen. A power reset is needed for the system to boot with the new setup. Then it is ready to try.

For more information, please contact Wyltor after sales crew.