
StepBro quick reference · Step Mother

Firmware 1.2.0 • One USB MIDI sequencer, channel 1 • Shares the board with Yummy Gummy • External MIDI clock and transport required

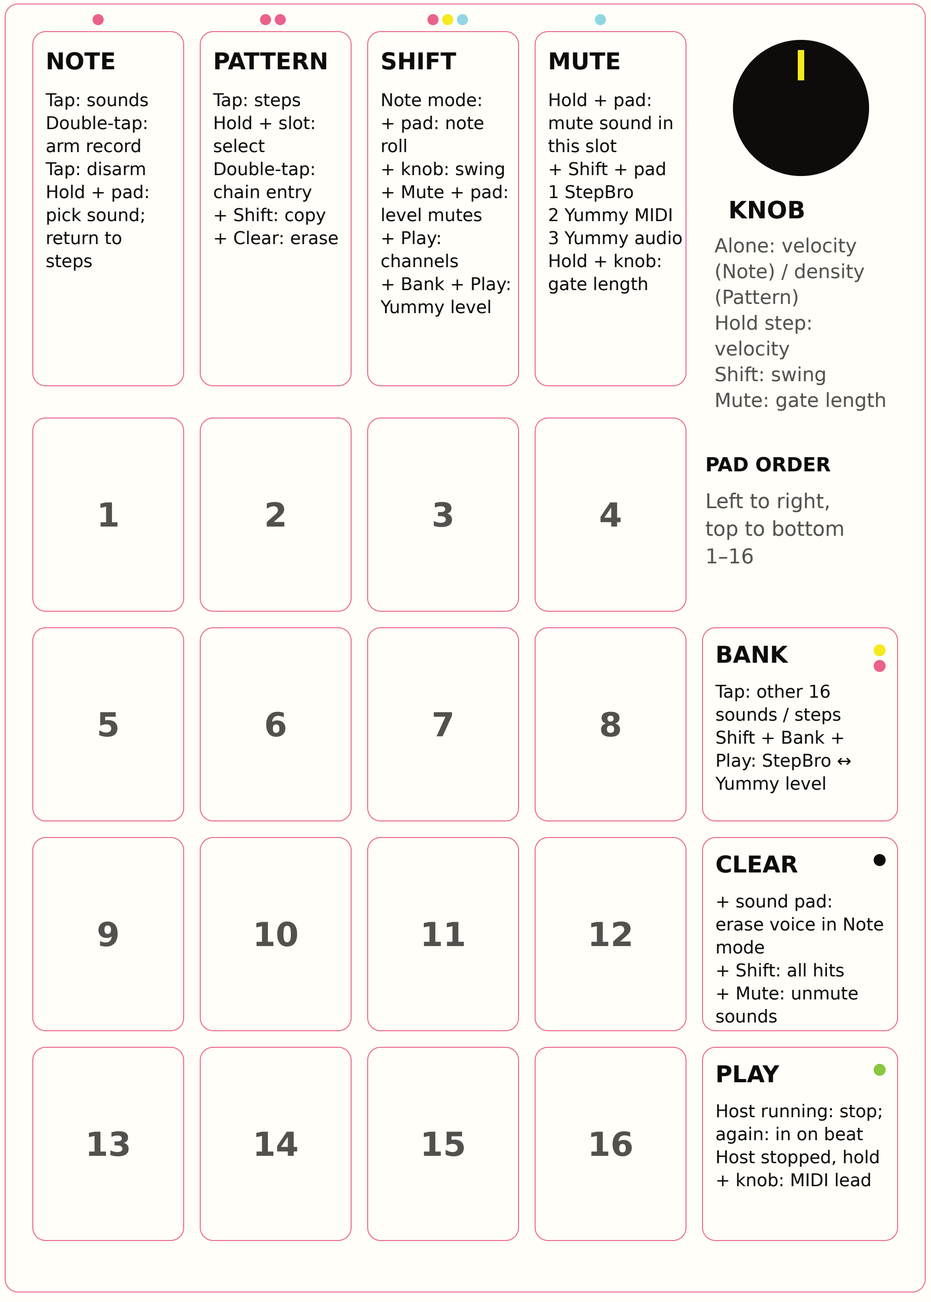

NOTE mode

Pads = sounds · Bank selects sounds 1–16 / 17–32

1 MIDI 36 / 52	2 MIDI 37 / 53	3 MIDI 38 / 54	4 MIDI 39 / 55
5 MIDI 40 / 56	6 MIDI 41 / 57	7 MIDI 42 / 58	8 MIDI 43 / 59
9 MIDI 44 / 60	10 MIDI 45 / 61	11 MIDI 46 / 62	12 MIDI 47 / 63
13 MIDI 48 / 64	14 MIDI 49 / 65	15 MIDI 50 / 66	16 MIDI 51 / 67

Double-tap Note: arm recording
Play pads while the sequencer runs. Nearest-step timing; tap Note to disarm. While armed, the playhead runs; pad 1 = bar start.

Shift + pad: straight sixteenth-note roll
Records when armed. Note + Shift + pad always records while playing. Release pad to stop.

Knob alone: the selected sound’s velocity (picks up), scaling its programmed hits. While a pad rolls, the knob rides its velocity.

PATTERNS AND LEVELS

Hold Pattern: slots · Double-tap Pattern: chain entry

16 slots · Shift + Bank + Play: Yummy level
Both keep playing; the Bank LED blinks slowly on the Yummy level. The board starts on StepBro.

Copy / erase slots
Pattern + Shift: source, destination. Copy becomes active.
Pattern + Clear + slot: erase. No undo.

Chains: up to 32 entries
Double-tap Pattern; tap slots in order; tap Pattern or Note to finish. Each entry plays its full 16 / 32 steps.

Pick one slot to end a chain. Manual recalls wait for the end of the 16 / 32-step loop. Chains are not saved.

PATTERN mode

Pads = steps 1–16 / 17–32 for the selected sound

1 or step 17	2 or step 18	3 or step 19	4 or step 20
5 or step 21	6 or step 22	7 or step 23	8 or step 24
9 or step 25	10 or step 26	11 or step 27	12 or step 28
13 or step 29	14 or step 30	15 or step 31	16 or step 32

Tap step / hold step + knob
Toggle hit on release / set velocity 1–127. Hold + turn on an empty step creates a hit.

Shift + knob / Mute + knob / knob alone
Swing 50–75% / note length 5–100% / density.

Hits in 17–32: 32-step loop. Shift + step(s): loop window.
Pattern + Shift, then Bank: copy visible half.
Pattern + Bank, then Clear: erase visible half.

PERFORMANCE AND MIDI

StepBro: channel 1 · Yummy: channel 2

Play while the host runs
Stops at once; keeps counting with the host. Press again: Play blinks, and StepBro is back in on the next beat.

Shift + Play + pad: MIDI channel
Pads 1–16 choose StepBro’s channel. Keep it off channel 2 if your host also listens to Yummy.

Host stopped: Play + knob = MIDI lead
0–16 ms, 1 ms per lit pad; default 4 ms. Saved automatically. The first step after Start cannot be sent early.

Shift + Mute + pad 1/2/3: StepBro / Yummy MIDI / audio.
Clear + Mute unmutes this slot’s sounds only.
Mutes and density are not saved. StepBro sends MIDI only.

SAVE
Stop host and Yummy; wait for Play to stop blinking.

HOST SETUP
Send clock + transport to Step Mother.

UPDATE MODE
StepDaddy; or Shift + Clear at power-up for 0.5 s.

FIRMWARE
1.2.0 · StepBro and Yummy Gummy in one.