



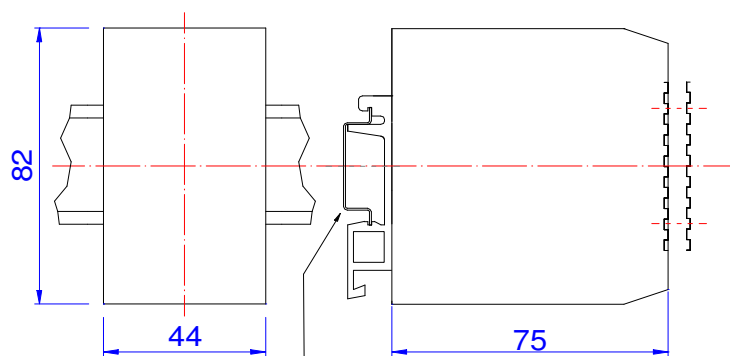

Dimensions in mm


NS35 / 7.5 DIN EN 50022

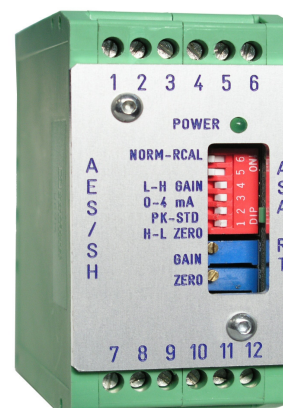

AES-R is a measuring amplifier for strain gages bridge, with a function for holding the maximal value (peak), with zero and gain adjustment and two analog outputs towards a supervisor or tension regulation unit. The peak value is resetted automatically after about 300 ms after the falling of the signal.

Technical Characteristics	
- Power Supply - Protection for power supply inversion - Precision in normal mode - Precision in holding mode - Nominal working temperature - Maximal load on the load cell input - Load cell power supply - Bandwith for small signals - Rising time for the analogue output - Analogue output #1 - Analogue output #2 - Assembling - Protection level	24Vdc $\pm 10\%$ / 110 mA included $< \pm 0,1\%$ Fs $< \pm 0,5\%$ Fs $-30^{\circ} \dots +50^{\circ} \text{C}$ 175 Ohm (2 load cells with 350 Ohm or 4 load cell with 700 Ohm) 7,5Vcc 1 kHz / -3dB @ Rg=50 ohm $\leq 10\text{V/ms}$ 0-10Vcc / 5mA (2k ohm load) protected for short-circuit towards ground 4-20mA / 400 ohm maximum protected for short-circuit towards ground on DIN guide EN50022 - EN50035 IP20


ELECTRICAL CONNECTION

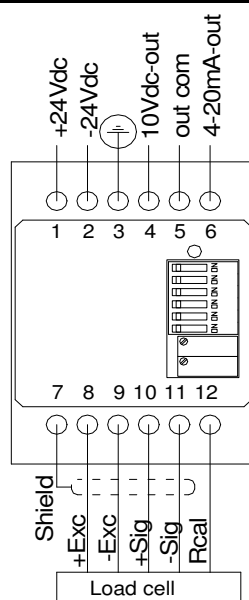

ATTENTION PLEASE :

The wiring scheme is changed in respect of the standard AES-R type.

SETTINGS

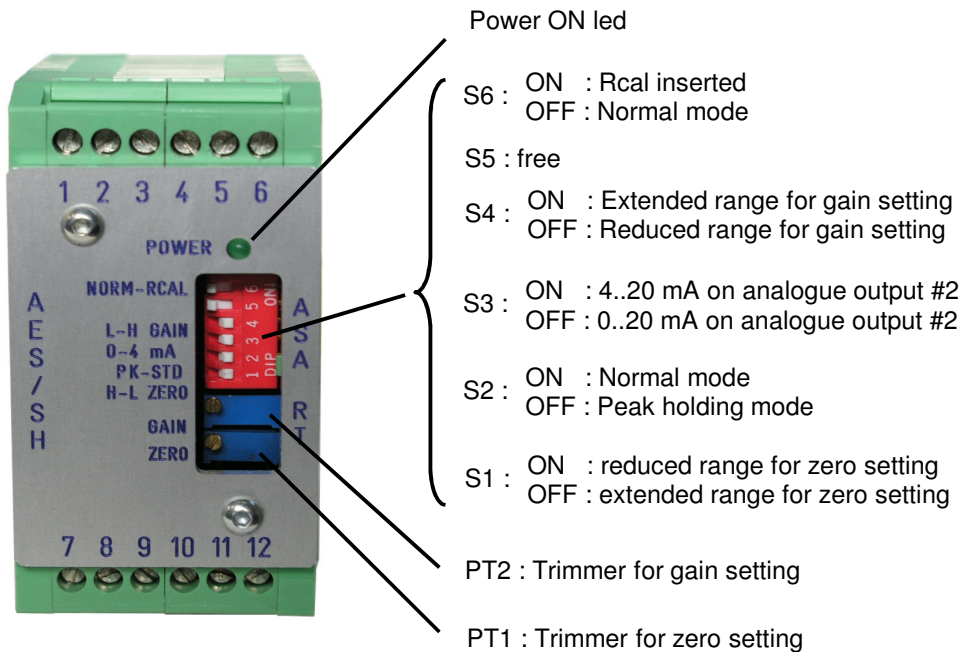

AES-SH : Analogue amplifier with peak holding function

- On the wiring of the power supply to the amplifier it is mandatory to connect the negative pole (-24Vdc) to the earth of the cabinet.
- For setting the zero and gain of the amplifier :
set the switch S2 on the ON position, to exclude the holding function, but work in the continuous mode.
- Act on the trimmer PT1 for zeroing the system and on the trimmer PT2 to calibrate the gain.
- The switch S1 on ON reduces the Zero setting range of the trimmer PT1 (when possible try always to use the reduced range):
 S1 = ON ; Zero range = $\pm 1,65V$
 S1 = OFF ; Zero range = $\pm 5V$
- The switch S4 on OFF reduces the Gain setting range of the trimmer PT2 (when possible try always to use the reduced range):
 S4 = ON ; G = 630...1650
 S4 = OFF ; G = 500...1000
- The two analogue outputs (10Vdc and 4-20mA) are both active, but they can present small differences in value; so it is suggested to execute the calibration of Zero and Gain measuring the output that is really to be used.
- Setting the switch S3 on the ON position the base starting level for the 4mA output is preset (this value is to be then calibrated with the trimmer PT1); otherwise the base starting level for the 0mA value is preset.
- Set the switch S2 in OFF position to activate the peak value holding modality.
- The analogue memory of the peak value is automatically cleared when the measure goes down the peak value itself; the holding time depends from the effectively reached value, this according to the following table:
- Vpk = 0,2...1V / Thold = 150...250ms
 = 1.....2V / = 250...300ms
 = 2....10V / = 300...400ms
- The calibration resistance of the connected load cell must be externally connected to +EXC (pin 8) and to the amplifier on the pin 12; the switch S6 (on ON) connects pin 12 to +SIG. In normal working mode S6 must be on the OFF position.