


## Digital temperature and humidity sensor DHT-11

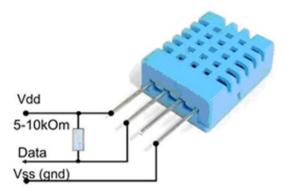


Connecting the DHT-11 temperature and humidity sensor

The location of the sensor on the stand is shown below.



Location of the DHT-11 sensor on the stand

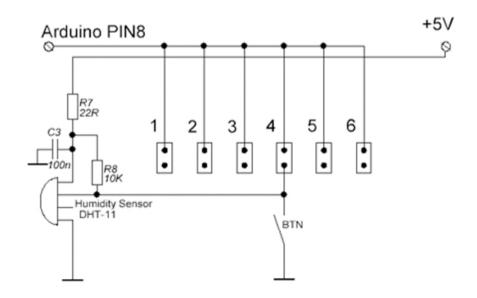

Connection diagram of the DHT-11sensor





