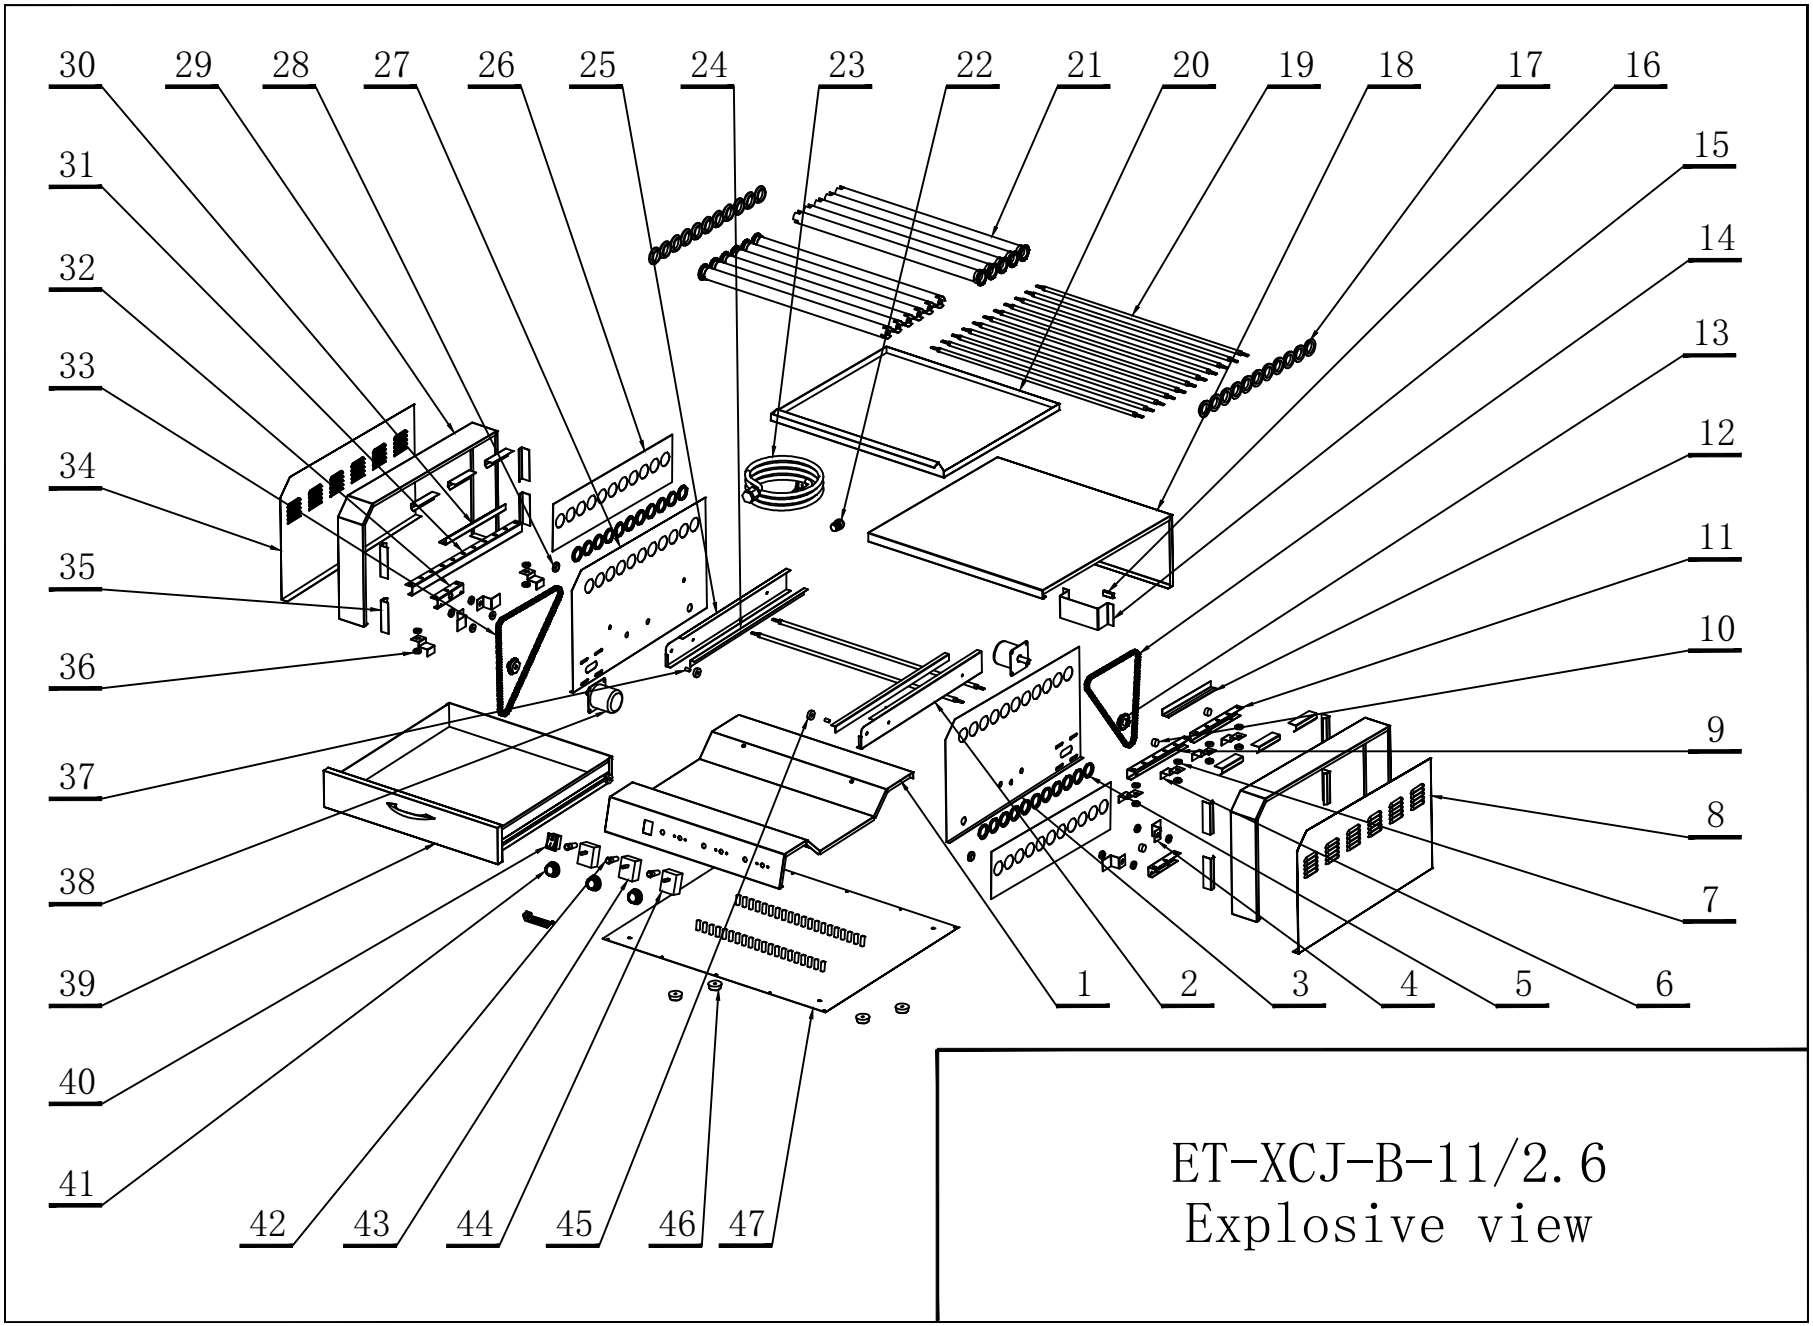


ET-XCJ-B-11/2.6
Explosive view

NO.	NAME OF PART	NO.	NAME OF PART
1	CONTROL PANEL	25	UPPER LEADING RAIL
2	RIGHT UPPER LEADING RAIL	26	ROLLER HOLDING PLATE
3	RIGHT INNER PLATE	27	LEFT INNER PLATE
4	INSULATED HEATING PIPE CLAMP	28	PROTECTIVE RUBBER RING
5	ROLLER SLEEVE	29	BOARDERS
6	HEATING PIPE FIXING SUPPORT	30	LEFT CHAIN FIXING PLATE
7	INSULATING PAD	31	HEATING PIPE FIXING PLATE
8	RIGHT OUTTER PLATE	32	INSULATED HEATING PIPE FIXING PLATE
9	HEATING PIPE FIXING PLATE	33	CHAINS
10	WIRE PROBE	34	LEFT OUTTER PLATE
11	HEATING PIPE FIXING PLATE	35	OUTTER PLATE LOCATING STRIP
12	RIGHT CHAIN FIXING PLATE	36	INSULATING PAD
13	CHAIN WHEEL	37	AXIS
14	CHAIN	38	MOTOR
15	SPACER	39	DRAWER
16	MAGNET	40	SWITCH
17	RUBBER RING	41	KNOBS
18	OIL PAN SUPPORTING PLATE	42	INDICATING LIGHT
19	HEATING PIPE	43	250℃ THERMOSTAT
20	OIL PAN	44	110℃ THERMOSTAT
21	ROLLER	45	BEARING
22	FUSE HOLDER	46	RUBBER FEET
23	POWER SOCKET	47	BOTTOM PLATE
24	LOWER LEADING RAIL		