
Temperature / Flow Controller Comms.

Each unit is equipped with a RS485 (15 way) connector, allowing the user to connect to both Eurotherm temperature and flow controller. This will allow the same functionality as using the manual display buttons from a laptop (which in turn could be controlled remotely).

A free user program from Eurotherm is available from their website (https://www.eurotherm.com/products/power-control/power-control-software/eurotherm-itools/) called iTools V9.85. Ensure the program is downloaded and installed.


Using OVG computer control upgrade kit (00-0026) connect the round four pin plug to the rear of the rack. From the kit connect the RS485 to RS232 converter hub to rack and PC.

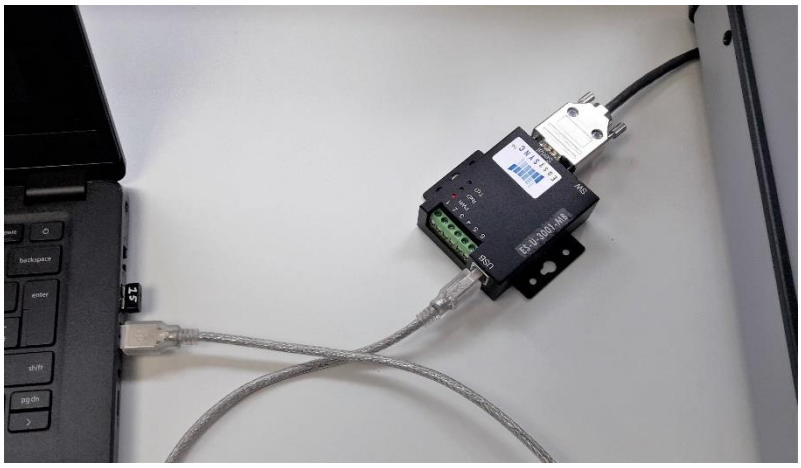

Ensure each of the unit is powered on and stable.


Open the iTools program, from the top tool bar select ‘Scan’.



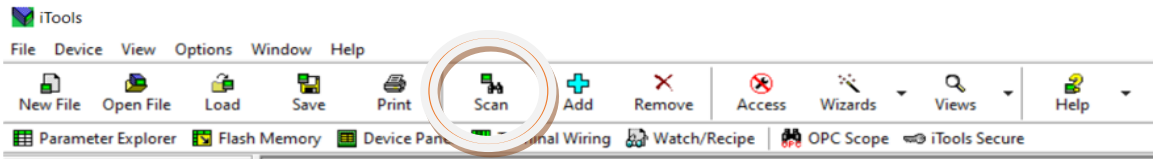


The follow page will open, ensure the following options are enabled, select OK.


The scan will begin with all devices shown.

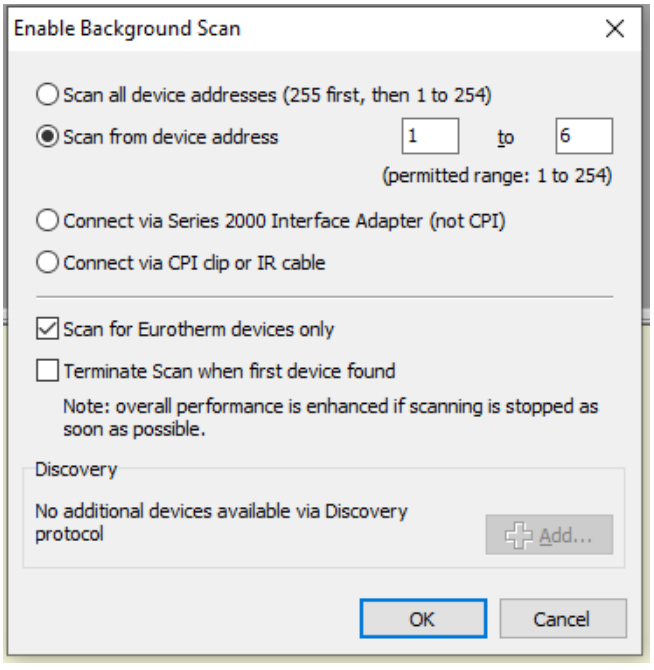

Each device will be displayed at the bottom left-hand side of the screen in the same order as the rack (from left to right) or as a standalone unit (max of two displays).

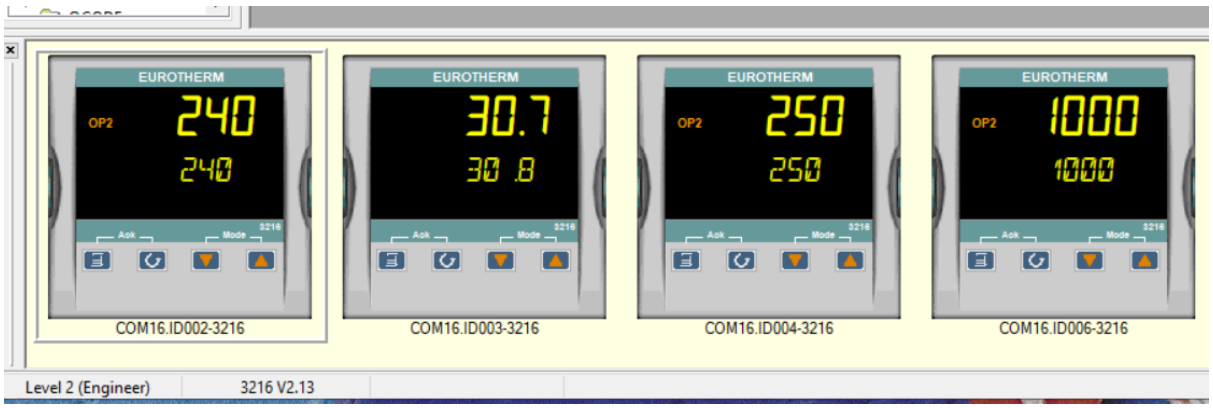


Select the first device and from the top tool bar select ‘Device Panel’, the selected device will be displayed on the main page. Select the second device followed by ‘Device Panel’. Continue to select each device followed by ‘Device Panel’, once all devices have been opened, switching between devices can be made by selecting from the lower display.

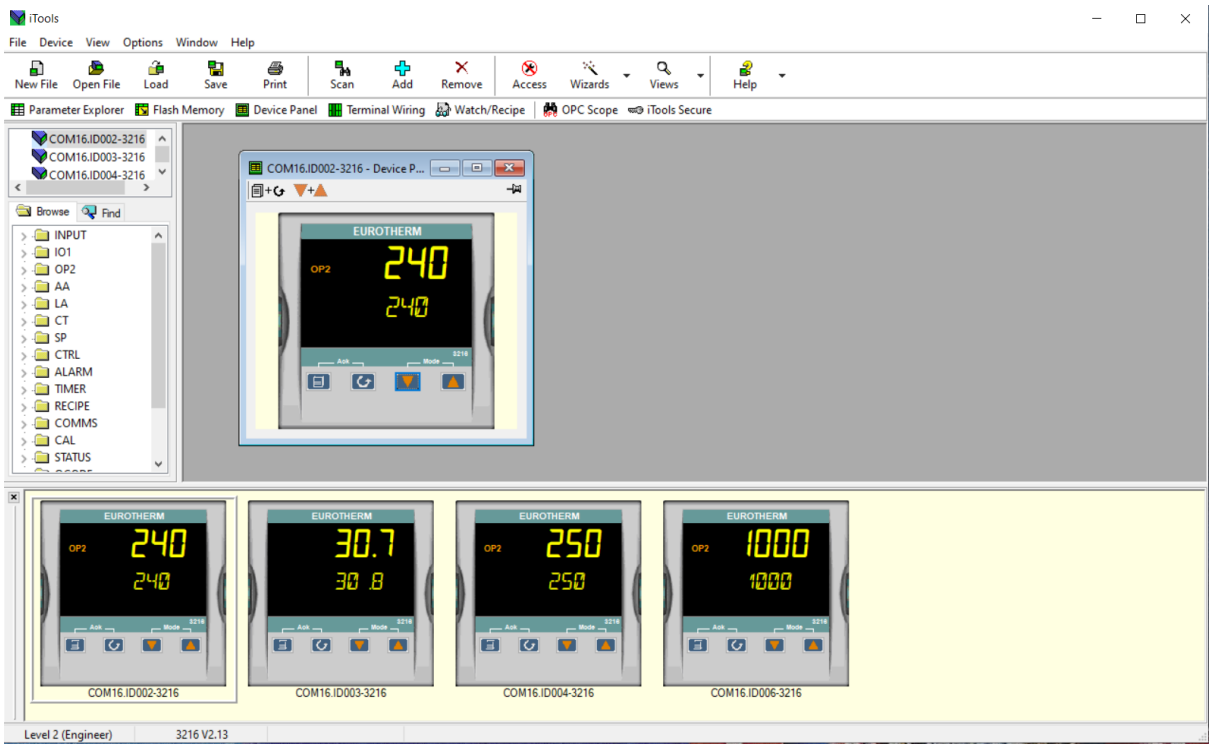

From a selected display the controller set values can be adjusted using the display buttons.

Error messages can be reset by using the menu and return button function.

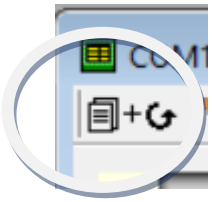

It is strongly advised not to make any adjustments within any of the parameters to the device, as this would alter the calibration of the unit.