




Labor Saving Lift Jack

User Manual

1. Introduction & What's In The Box

Thank you for purchasing the Djekrev Lift and Clamp Jack. This versatile tool is designed to reduce physical strain when lifting, positioning, and installing heavy items such as cabinets, doors, windows, tiles, and furniture. It also functions as a powerful clamp for various workshop applications.


- **Main Jack Body** (2 units)
- **Clamp Head Attachment** (2 units)
- **Non-Slip Protective Cover** (2 set)

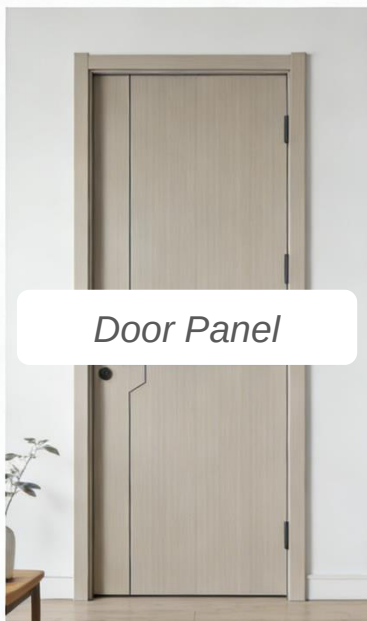

Door Panel




Home Appliances

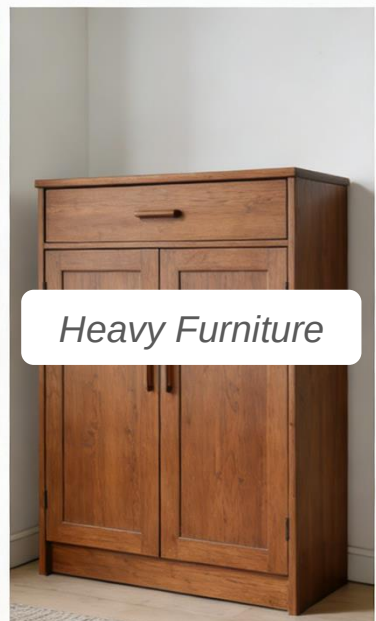

Heavy Furniture

2. Key Features & Specifications

- **Lift Capacity:** 220lbs / 100kg (per jack)
- **Lift Range:** 8.27" / 210mm
- **Dual Function:** Lifting Jack & Clamp
- **Highlight:** Dual-Mode Release.

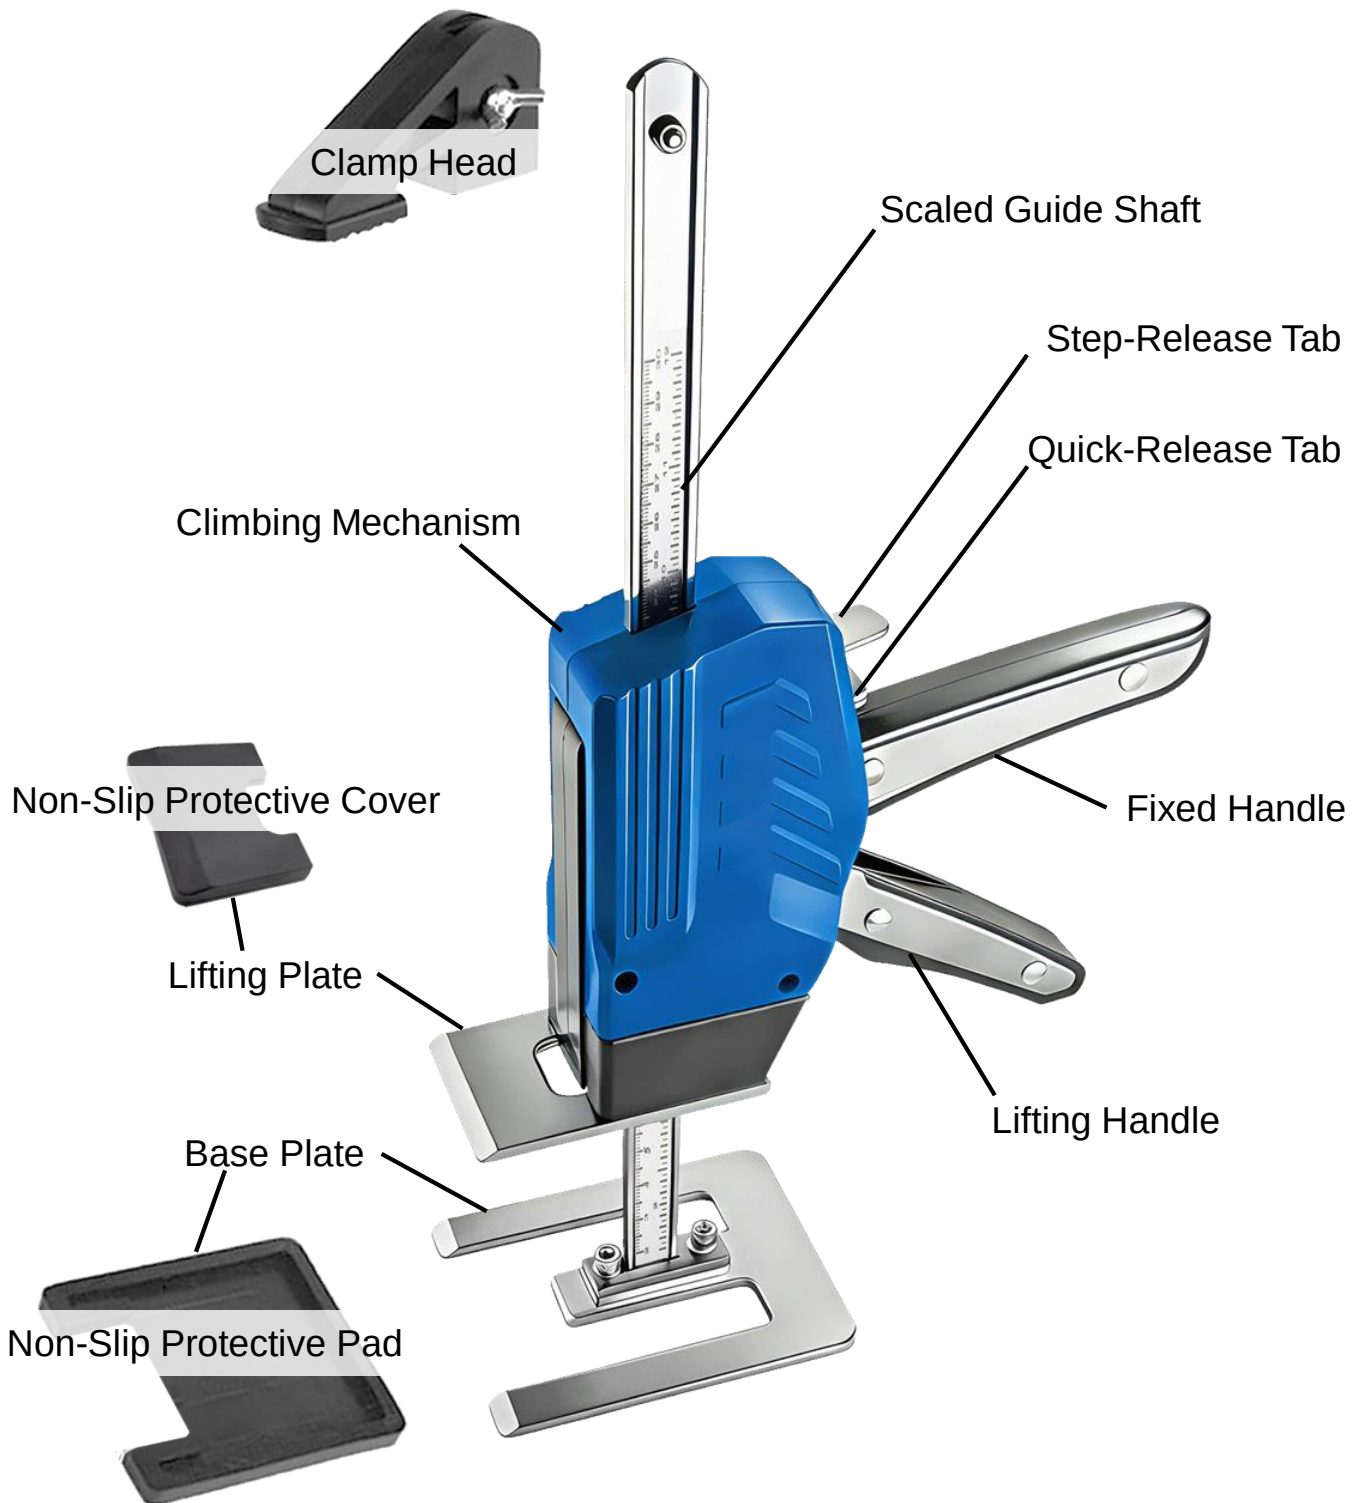

3. How to Use - Lifting Function

BEFORE YOU START: SAFETY PRECAUTIONS

- ALWAYS use on a flat, stable surface for stability.
- Do not exceed the maximum load capacity (220lb / 100kg per jack).
- Fully insert the Lifting Plate into the gap under the object for secure contact.

Step 1: Lifting the Object

1. Position the jack so the Lifting Plate is fully inserted under the object.
2. Grip the Lifting Handle and repeatedly lift it upward. The climbing mechanism locks automatically, raising the object step by step.
3. Continue until the object reaches your desired height.



Step 2: Lowering, Release & Resetting

A. Lower Loaded Object (Height Adjustment)

1. Ensure the object is additionally supported before operating. Lift the Lifting Plate to fully support the object, remove the additional support.
2. Press the Step-Release Tab to lower the object slowly, steadily, and in a controlled manner.
3. Stop once the object reaches the desired height.

B. Release & Remove Jack After Securing Load

1. Once the loaded object is firmly secured, press either the Step-Release Tab or Quick-Release Tab.
 - For gradual release: Press the Step-Release Tab until the Lifting Plate is fully disengaged from the object.
 - For quick release: Press the Quick-Release Tab to retract the Lifting Plate rapidly.
2. Safely withdraw the jack from under the object.

⚠ CRITICAL NOTE:

- The Quick-Release Tab is **for unloaded use only**. Using it while the jack is bearing load may cause the object to drop suddenly.
- Never remove the jack until the object is completely supported by stable stands or the ground.




C. Reset the Jack After Use

1. Hold down the Quick-Release Tab and push the Climbing Mechanism downward until it retracts to its original position.
2. Wipe clean any dirt or debris from the jack, and store it in a safe place.
3. Done. The jack is now ready for next use.

4. Optional: Convert to Clamp Function

This tool doubles as a powerful clamp—follow these steps to switch functions:

1. Remove the limit screw from the jack.
2. Insert the clamp head into the slider shaft, then tighten the screw to secure it in place.
3. Raise the Lifting Plate to clamp the workpiece placed between the clamp head and the Lifting Plate.

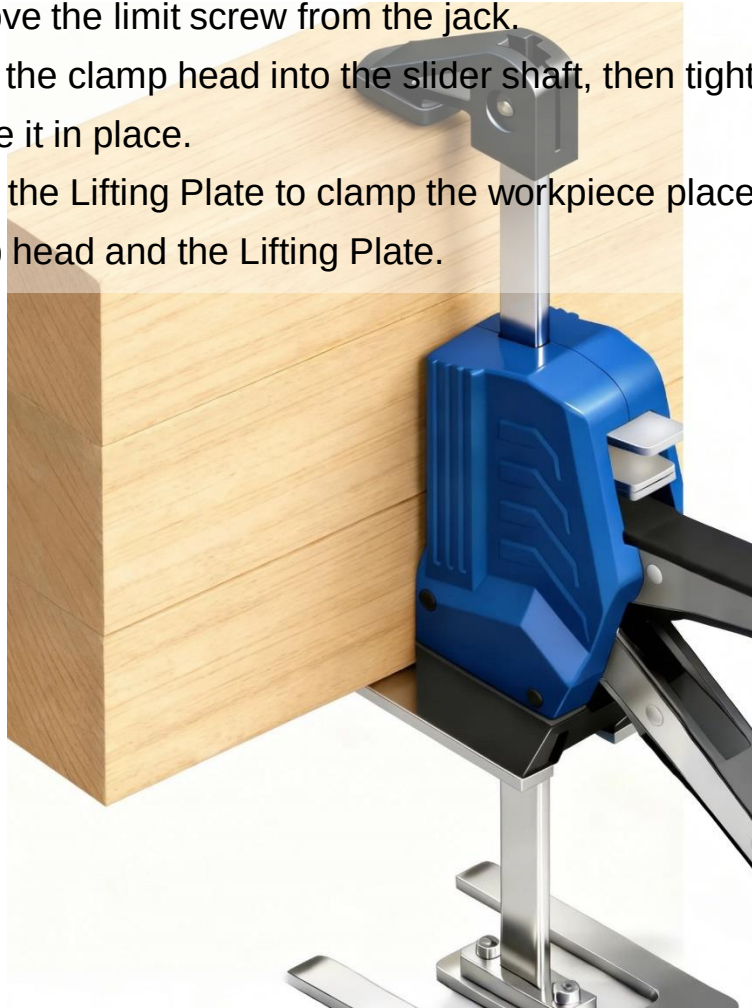

5. Operating Tips & Maintenance

- For optimal stability and load distribution, use two jacks in pairs whenever possible.
- Always insert the Lifting Plate as far as possible into the gap under the object to ensure secure contact.
- If movement becomes stiff or unsmooth, lubricate all moving parts (e.g., springs, spindles) with liquid lubricant or grease.
- Avoid applying lateral force to the jack during lifting or clamping to prevent damage to the internal mechanism.
- Inspect the jack for wear, deformation or loose parts before each use.
- Store the jacks in a dry, well-ventilated area. Keep it out of reach of children.