


controller_manager (one ROS2 node)

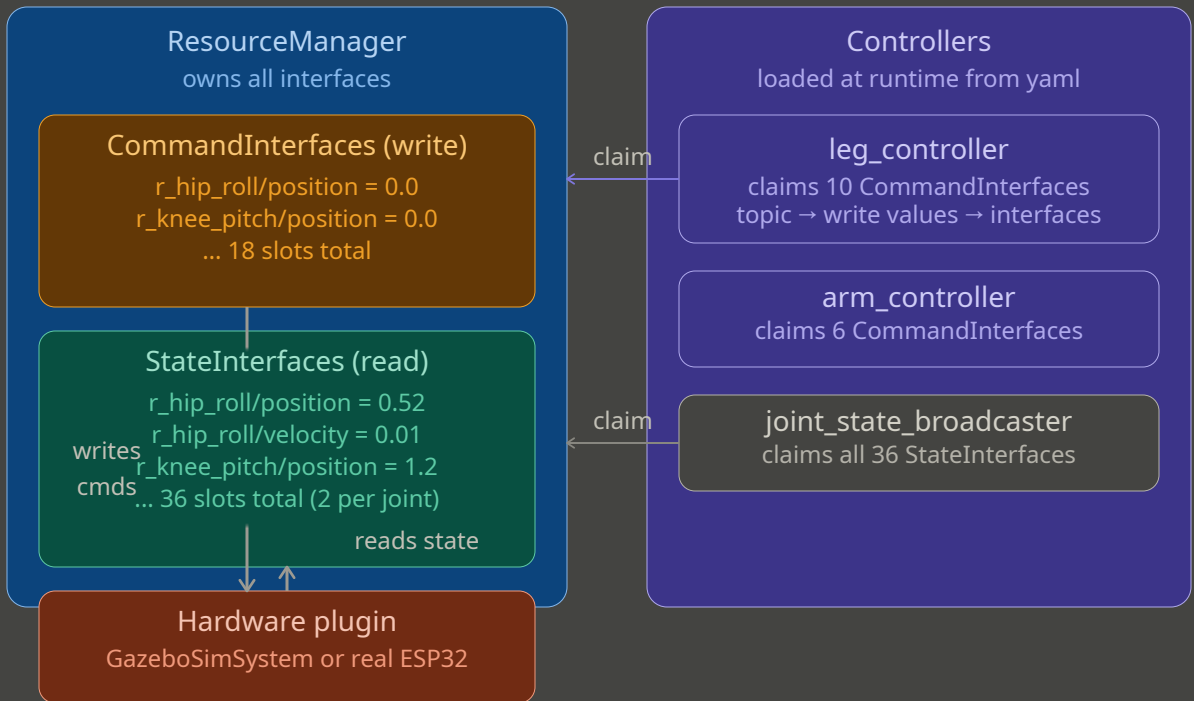

The update loop — runs at 100 Hz (set in controllers.yaml)

1. hardware plugin reads Gazebo joint positions → fills StateInterfaces
2. joint_state_broadcaster reads StateInterfaces → publishes /joint_states
3. leg_controller reads /leg_controller/commands → writes CommandInterfaces
4. hardware plugin reads CommandInterfaces → applies to Gazebo joints