X62

SUSPENSION AIR CUSHION : REMOVAL - REFITTING

⚠ Caution, one or more warnings are listed in this method ⚠

Torque tightening		
air supply pipe of the air cushion	12 N.m	

Ingredient
teflon adhesive roll

1 REMOVAL

1.1 REMOVAL PREPARATION OPERATION

(See SUSPENSION : PRECAUTIONS FOR THE REPAIR)

Position the vehicle on a four-post lift (see, Vehicle : towing and lifting).

Position the axle stands under the rear support points (see, Vehicle : towing and lifting).

⚠ CAUTION


The pressure in the air cushions is between1 to 7 bardepending to the load.

⚠ CAUTION

Use the following procedure to bleed the air pressure from the suspension cushions.




- Position the vehicle in the low position using the remote control (1).
- Wait for the end of the air purge of the pneumatic system.

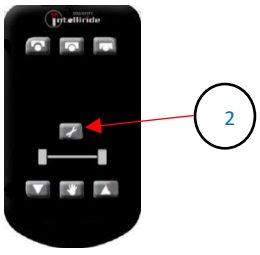

Confidential C

- Put the pneumatic system in service mode using the remote control (2). Commissioning is confirmed by switching the button to red.


Disconnect the battery (see, 12 V battery : removal - refitting).

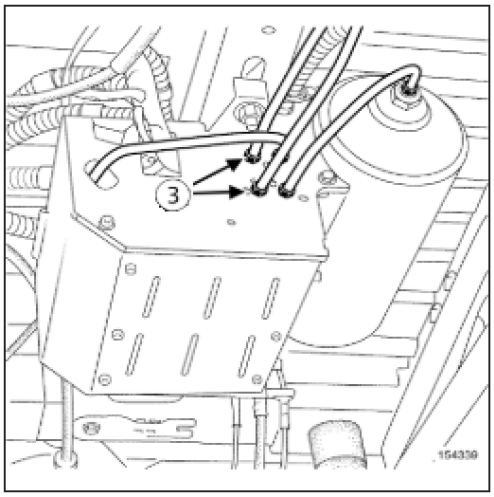

- - Unscrew the connector (3) from the air supply pipe of the air suspension cushion concerned

SUSPENSION AIR CUSHION : REMOVAL - REFITTING


1.2 REMOVAL OPERATION

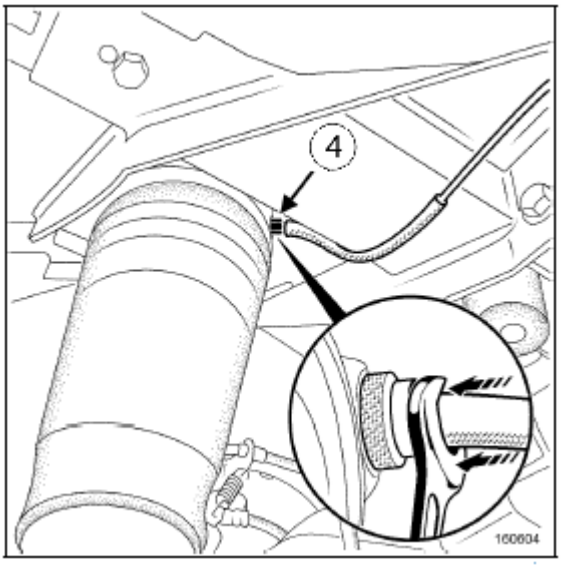

- Remove the air supply pipe (4) from the suspension cushion by pushing and pulling on the supply pipe connection


Confidential C

SUSPENSION AIR CUSHION : REMOVAL - REFITTING

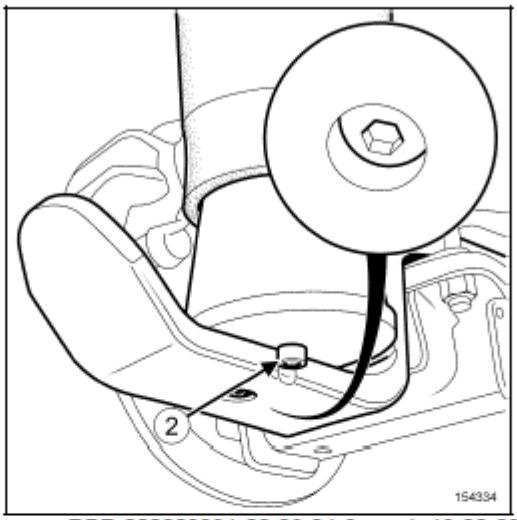

RPR-000208331-02-09-04-6-repair-13-02-09-04-01-37-1-3-9-000060831

- Remove the air cushion lower bolt (2).

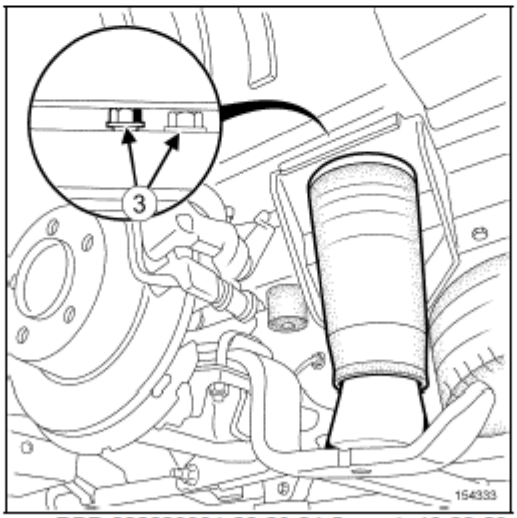

RPR-000208331-02-09-04-5-repair-13-02-09-04-01-37-1-3-10-000060830

- Remove :
  - the air cushion upper bolts (3),
  - the air cushion.

Confidential C

SUSPENSION AIR CUSHION : REMOVAL - REFITTING

2 REFITTING

2.1 REFITTING PREPARATION OPERATION

Applyteflon adhesive roll (see, vehicle : parts and consumables for the repair)on the air pipe union.

CAUTION

Be sure to connect the air supply pipes correctly.
Do not inflate the air cuhion if is not secured to the vehicle.

2.2 REFITTING OPERATION

Refit:

- the air cushion,
- the air cushion upper bolts,
- the air cushion lower bolt,
- the air supply pipe of the air cushion.

Torque tighten thetighten to torque air supply pipe of the air cushion at 12 N.m.

2.3 FINAL OPERATION

Proceed in the reverse order to removal.

- Deactivate the service mode using the remote control, the red light goes out.
- Control the system in all the predefined positions available using the remote control.
- Check for leaks using a detector, repair if necessary.

SUSPENSION : PRECAUTIONS FOR THE REPAIR

Switch off the ignition before working on the system.

Be careful of the pressure in the air reservoirs when disconnecting a pipe (pressure10to12 bar).

Be careful of the pressure in the air cushions when disconnecting a supply pipe to the cushions (pressure1to 7 bardepending on load).

Take care not to allow water or moisture to enter the pneumatic circuit.

The pressurised air reservoirs must not be modified or undergo any attack that could damage them.

Confidential C