
## FENDER "TWIN-AMP"SCHEMATIC MODEL 5F8-A I-46

NOTICE

VOLTAGES READ TO GROUND WITH ELECTRONIC VOLTMETER VALUES SHOWN + OR - 20 %

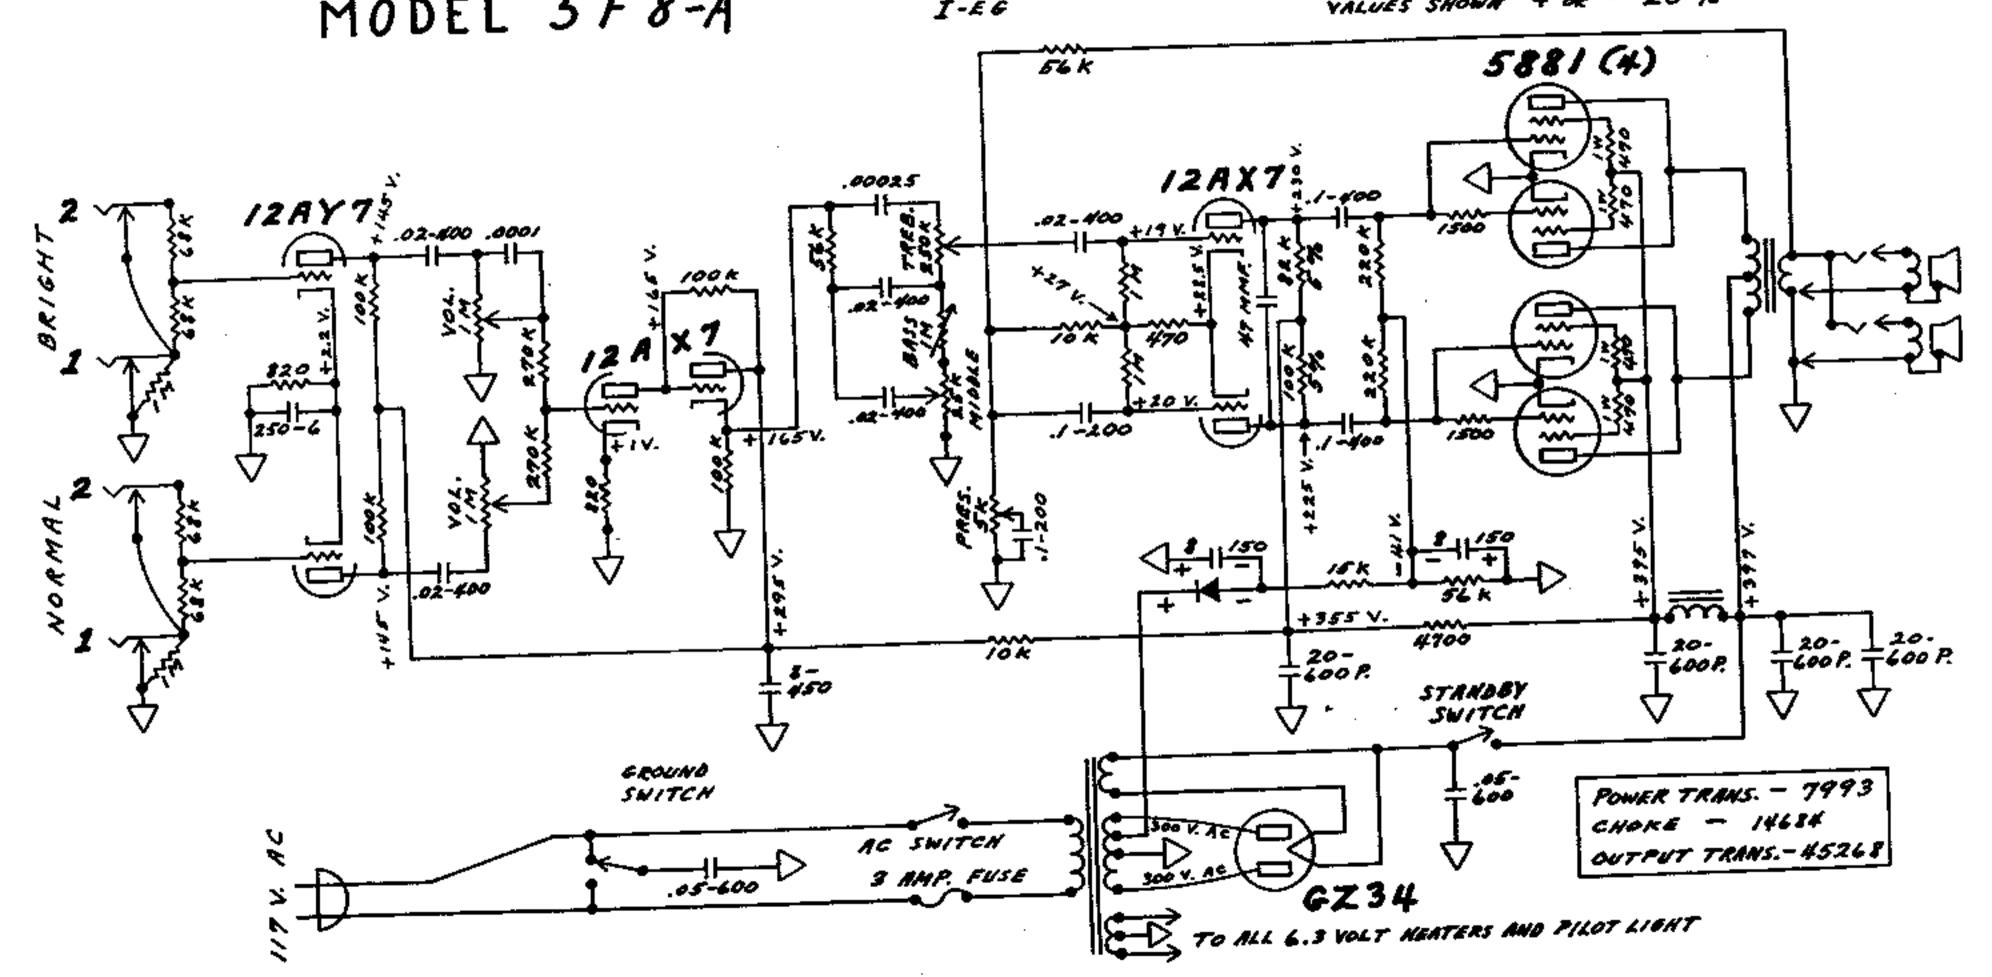

## FENDER TWIN-AMP LAYOUT

## NOTICE

VOLTAGES READ TO GROUND WITH ELECTRONIC VOLTMETER

