
FENDER SUPER-AMP SCHEMATIC

NOTICE

VOLTAGES READ TO GROUND WITH ELECTRONIC VOLTMETER VALUES SHOWN + OR - 2.0 %

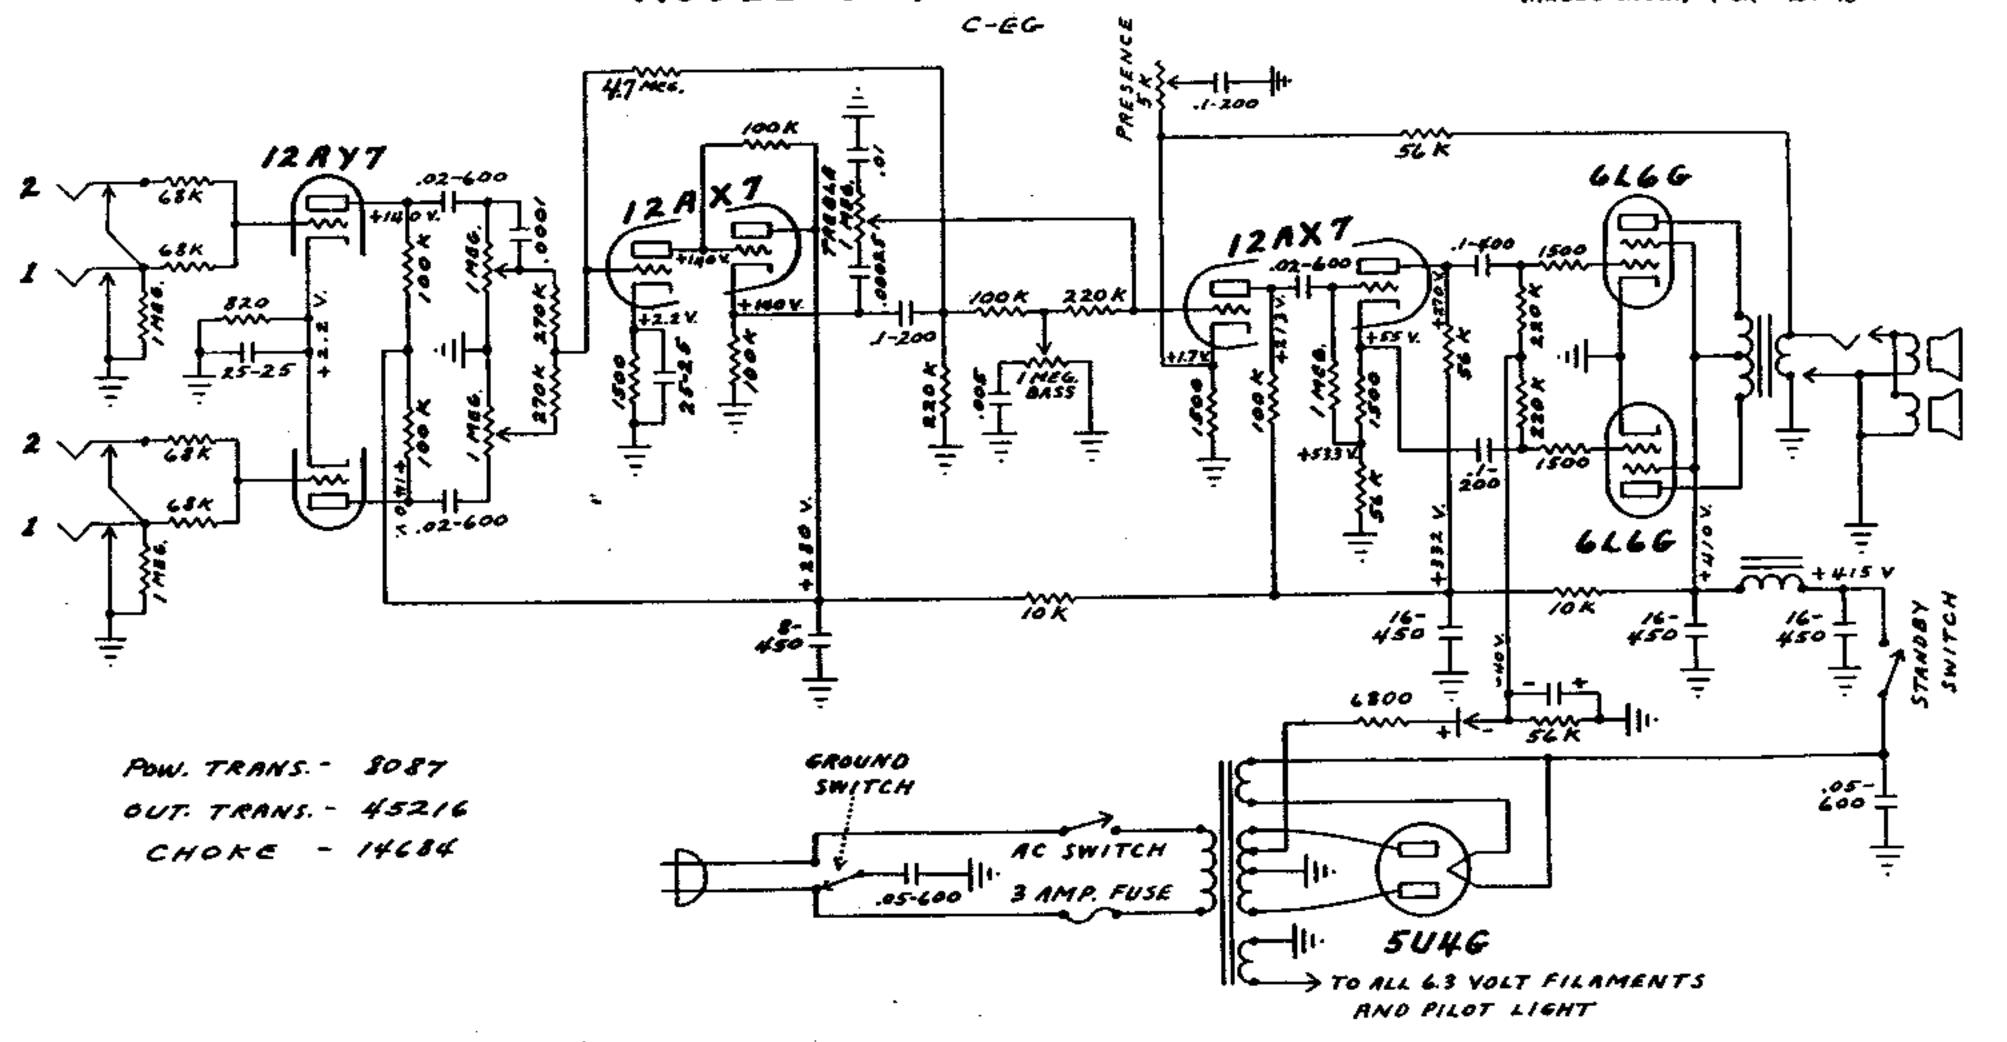

FENDER" SUPER-AMP" LAYOUT MODEL 5F4

NOTICE

VOLTAGES READ TO BROUND WITH ELECTRONIC VOLTMETER VALUES SHOWN + OR - 20 %

