

Floodlight Settings Guide for Reolink Floodlight Camera Series

To make the most of your Reolink floodlight camera, it's important to understand how to configure its two key lighting settings: **Light** and **Light Alert**. Although these options appear separately in the app, they control the same physical light on the device. This guide will walk you through how to set them up effectively.

Applies to: Reolink Elite Floodlight WiFi, Reolink Elite Pro Floodlight PoE.

For Reolink Duo Floodlight WiFi and Duo Floodlight PoE, refer to: [How to Configure Spotlight Settings for Your Camera](#).

Table of Content

- 1. [Step-by-Step Guide to Floodlight and Light Alert Settings](#)
- 2. [How Floodlight and Light Alert Work Together](#)

Step-by-Step Guide to Floodlight and Light Alert Settings

Prerequisites


- Reolink App version: 4.55 or higher
- Reolink Client version: 8.20.5 or higher
- Camera firmware: Must be updated to the latest version
- Compatibility note:** When used with Reolink NVRs or Reolink Home Hubs

Usage Scenario	Supported Models (with latest firmware)	Notes
With NVR	RLN8-410 (HW: NVR_NNT3NA78P / N7MB01) RLN16-410 (HW: NVR_NNT4NA716P / N6MB01) RLN36 NVS8 NVS16 NVS36 RP-PN8 RP-PN16	Must upgrade firmware to the latest version
With Hub	Home Hub Pro, Home Hub	

Where to Find the Settings


- Open the **Reolink App** and go to the camera's settings page.
- There are two lighting-related options:
 - Floodlight** (under the **Light** menu)
 - Light Alert** (under **Notification Settings**)

Note: Both settings refer to the same physical light, not separate ones. Don't mistake them for two different lights.

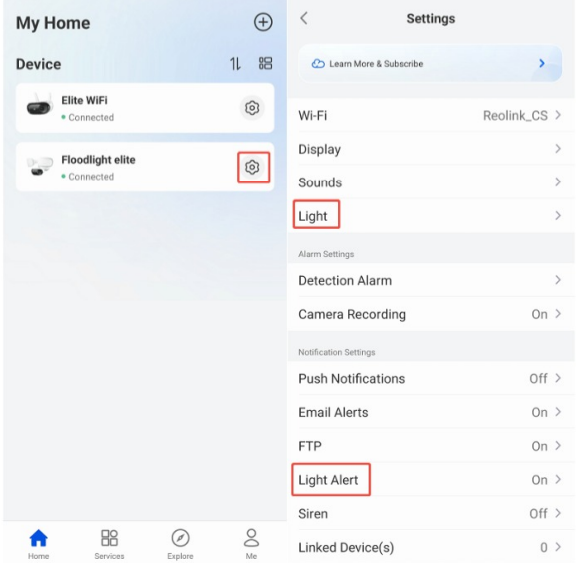

Part 1. Floodlight Settings (Light Menu)


The **Floodlight** setting controls how the light operates under normal (non-alarm) conditions, including adjustments to brightness, color temperature.

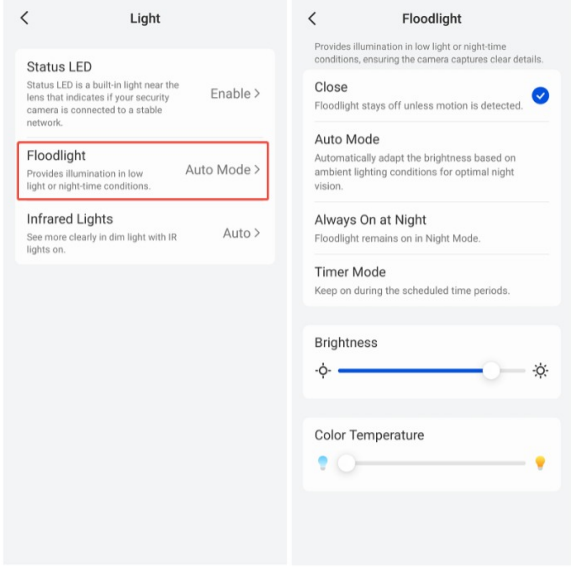

- Close:** The floodlight will stay off unless motion is detected. (Make sure Light alert is enabled)
- Auto Mode:** Adjusts light brightness automatically based on ambient light, helping to save energy.
- Always On at Night:** The light stays on when the camera is in night mode.
- Timer:** Keeps the light on during your chosen schedule. (For example, if the schedule is set from 19:00 to 6:00, the light will remain on during that time period.)
- Brightness:** Manually sets the brightness level of the floodlight.
- Color Temperature:** Adjust the floodlight color temperature from 3000K warm light, ideal for creating a cozy and welcoming atmosphere, to 6000K cool light, which offers brighter illumination for enhanced security. Slide to the right for a warmer tone, or to the left for a cooler, more intense light.

Part 2. Light Alert Settings (Notification Settings)

The **Light Alert** setting controls how the light responds to motion detection—whether from a person, vehicle, or animal. It manages alert-specific behavior, such as whether the light turns on, flashes, and how it behaves during an alarm event.

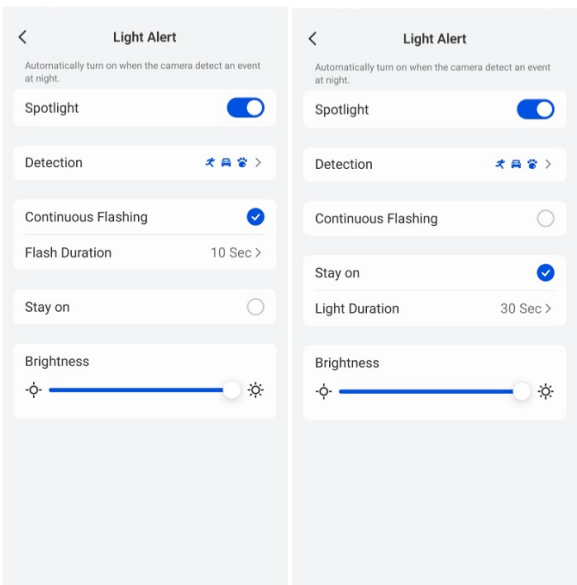

- Spotlight:** When enabled, the light turns on when the camera detects an alarm event.
- Detection:** Choose what types of objects will trigger the light (person, vehicle, animal).
- Lighting Mode:** Choose how the light will operate when an alarm is detected (Continuous Flashing or Stay On).
 - Continuous Flashing:** The light flashes repeatedly upon detection to deter intruders; flash duration is adjustable.
 - Stay On:** The light turns on and stays lit for a set duration upon detection.
- Brightness:** Controls the light intensity during alarm events.

Note: Upon detection, choose either Continuous Flashing or Stay On for the light—only one can be enabled at a time.

Via Reolink Client	+
Via Monitor Connected to Reolink NVR	+

How Floodlight and Light Alert Work Together

How They Work Together

When both **Floodlight** and **Light Alert** modes are enabled, they work in a priority order:

- Normal Mode:** Floodlight settings apply when there is no detection event.
- Alert Mode:** When motion is detected, Light Alert settings override the Floodlight mode.
- After Alert:** Once the alert ends, the camera returns to the Floodlight behavior.

If the brightness levels differ in the two modes, the camera will switch accordingly—using the **Light Alert** brightness during alarms and reverting to the **Floodlight** brightness afterward.

Example Usage Scenarios

- Dusk-to-Dawn Automation(Lighting Purpose):** The Camera turns the floodlights on at dusk and off at dawn. They provide steady ambient lighting and switch to a custom brightness when motion is detected, improving visibility and deterrence.
For continuous Night Lighting with enhanced motion alerts, set the floodlights to **"Always On at Night"** and enable **Light Alerts** (flash or stay-on) for motion events.
- Smart Mode(Detection Purpose):** IR light stays on and the floodlight stays off at night. When motion is detected, the floodlight turns on automatically.
If you want the floodlight to activate **Only** on motion, set the Floodlight to **"Close"** and enable **Light Alerts** (flash or stay-on) as needed.

With the right settings, your Reolink floodlight camera delivers both effective security and customizable lighting for any scenario.

Have more questions? [Submit a request](#)



Helpful?

Yes No

PRODUCTS

RLC-811A
Reolink Duo 2 PoE
Reolink Go PT Plus
Battery Cameras
Dual-Lens Security Cameras
PoE IP Cameras
WiFi Security Cameras
Security Camera Systems
Video Doorbells
[Solution Finder](#) >

SUPPORT

Support Center
Blog
3rd-Party Compatibility
Payment Methods
Warranty & Return
Shipping & Delivery
Track Your Order
Product Registration
[Purchase FAQs](#) >

COMPANY

About Us
Security
#ReolinkCaptures
Press & Media
Contact Us
Privacy Policy
Terms & Conditions

PROGRAMS

Affiliate Program
Partner Program
Shop for Business
#ReolinkTrial
#ReolinkInAction