
AELab25 Modern UI Overview

v25.1 | Updated October 30, 2026

Current capabilities across PSS/E, TARA, PSCAD and Utilities. Source-verified feature updates lead this edition; an expanded, clearly labeled archive of 55 UI captures follows. Cover image: archived interface reference.

Feature descriptions reflect reviewed source code. The cover image and reference gallery are archived captures. No licensed simulator run or engineering validation was performed for this update.

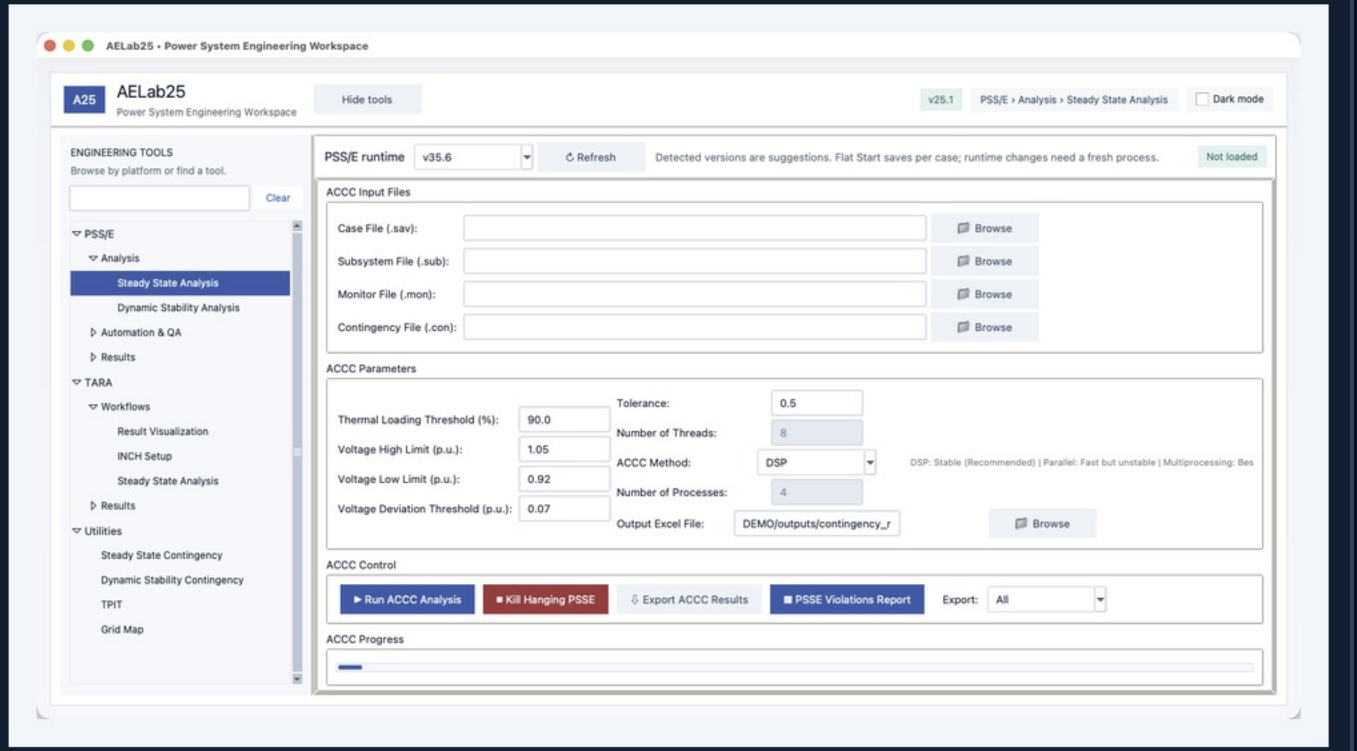

Cover image: archived UI reference

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

Current workspace map

PSS/E > TARA > PSCAD > Utilities

The searchable tool rail now spans four platforms. PSS/E has a dedicated Load Modeling section; PSCAD has its own Model Preparation workspace.

PSS/E | Steady-state and dynamic analysis; automation, model QA and results.

PSCAD | Model Preparation > One-Line to PSCAD review prototype.

PSS/E Load Modeling | Composite Load Models (CMLD), PERC1 and PERC2.

Utilities | Steady State Contingency and Dynamic Stability Contingency.

TARA | Result visualization, INCH case preparation, study setup and result review.

Utilities | TPIT and Grid Map remain available alongside the contingency tools.

Sources: aelab25_app/workspace_navigation.py

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

What has expanded since the previous overview

Implementation reviewed October 30, 2026 | AELab25 v25.1

The published 47-page edition covered 45 archived screens. This update adds the current feature guide and the ten additional TARA screens in the source catalog.

Study management | Saved ACCC setups and evidence; connected Dynamic Simulator studies, event selection, dashboard and history.

Model preparation | CMLD, PERC1/PERC2, the PSCAD review prototype, richer equipment IDV authoring and dynamic event preparation.

Review and reporting | ACCC input checks and audits; TARA native imports, SCD planning, summaries, cross-case plots and mitigation registers.

Sources: aelab25_app/workspace_navigation.py; Docs/AELab25_Screenshots/README.md
Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

ACCC: saved studies and preflight checks

PSS/E > Analysis > Steady State Analysis

Study setup, execution evidence and recorded results now have separate lifecycles. Reviewing a previous run does not replace the current editable setup.

Save setup, Save as new and Load setup manage named configurations. Run history reopens recorded results and their submitted settings.

Check inputs reviews files, deck structure, subsystem references and numeric settings. Native DFAX check builds DFAX in a fresh worker without running ACCC.

Run manifests retain case identities, input hashes, criteria, runtime and output paths. Unsupported input syntax and native failures remain visible for review.

Sources: Docs/ACCC_Studies_and_Results.md; Docs/ACCC_Input_Checks.md
Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

ACCC: assessment completeness and audit reports

PSS/E > Results > Steady State Results

Run Summary and Contingency Audit expose the evidence behind violation tables, including nonconvergence, absent records and voltage extrema.

Explicit convergence and uniquely identified base-case evidence govern comparisons. Missing ratings or voltage evidence are unavailable, never substituted with zero.

Submitted/returned contingency coverage, evaluated voltage counts and zero-voltage observations are retained. Zero voltage remains visible and requires review.

Excel/CSV reports distinguish complete assessments with no violations from incomplete evidence. Native PSS/E report criteria can differ from AELab's recorded assessment.

Sources: Docs/ACCC_Studies_and_Results.md

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

Dynamic Simulator: connected study workspaces

PSS/E > Analysis > Dynamic Stability Analysis > Dynamic Simulator

Studies, Setup, Contingencies, Run dashboard and Study history organize the full workflow, with live console and files/plotting views also available.

Named studies support save, duplicate, import/export and restoration. Previews show settings, notes and checked events before opening a study.

Searchable Run checkboxes preserve hidden selections. Highlighting an event is separate from selecting it for execution; Run selected includes all checked events.

The dashboard combines live execution status with event details. History reopens recorded settings and evidence; automatic refresh stays on the dashboard. One study runs at a time.

Sources: Docs/Dynamic_Simulator_TRABAJO_Comparison.md; aelab25_app/dynamic_workspace_dashboard.py

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

Dynamic Simulator: event evidence and run controls

Run dashboard > Summary / Channels / Losses / Plots / Attempts / Logs / Setup

Execution outcome and engineering assessment remain separate. Event-level evidence supports investigation of completed, failed and retried attempts.

Review full-resolution channel extrema and times, voltage evidence and separate connectivity, equipment-loss and relay-shedding measures. Missing evidence remains explicit.

Embedded previews and interactive plots use recorded artifacts. Preview samples may be decimated; reported extrema come from full-resolution assessment, and FREQ is not automatically Hz.

Isolated workers support concurrency, per-attempt timeout, retries and optional crash reruns with recorded settings. Failed attempts remain available; engineering FAIL/REVIEW is not automatically retried.

Sources: Docs/Dynamic_Simulator_TRABAJO_Comparison.md

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

Composite Load Models (CMLD)

PSS/E > Load Modeling > Composite Load Models (CMLD)

A guided workspace wraps source inspection, database preparation and reviewed legacy CMLD DYR generation, with dedicated source, output and log views.

Create a blank workbook or inspect Excel/SQLite inputs. Validate schema, values and assignments, then create a canonical database snapshot without PSS/E.

Save/load setups and select an explicit runtime, SAV and generation settings. Generate DYR uses an isolated licensed Windows PSS/E process and retains logs, manifests and hashes.

New setups default to PSS/E 35.6. Version guidance is explicit; structural checks and generated records do not validate model suitability, initialization or legacy-to-modular conversion.

Sources: Docs/CMLD_Workspace.md; aelab25_app/tabs/cmld_tab.py

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

PERC1 and PERC2 preparation workspaces

PSS/E > Load Modeling > PERC1 / PERC2

Separate model drafts organize study context, reference parameters, facility allocation, vendor DYR templates, research limits and review logs.

Record explicit MW/Mvar allocations and inspect reference worksheets. Save/load each model's draft independently; reference exports are labeled REFERENCE_ONLY.

Reviewed vendor-template replication changes bus/load identity while retaining the supplied model parameters. Worksheet values are not silently serialized into a guessed DYR schema.

The app defaults to PERC1 36.5 and provisional PERC2 36.7 targets. PERC2 availability remains UNCONFIRMED; templates, installed libraries and model behavior require separate verification.

Sources: Docs/Load_Modeling_PERC_Research.md; aelab25_app/load_model_versions.py

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

One-Line to PSCAD: local review prototype

PSCAD > Model Preparation > One-Line to PSCAD

Import a PDF or image, inspect the interpreted drawing and explicitly review equipment, values, units and connectivity before preparing exports.

Drawing overlays, equipment/parameter editors, connectivity and issue review retain source identity and correction history. Missing data remain unresolved rather than receiving invented defaults.

Save/load JSON and export a REVIEW_ONLY bundle without PSCAD. Review release-specific mappings before preparing a Windows build bundle for the configured PSCAD 5.1.0 target.

Recognition supports a narrow local baseline and optional OCR. This is not a verified turnkey drawing-to-EMT converter; licensed project creation, compilation and engineering validation are separate stages.

Sources: Docs/One_Line_to_PSCAD.md; Docs/PSCAD_Automation_Mapping.md

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

IDV Generator: equipment projects and full-file editing

PSS/E > Automation & QA > IDV Generator

Build a change and Edit an existing IDV now support complementary authoring workflows. Generation produces reviewed command text; it does not execute a case.

Built-in line, autotransformer, shunt and bus templates expose editable engineering defaults. Combine equipment changes in an ordered project and save/reload its configuration.

The persistent conductor/rating library supports explicit mappings. Line previews distinguish conductor ratings from the separately entered substation equipment limit and show the conversion.

The complete-file editor retains command order, comments and unedited recording content. Edit labeled commands or full text, then save under a new name for independent case review.

Sources: IDV_GENERATOR_README.md; aelab25_app/tabs/idv_tab.py

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

Batch Changes and Model QA: isolated execution

PSS/E > Automation & QA > Apply Batch Changes / Model QA & Validation

The batch interface separates Setup & Plan, Case Outputs and Run Log, while retaining visible run/cancel controls and explicit per-case change ordering.

Assign ordered IDV/Python changes to selected cases and review derived outputs. Case Outputs fills when the batch finishes; Run Log shows progress during execution.

QA and Batch Changes run in separate owned worker processes. Cancellation targets the selected process tree; shutdown failures and partial outputs remain visible.

These jobs have no automatic elapsed-time cutoff. Process liveness is not numerical progress, and successful process completion does not turn failed QA checks into passes.

Sources: Docs/PSSE_Job_Isolation.md; aelab25_app/tabs/batch_case_tab.py
Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

TARA: contingency profiles and SCD planning

TARA > Workflows > Steady State Analysis

Study planning now offers finer contingency-family selection, explicit event roles and frozen plan review before isolated TARA execution.

Select N-1 families P1s, P2s, P4s, P5s and P7s independently, alongside P3/P6/ERCOT2/ERCOT3 N-1-1 mappings. Review case, deck and output assignments before running.

Export separate N-1/N-1-1 TARAViewer batch CSVs and printable plans. SCD planning retains explicit Options files, subsystem choices and load-eligibility selections.

Generation-side/no-load-adjustment and load-enabled SCD variants remain distinct. Reported execution is not correction approval; SCD engineering outcome remains NOT_EVALUATED.

Sources: aelab25_app/TARA_POWERGEM_CA.md; aelab25_app/tabs/tara_powergem_ca_tab.py

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

TARA: native results, summaries and comparisons

TARA > Results > Steady State Analysis Results

Native N-1 and N-1-1/SCD imports join the combined-workbook workflow, with traceable result views and exports for engineering review.

Worst Thermal and Worst Voltage retain reported element/event identity, source rows and distinct reported-contingency counts. These counts do not establish execution coverage.

Detailed Thermal/Voltage Cross-Case and compact Summary tables preserve case context and source limits. Missing values and status text are not converted to zero.

Export updated workbooks and self-contained HTML thermal/voltage plot reports. Native source-selection policy and SCD adjustment context remain explicit in the evidence.

Sources: aelab25_app/TARA_POWERGEM_CA.md; Docs/AELab25_Screenshots/README.md

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

TARA: mitigation register preparation

TARA > Results > Mitigation template export

Direct native N-1 and N-1-1 workbooks can feed an auditable Excel register for reviewing candidate mitigation work.

Combine reported thermal and voltage issues into a review template while retaining source workbook, source-row and hash evidence.

Editable CAP/action fields support engineering disposition. Policy-review information accompanies the generated register rather than silently approving a response.

A register entry or plotted violation is a review aid. It does not establish an accepted mitigation, contingency coverage, study compliance or successful corrective operation.

Sources: aelab25_app/TARA_POWERGEM_CA.md

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

Dynamic contingencies: Audit & Split and Auto CONs

Utilities > Dynamic Stability Contingency

The newer event-preparation tabs extend the original DWG setup/build workflow with searchable event evidence, cut-ins and reviewed template reconstruction.

Audit executable bus references in IDV folders, loose files and ZIPs. Preview/export selected events; prepare two-sided line cut-ins and batch mappings from Excel/CSV.

Audit & Split retains manifests and recovery archives. Default replacement removes selected originals from the active folder only after verification; Keep originals selects copies-only behavior.

Audit & Split > Rebuild from DWG reuses reviewed event templates. Auto CONs prepares P1 source CONs from SINGLE rules and paired CON decks from selected sources.

Sources: Docs/SELECTIVE_DWG_WORKFLOW.md; aelab25_app/dwg_contingency_source_ui.py

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

Dynamic contingencies: pairing and equipment inputs

Utilities > Dynamic Stability Contingency > Pair event IDVs / Equipment IDVs

Two additional preparation routes assemble candidate event scripts with explicit inputs, previewable text and export evidence.

Pair event IDVs combines ordered first-outage and second-event sources for P3/P6/ERCOT2/ERCOT3 candidates. Preview scripts and export selected pairs with hashes and assumptions.

Equipment IDVs accepts pasted bus, AC-line, transformer and machine tables to prepare P1/P3/P6/ERCOT2/ERCOT3 batches. Advanced exact templates and full-script previews remain available.

Generated category names do not establish compliance, complete topology coverage or an adjusted initial case. Review event actions, timing and case assumptions before licensed simulation.

Sources: Docs/PAIRED_DYNAMIC_IDVS.md; Docs/EQUIPMENT_DYNAMIC_IDVS.md

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

Screenshot reference: 55 archived application views

Reference atlas | PSS/E, TARA and Utilities captures

The following pages preserve the established screen guide and add ten TARA catalog views missing from the previous portfolio PDF. These are archived captures, not fresh October screenshots.

The atlas covers analysis, automation, result review, INCH preparation, contingency utilities, TPIT and Grid Map. Added TARA pages cover SCD, Worst/native results and cross-case/summary views.

Load Modeling, PSCAD and the expanded Dynamic Simulator dashboard are documented in the preceding source-based feature pages; the archived catalog has no captures of those new layouts.


Blank tables and synthetic labels are intentional. Captures do not represent licensed study validation. Source revision, content and image hashes are recorded in docs/aelab-overview.json.

Sources: Docs/AELab25_Screenshots/README.md; Docs/capture_aelab25_screenshots.py

Reviewed 2026-10-30 | Source a70134fc600d729ee5813502af2a26c26e86f7cf

Reference: Steady State Analysis

ARCHIVED UI | PSS/E › Analysis › Steady State Analysis

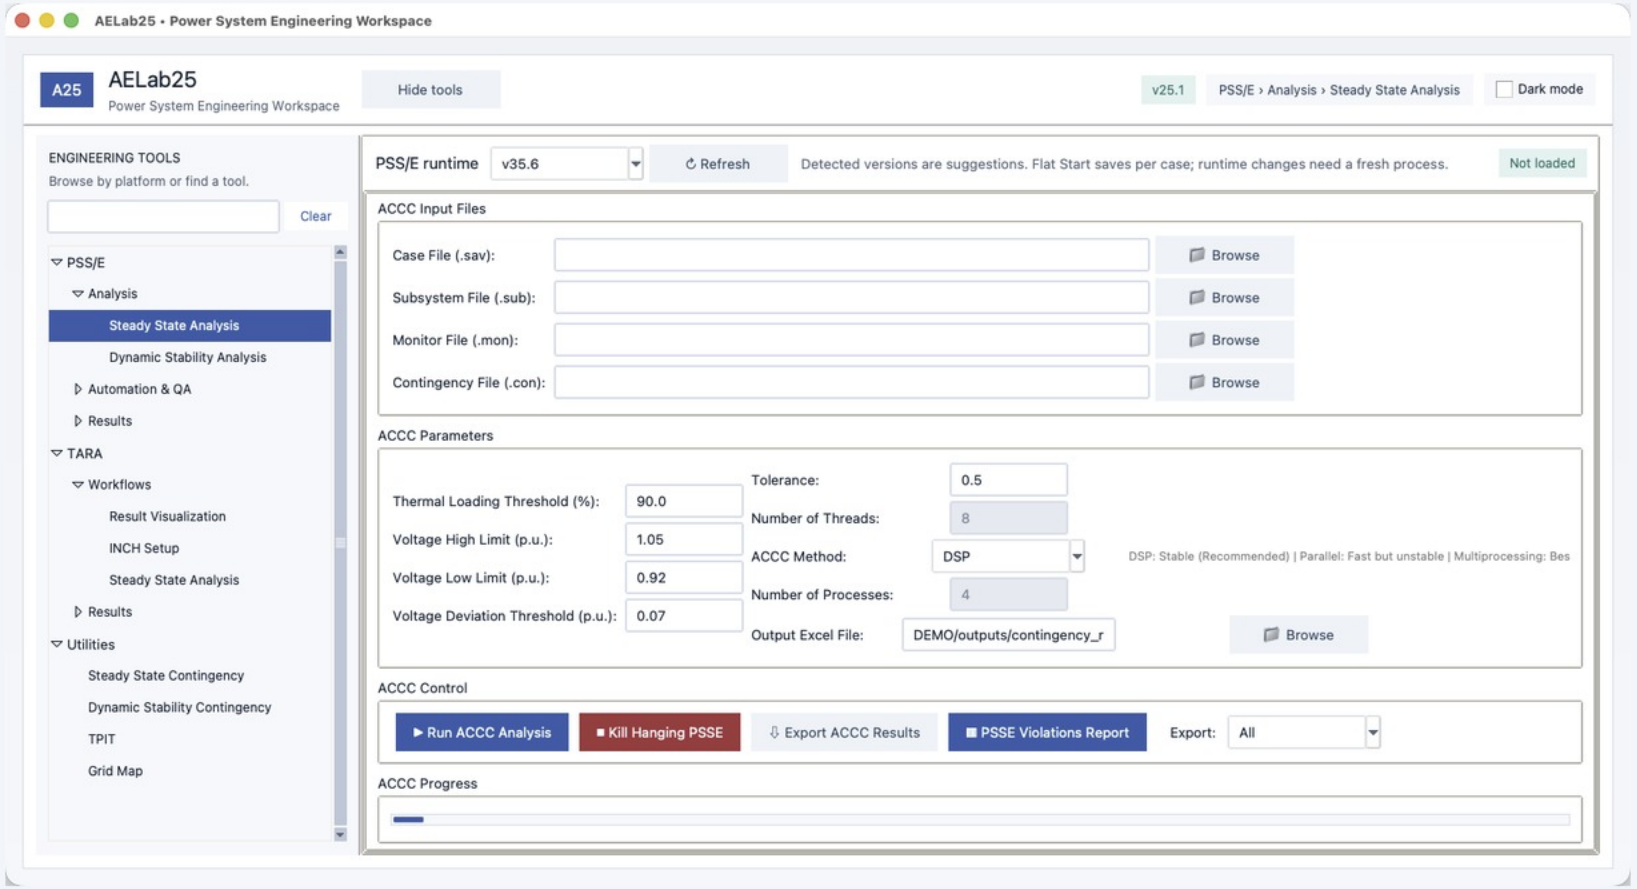


WHAT THIS TAB DOES

Archived ACCC setup with case, contingency, solver and reporting controls. The current workflow adds saved studies, input/DFAX checks, history and assessment audit reports; see the feature guide. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Flat Start & Validation

ARCHIVED UI | PSS/E › Analysis › Dynamic Stability Analysis › Flat Start & Validation

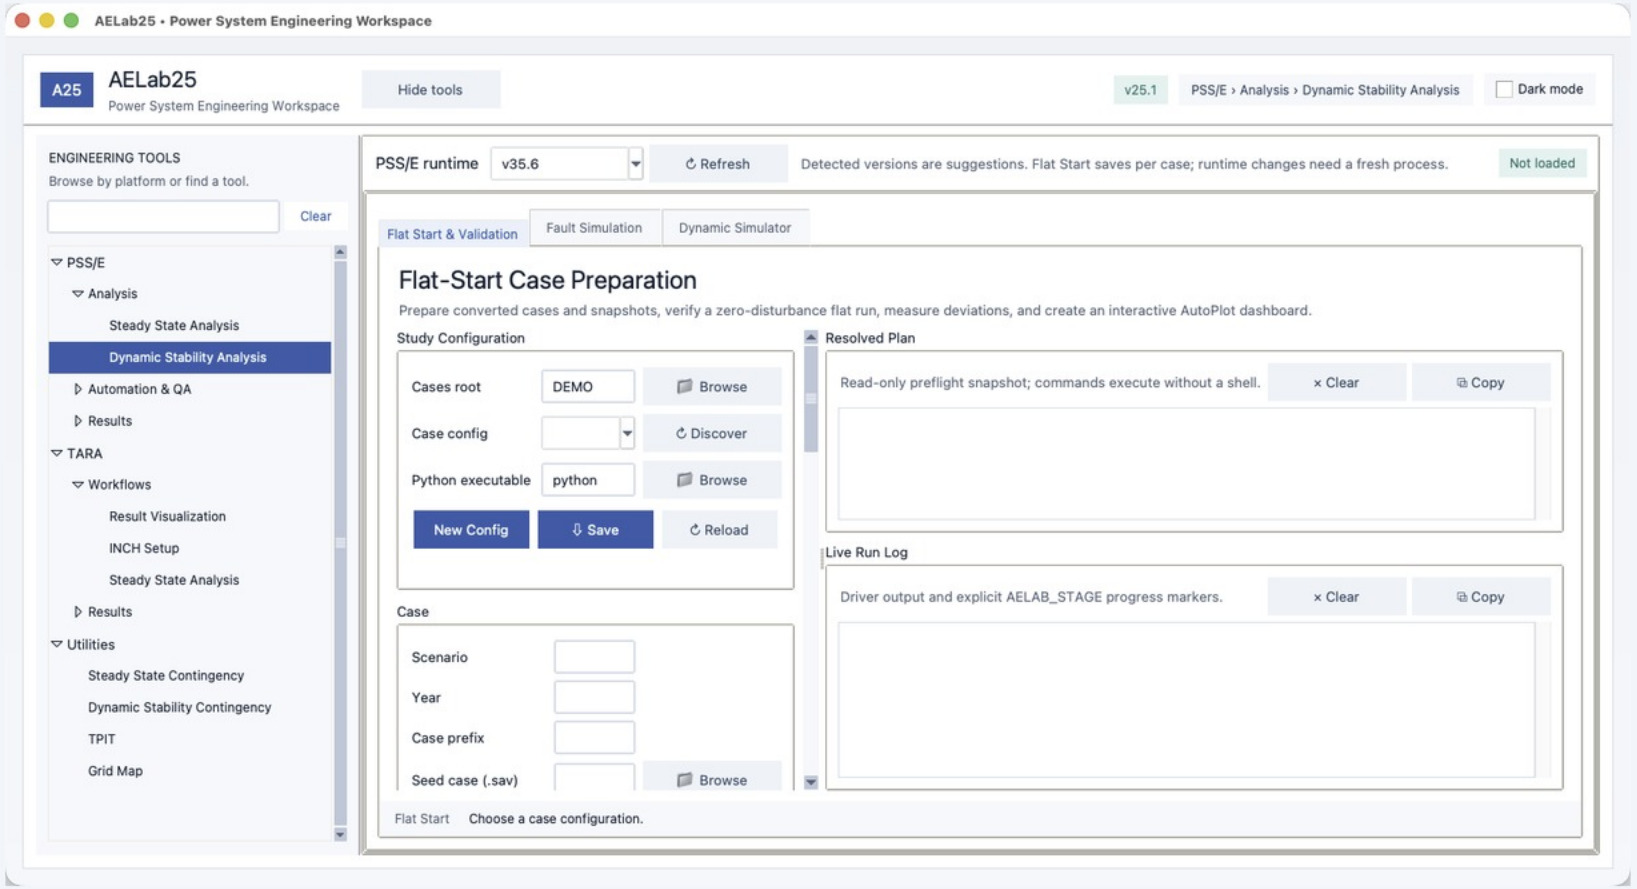


WHAT THIS TAB DOES

Prepares converted cases and snapshots, verifies a zero-disturbance run, checks deviations, and can build an AutoPlot dashboard. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Fault Simulation

ARCHIVED UI | PSS/E › Analysis › Dynamic Stability Analysis › Fault Simulation

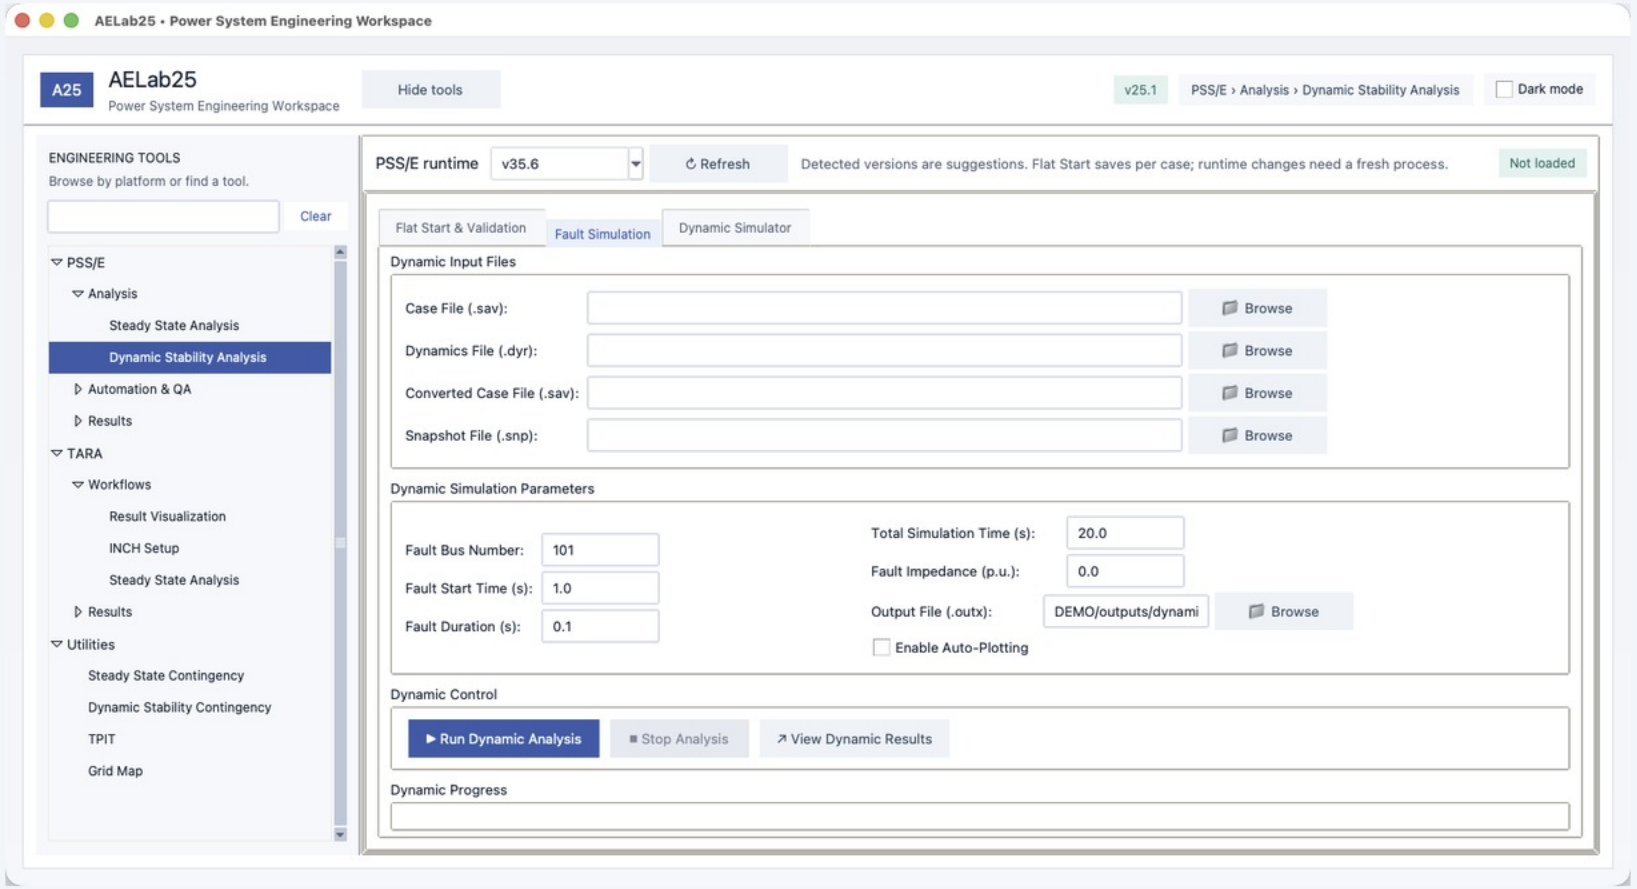


WHAT THIS TAB DOES

Collects prepared dynamic inputs, fault timing and impedance, simulation duration, output path, progress, and optional plotting. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Dynamic Simulator

ARCHIVED UI | PSS/E › Analysis › Dynamic Stability Analysis › Dynamic Simulator

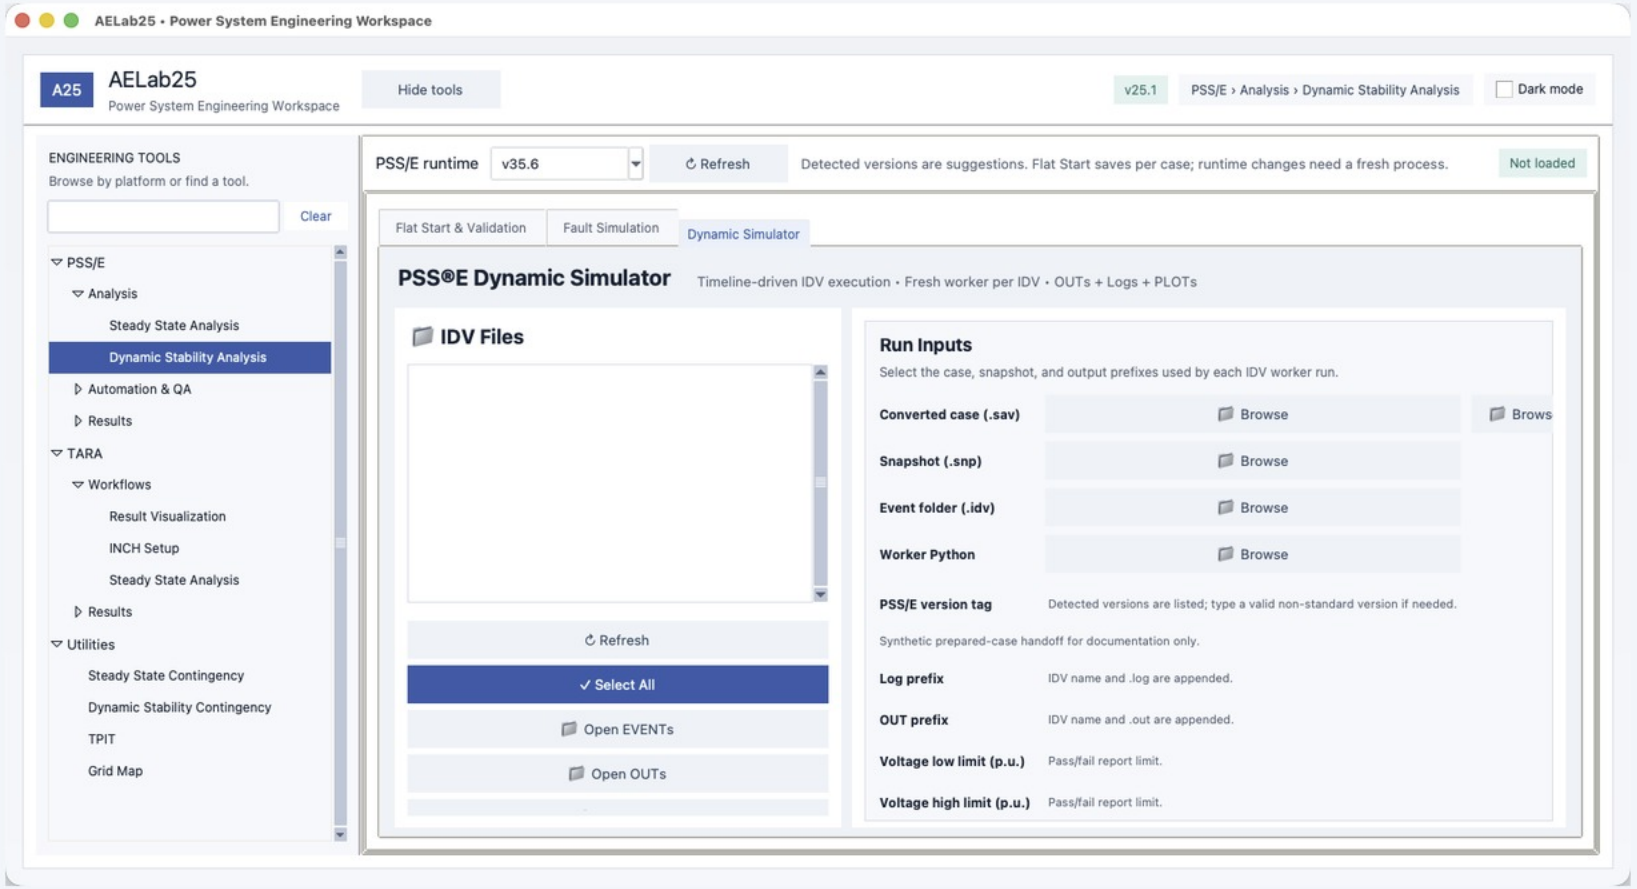


WHAT THIS TAB DOES

Archived prepared-case IDV batch setup. The current Dynamic Simulator adds connected study tabs, searchable Run checkboxes, event-detail dashboards and recorded history; see the feature guide. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: IDV Generator

ARCHIVED UI | PSS/E › Automation & QA › IDV Generator

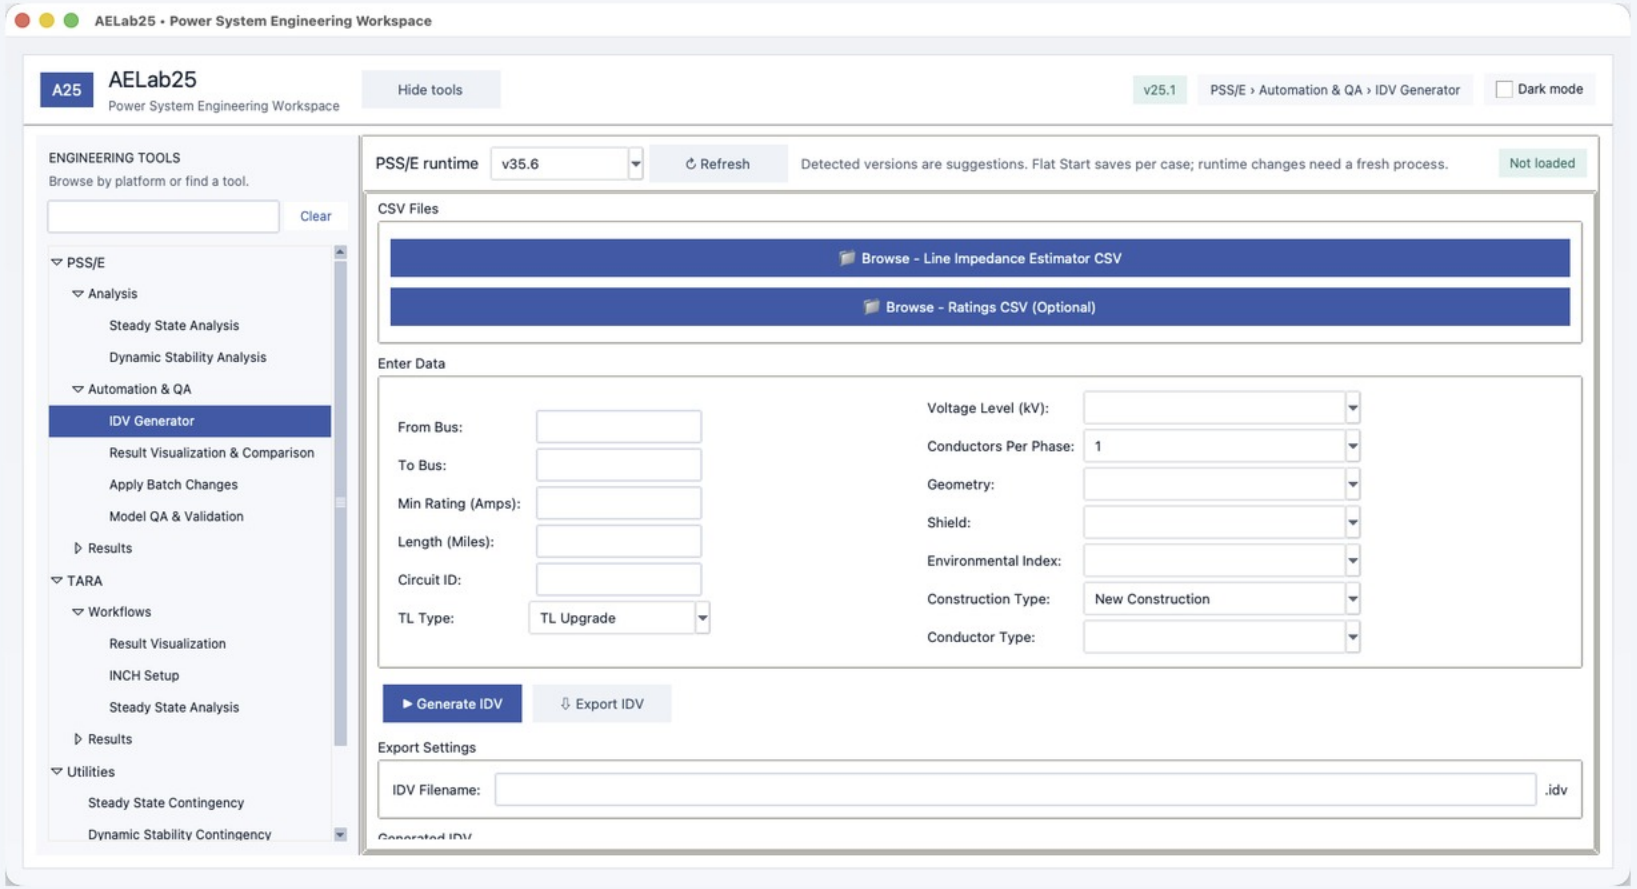


WHAT THIS TAB DOES

Archived line-oriented IDV authoring form. The current generator adds equipment templates, editable defaults, ordered projects, conductor/rating libraries and complete-file editing; see the feature guide. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Result Visualization & Comparison

ARCHIVED UI | PSS/E › Automation & QA › Result Visualization & Comparison

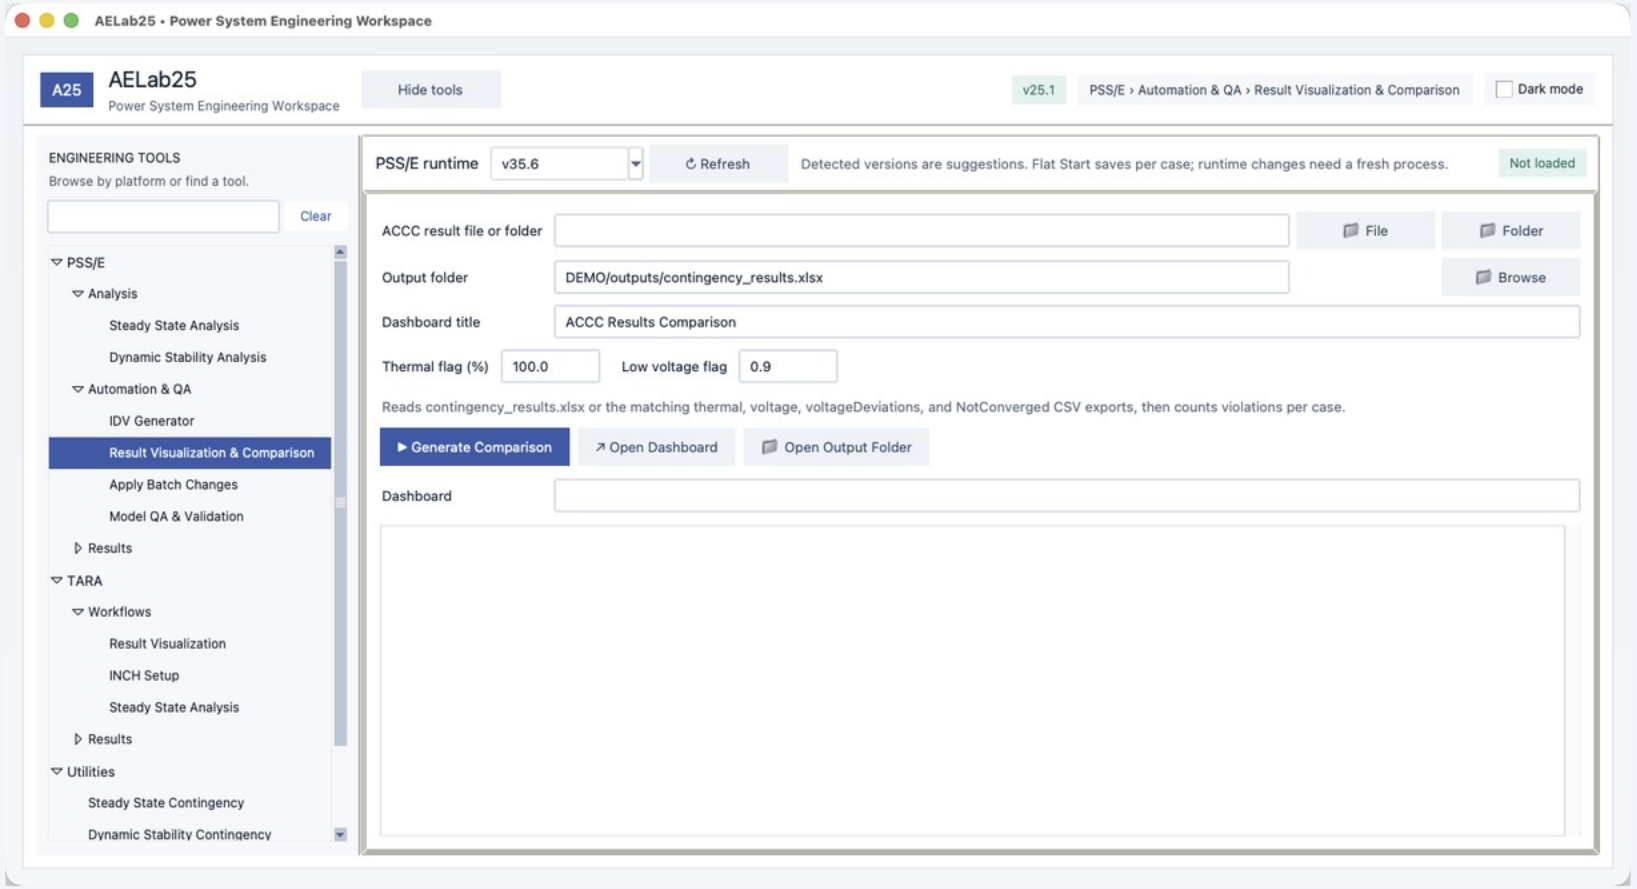


WHAT THIS TAB DOES

Combines ACCC result files into a filterable comparison dashboard with configurable thermal and voltage flags. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Apply Batch Changes

ARCHIVED UI | PSS/E › Automation & QA › Apply Batch Changes

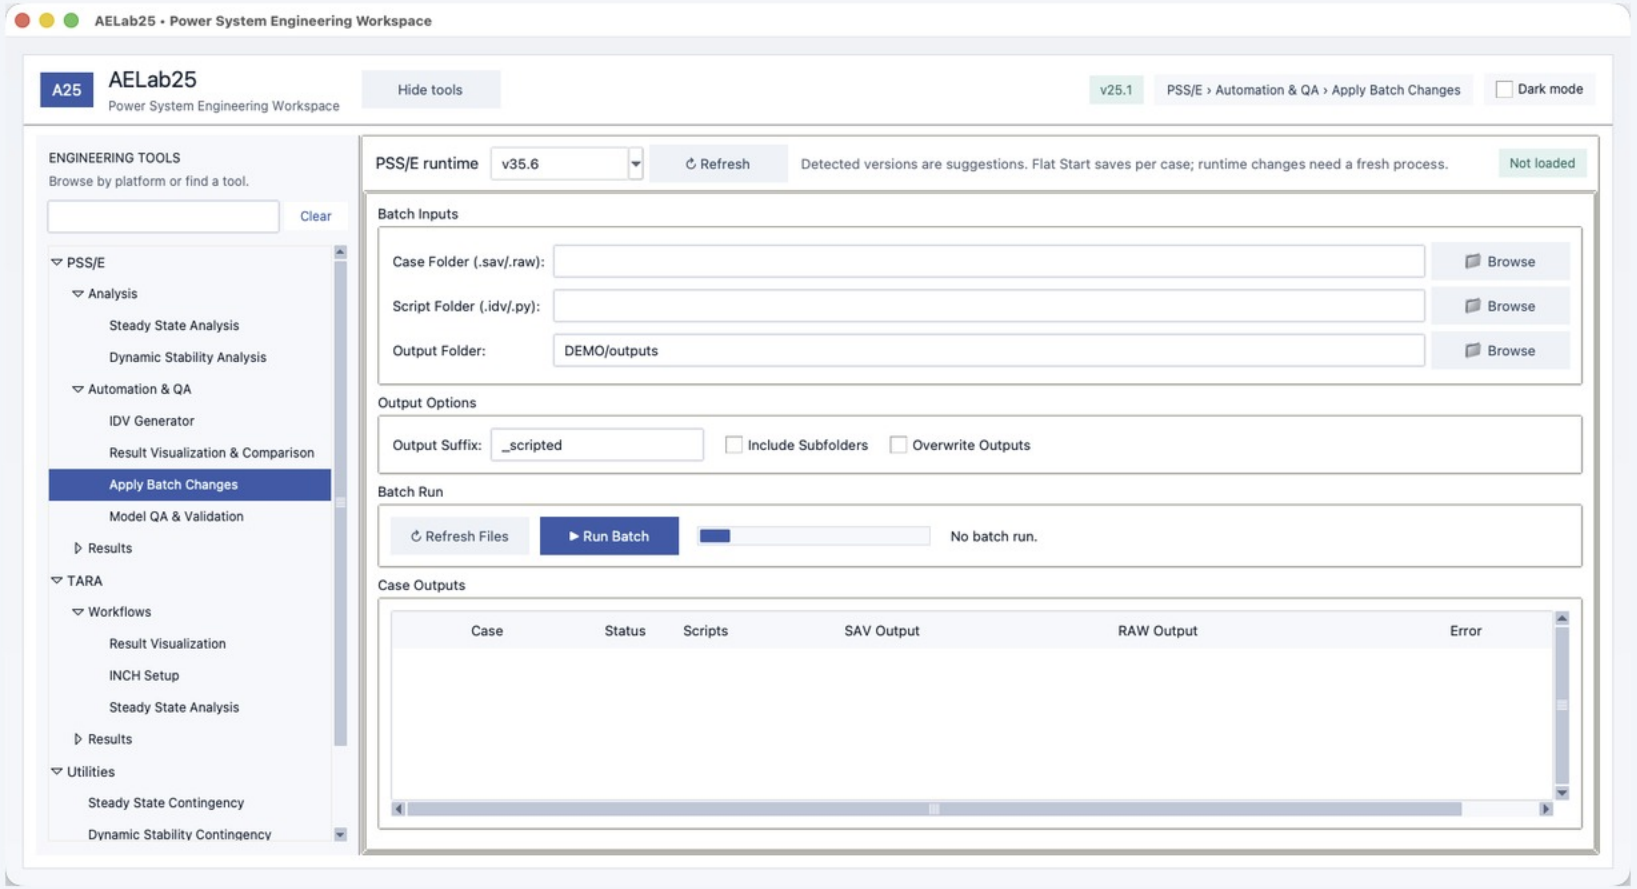


WHAT THIS TAB DOES

Archived stacked batch form for ordered case changes. The current tool separates Setup & Plan, Case Outputs and Run Log, with persistent controls and isolated worker execution. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Model QA & Validation

ARCHIVED UI | PSS/E › Automation & QA › Model QA & Validation

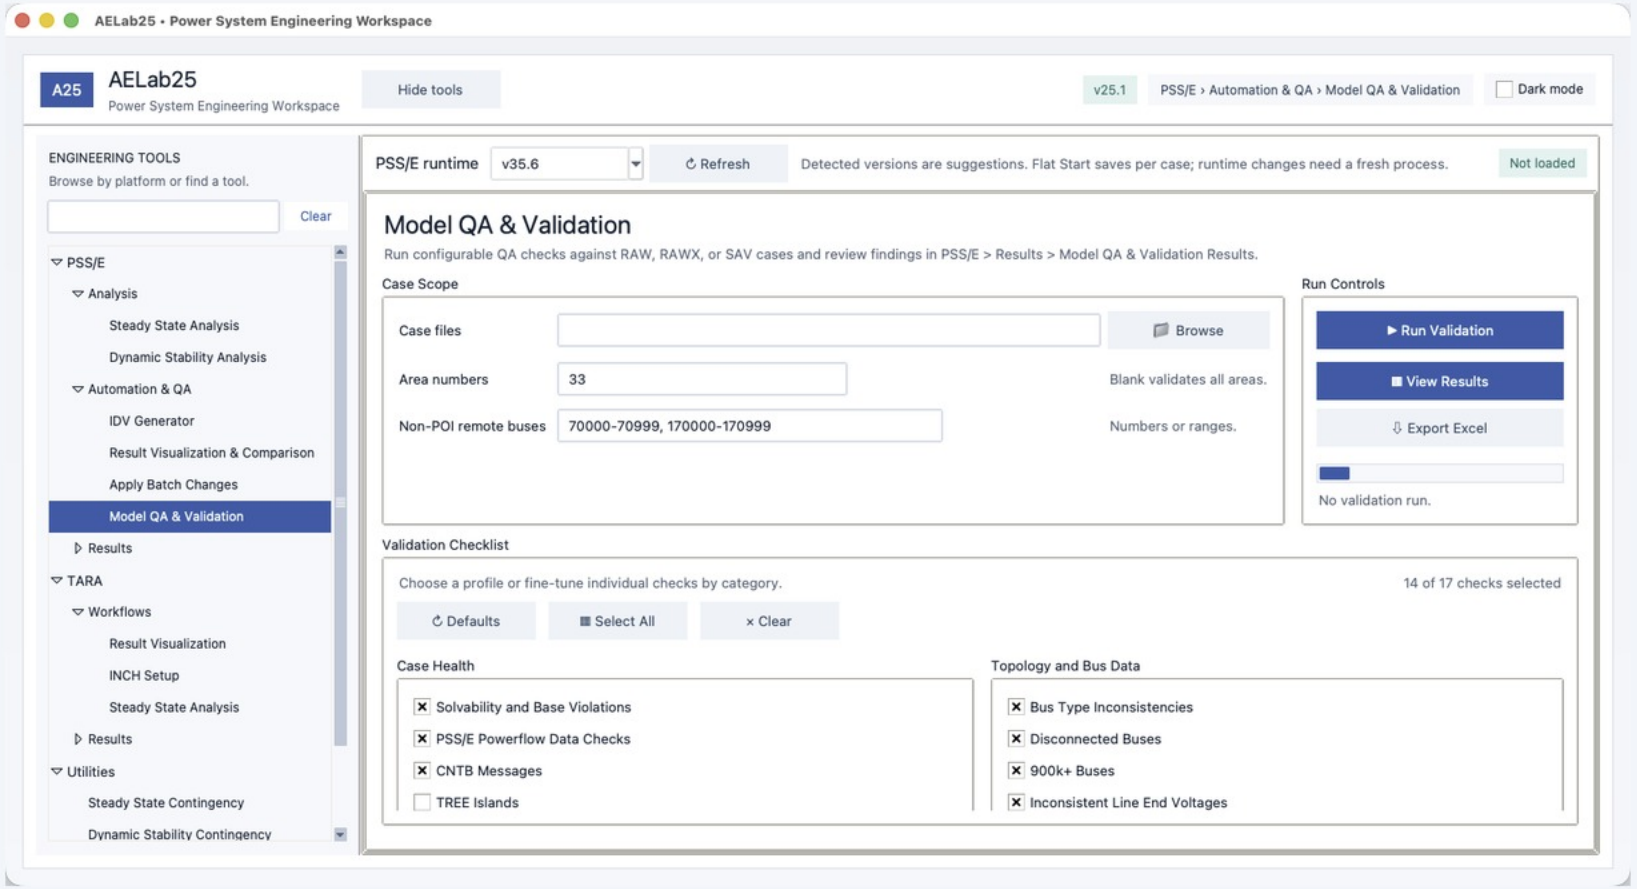


WHAT THIS TAB DOES

Case scope and deterministic model checks. This archived setup predates the newer owned-worker isolation and cancellation behavior. Review findings separately from process completion. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Thermal Violations

ARCHIVED UI | PSS/E › Results › Steady State Results › Thermal Violations

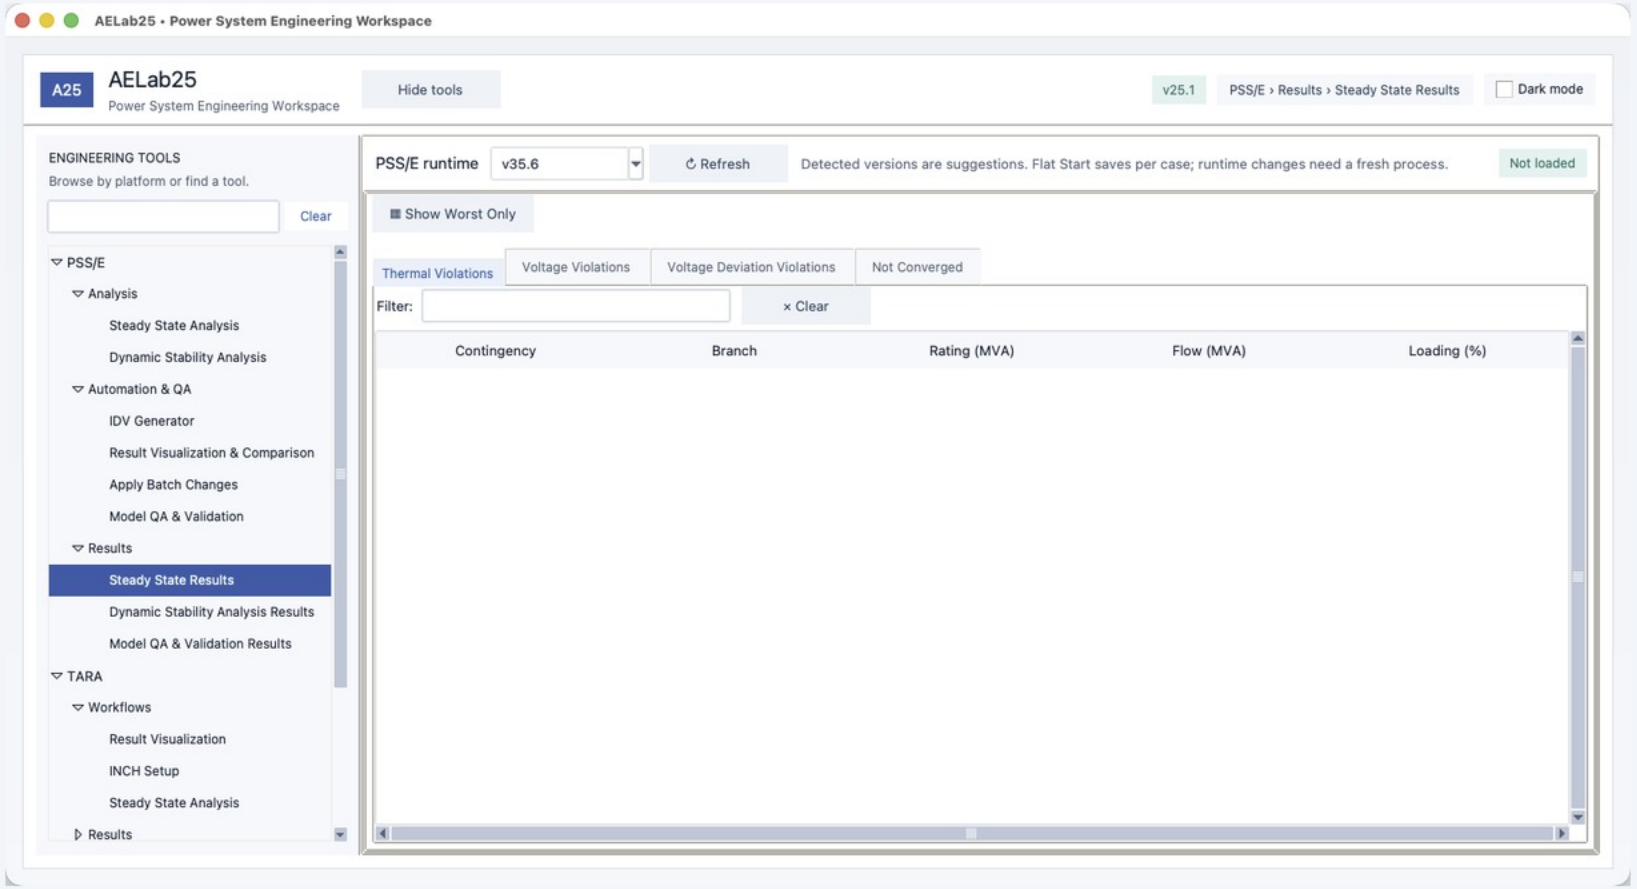


WHAT THIS TAB DOES

Reviews contingency, branch, rating, flow, and loading columns for reported thermal violations. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Voltage Violations

ARCHIVED UI | PSS/E › Results › Steady State Results › Voltage Violations

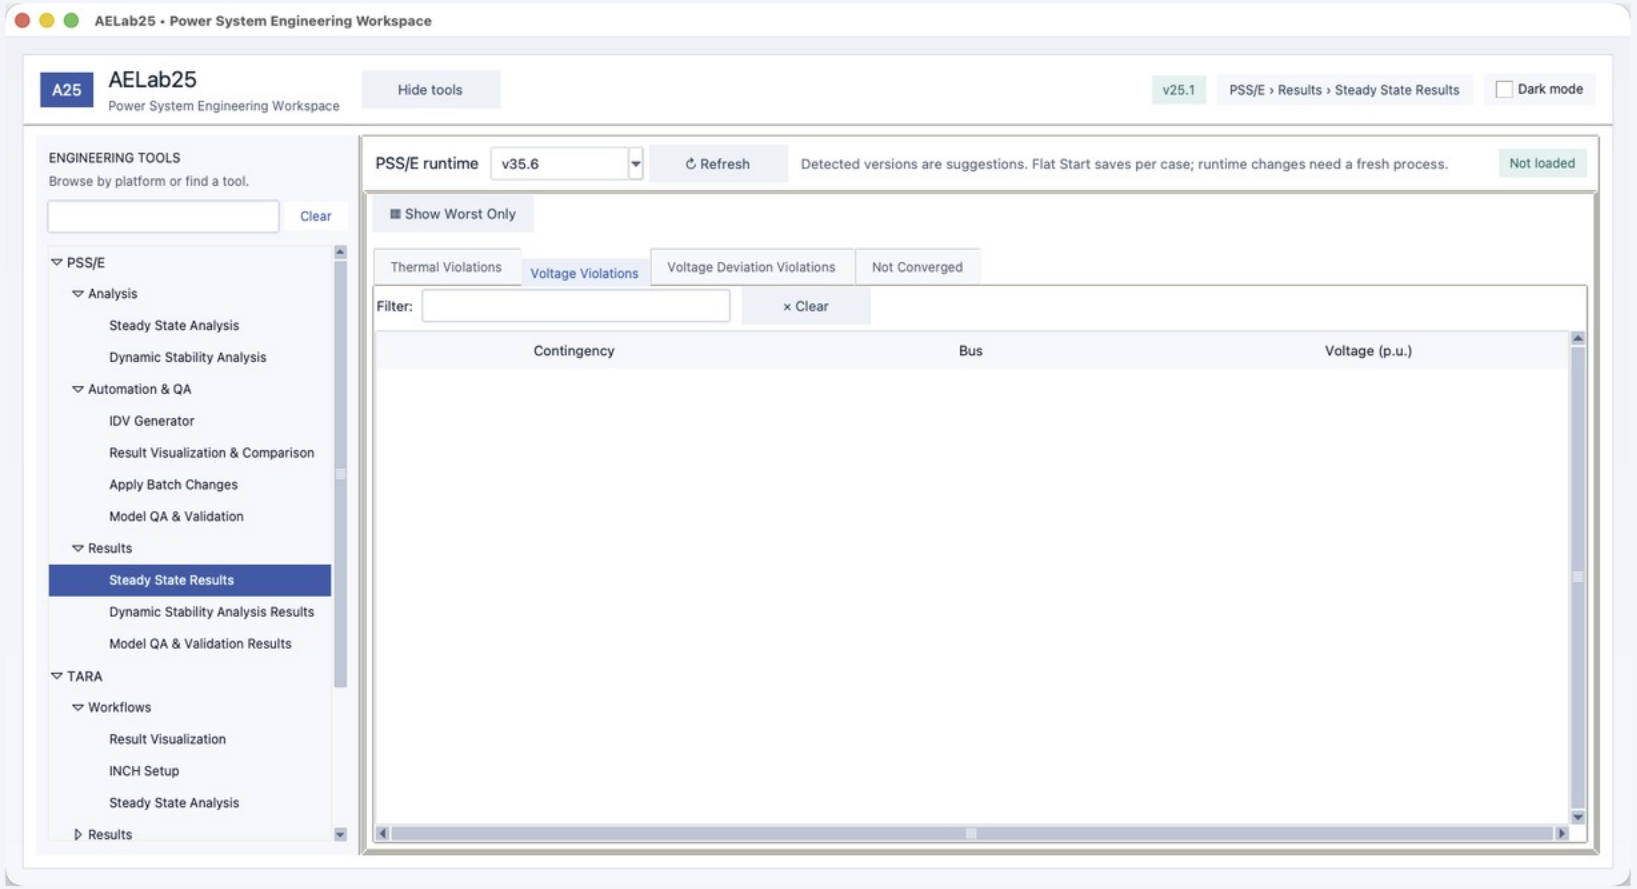


WHAT THIS TAB DOES

Reviews reported contingency bus voltages in per unit. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Voltage Deviation Violations

ARCHIVED UI | PSS/E › Results › Steady State Results › Voltage Deviation Violations

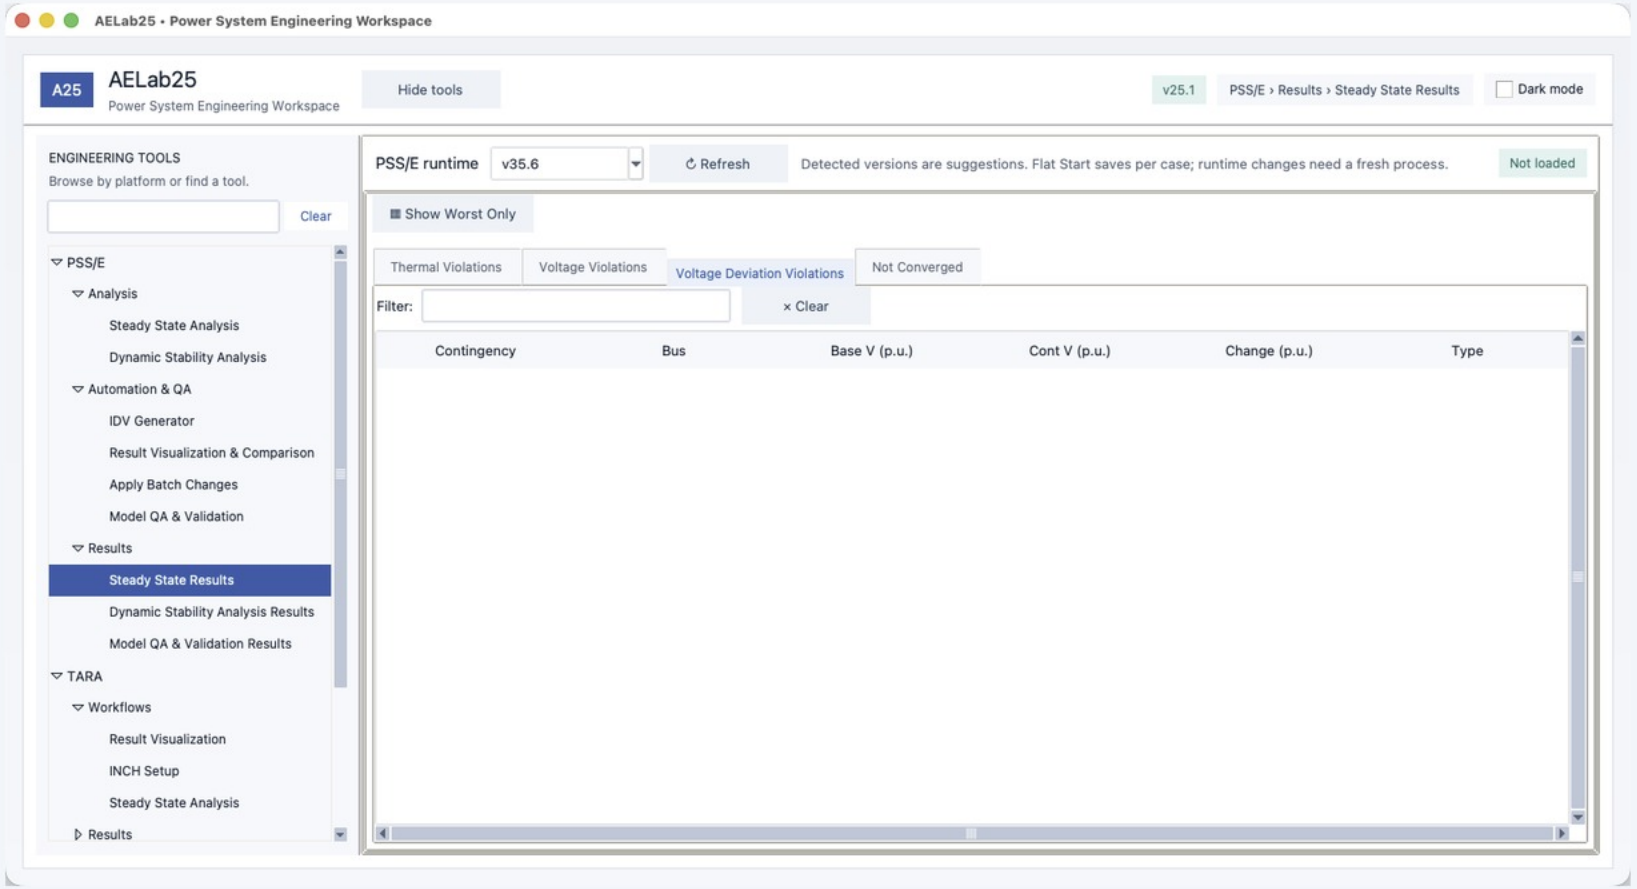


WHAT THIS TAB DOES

Compares base and contingency voltage and identifies the reported rise or drop magnitude. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Not Converged

ARCHIVED UI | PSS/E › Results › Steady State Results › Not Converged

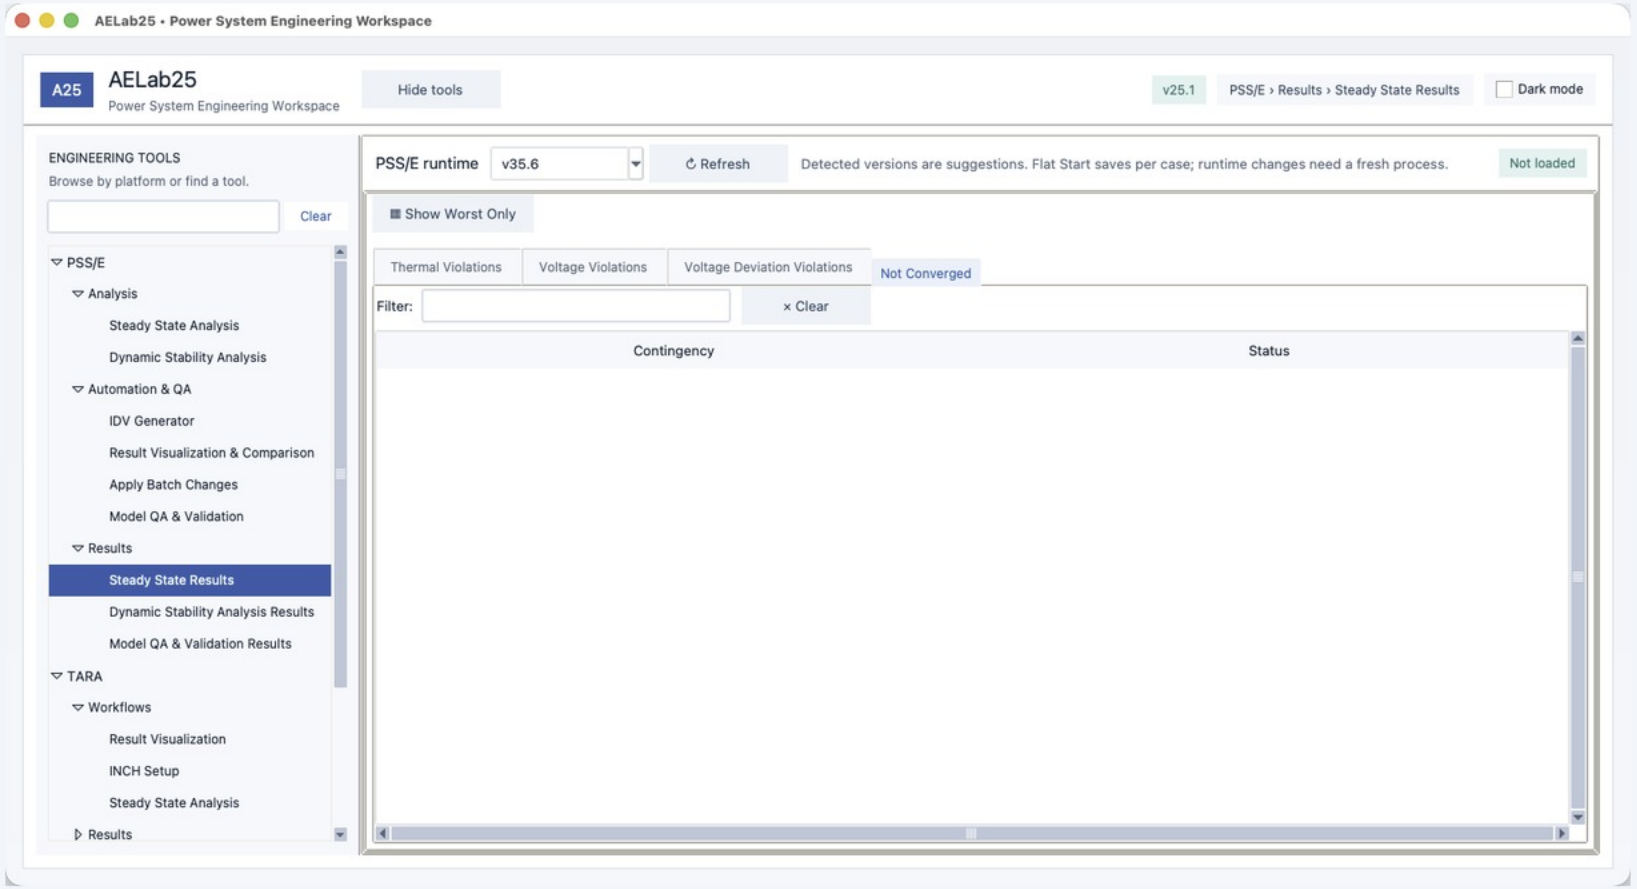


WHAT THIS TAB DOES

Keeps nonconverged contingency outcomes explicit instead of treating them as passing cases. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: IDV Pass-Fail

ARCHIVED UI | PSS/E › Results › Dynamic Stability Analysis Results › IDV Pass-Fail

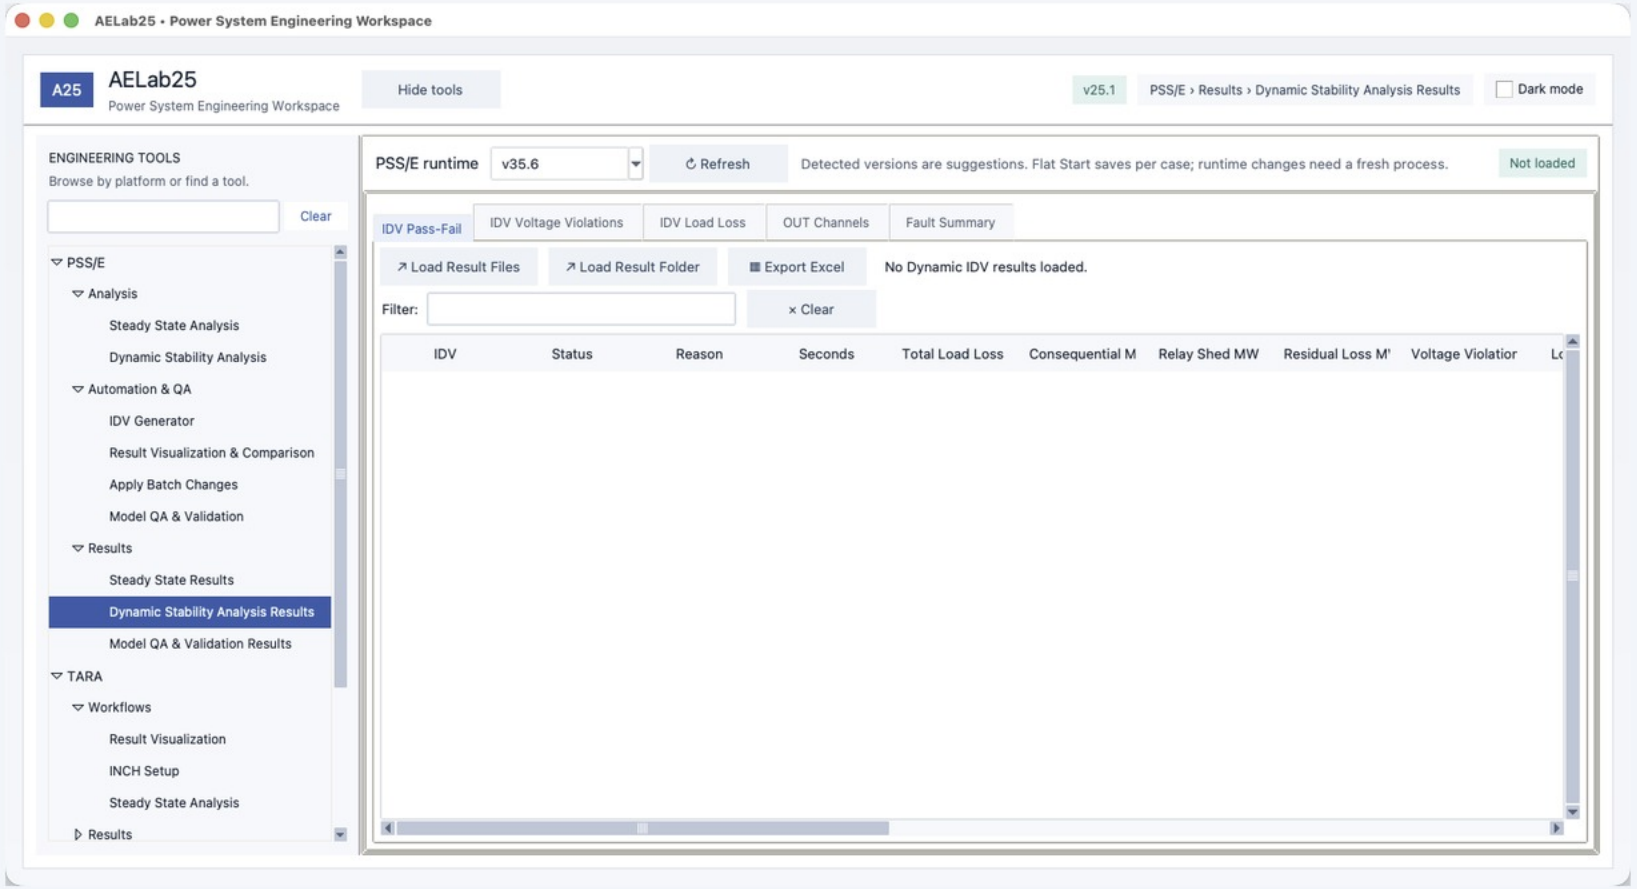


WHAT THIS TAB DOES

Summarizes each IDV result, reason, elapsed time, load loss, voltage counts, and source artifacts. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: IDV Voltage Violations

ARCHIVED UI | PSS/E › Results › Dynamic Stability Analysis Results › IDV Voltage Violations

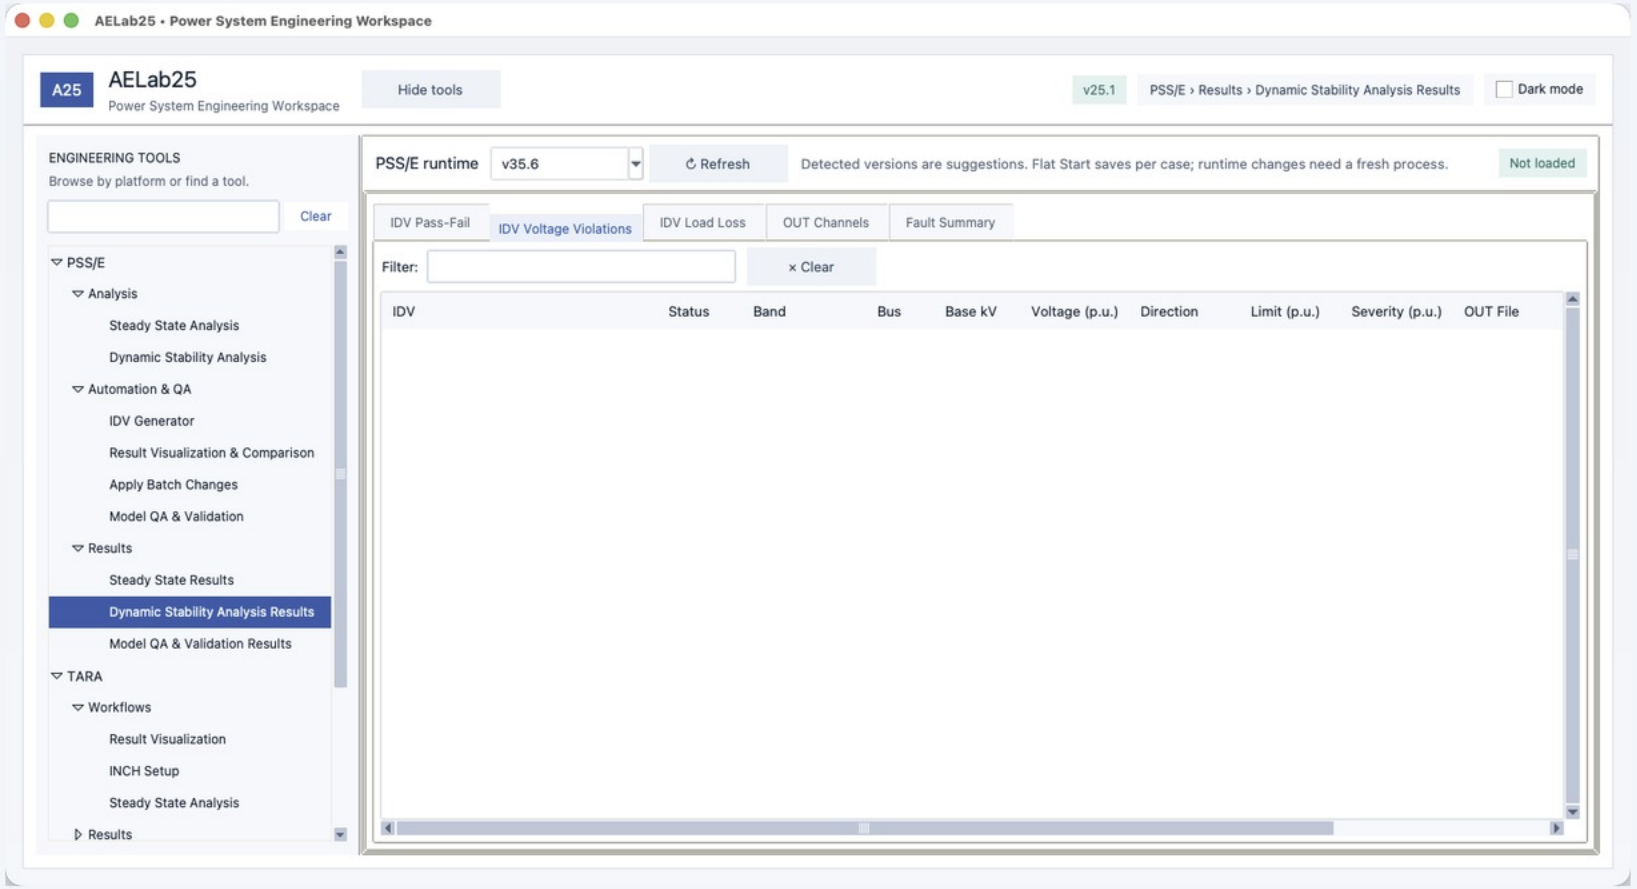


WHAT THIS TAB DOES

Reviews low and high dynamic voltage observations by band, bus, limit, and severity. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: IDV Load Loss

ARCHIVED UI | PSS/E › Results › Dynamic Stability Analysis Results › IDV Load Loss

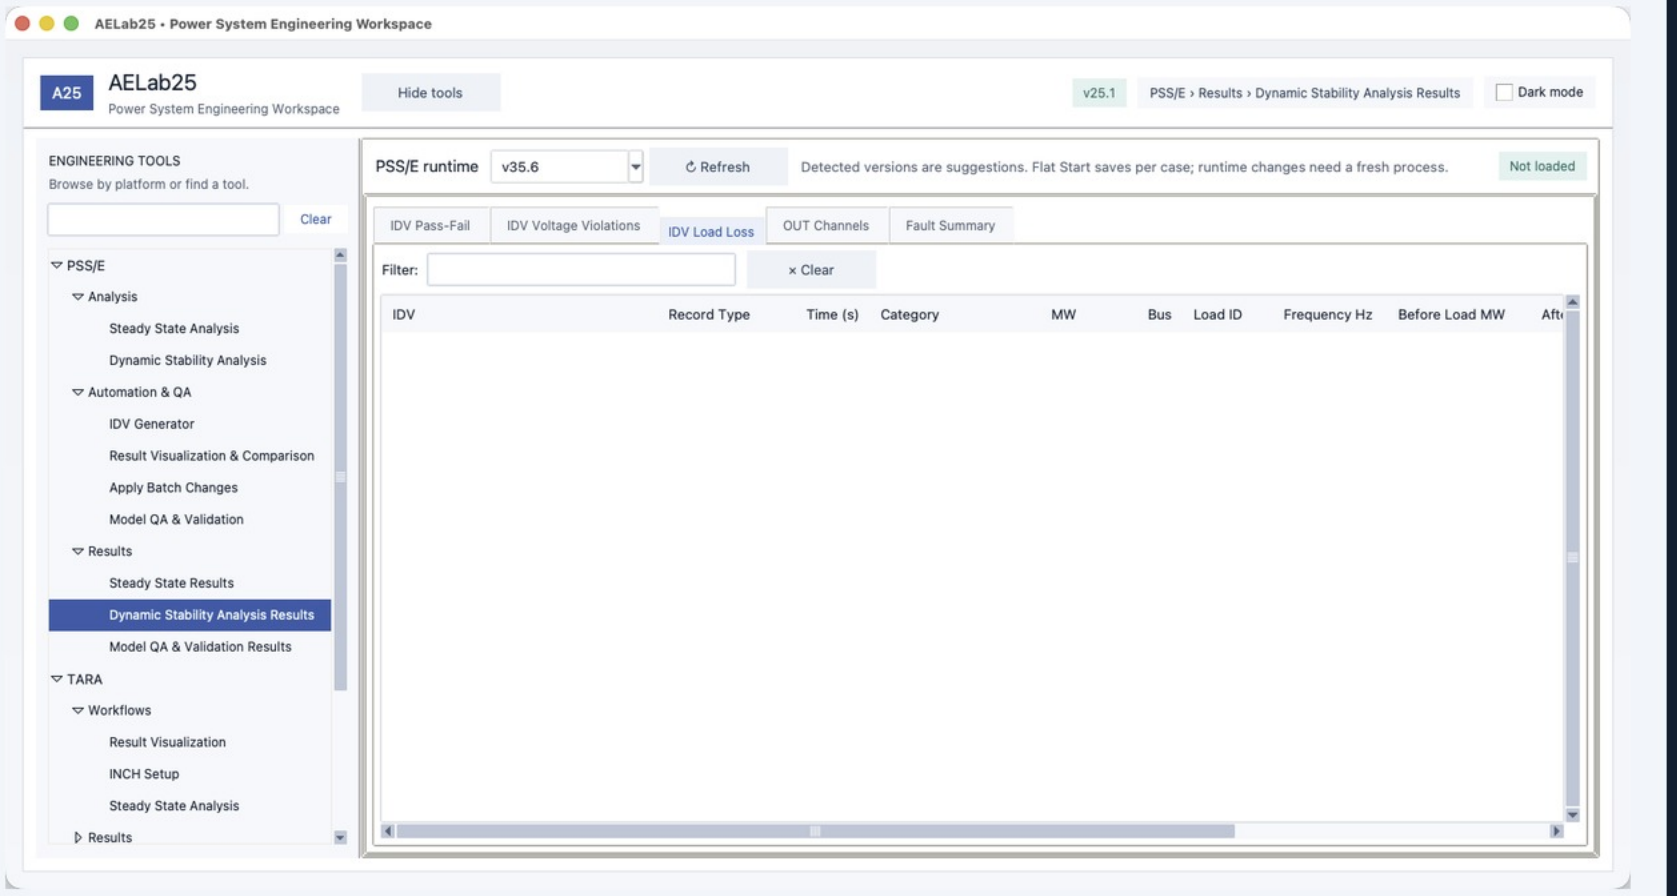


WHAT THIS TAB DOES

Reviews load-loss records with time, category, MW, bus, frequency, before/after load, and IDV actions. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: OUT Channels

ARCHIVED UI | PSS/E › Results › Dynamic Stability Analysis Results › OUT Channels

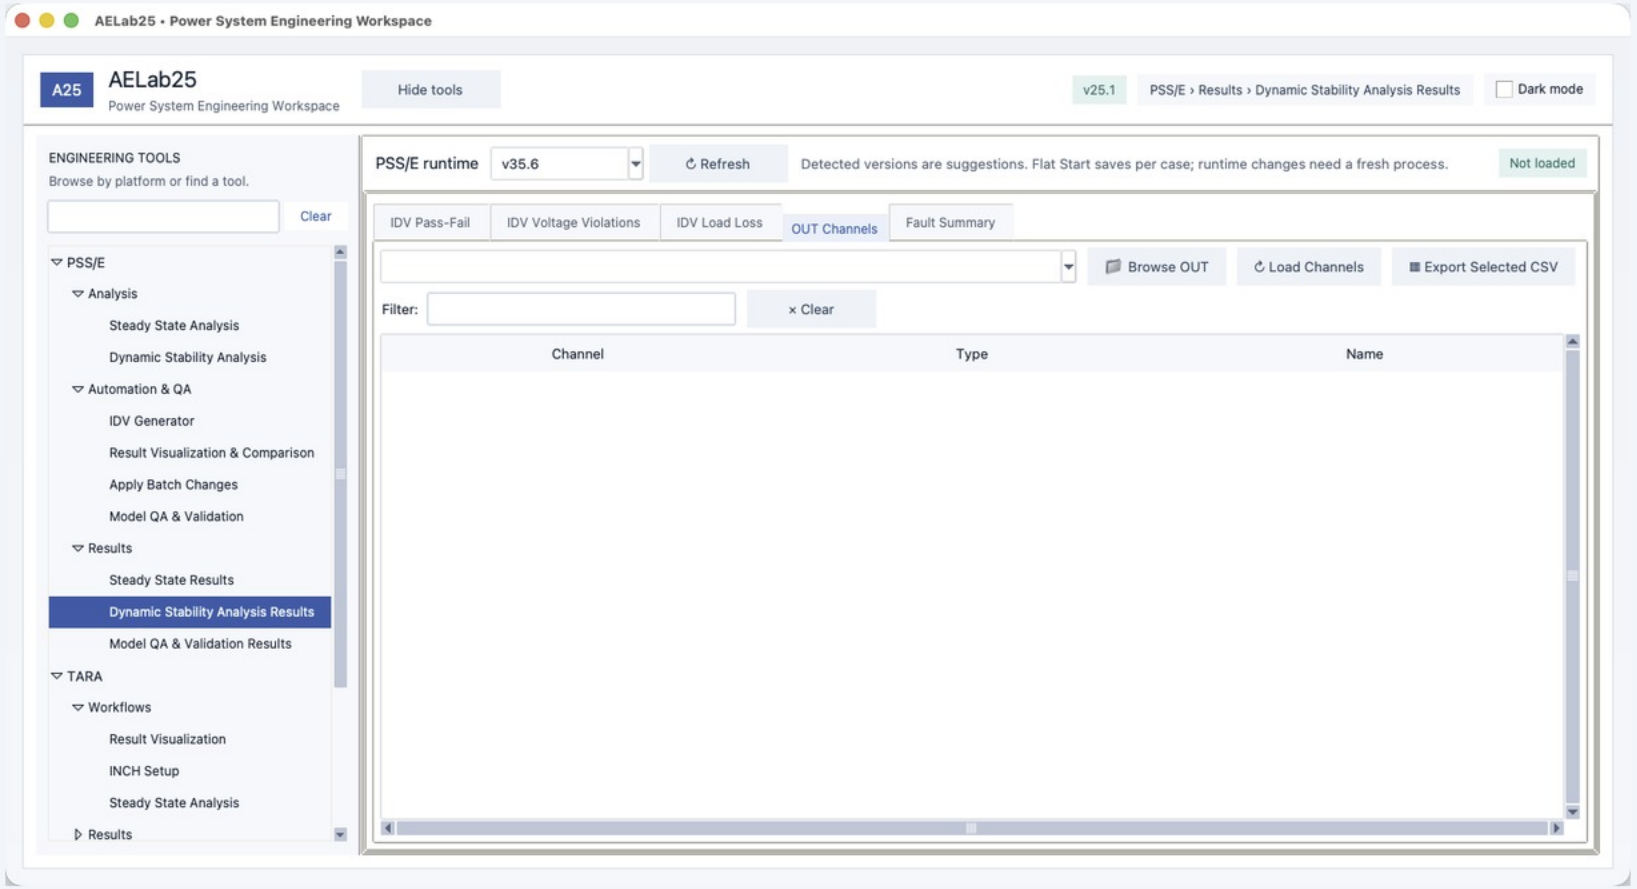


WHAT THIS TAB DOES

Loads an OUT file channel index and exports selected channel data to CSV. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Fault Summary

ARCHIVED UI | PSS/E › Results › Dynamic Stability Analysis Results › Fault Summary

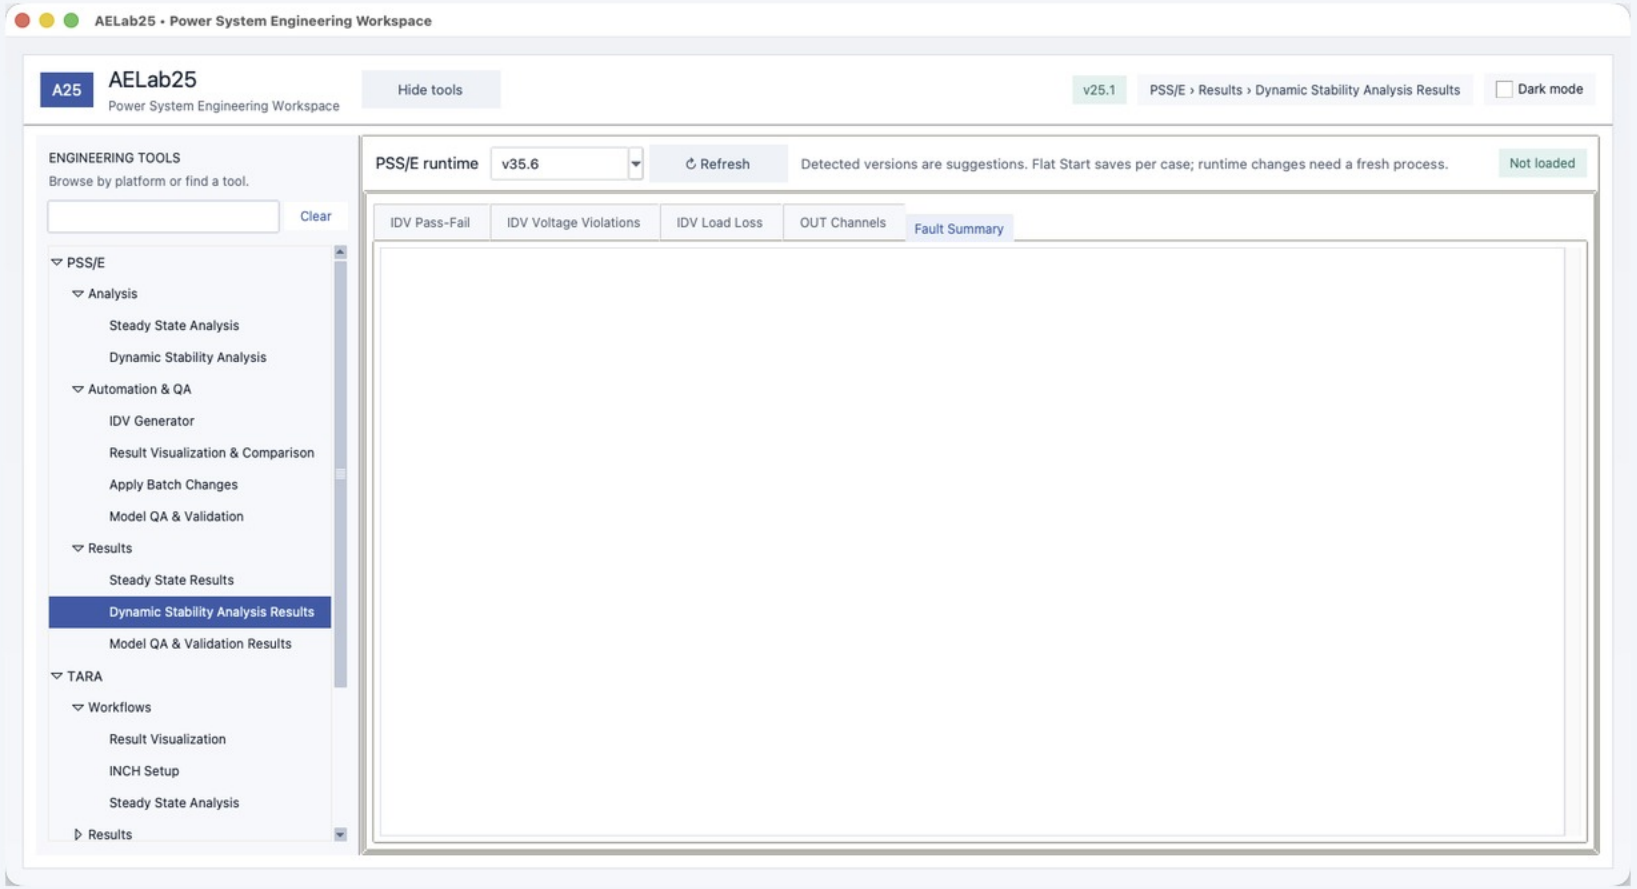


WHAT THIS TAB DOES

Displays the text summary produced by the fault-simulation workflow. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Model QA Summary

ARCHIVED UI | PSS/E › Results › Model QA & Validation Results › Summary

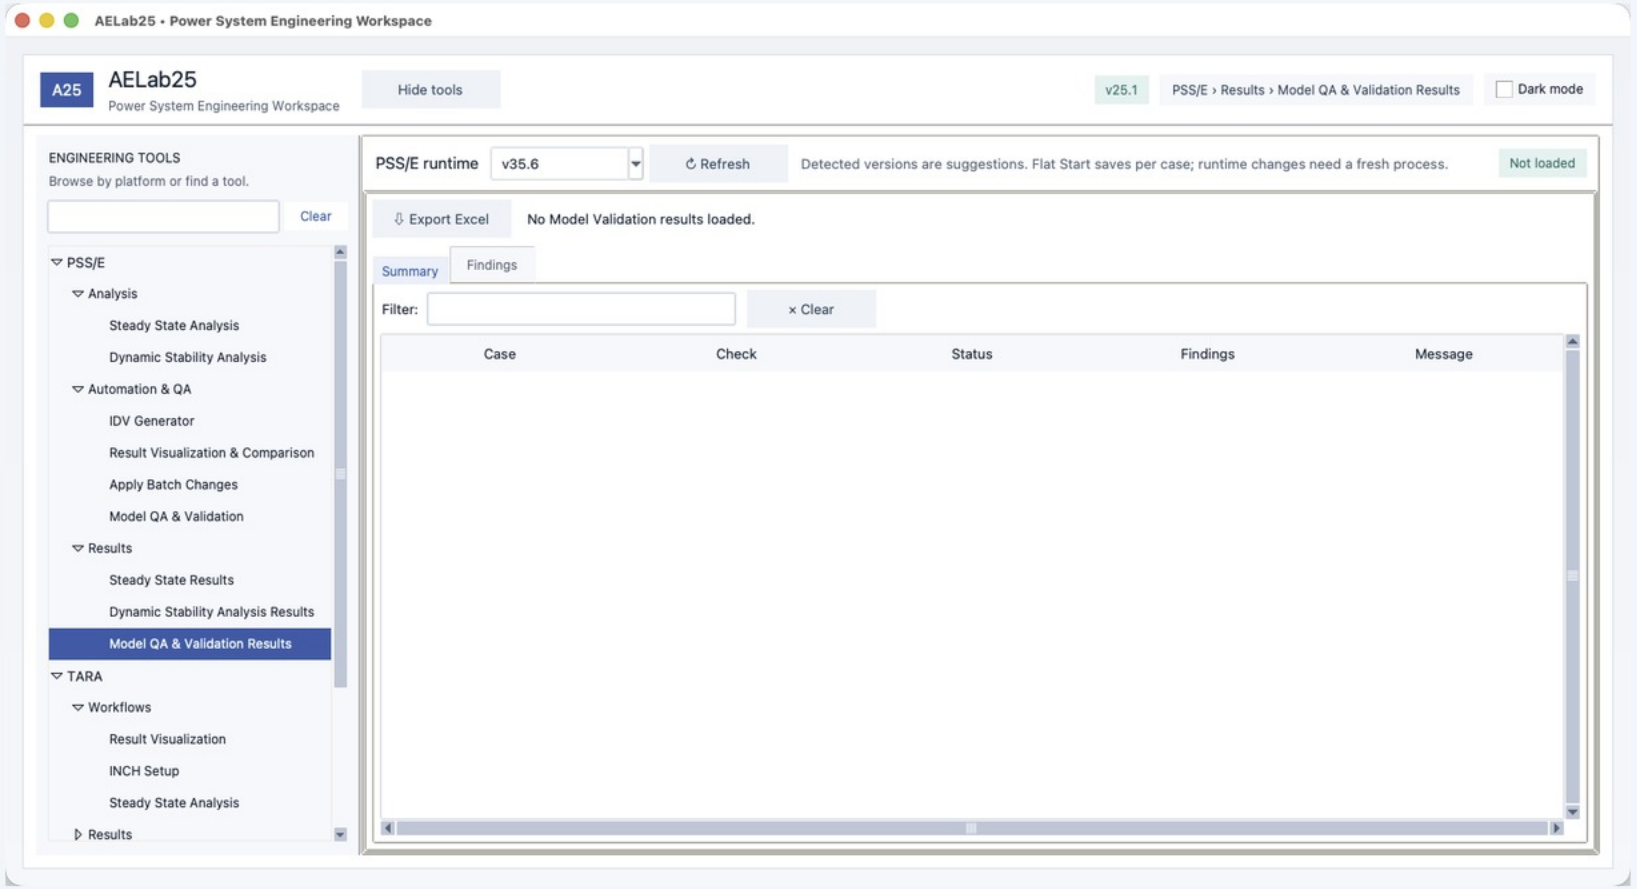


WHAT THIS TAB DOES

Summarizes validation status and finding counts by case and check. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Model QA Findings

ARCHIVED UI | PSS/E › Results › Model QA & Validation Results › Findings

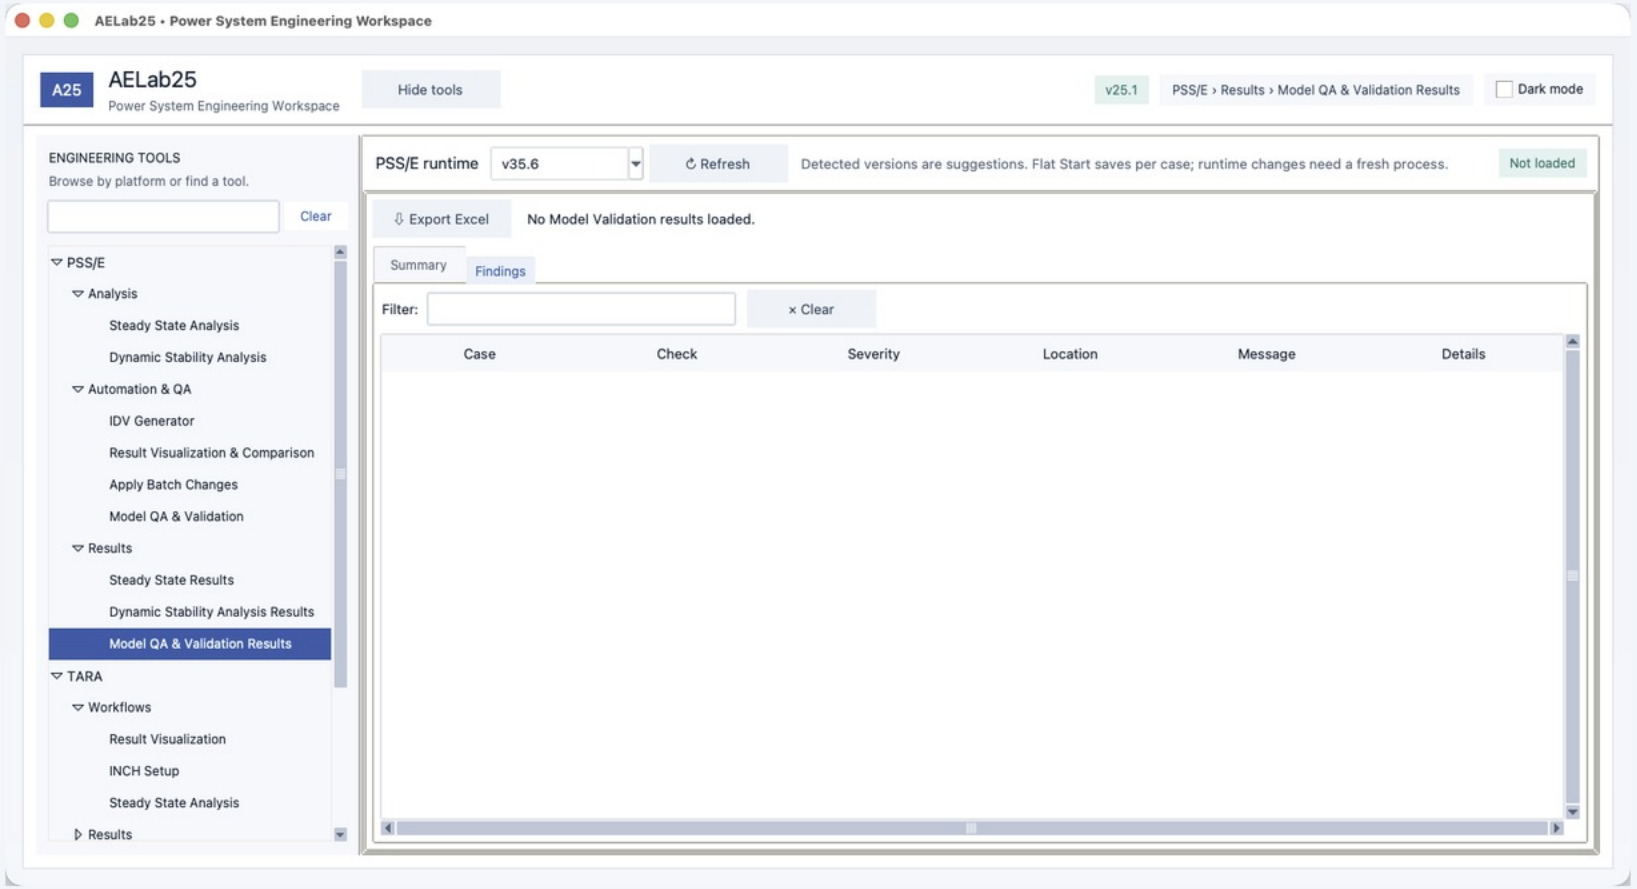


WHAT THIS TAB DOES

Lists individual findings with severity, location, message, and supporting details. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Interactive Browser

ARCHIVED UI | TARA › Workflows › Result Visualization › Interactive Browser

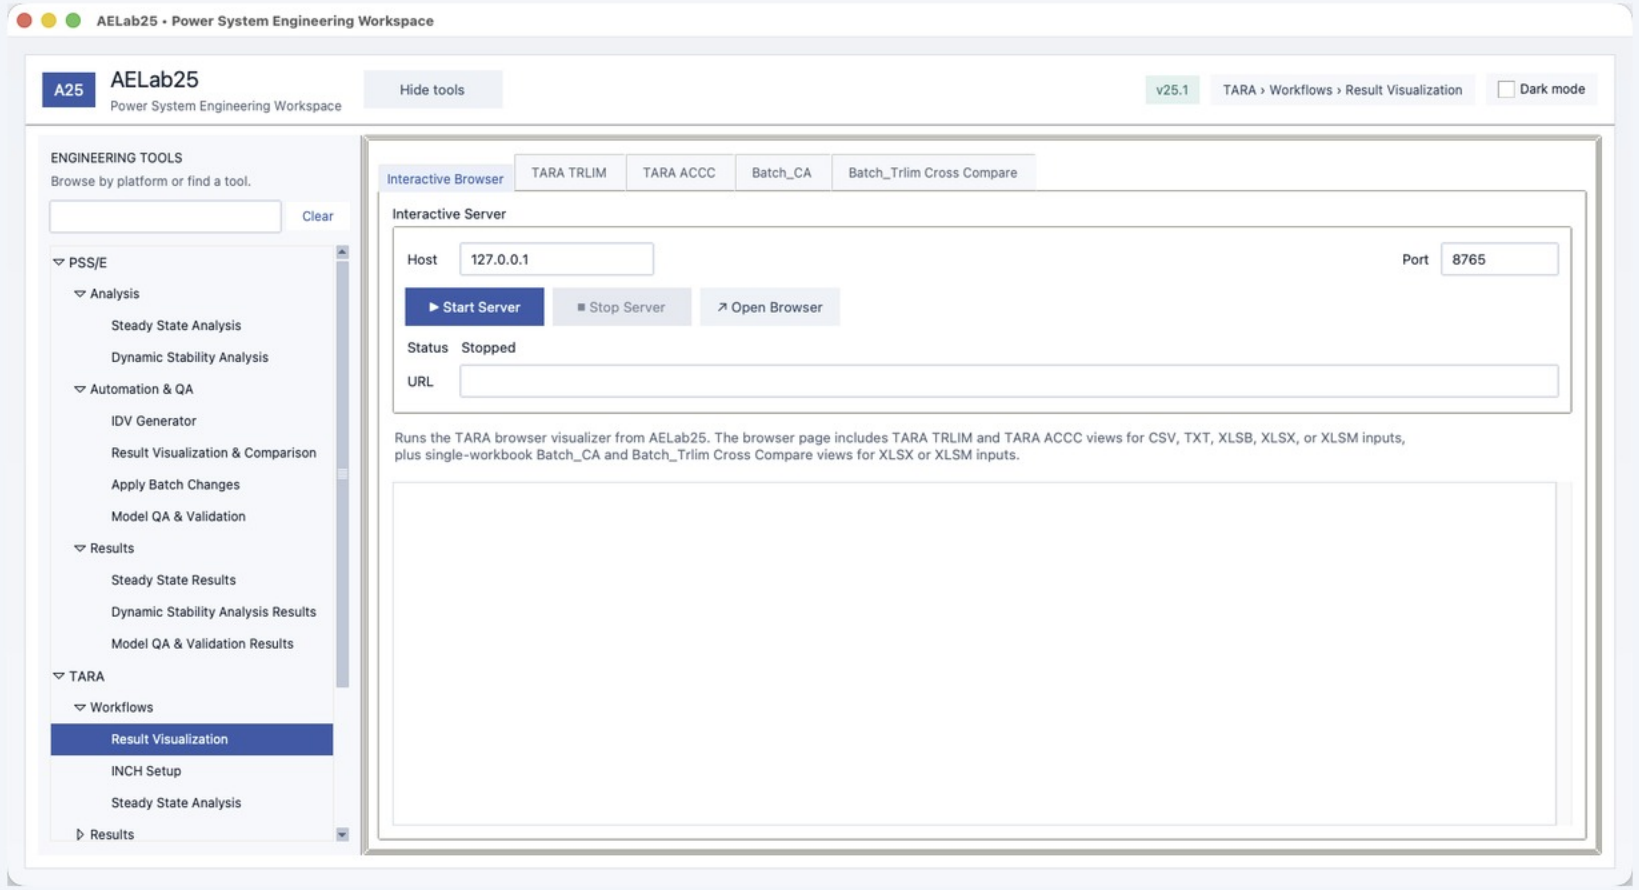


WHAT THIS TAB DOES

Starts and links to the local interactive TARA result browser without embedding source study data in the GUI. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA TRLIM

ARCHIVED UI | TARA › Workflows › Result Visualization › TARA TRLIM

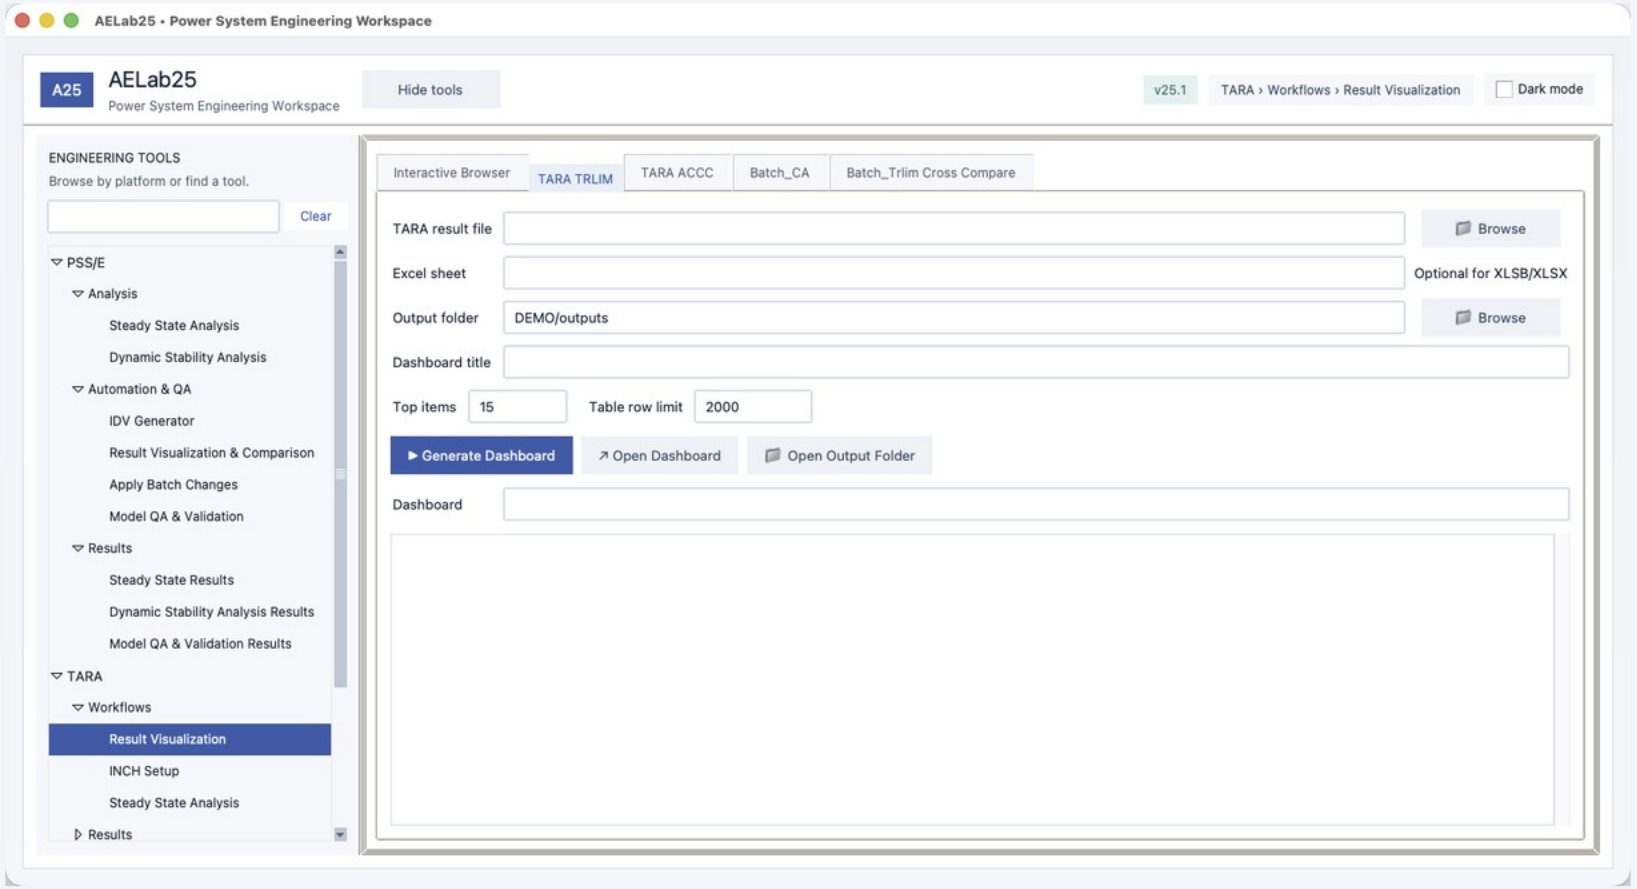


WHAT THIS TAB DOES

Configures a searchable HTML dashboard for a TARA transfer-limit result file. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA ACCC

ARCHIVED UI | TARA › Workflows › Result Visualization › TARA ACCC

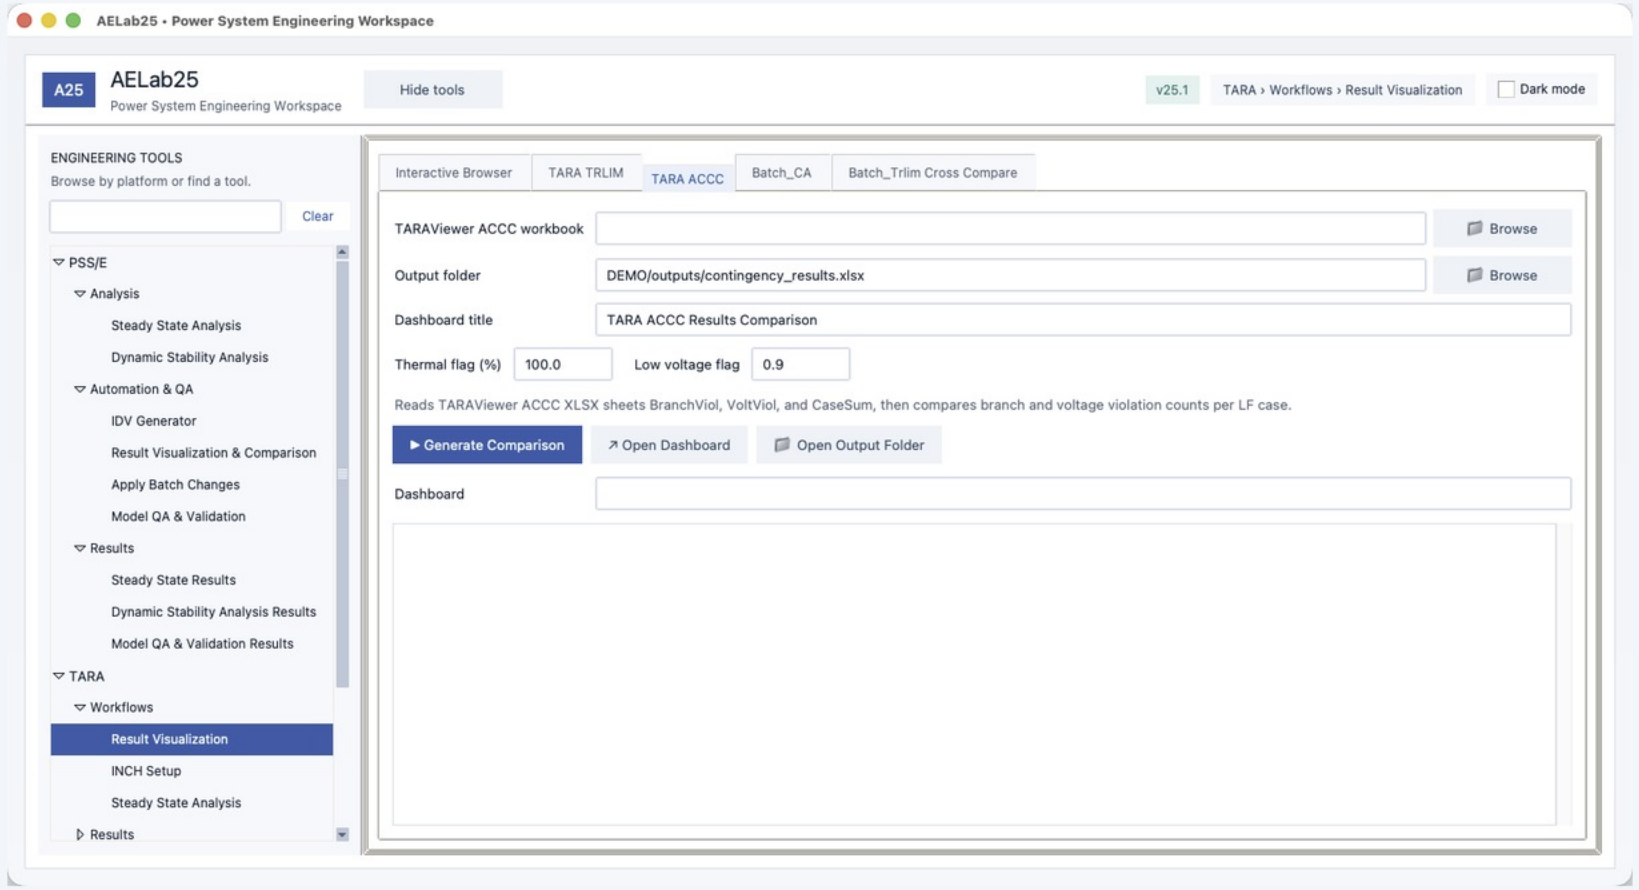


WHAT THIS TAB DOES

Configures an ACCC result dashboard with explicit thermal and low-voltage review flags. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Batch_CA

ARCHIVED UI | TARA › Workflows › Result Visualization › Batch_CA

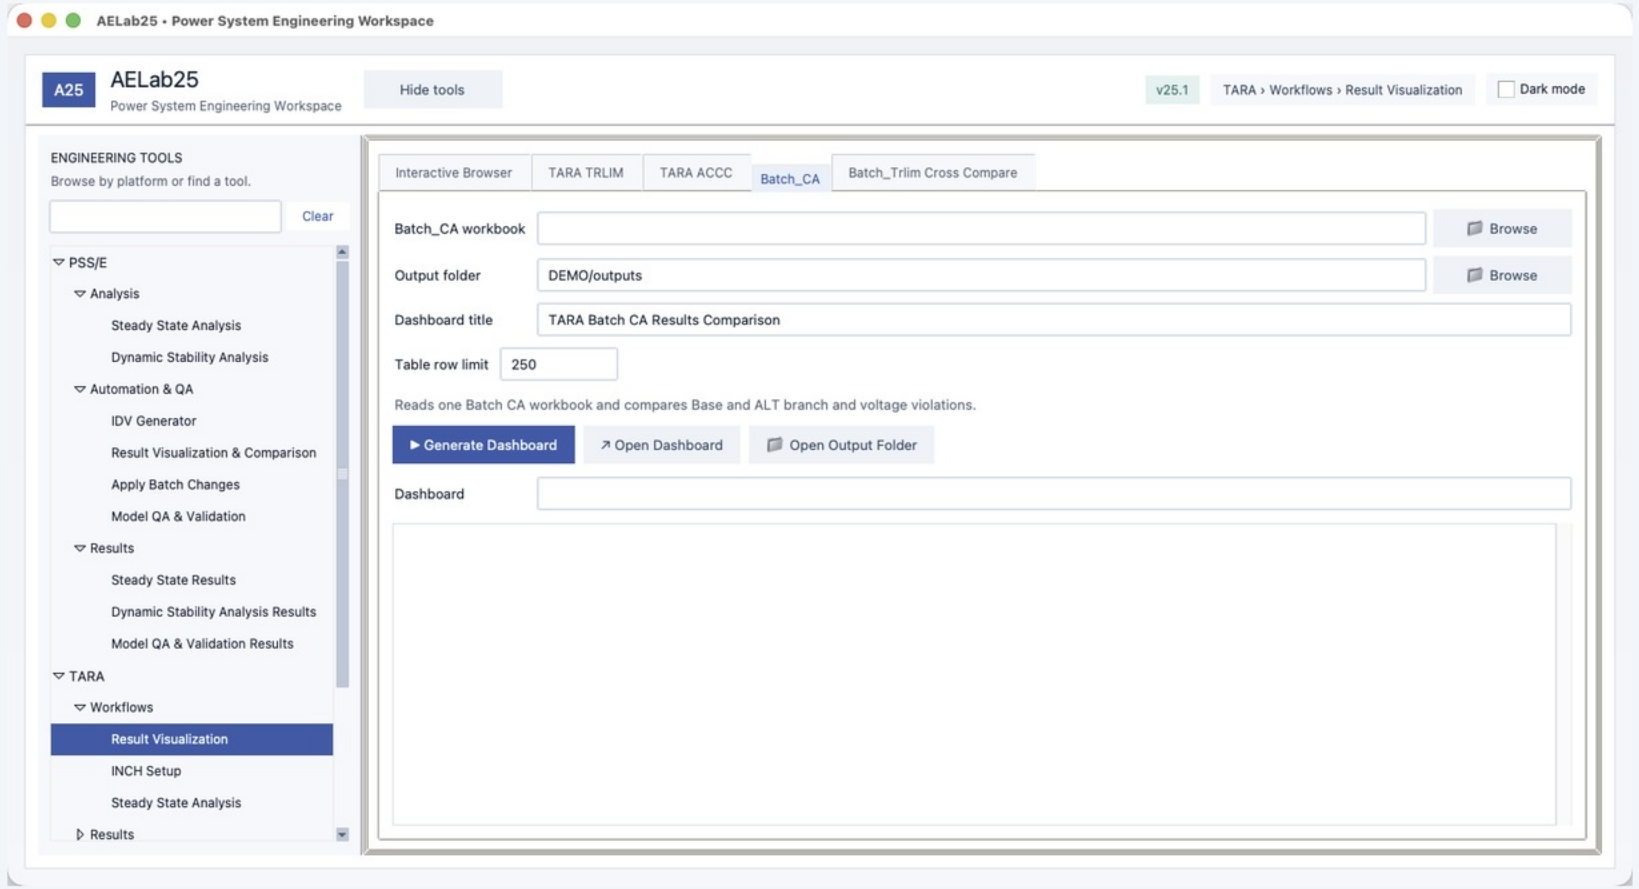


WHAT THIS TAB DOES

Builds a combined browser from a folder of TARA contingency-analysis result files. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Batch_Trlim Cross Compare

ARCHIVED UI | TARA › Workflows › Result Visualization › Batch_Trlim Cross Compare

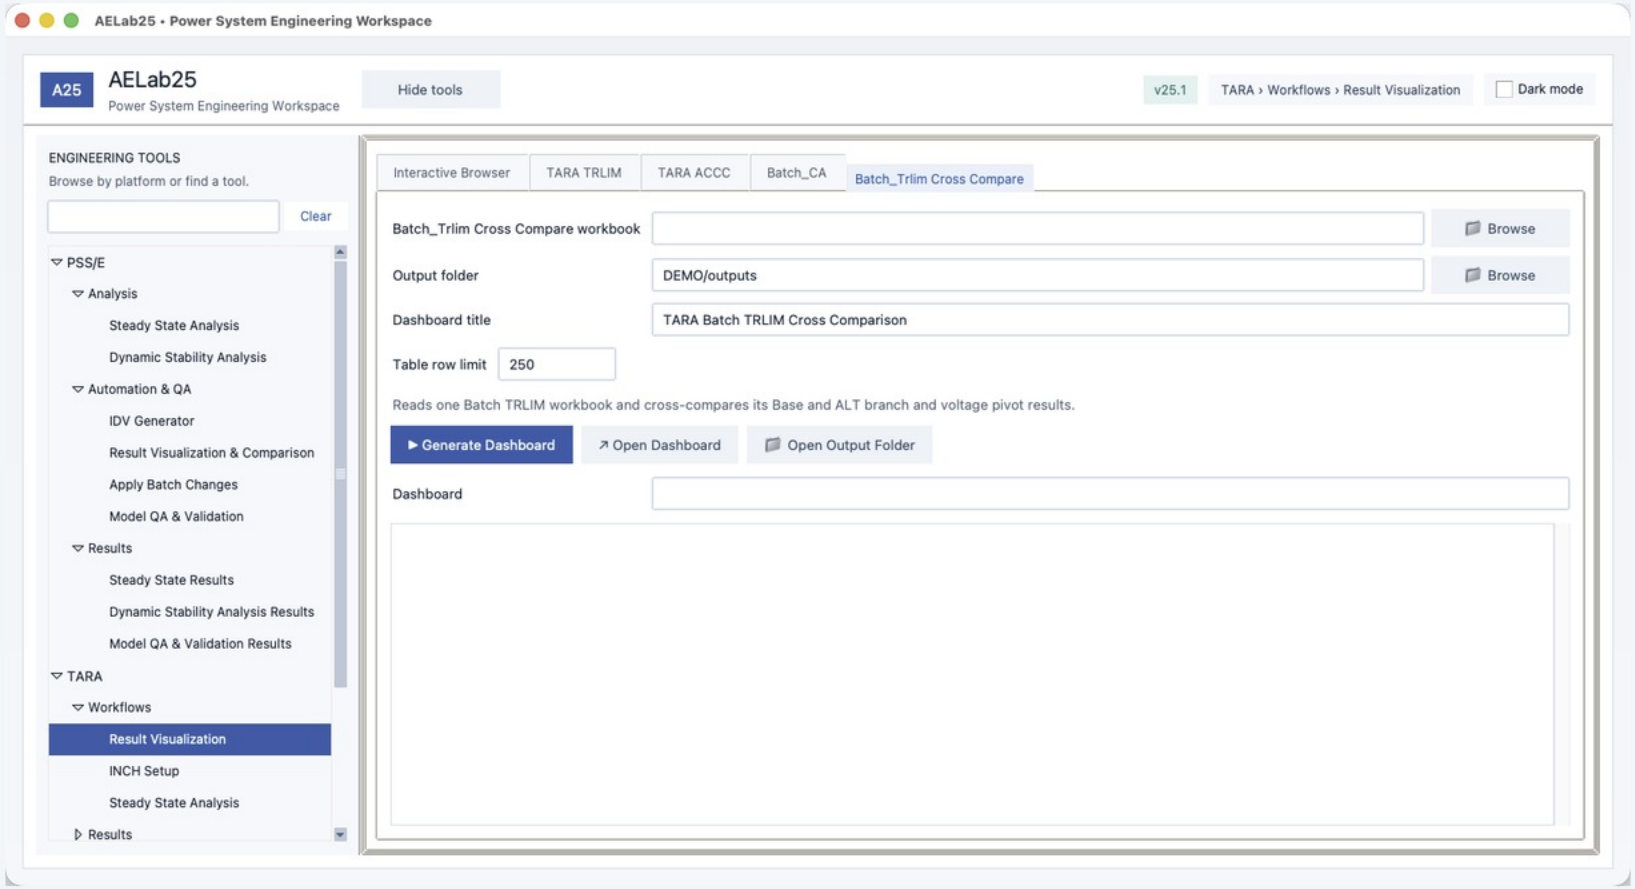


WHAT THIS TAB DOES

Cross-compares transfer-limit batches and exposes filter and dashboard output settings. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Compare Cases → INCH

ARCHIVED UI | TARA › Workflows › INCH Setup › Compare Cases → INCH

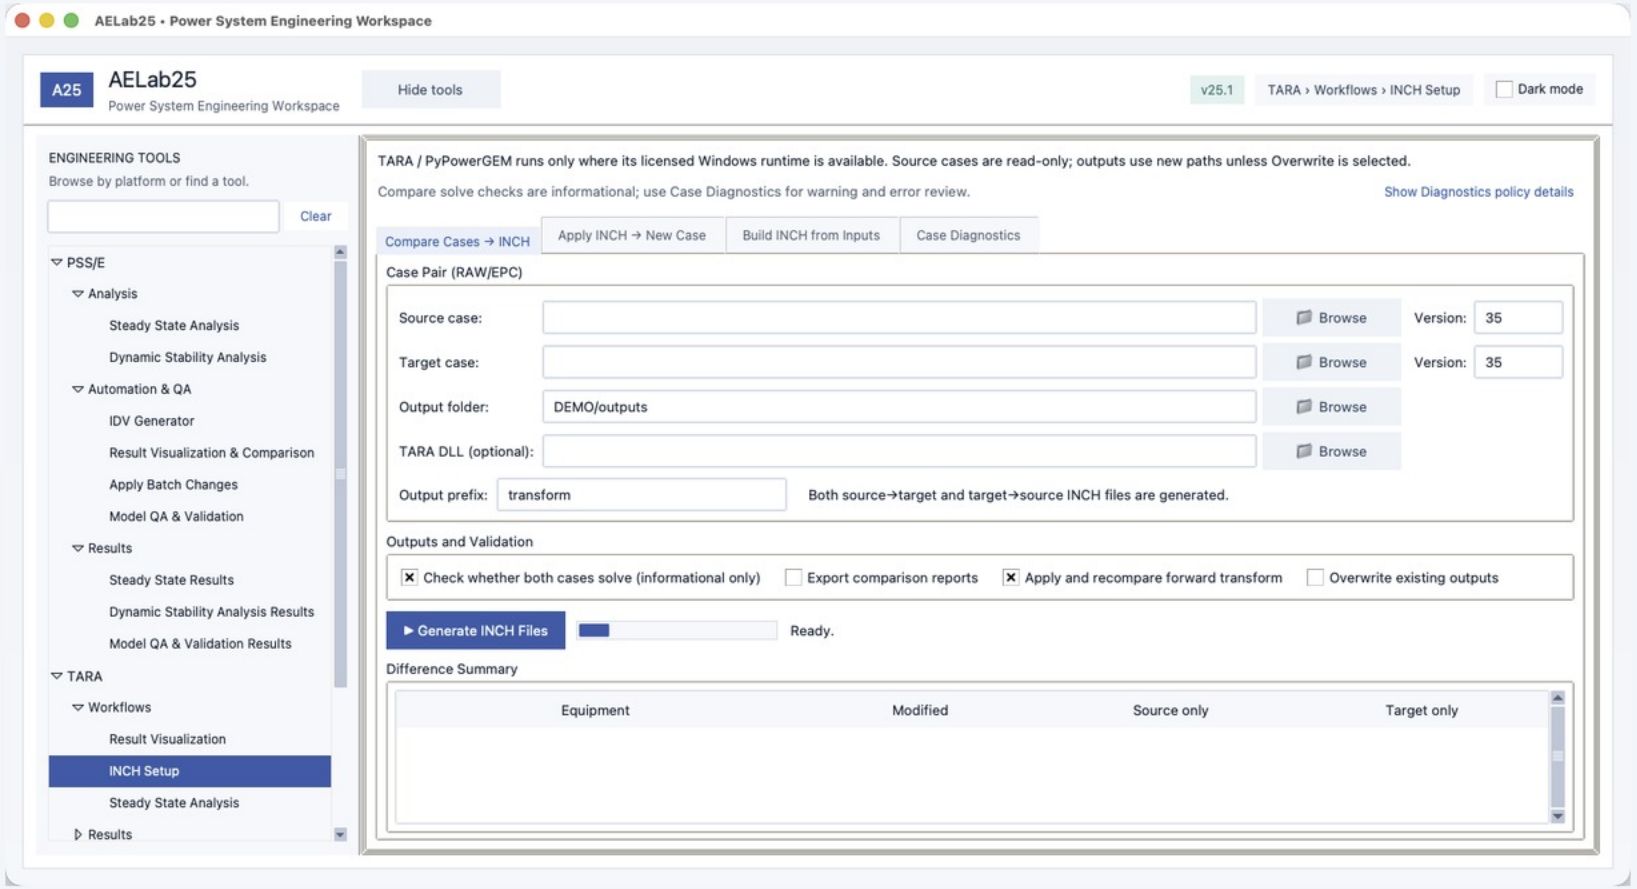


WHAT THIS TAB DOES

Compares a source and target case and prepares forward and reverse INCH transformations with optional validation reports. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Apply INCH → New Case

ARCHIVED UI | TARA › Workflows › INCH Setup › Apply INCH → New Case

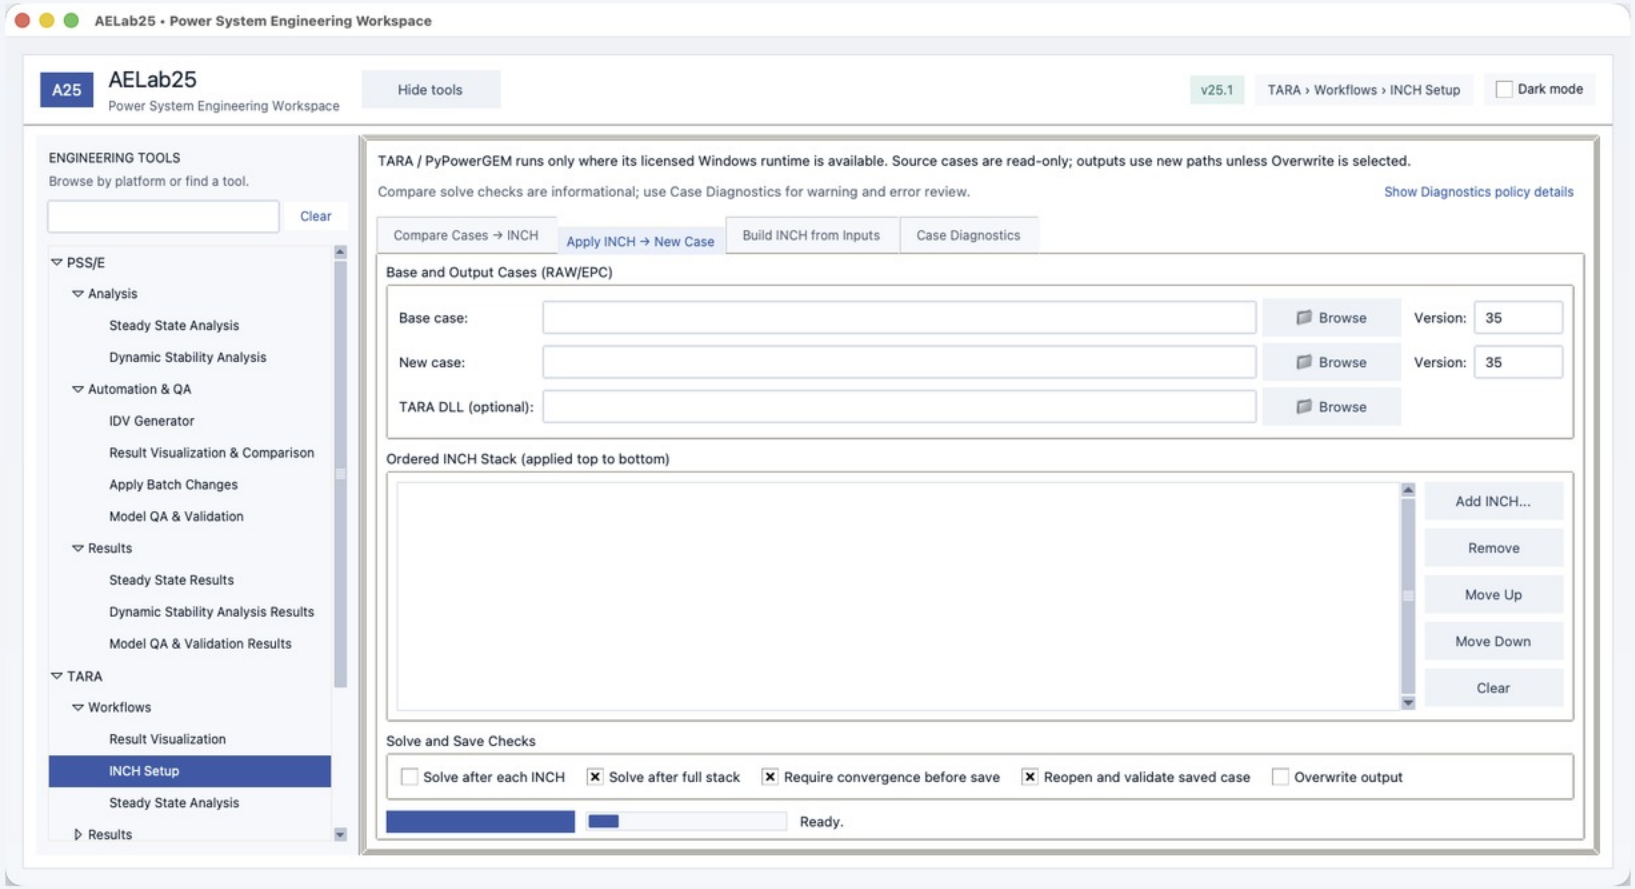


WHAT THIS TAB DOES

Applies an ordered INCH stack to a base case and exposes solve, convergence, overwrite, and reopen checks. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Build INCH from Inputs

ARCHIVED UI | TARA › Workflows › INCH Setup › Build INCH from Inputs

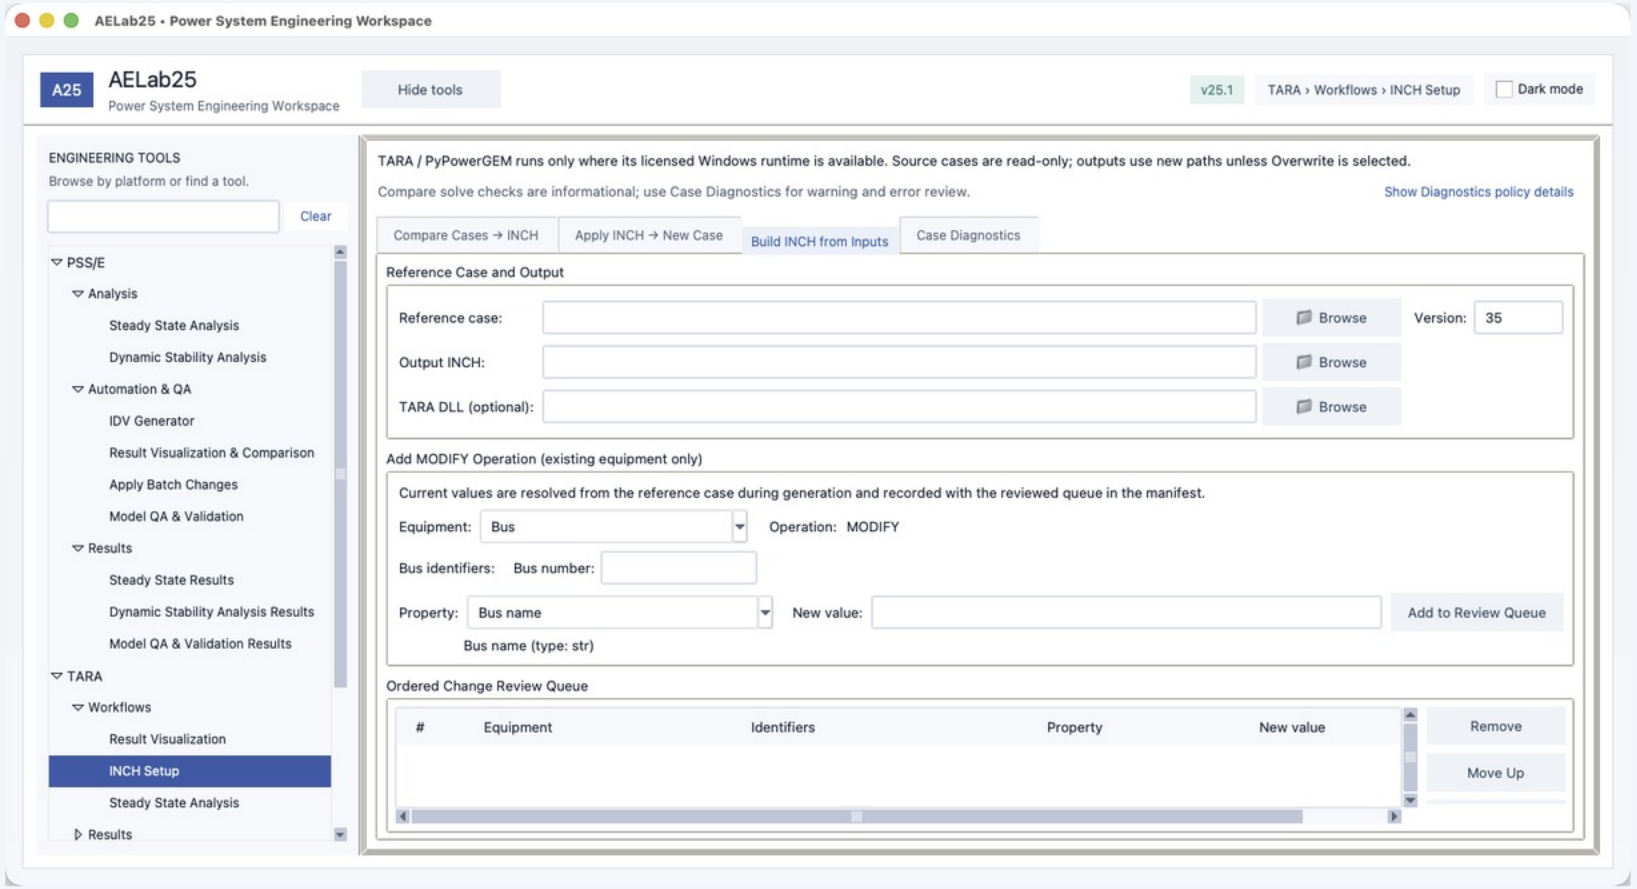


WHAT THIS TAB DOES

Builds a reviewed, ordered queue of supported equipment modifications before writing an INCH file. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Case Diagnostics

ARCHIVED UI | TARA › Workflows › INCH Setup › Case Diagnostics

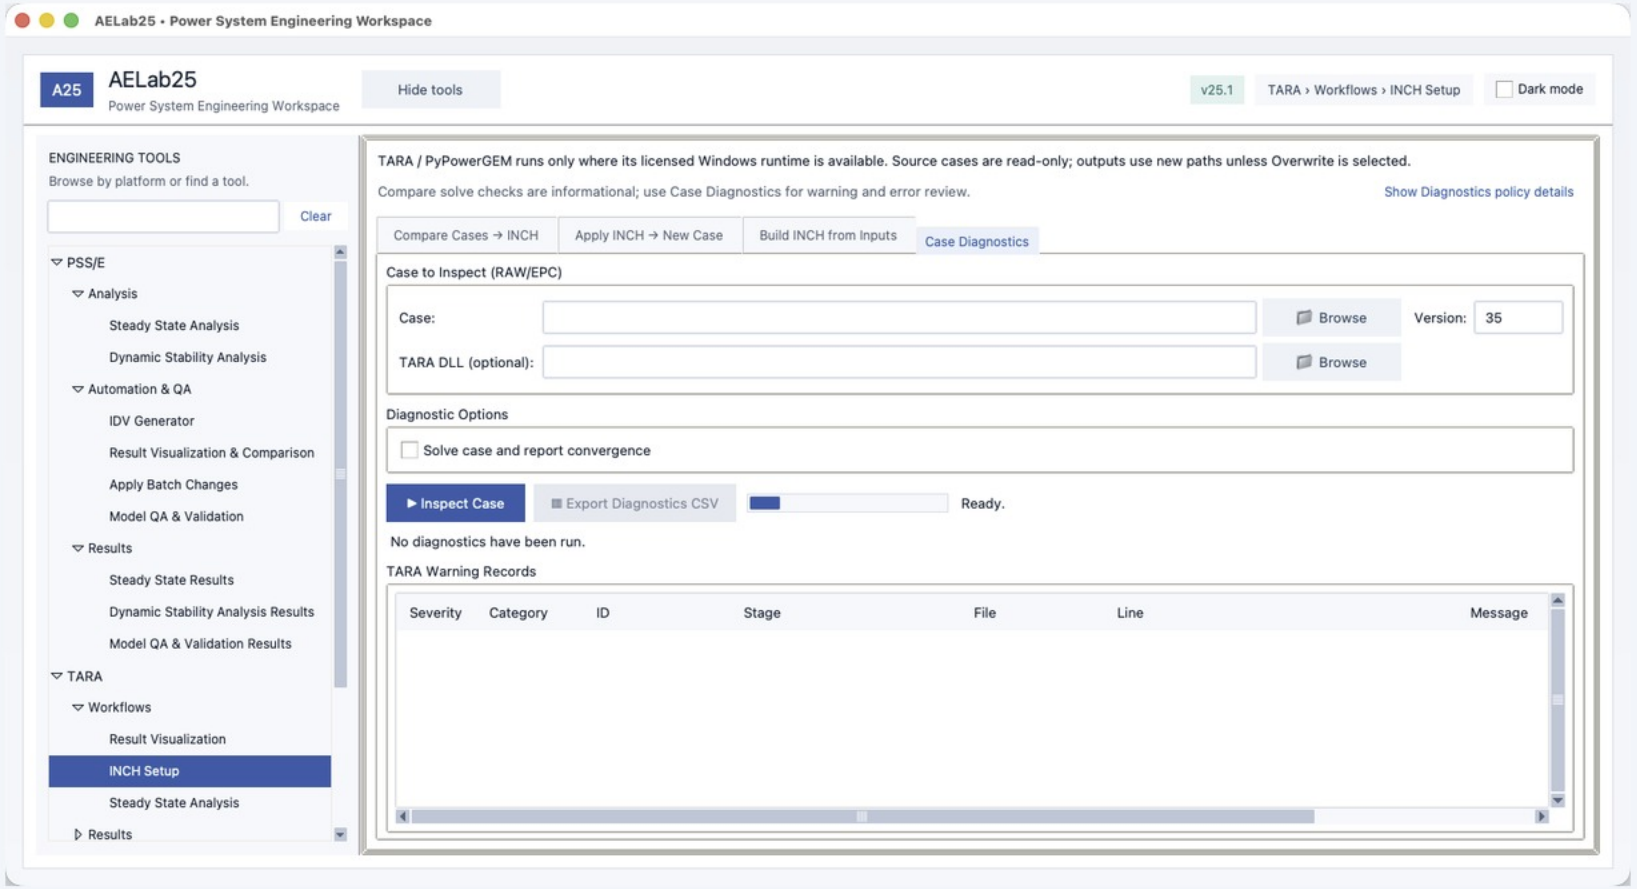


WHAT THIS TAB DOES

Inspects a selected case and reports diagnostic warning records and optional convergence information. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Steady State Analysis — Setup & Run

ARCHIVED UI | TARA › Workflows › Steady State Analysis › Setup & Run

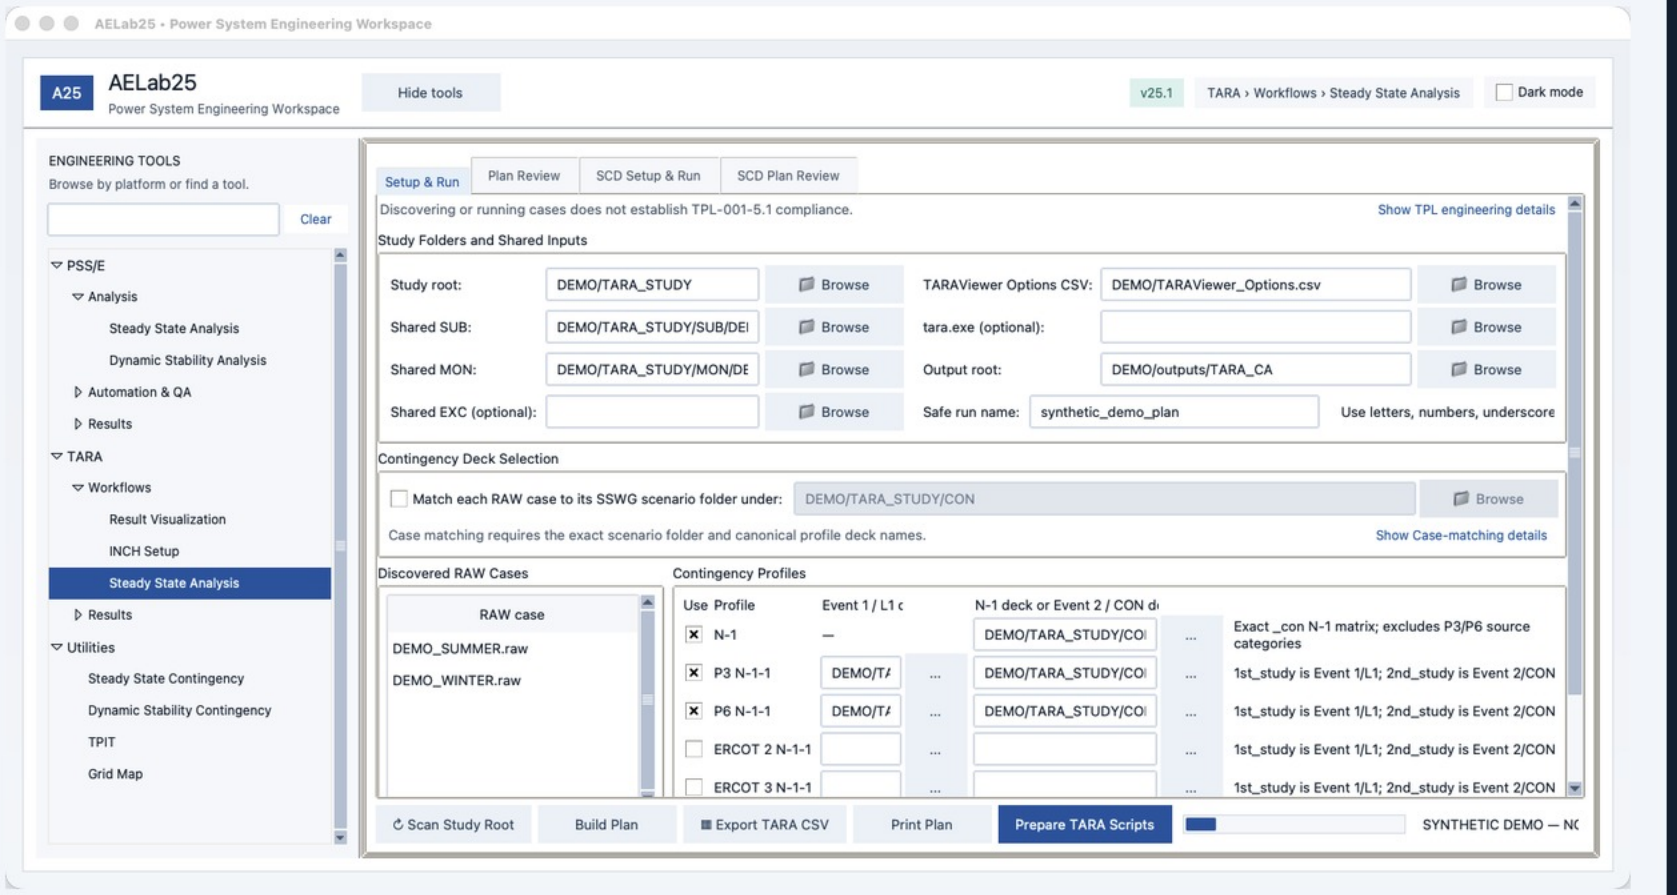


WHAT THIS TAB DOES

Archived RAW/deck mapping and run setup. Current selection separates P1s, P2s, P4s, P5s and P7s N-1 families alongside the N-1-1 mappings. Review the frozen plan before execution. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Steady State Analysis — Plan Review

ARCHIVED UI | TARA › Workflows › Steady State Analysis › Plan Review

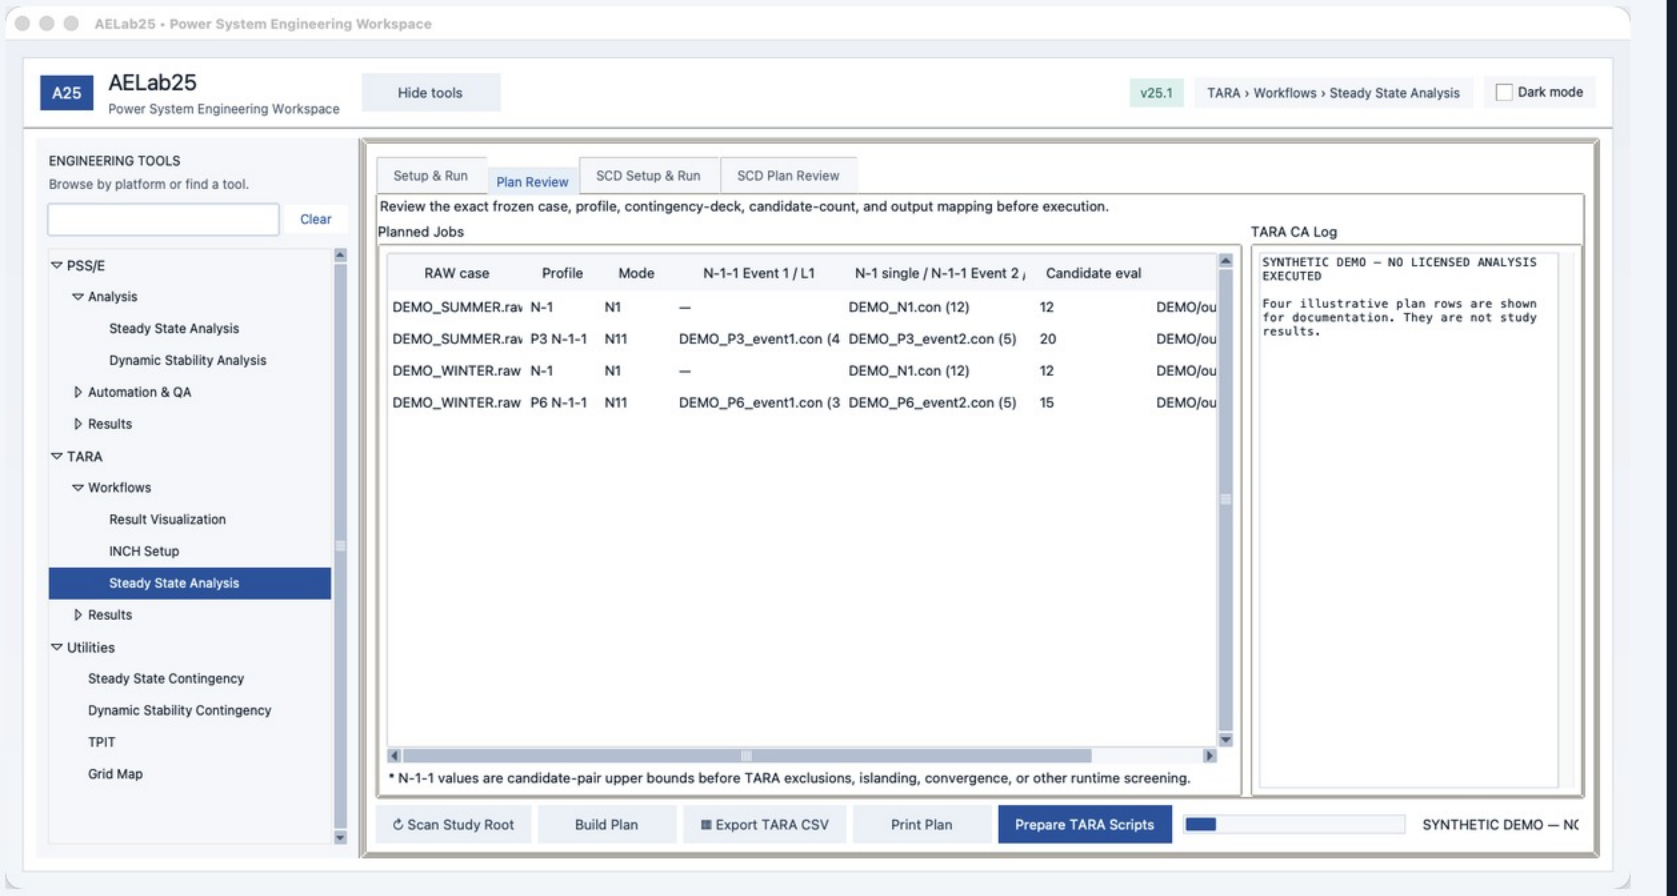


WHAT THIS TAB DOES

Reviews the frozen job plan, per-job commands and dependencies, and the CSV export and printable plan controls. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA Jobs

ARCHIVED UI | TARA › Results › Steady State Analysis Results › Jobs

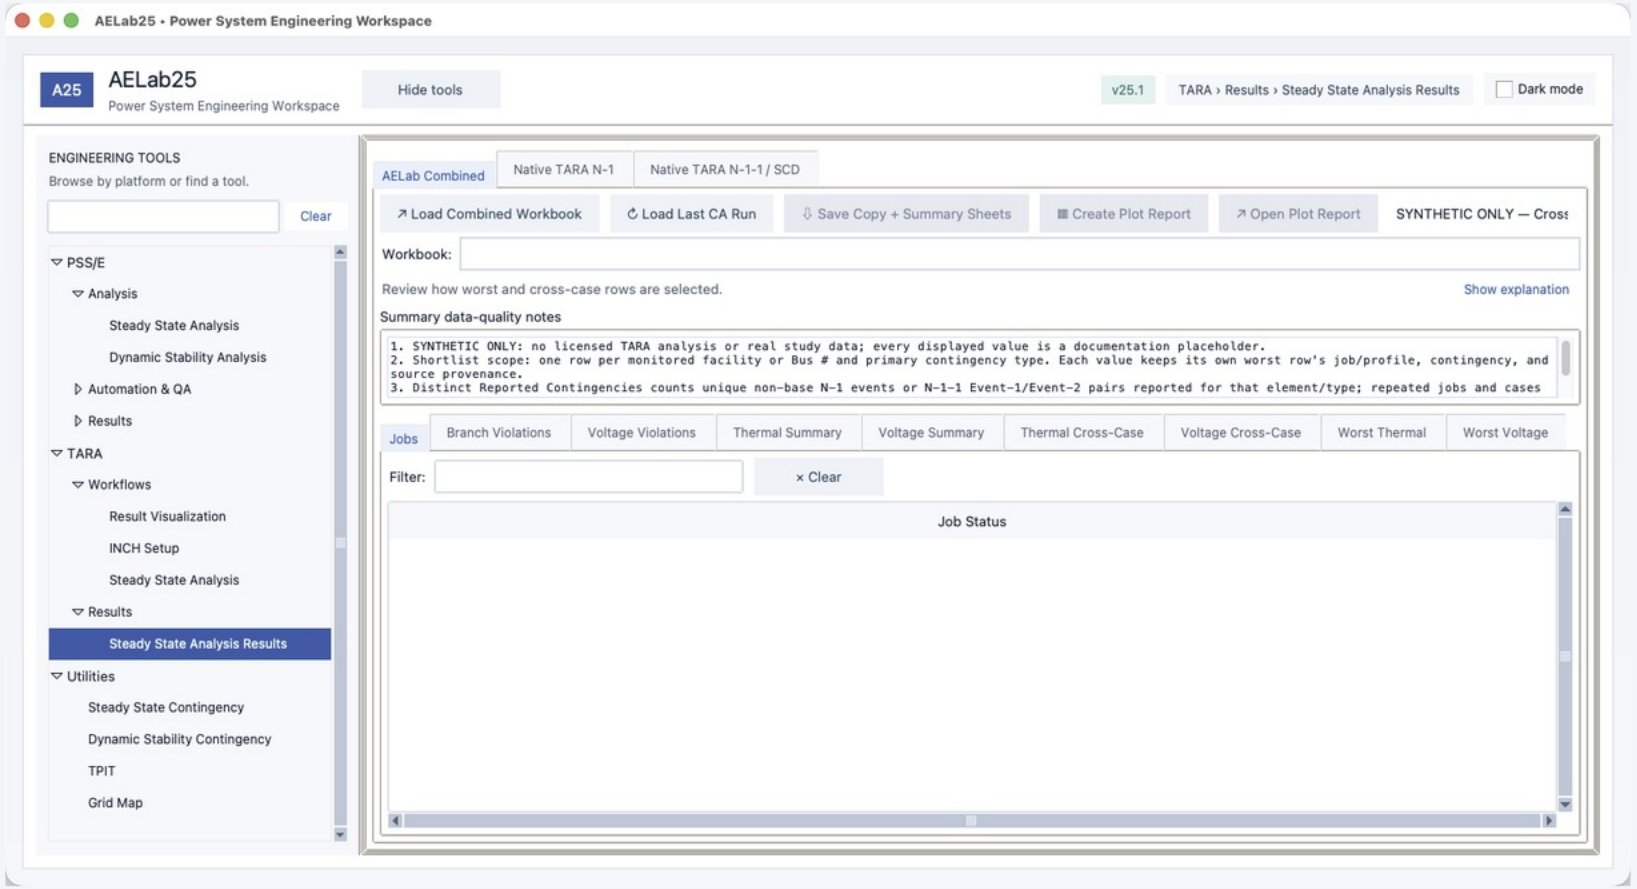


WHAT THIS TAB DOES

Reviews combined-workbook job status while retaining source case and contingency-profile context. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA Branch Violations

ARCHIVED UI | TARA › Results › Steady State Analysis Results › Branch Violations

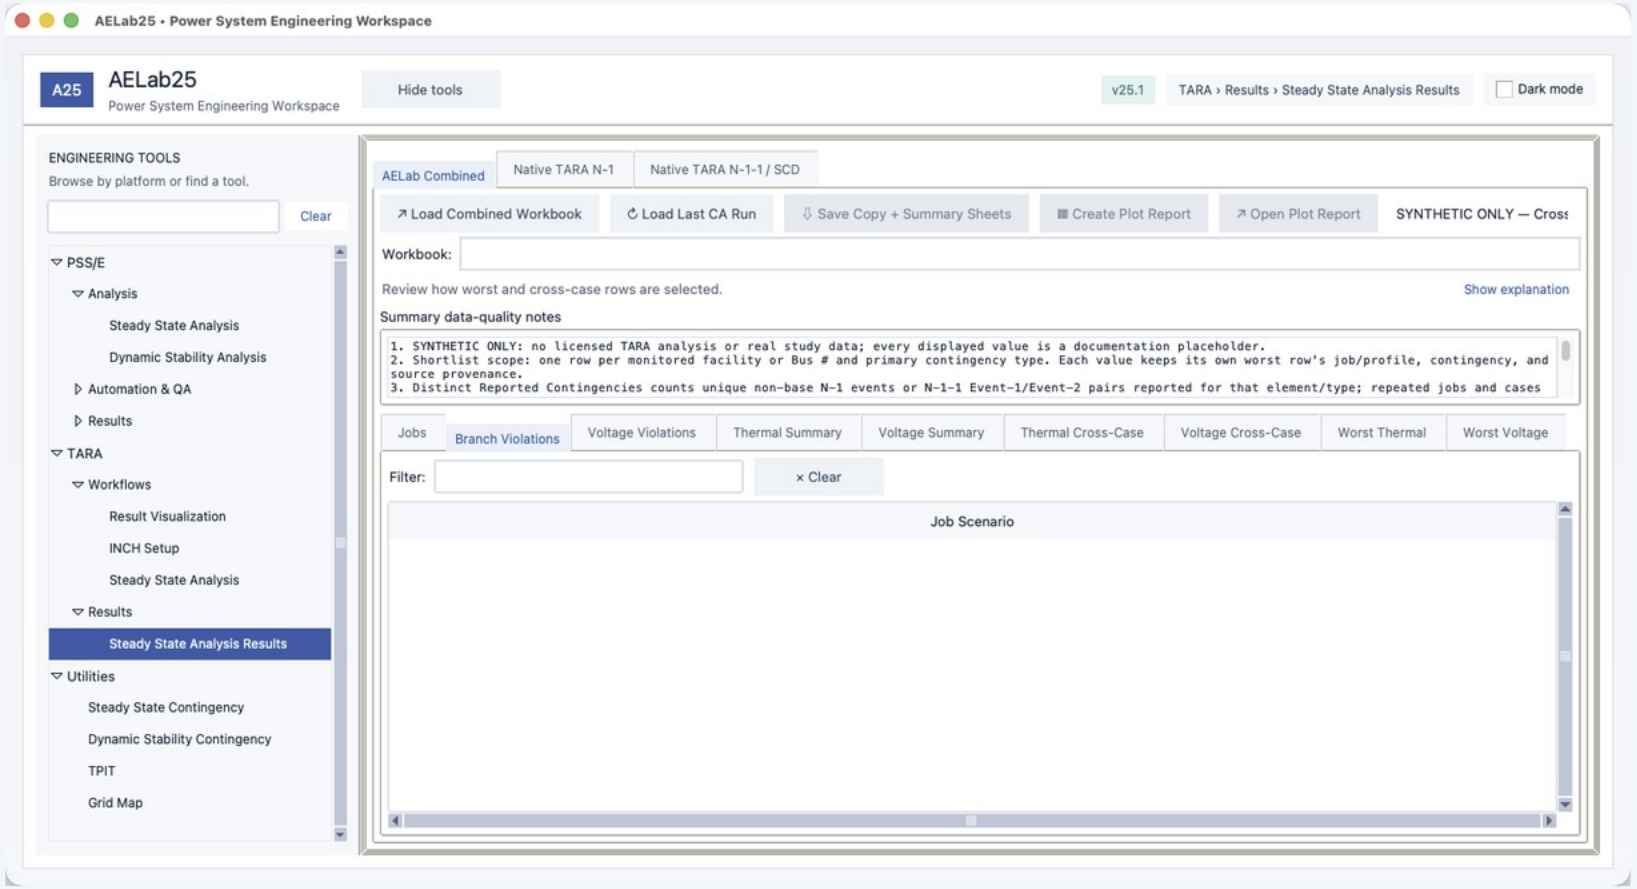


WHAT THIS TAB DOES

Reviews reported branch violations together with their originating job and scenario fields. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA Voltage Violations

ARCHIVED UI | TARA › Results › Steady State Analysis Results › Voltage Violations

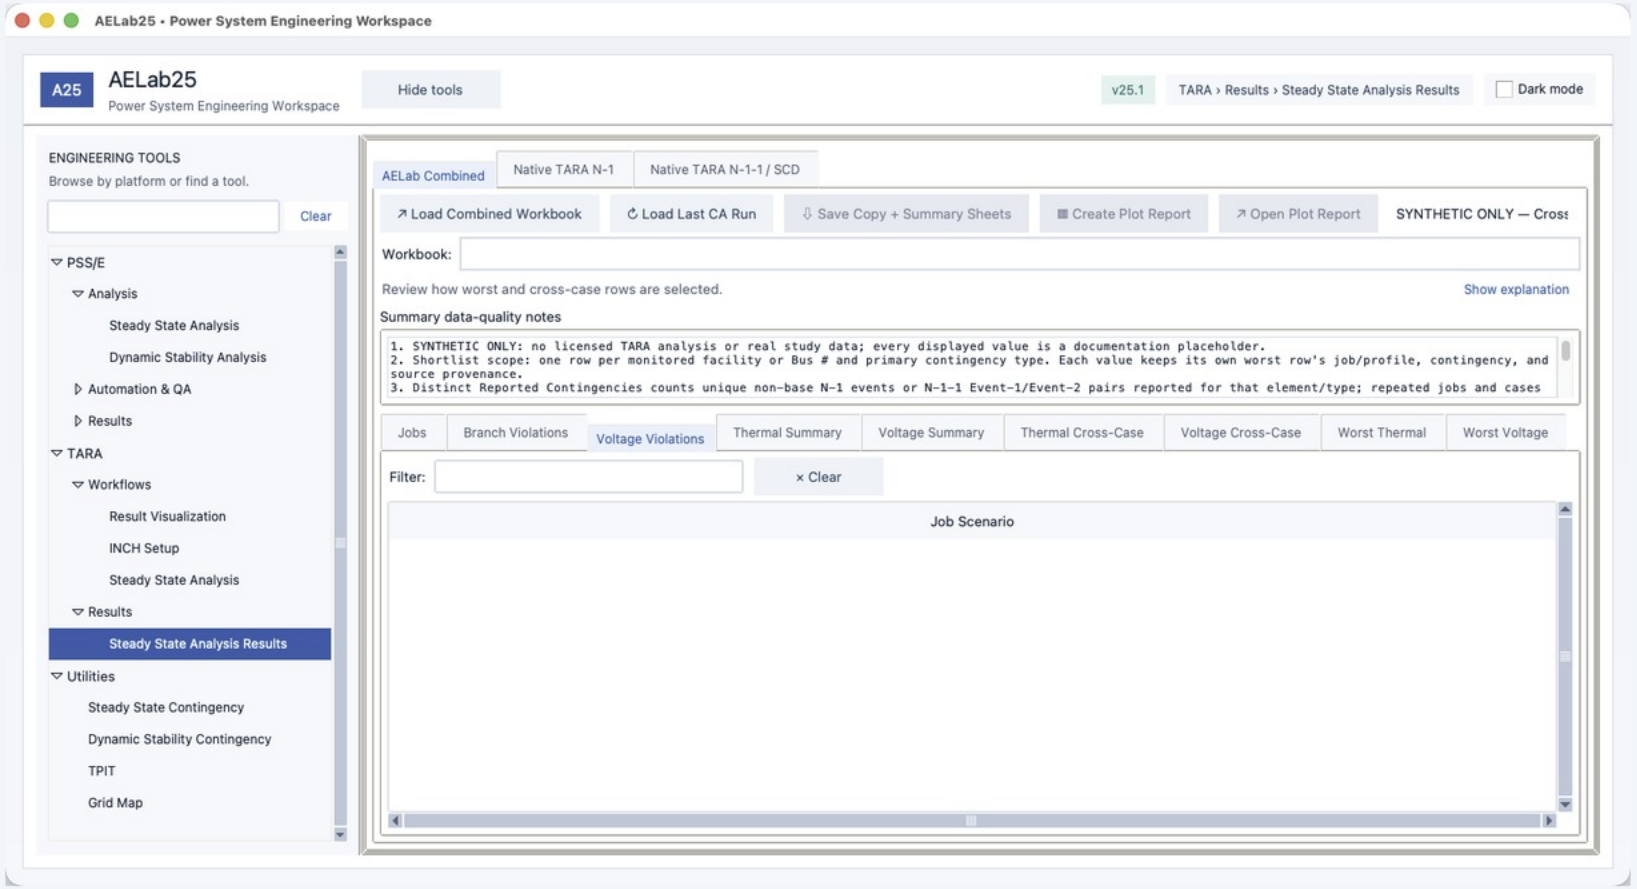


WHAT THIS TAB DOES

Reviews reported voltage violations together with their originating job and scenario fields. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Element Data Generator

ARCHIVED UI | Utilities › Steady State Contingency › Element Data Generator

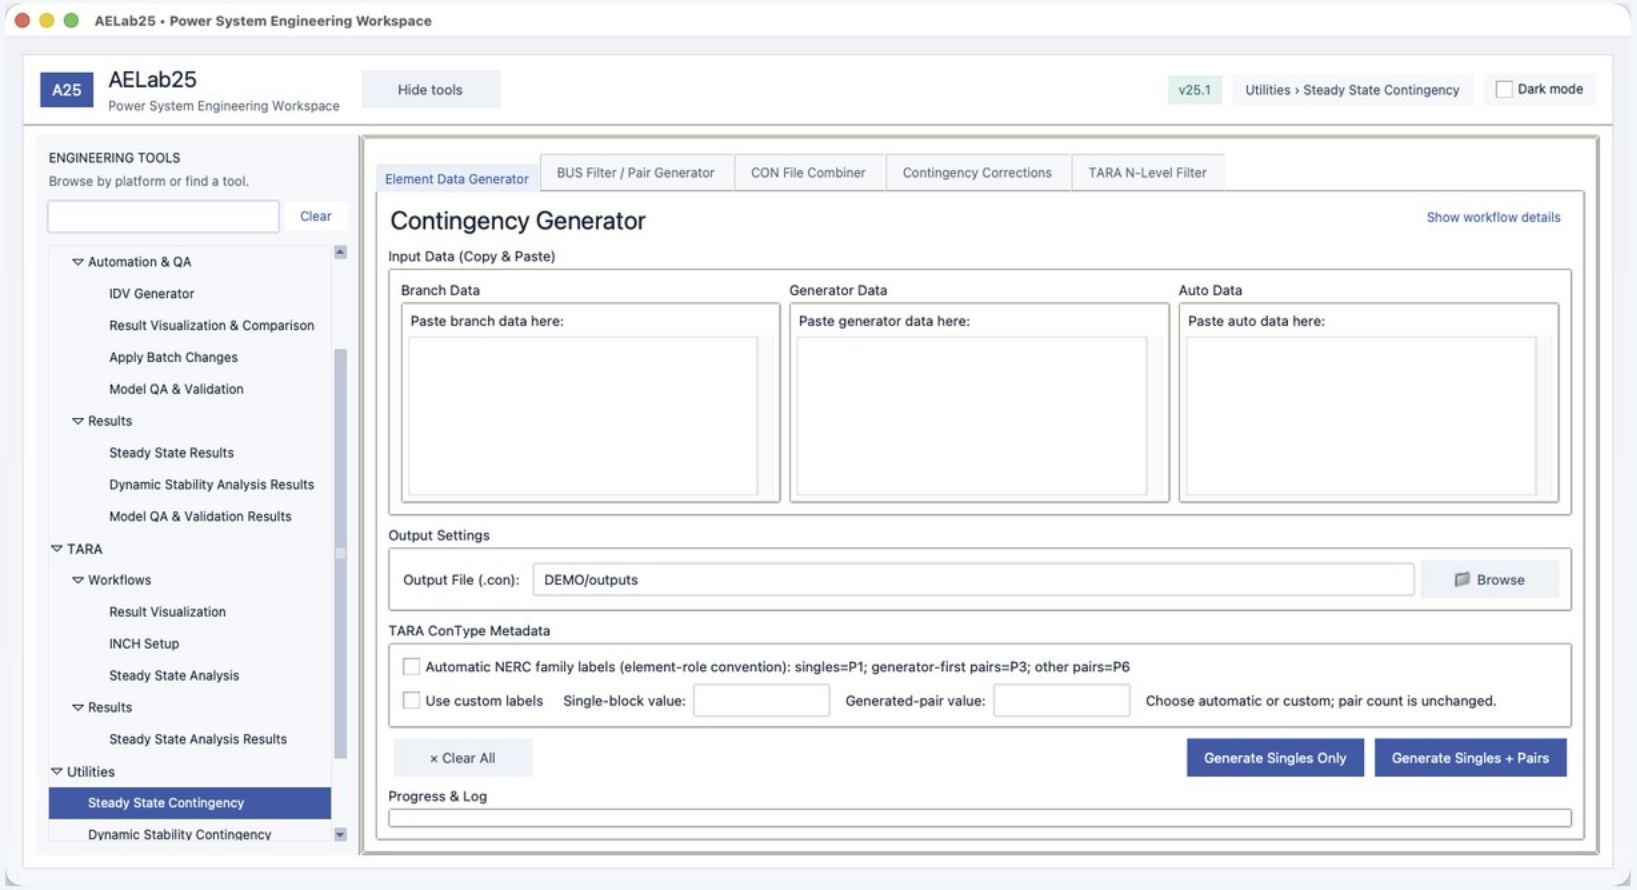


WHAT THIS TAB DOES

Creates single and paired contingency blocks from pasted branch, generator, and transformer data with optional ConType metadata. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: BUS Filter / Pair Generator

ARCHIVED UI | Utilities › Steady State Contingency › BUS Filter / Pair Generator

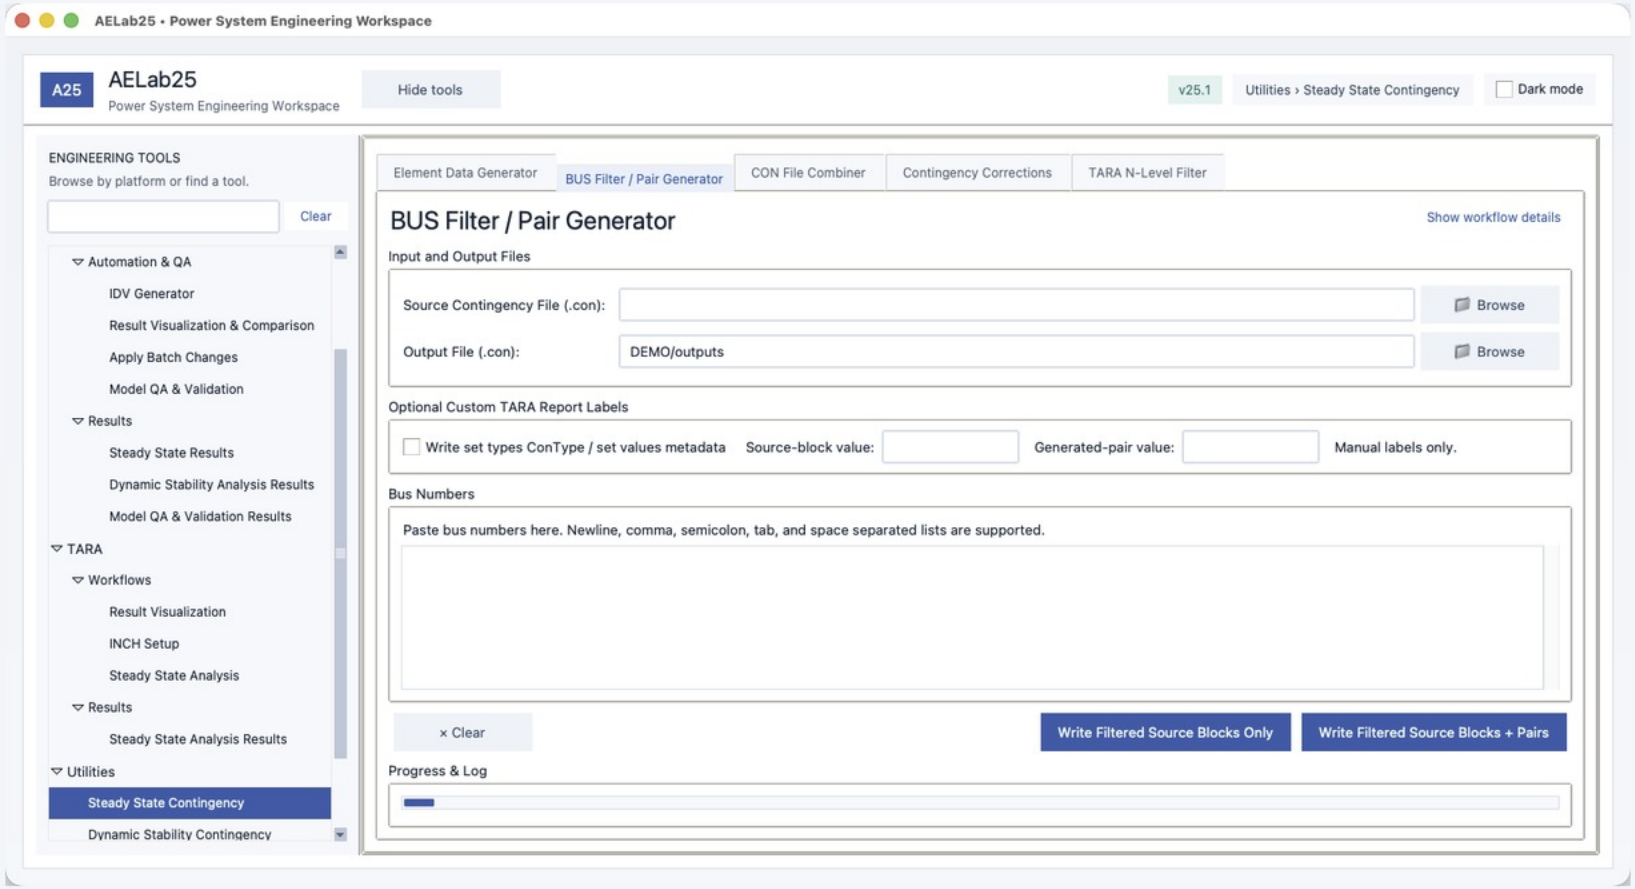


WHAT THIS TAB DOES

Filters source contingency blocks by a reviewed bus list and can create matched pair combinations. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: CON File Combiner

ARCHIVED UI | Utilities › Steady State Contingency › CON File Combiner

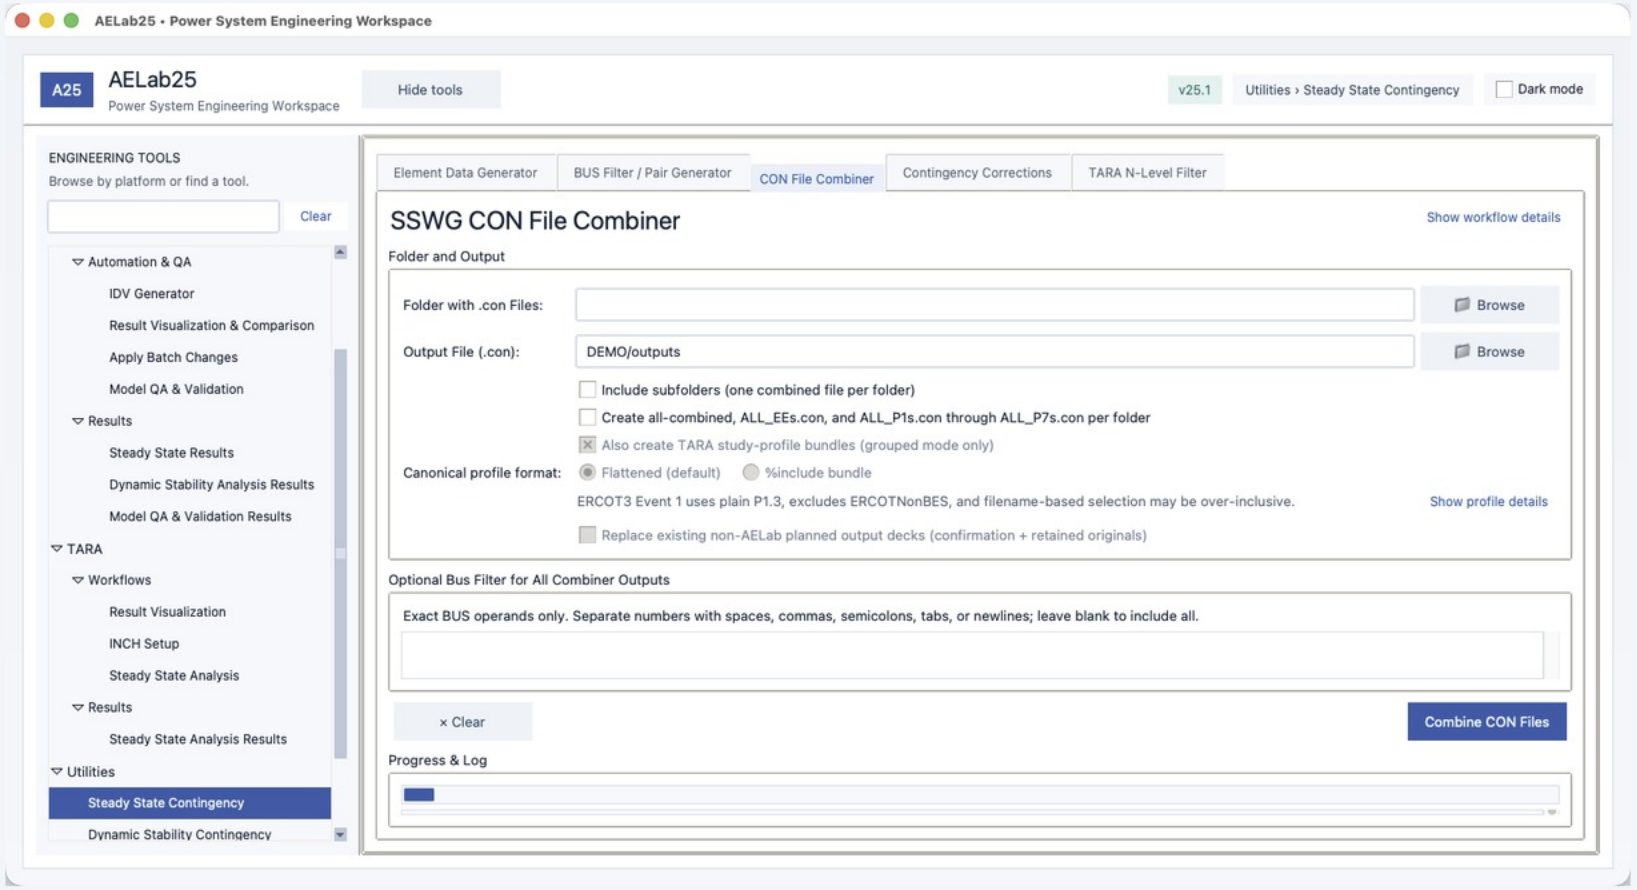


WHAT THIS TAB DOES

Combines contingency decks and can prepare grouped NERC-family and TARA study-profile outputs. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Contingency Corrections

ARCHIVED UI | Utilities › Steady State Contingency › Contingency Corrections

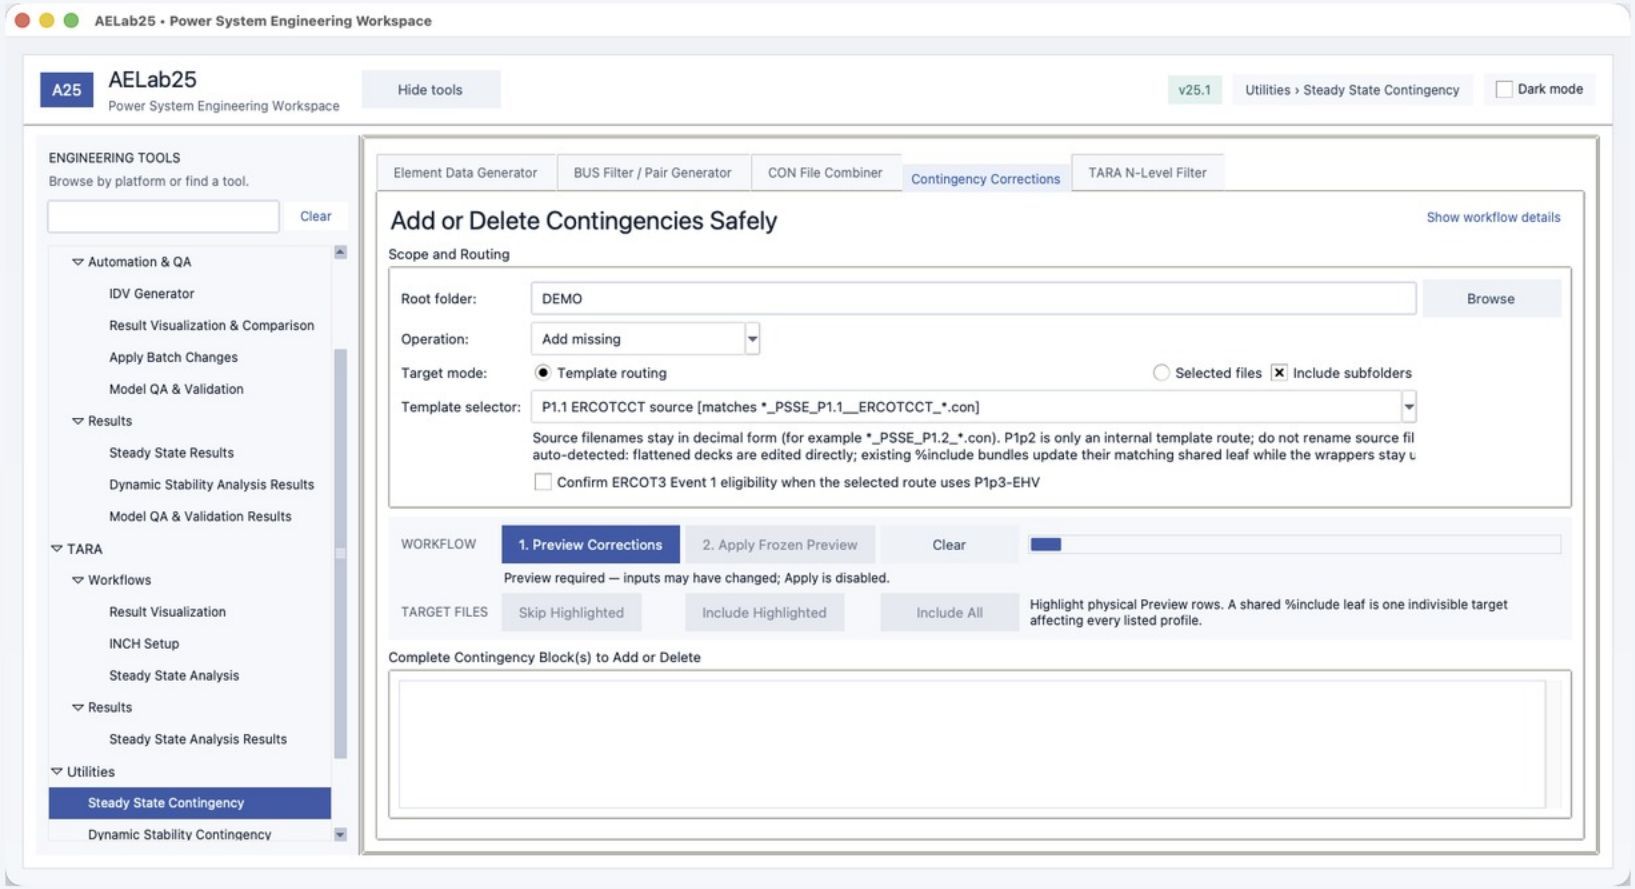


WHAT THIS TAB DOES

Scans selected decks and requires a frozen preview before adding or deleting complete contingency blocks. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA N-Level Filter

ARCHIVED UI | Utilities › Steady State Contingency › TARA N-Level Filter

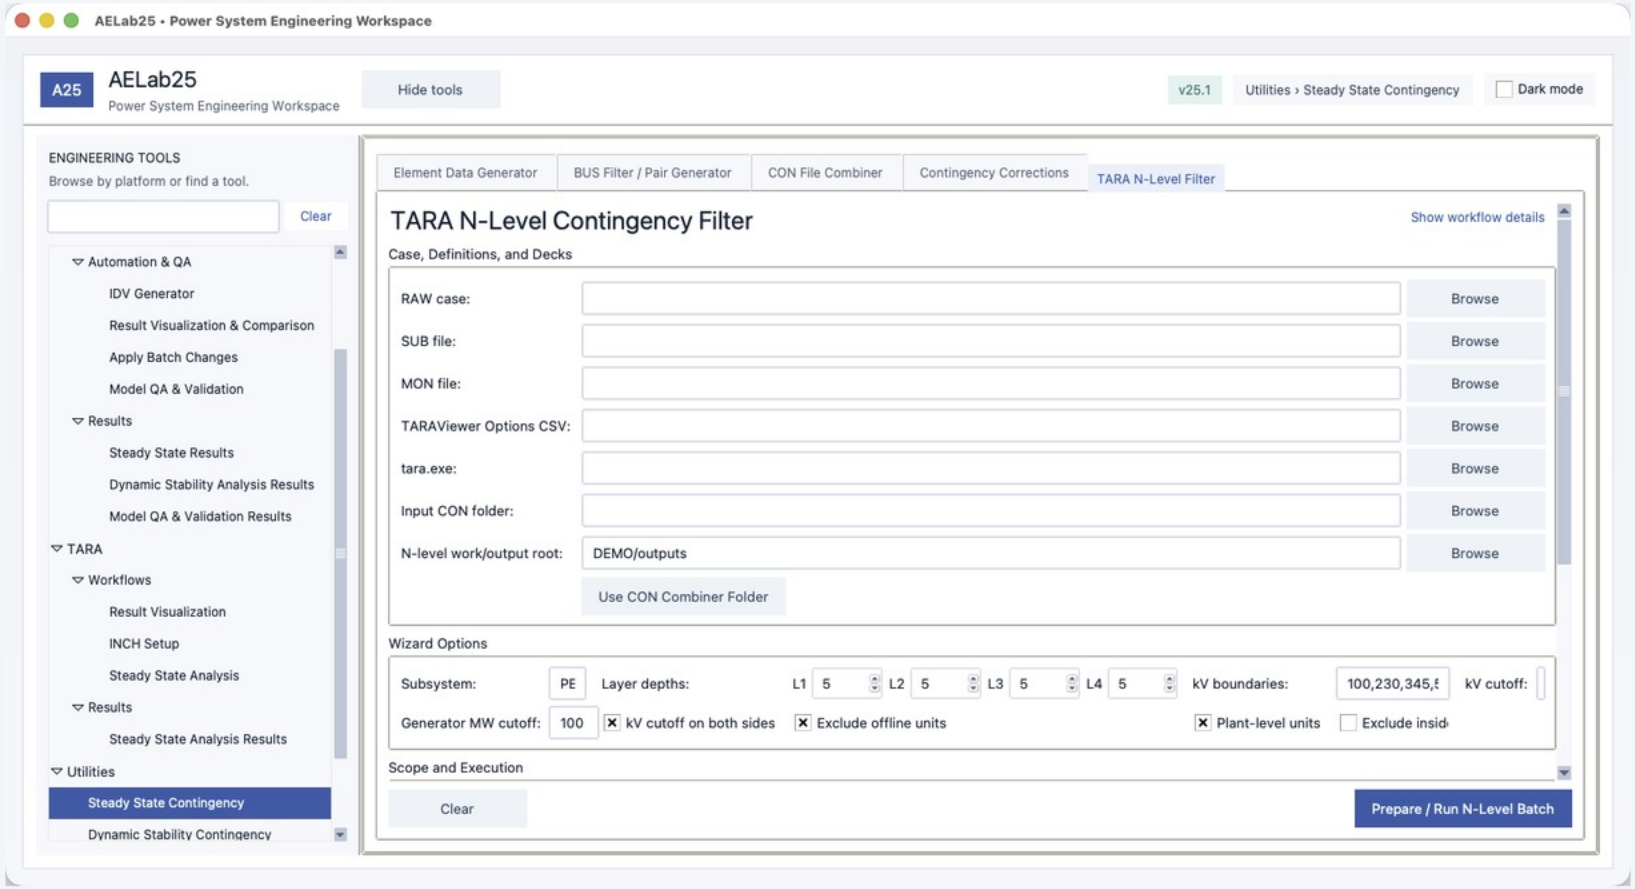


WHAT THIS TAB DOES

Configures subsystem, layer, kV, generator, and deck-scope filters and can prepare scripts without launching licensed TARA. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: DWG Contingency — Setup

ARCHIVED UI | Utilities › Dynamic Stability Contingency › Setup

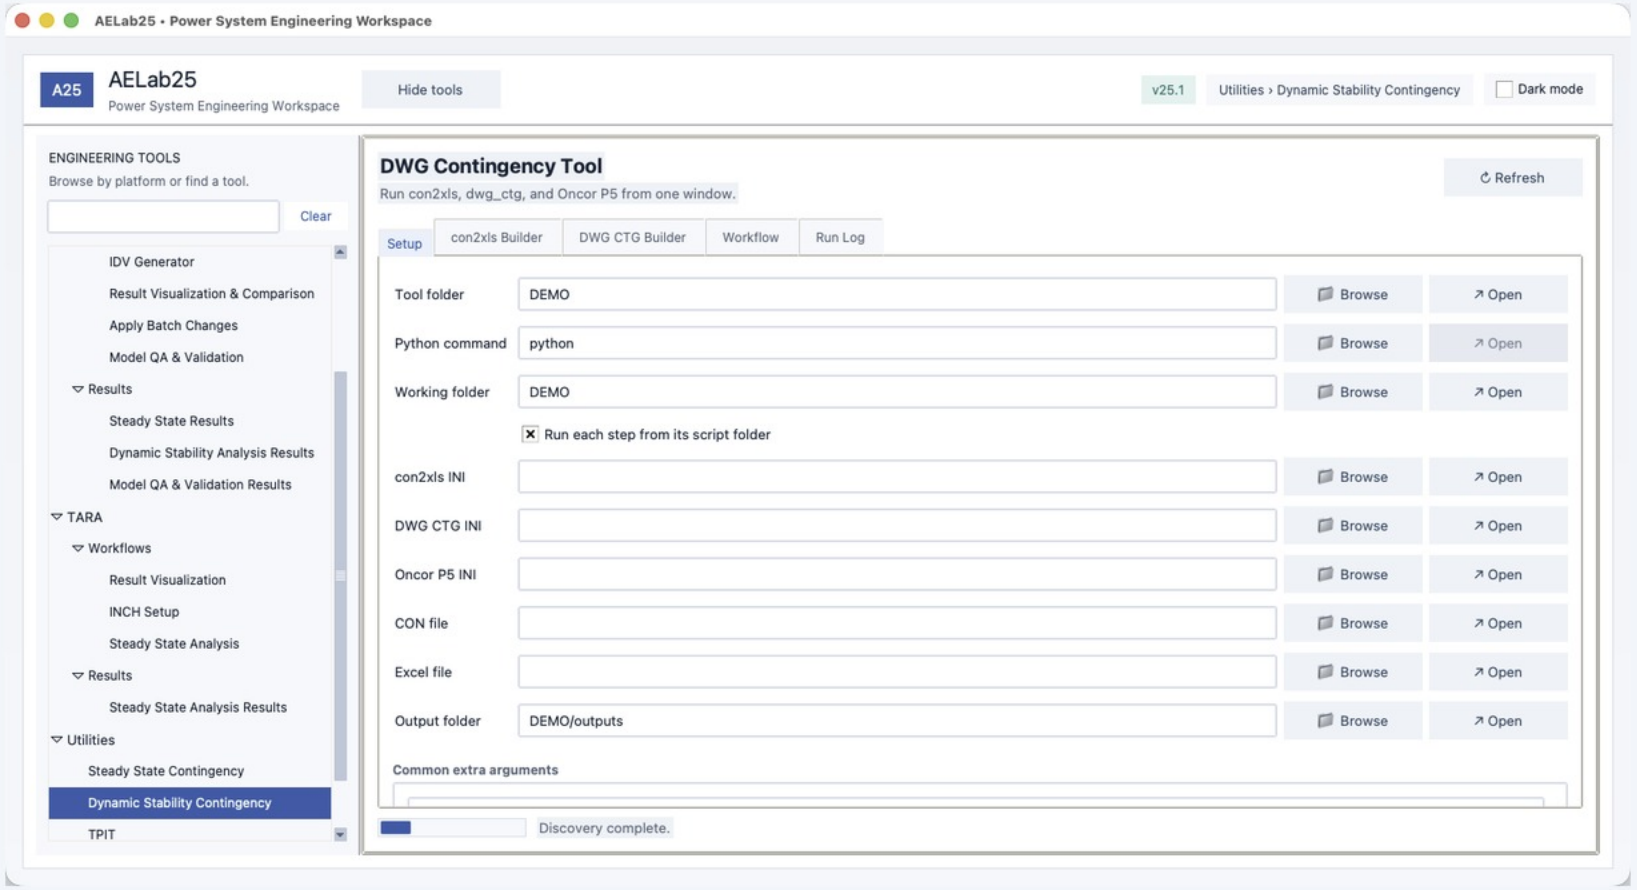


WHAT THIS TAB DOES

Archived DWG source/setup workspace. Current navigation also includes Audit & Split, Auto CONs, Pair event IDVs and Equipment IDVs; their source-verified capabilities appear in the feature guide. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: con2xls Builder

ARCHIVED UI | Utilities › Dynamic Stability Contingency › con2xls Builder

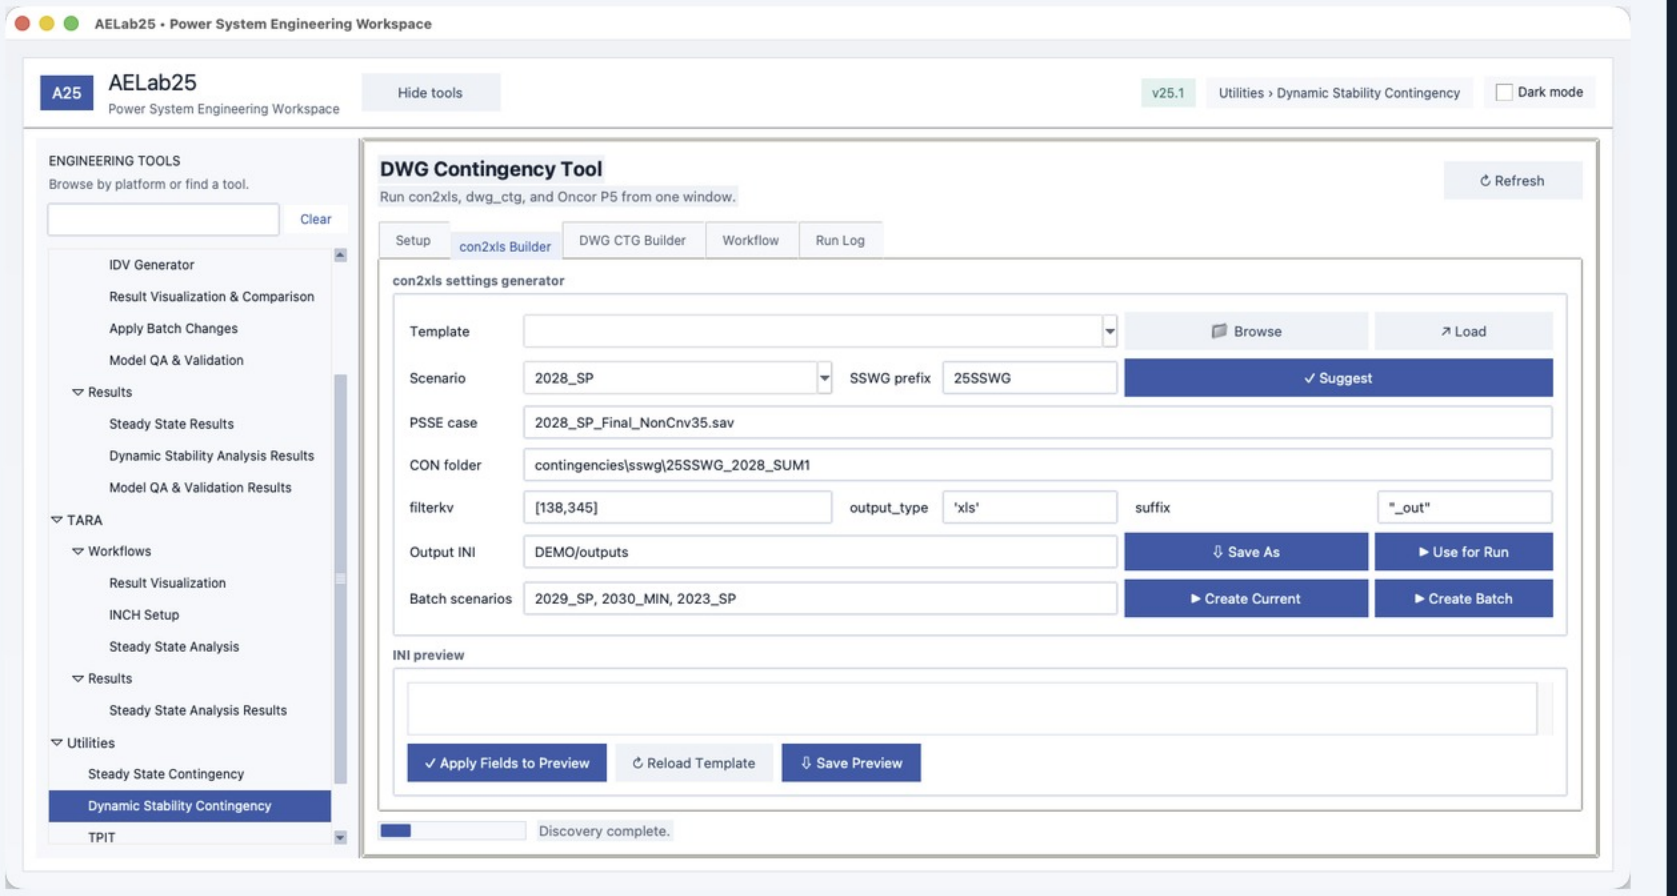


WHAT THIS TAB DOES

Builds reviewed con2xls settings from a template and scenario-specific workbook inputs. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: DWG CTG Builder

ARCHIVED UI | Utilities › Dynamic Stability Contingency › DWG CTG Builder

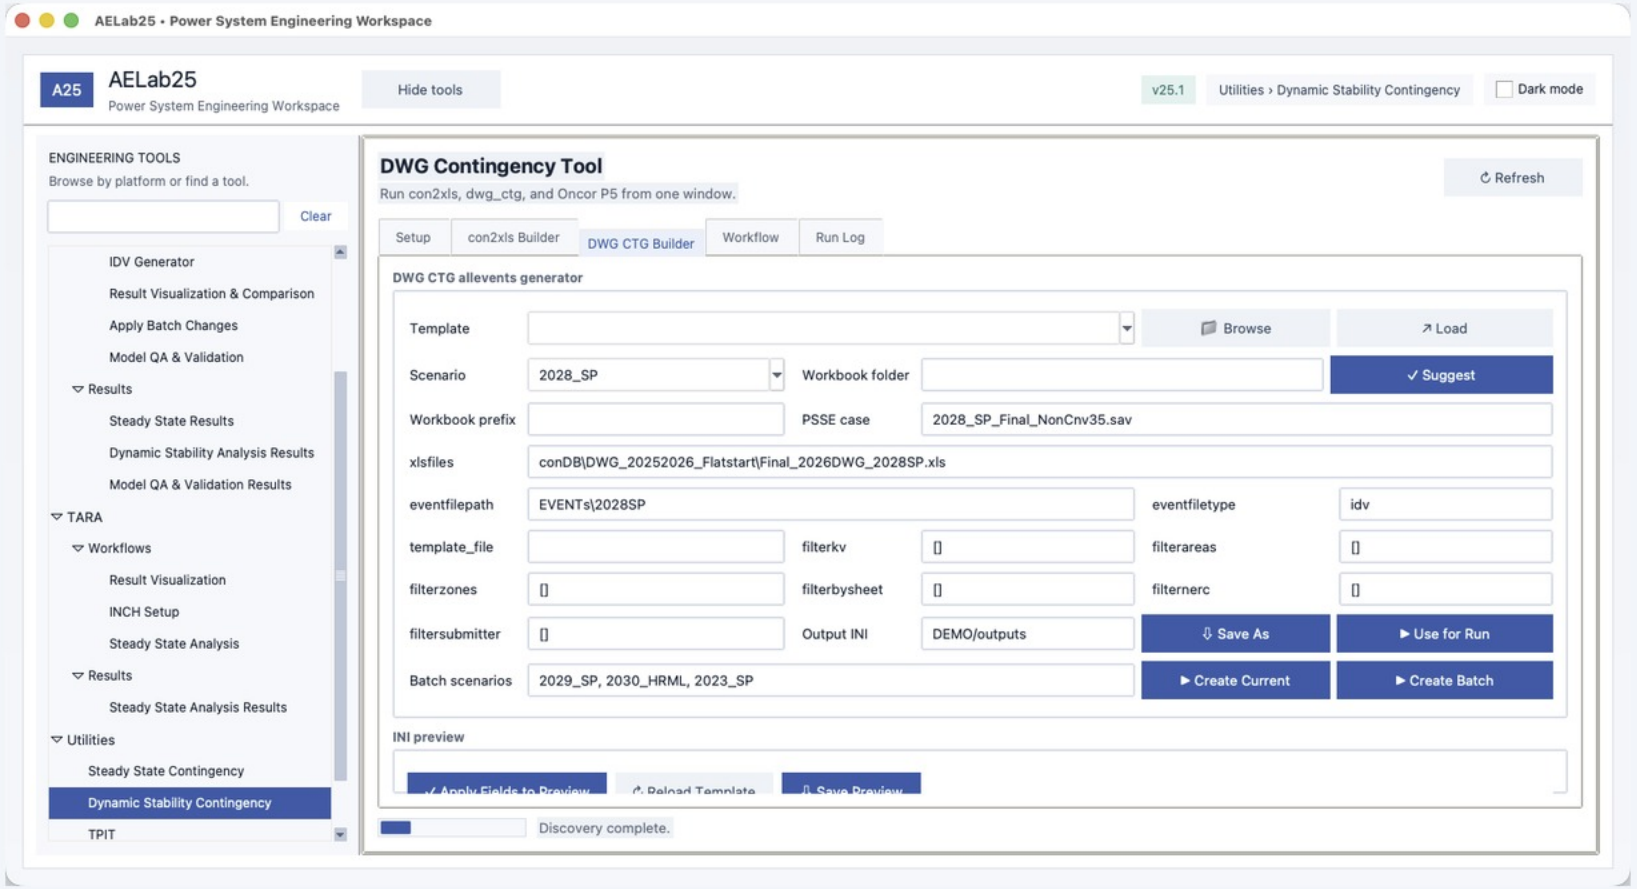


WHAT THIS TAB DOES

Builds DWG contingency settings for selected workbooks, event files, and optional filters. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: DWG Contingency — Workflow

ARCHIVED UI | Utilities › Dynamic Stability Contingency › Workflow

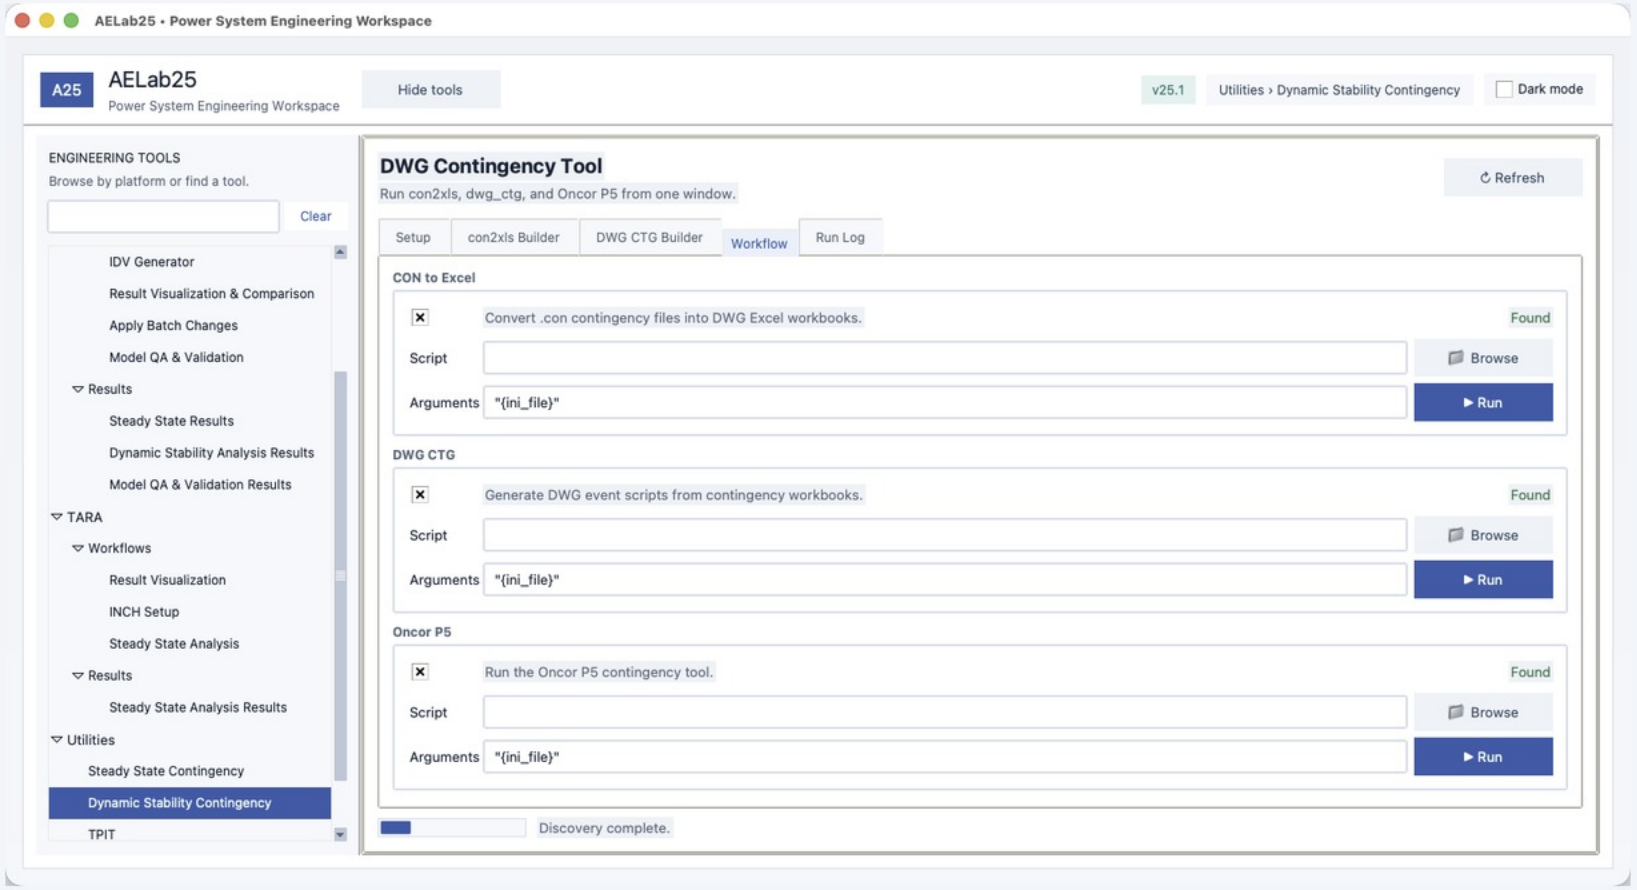


WHAT THIS TAB DOES

Shows ordered con2xls, DWG contingency, and Oncor P5 workflow steps with individual run selection and status. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: DWG Contingency — Run Log

ARCHIVED UI | Utilities › Dynamic Stability Contingency › Run Log

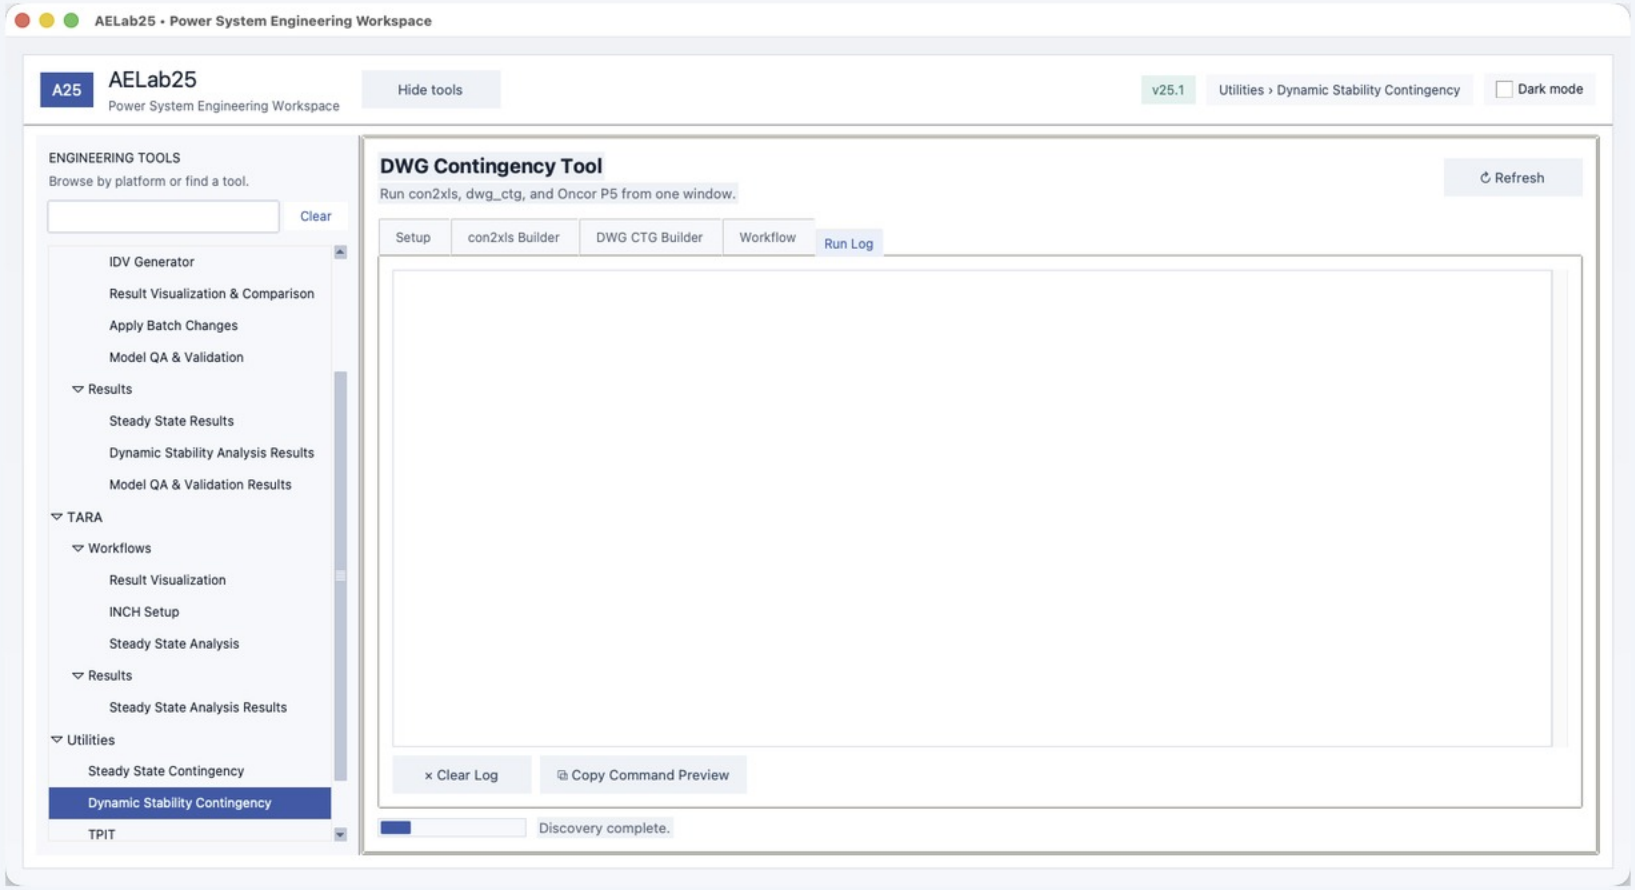


WHAT THIS TAB DOES

Displays workflow messages and subprocess output while keeping failures visible. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TPIT

ARCHIVED UI | Utilities › TPIT

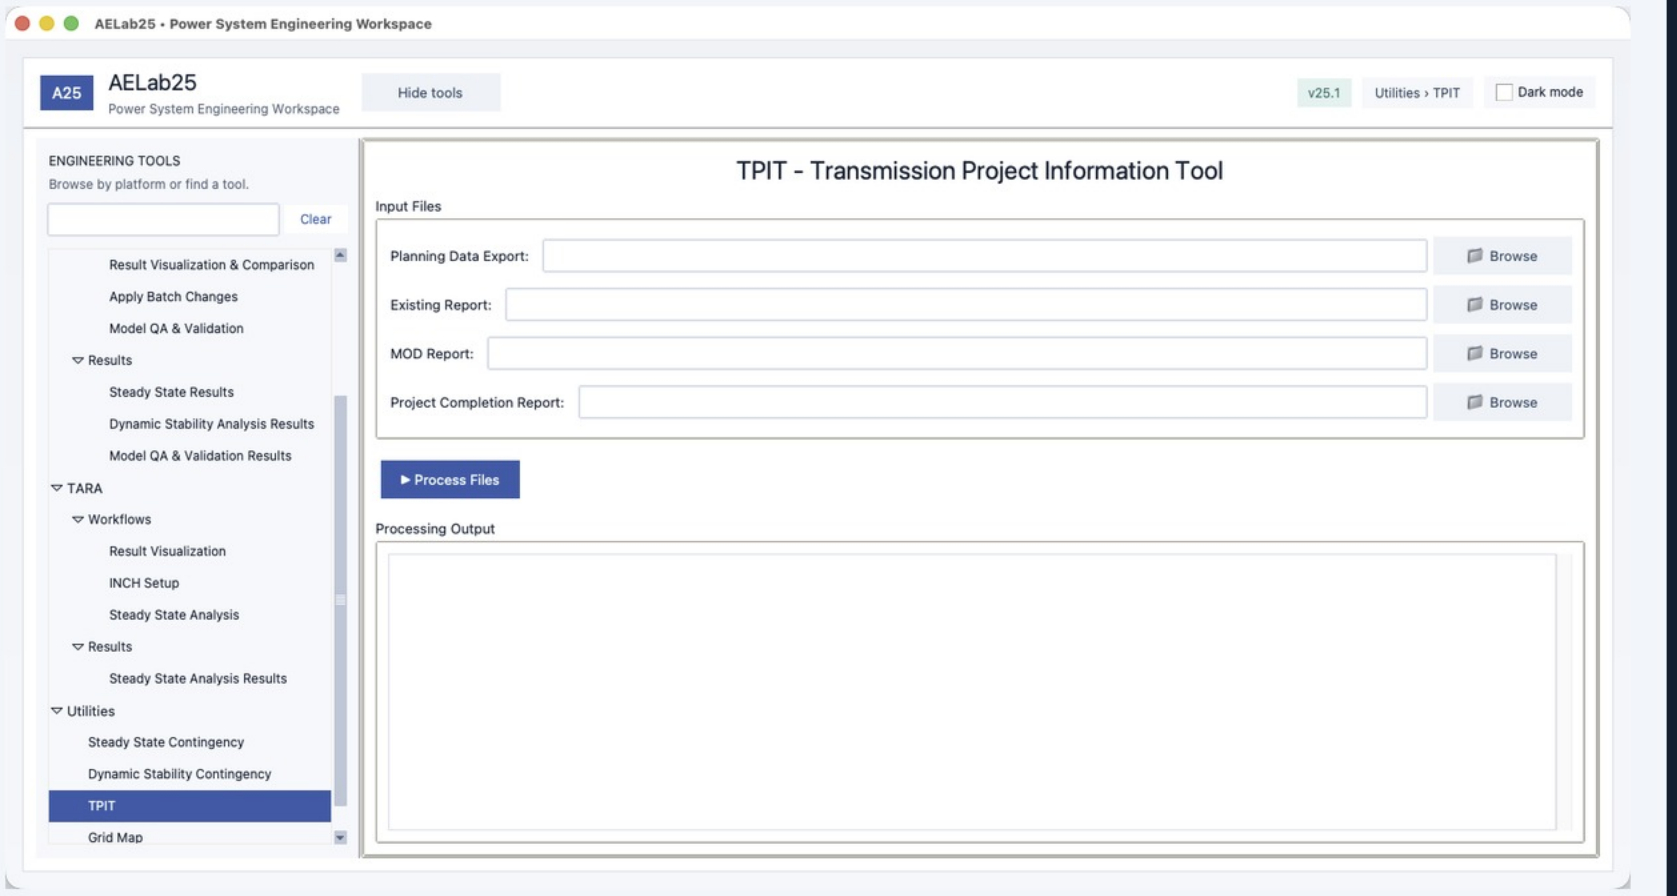


WHAT THIS TAB DOES

Loads planning, existing, MOD, and completion reports for transmission-project information processing. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Grid Map

ARCHIVED UI | Utilities › Grid Map

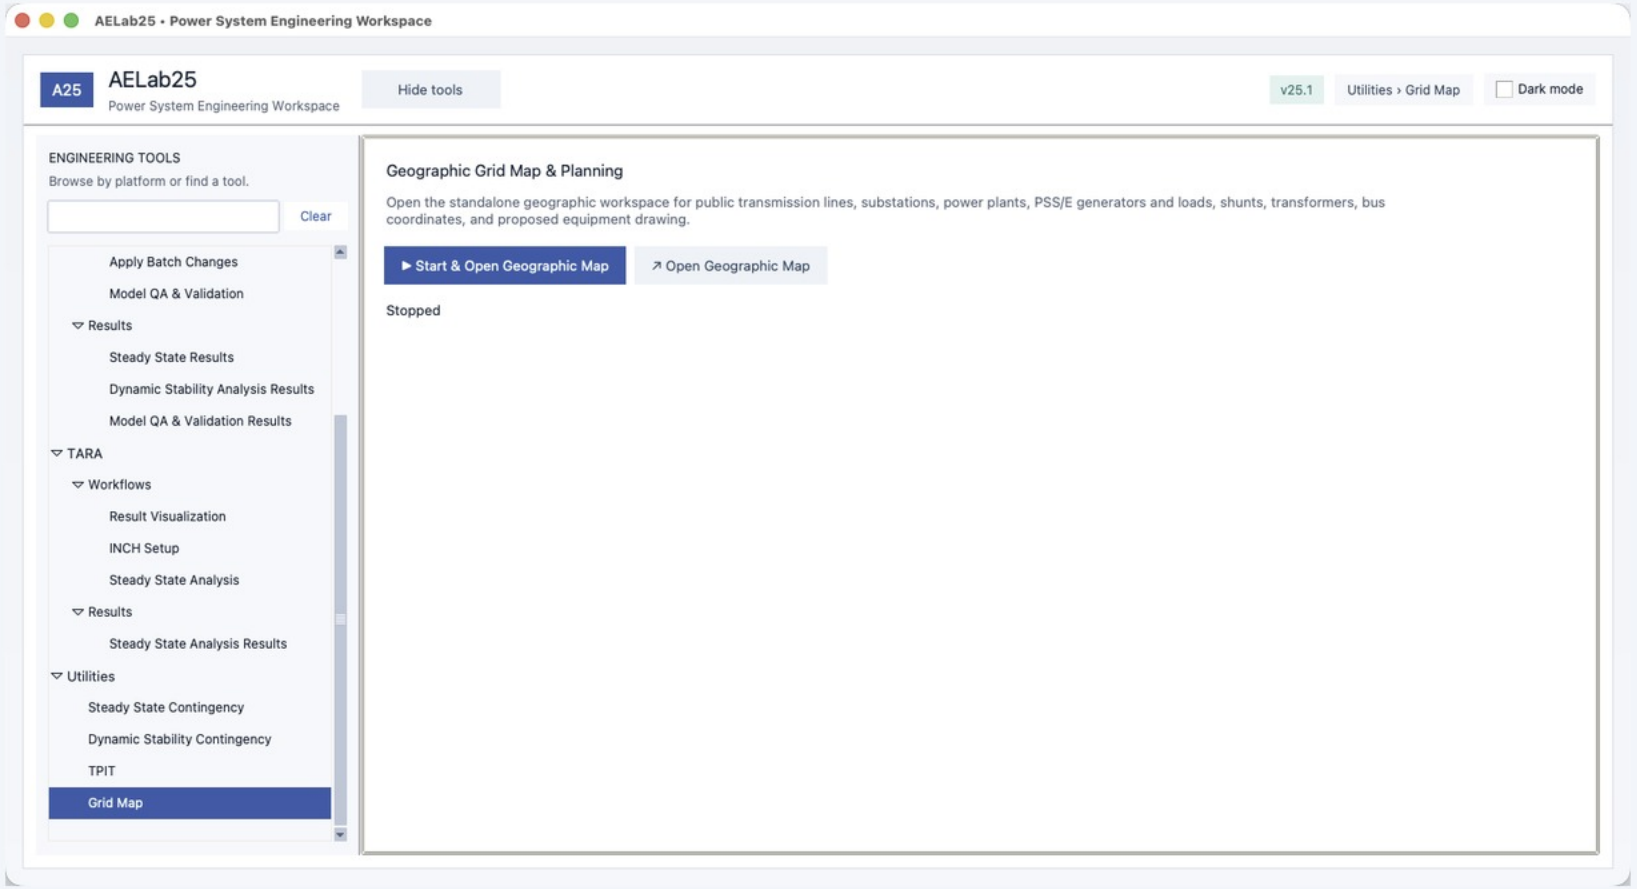


WHAT THIS TAB DOES

Configures the geographic planning map and its local interactive server controls. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA SCD — Setup & Run

ARCHIVED UI | TARA › Workflows › Steady State Analysis › SCD Setup & Run

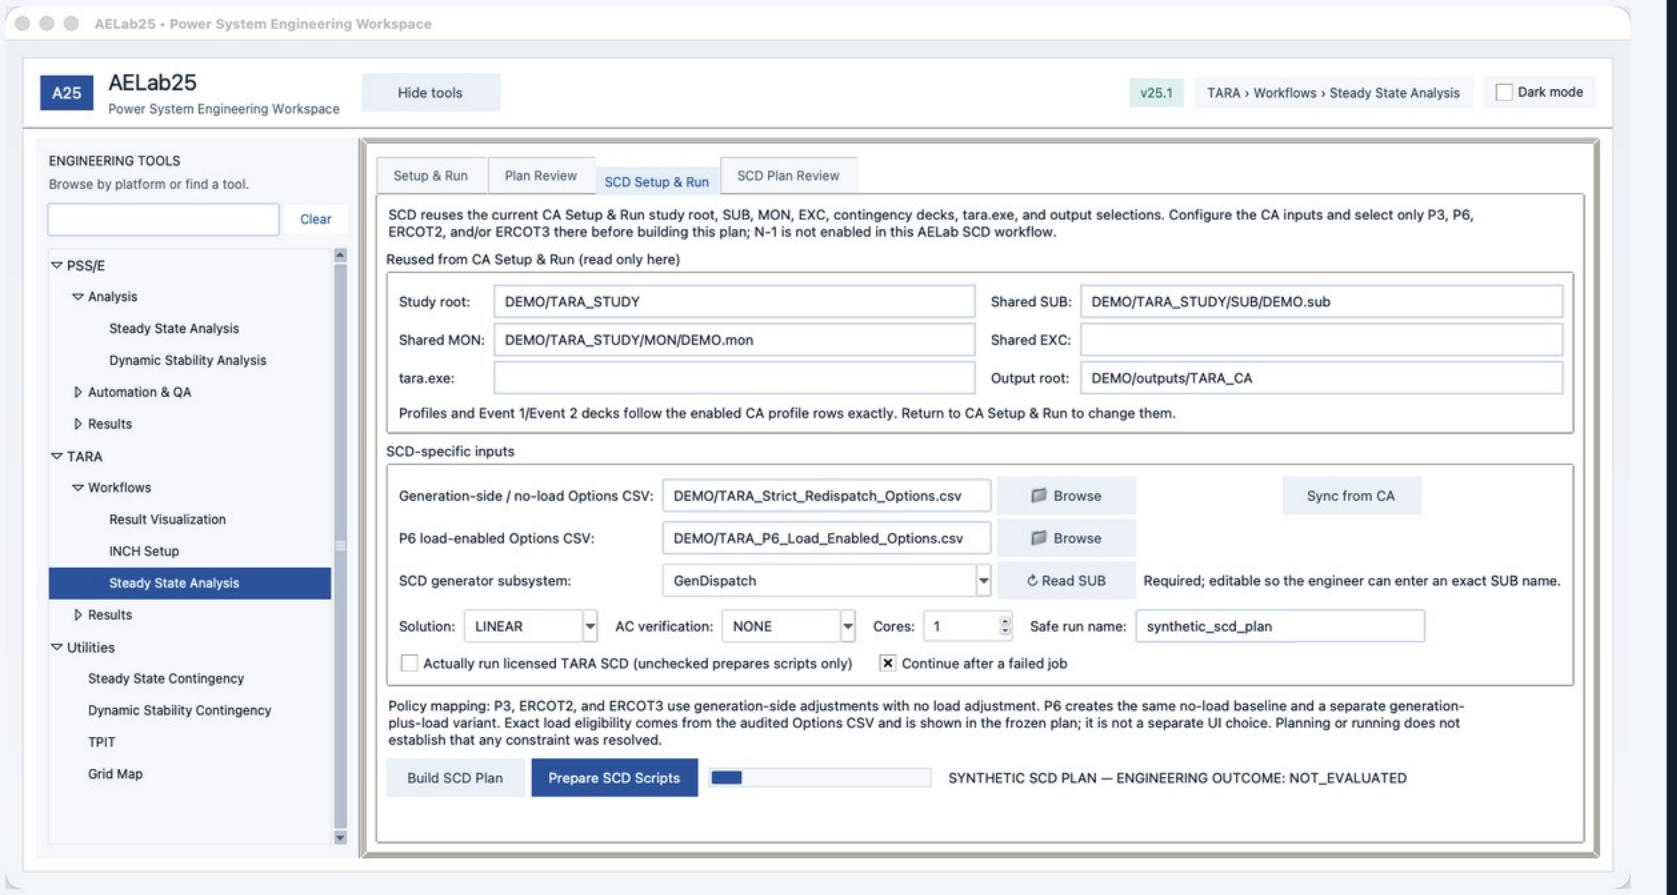


WHAT THIS TAB DOES

Review separate SCD plans for generation adjustments and P6 load-enabled policies, with explicit Options files and engineer-selected load eligibility. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA SCD — Plan Review

ARCHIVED UI | TARA › Workflows › Steady State Analysis › SCD Plan Review

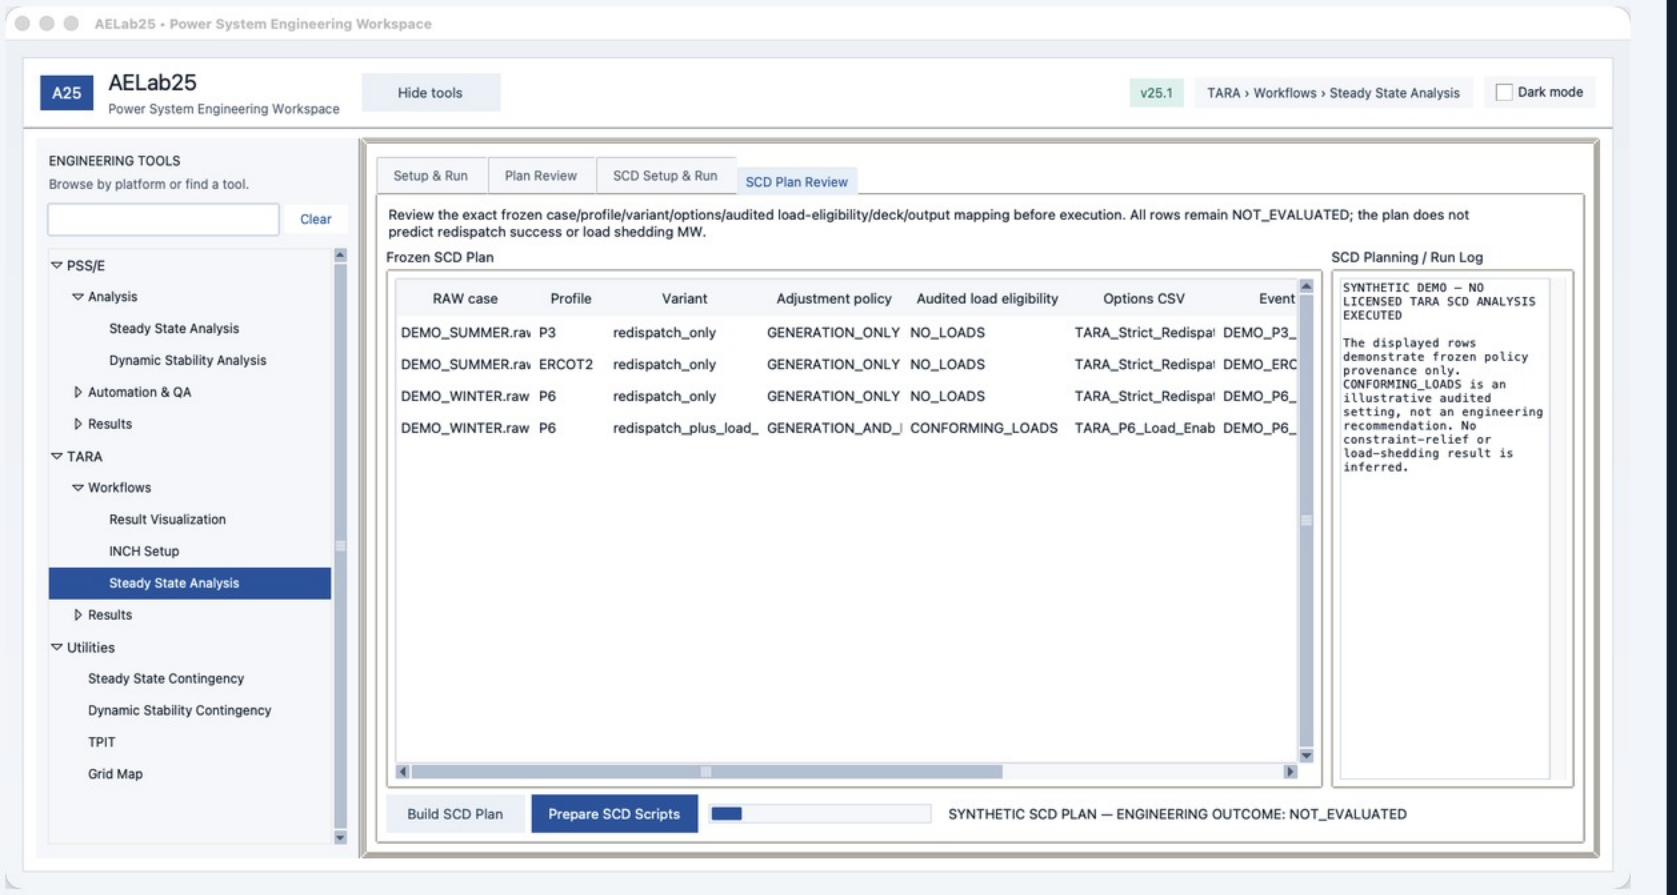


WHAT THIS TAB DOES

Reviews every frozen case, contingency profile, policy variant, detected load-eligibility class, Options fingerprint, Event 1/Event 2 deck, and isolated output while keeping the engineering outcome explicitly NOT_EVALUATED. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA Worst Reported Thermal Violations

ARCHIVED UI | TARA › Results › Steady State Analysis Results › Worst Thermal

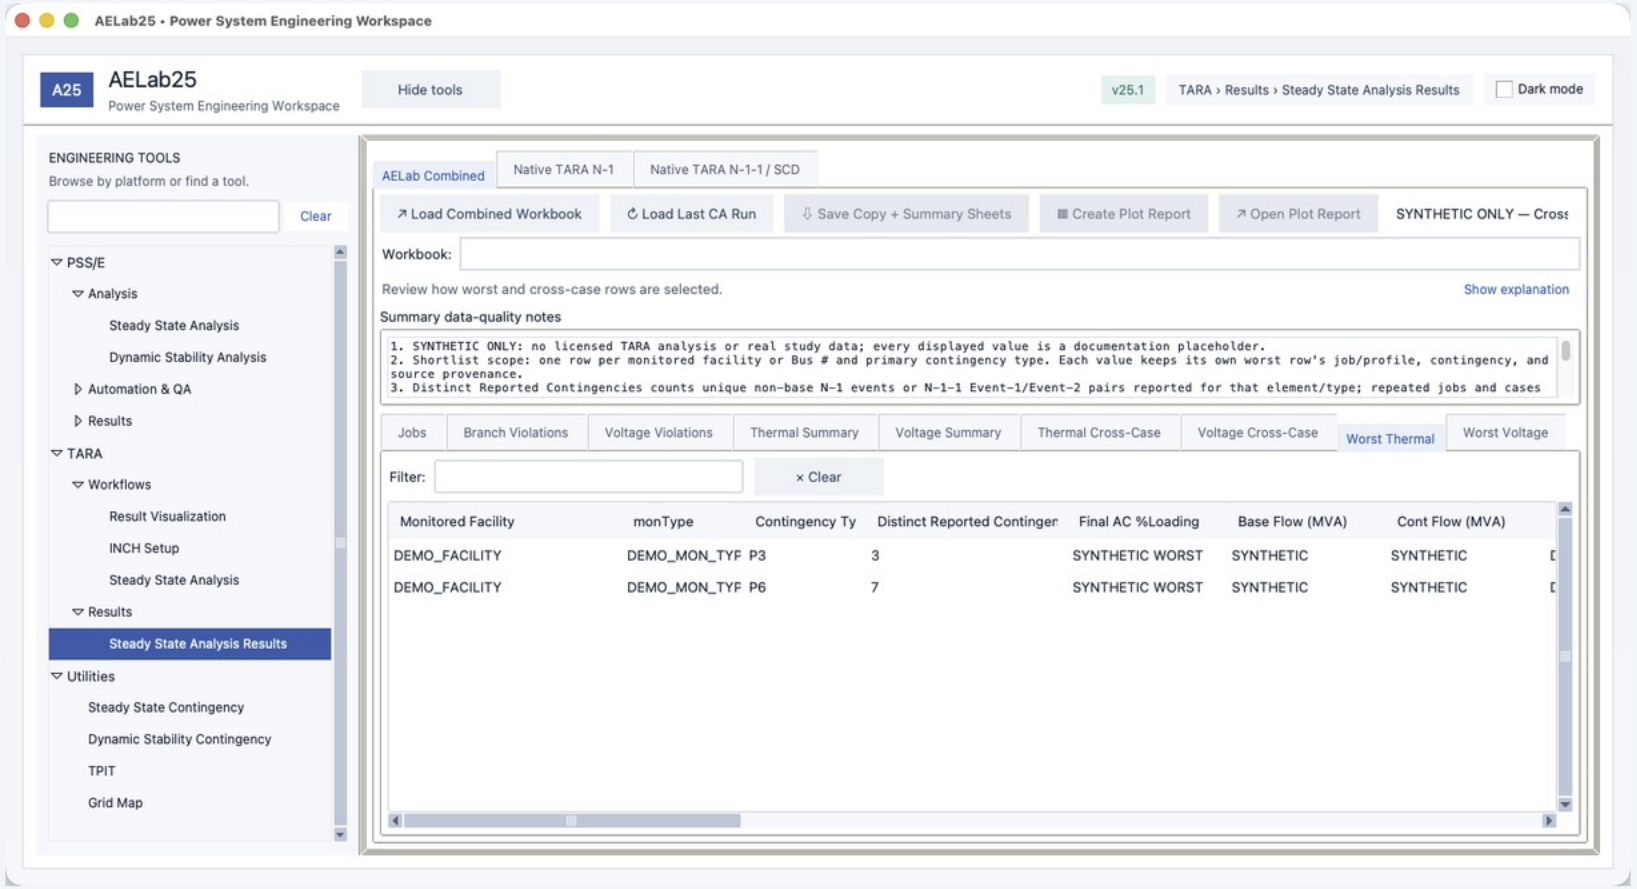


WHAT THIS TAB DOES

Shows exactly one highest reported final AC loading per monitored facility and first ConType, plus exact worst-row monType and the distinct reported-contingency count, while preserving the worst row's job/profile, contingency, and source provenance. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA Worst Reported Voltage Violations

ARCHIVED UI | TARA › Results › Steady State Analysis Results › Worst Voltage

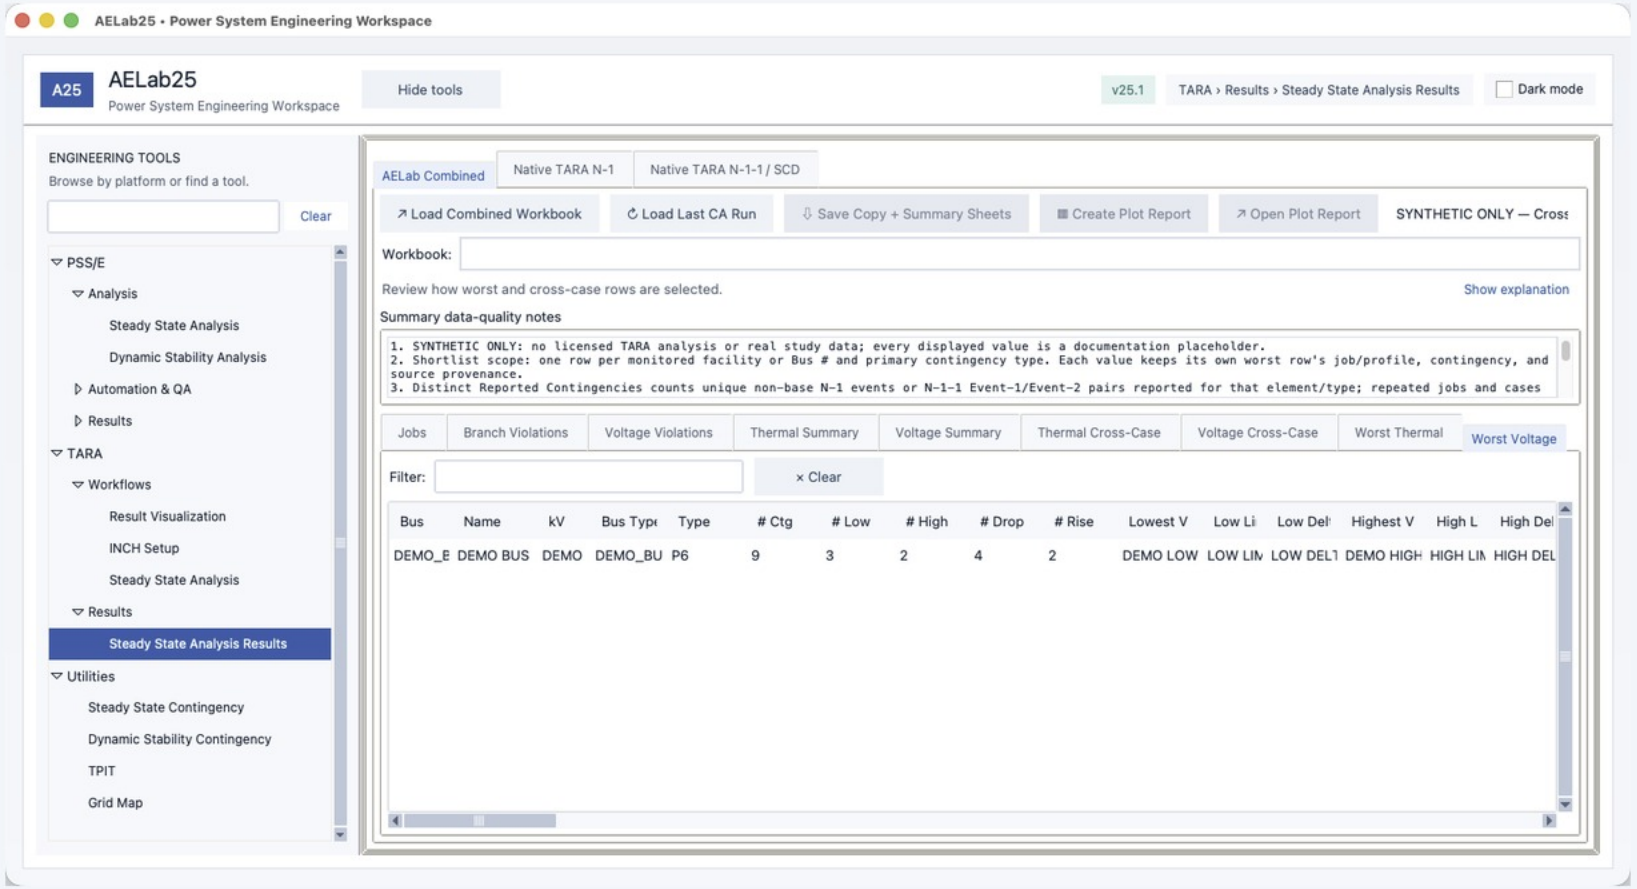


WHAT THIS TAB DOES

Shows exactly one wide row per bus and first ConType, retaining exact group-consistent Bus Type, a shared reported-contingency count, and separate qualifying-contingency counts for LOW, HIGH, VDROP, and VRISE. Each worst block qualifies against that source row's exact reported Min, Max, %Vdrop, or %Vrise limit. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Native TARA N-1 Filtered Results

ARCHIVED UI | TARA › Results › Steady State Analysis Results › Native TARA N-1

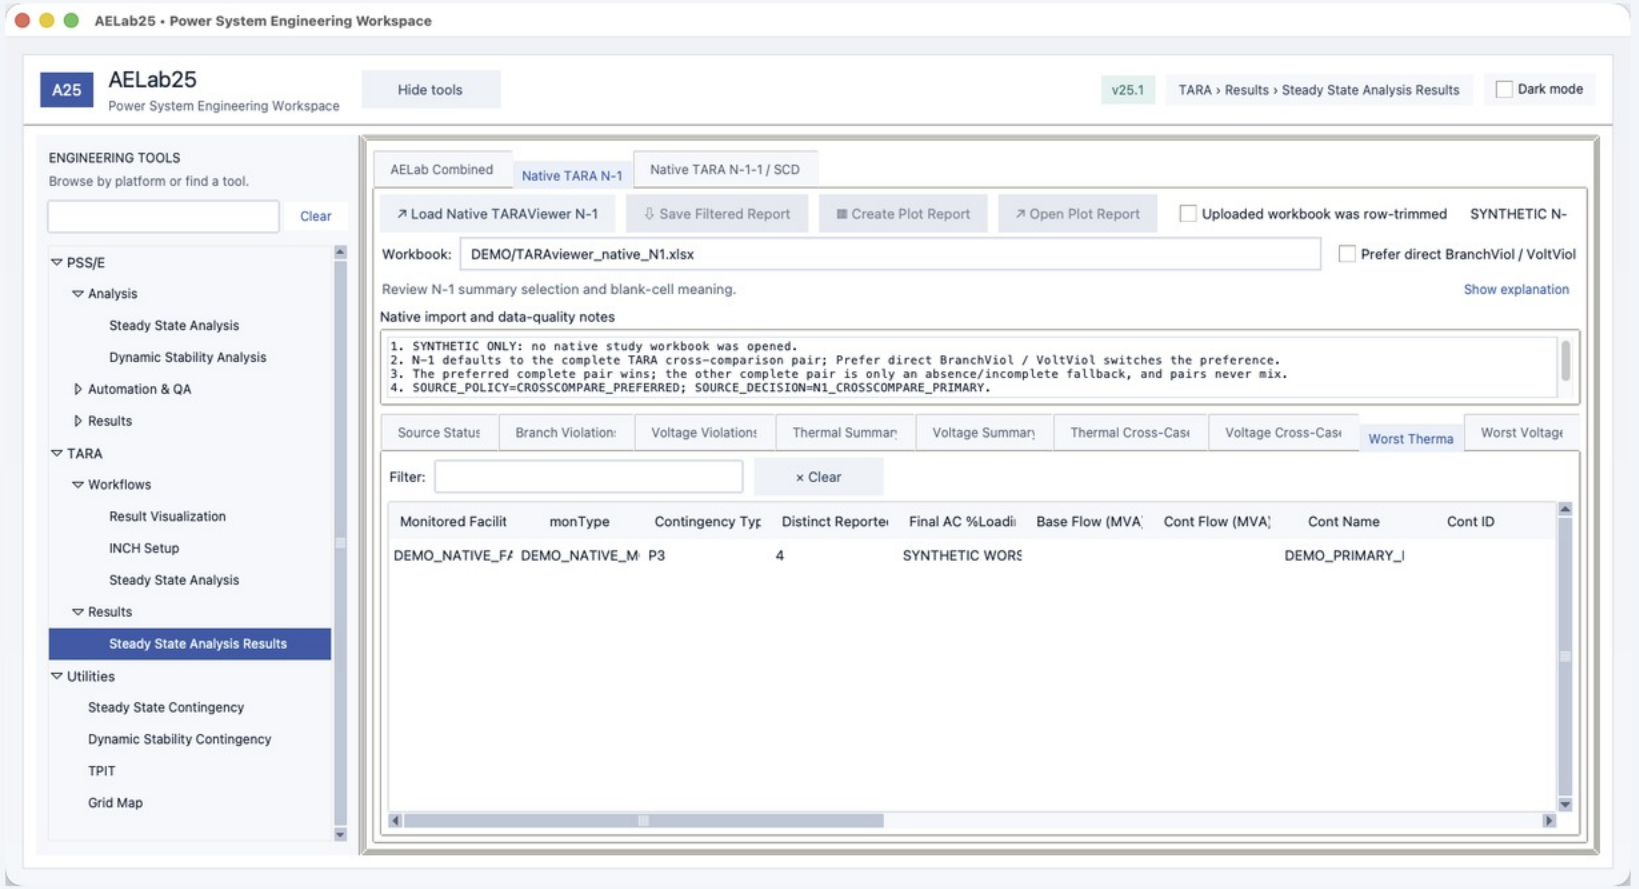


WHAT THIS TAB DOES

Import native N-1 workbooks with explicit source-pair selection. Direct BranchViol/VoltViol is preferred; cross-comparison results follow their Primary-row policy. Retain source decisions and reported-row provenance. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: Native TARA N-1-1 and SCD Context

ARCHIVED UI | TARA › Results › Steady State Analysis Results › Native TARA N-1-1 / SCD

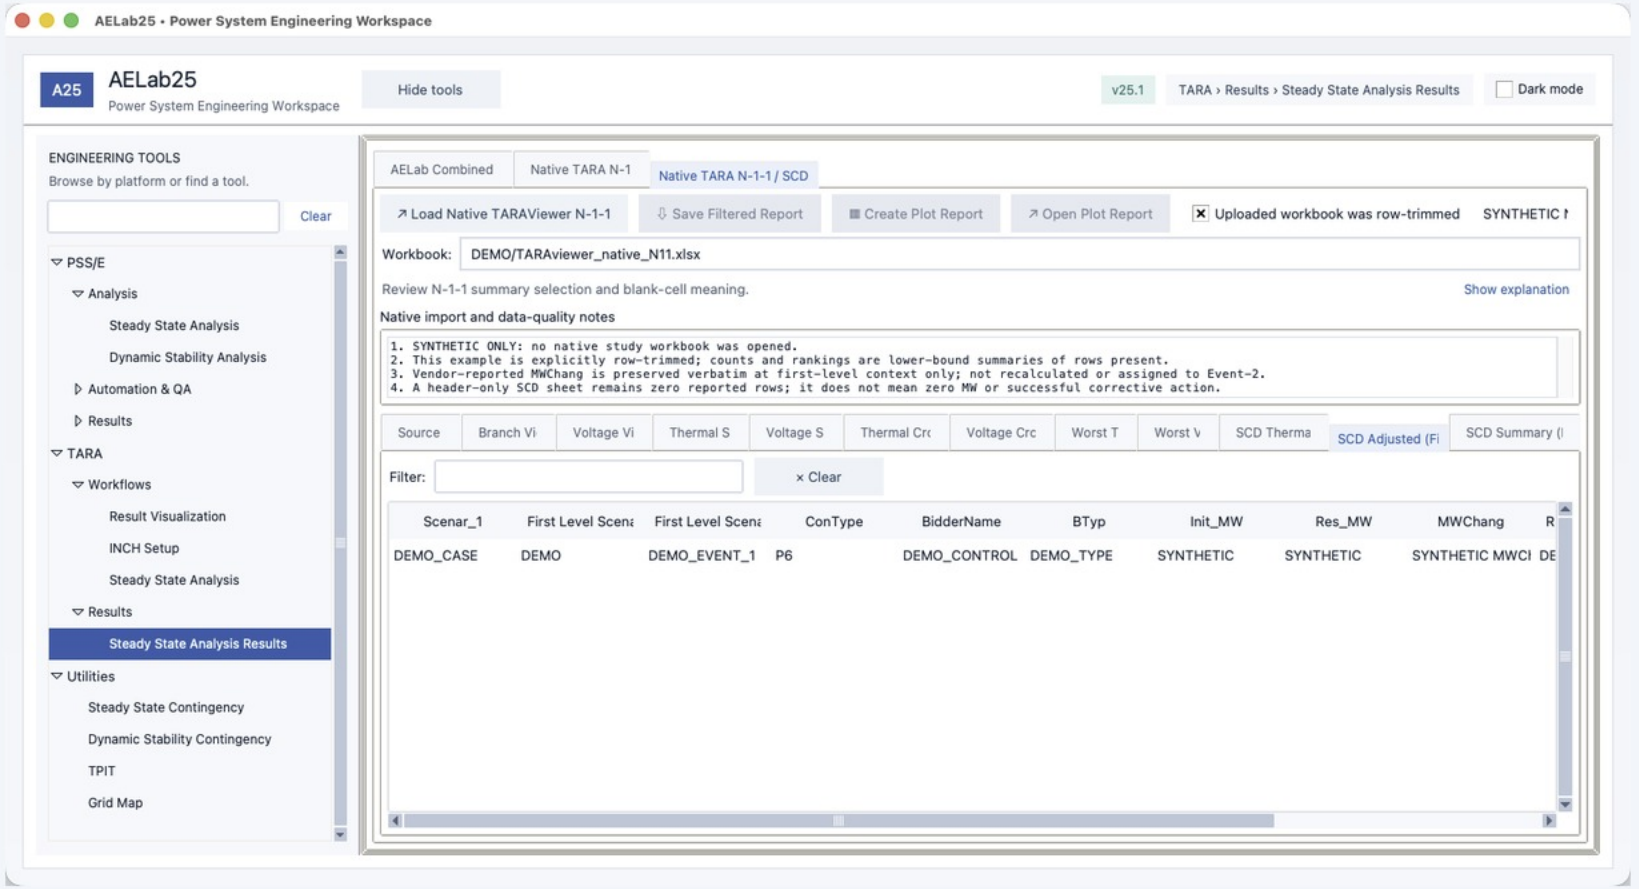


WHAT THIS TAB DOES

Imports direct native N-1-1 violation reports and keeps SCD thermal, vendor-reported adjusted-control MWChang, and summary rows in separate first-level context tabs; header-only reports remain explicitly unavailable rather than becoming zero-MW outcomes. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA Detailed Thermal Cross-Case Comparison

ARCHIVED UI | TARA › Results › Steady State Analysis Results › Thermal Cross-Case

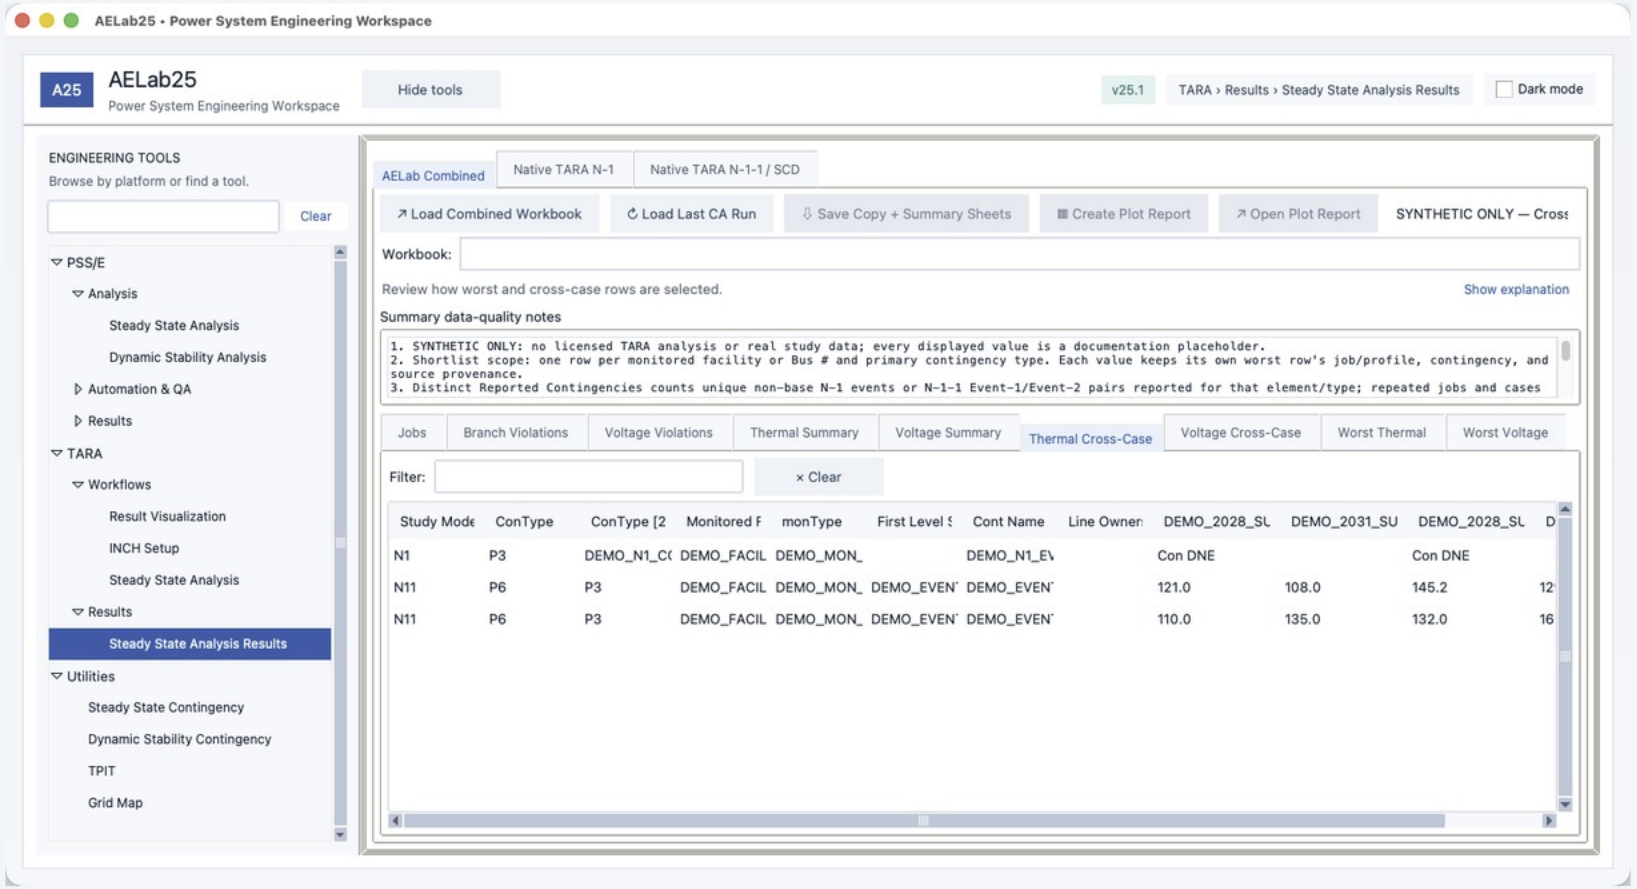


WHAT THIS TAB DOES

Shows detailed cross-case thermal rows with exact N-1/N-1-1 event identity, both exact ConType fields when applicable and stable, stable monType context, and metric-major RAW-case loading and flow columns; synthetic NConv and DNE cells remain explicit outcomes rather than zeroes. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA Detailed Voltage Cross-Case Comparison

ARCHIVED UI | TARA › Results › Steady State Analysis Results › Voltage Cross-Case

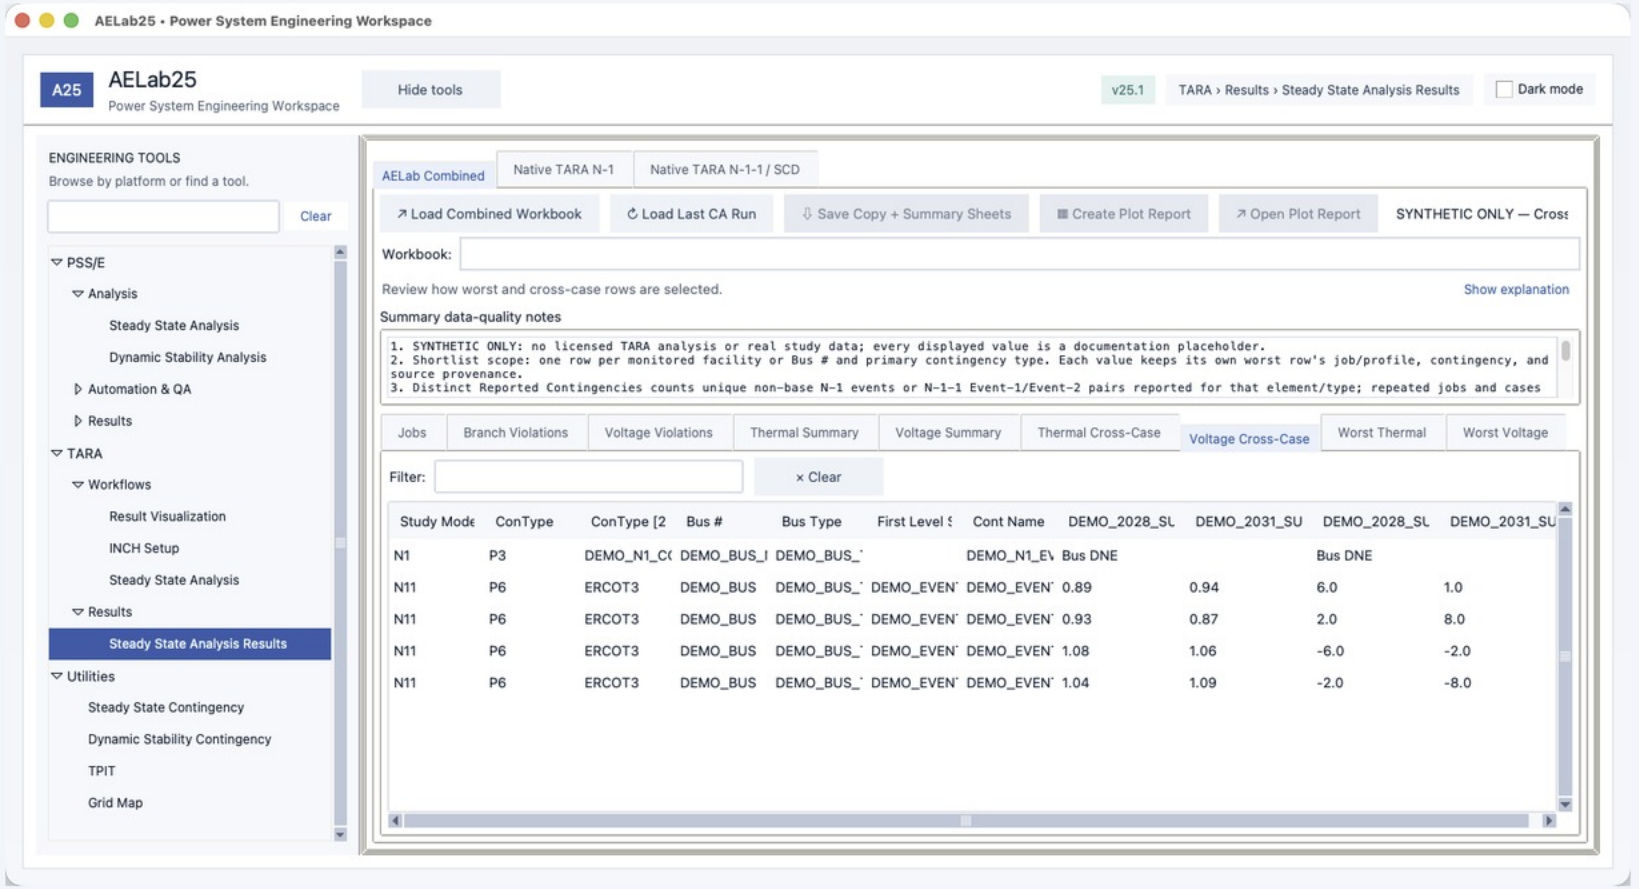


WHAT THIS TAB DOES

Shows detailed cross-case voltage rows with exact N-1/N-1-1 event identity, both exact ConType fields when applicable and stable, stable Bus Type context, and metric-major RAW-case contingency-voltage and signed-percent-change columns; blanks mean not reported, never pass or converged. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA Compact Thermal Summary

ARCHIVED UI | TARA › Results › Steady State Analysis Results › Thermal Summary

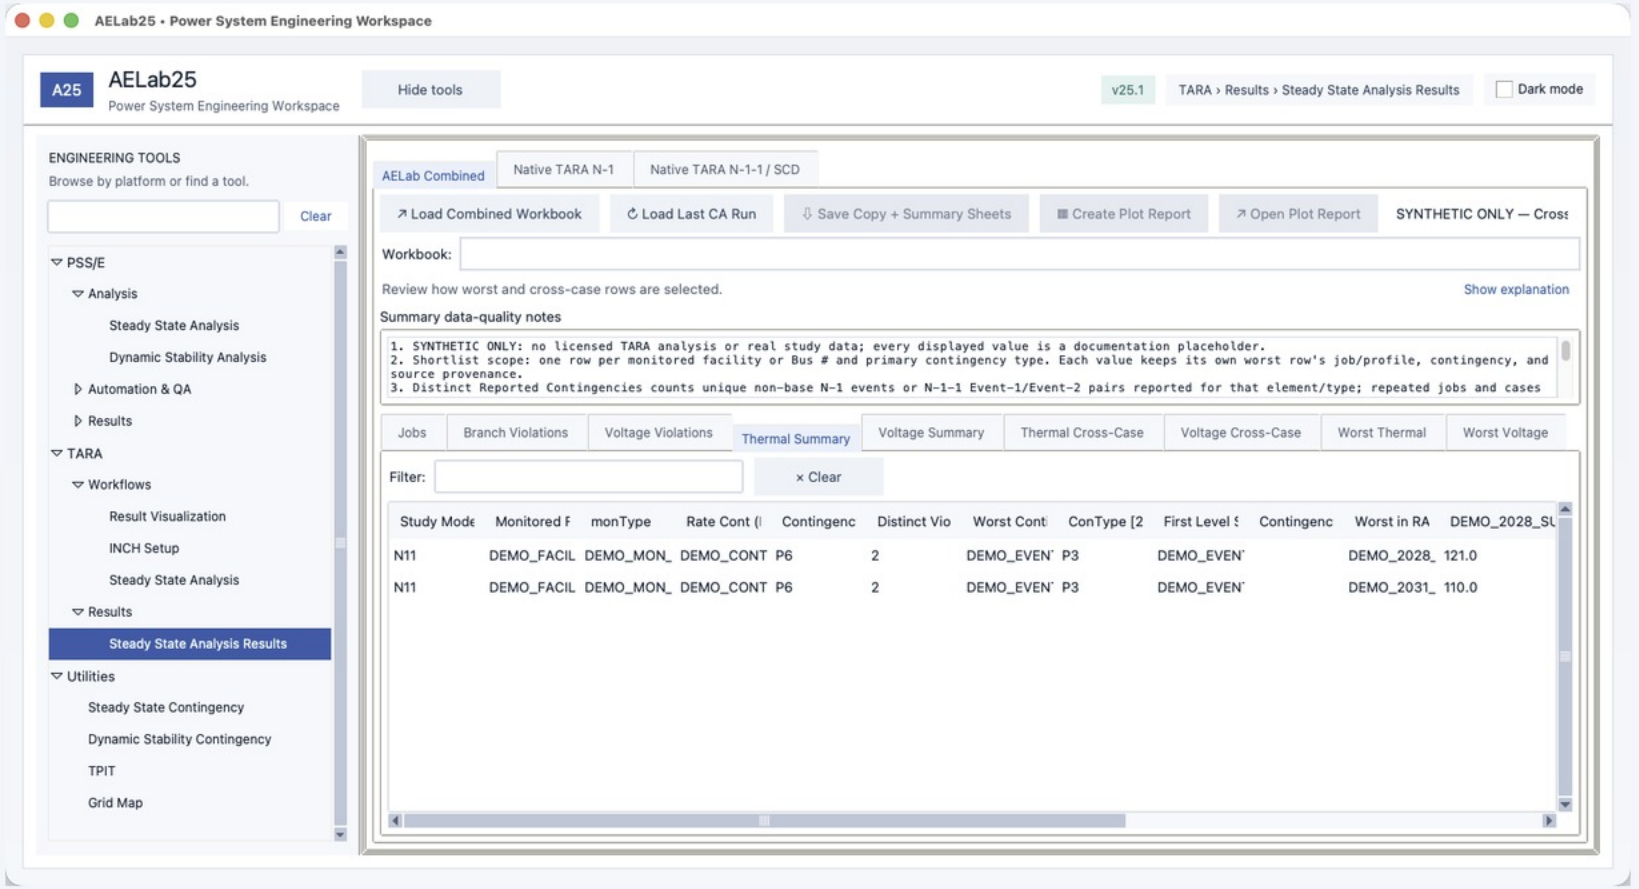


WHAT THIS TAB DOES

Shows the union of per-RAW-case maximum thermal violations above 100 percent. Each selected logical contingency keeps its complete loading/flow vector and the distinct violating-contingency count; true numeric cells support numeric Excel filtering after export.
Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE

Reference: TARA Compact Voltage Summary

ARCHIVED UI | TARA › Results › Steady State Analysis Results › Voltage Summary

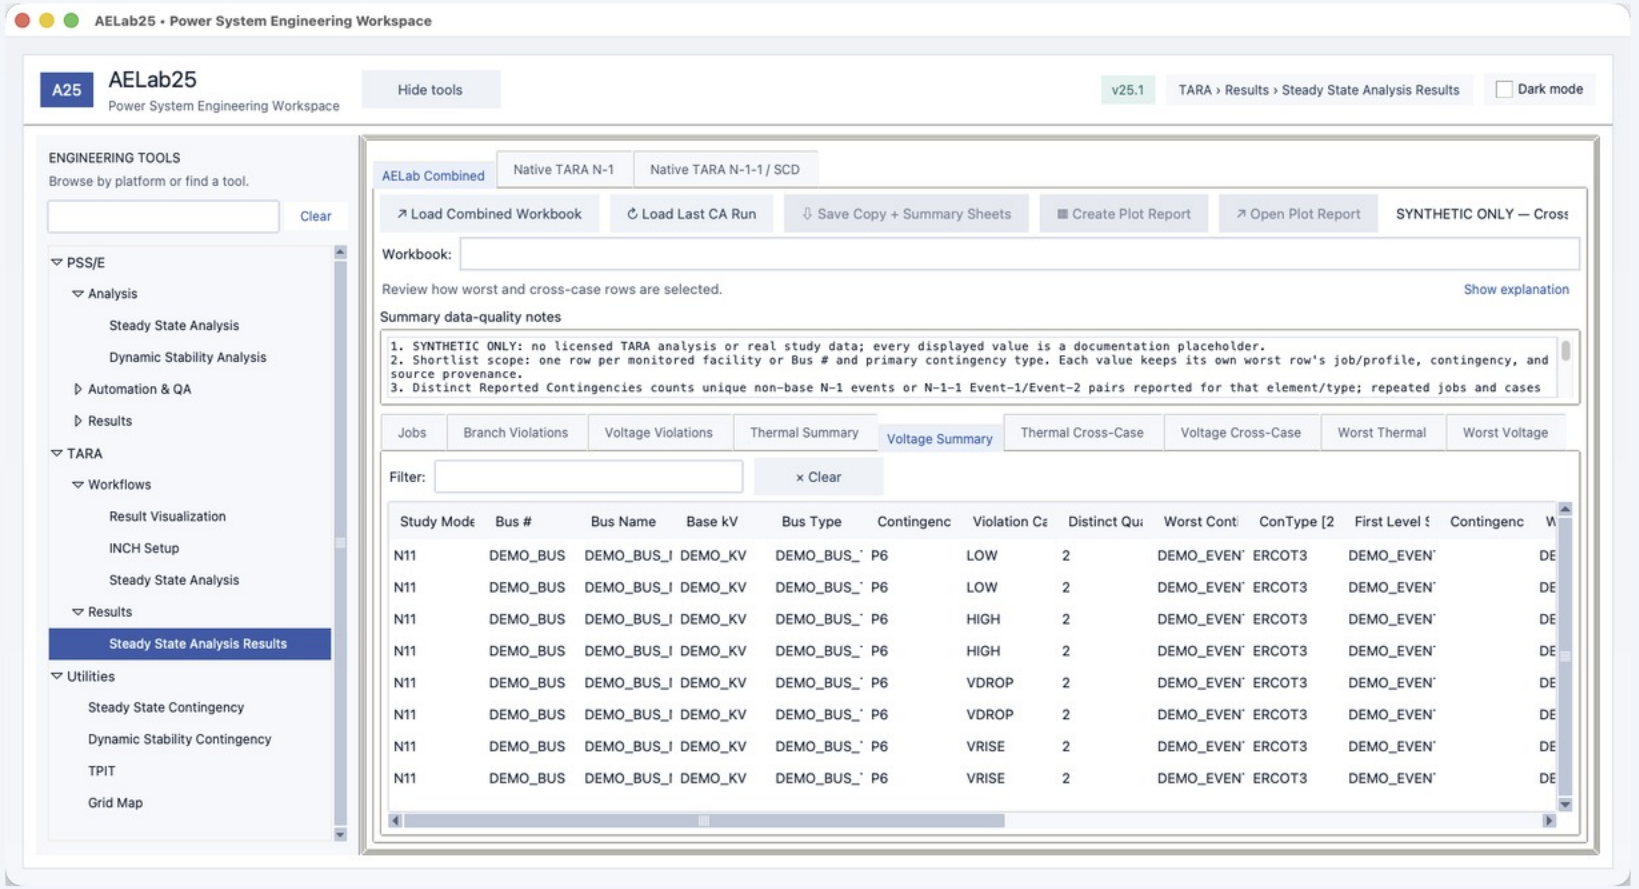

WHAT THIS TAB DOES

Shows the union of per-RAW-case worst qualifying LOW, HIGH, VDROP, and VRISE rows using each selected row's exact reported Min, Max, %Vdrop, and %Vrise limits. Each row names its Violation Category and Distinct Qualifying Contingencies while keeping the complete voltage/signed-drop vector; blanks remain explicitly not reported. Archived UI; current controls may differ. Source review: a70134fc600d.

REAL UI CAPTURE