

🔥 ESP32-S3 COMPLETE BadUSB v5.0

✨ What's New?

📶 FREE WiFi from ESP32

ESP32 WiFi Access Point ! .

🌐 Web Server on ESP32

! ESP32 .


📝 Auto-Write IP to Notepad

IP Notepad PC !

🖥️ Auto Open/Close CMD

CMD) show-off)

🚀 How It Works

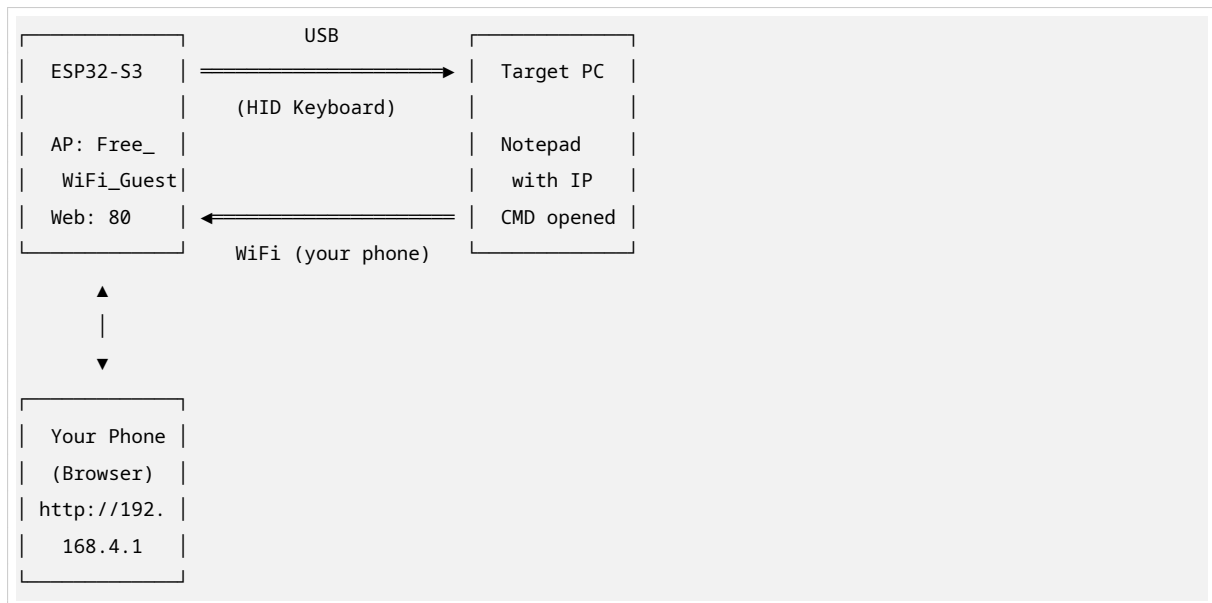

📱 Setup Steps

1. Upload Files

Copy to CIRCUITPY drive:

- code.py
- payload.txt
- lib/adafruit_hid/

2. Configure (Optional)

In code.py, you can change:

```
AP_SSID = "Free_WiFi_Guest"    # WiFi name
AP_PASSWORD = "12345678"      # WiFi password (or "" for open)
```

3. Plug and Play

1. Plug ESP32-S3 into target PC
2. Wait 3 seconds → **Payload auto-executes!**
3. ESP32 creates WiFi AP
4. **Notepad opens on PC** with IP address written
5. **CMD opens and closes** on PC
6. Connect your phone to the WiFi
7. Open browser, go to the IP shown in Notepad
8. **Control the target PC!**

Web Interface

Connect to Free_WiFi_Guest WiFi, then open browser:

- URL: <http://192.168.4.1>

Button	Action
 FIRE PAYLOAD	Execute DuckyScript
 Rick Roll	Open YouTube
 Fake BSOD	Show fake blue screen
 Prank Type	Type random characters
 Lock Screen	Win+L
 Vol MAX	Volume up x10
 Mute	Mute system
 Open CMD	Open command prompt

What Happens on Target PC

When you plug in the ESP32:

1.  Payload executes automatically
2.  Notepad opens with this text:

```
=====
ESP32-S3 BadUSB Controller
=====

Connect to WiFi: Free_WiFi_Guest
WiFi Password: 12345678
Web Control: http://192.168.4.1
```

- =====
3.  CMD opens and closes quickly
 4.  ESP32 WiFi AP is ready for connections

IMPORTANT

- **No internet required!** Everything is local.
- The WiFi range is ~50 meters (depending on environment).
- Multiple phones can connect simultaneously.
- For authorized testing only!

Fun Usage

1. Plug ESP32 into friend's PC
2. Walk away
3. Connect your phone to `Free_WiFi_Guest`
4. Open `http://192.168.4.1`
5. Click **Rick Roll** 
6. Watch their reaction!

Troubleshooting

Problem	Solution
WiFi not showing	Wait 10 seconds, refresh WiFi list
Web page not loading	Make sure you' re connected to ESP32 WiFi
Payload not executing	Check <code>payload.txt</code> exists on CIRCUITPY
HID not working	Ensure PC recognizes ESP32 as keyboard

Enjoy your wireless BadUSB! 