BETAFPV

WHOOP RACING
ADVANCED KIT

DRONE
DRONE-FPV-RACER.COM

Components

1 x Meteor75 Quadcopter
1 × LiteRadio 2
1 × VR01 FPV Goggles
2 × 450mAh 1S Lipo Battery
1 × Charger and Tester
1 × USB Charging Cable
2 × Goggle Antennas
1 × Prop Removal Tool
4 × 40mm 3-Blade Prop
1 × Portable Storage Bag

Meteor75 Quadcopter

Turn on/off: Connect the Meteor75 power cable to the battery. The receiver and flight controller power LEDS will flash (the receiver LEDs will then go out). After using the drone, unplug everything, the LEDS will go out.

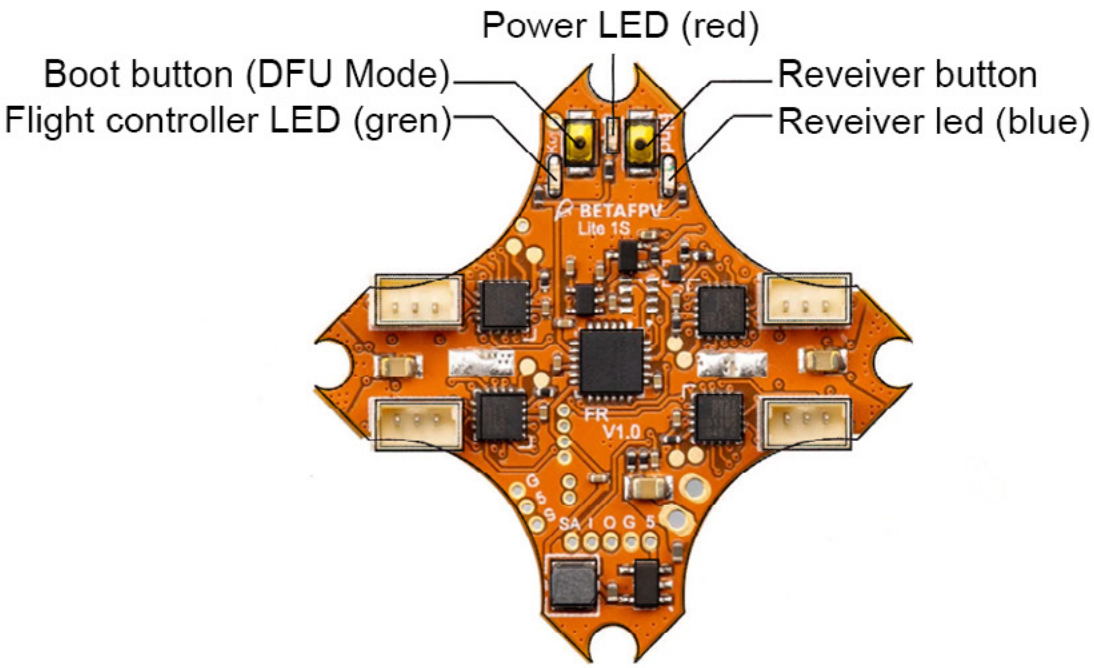

LED status	Cause	Solution
Off	No power supply	Connect the battery
Flight controller LED is off and receiver LED steady	Successful bind	
Flight controller LED blinking	Interrupted connection or waiting to bind	Reconnect the power suply and press the receiver bind button while pushing the bind button

● Battery: Connect the battery to the charger/tester to view the battery voltage.

● Recharge: Connect the battery to the charger, then the charger to a 5V power supply. The LED will be red during charging. This LED will turn green when the refill is complete.

Remote control

● Installing the battery: Remove the lid at the back of the radio. Connect the battery inside and put the lid back.

● Start-up: Hold the on/off button for 5 seconds, release the button after the radio vibrates twice and the LED has gone from green to blue.

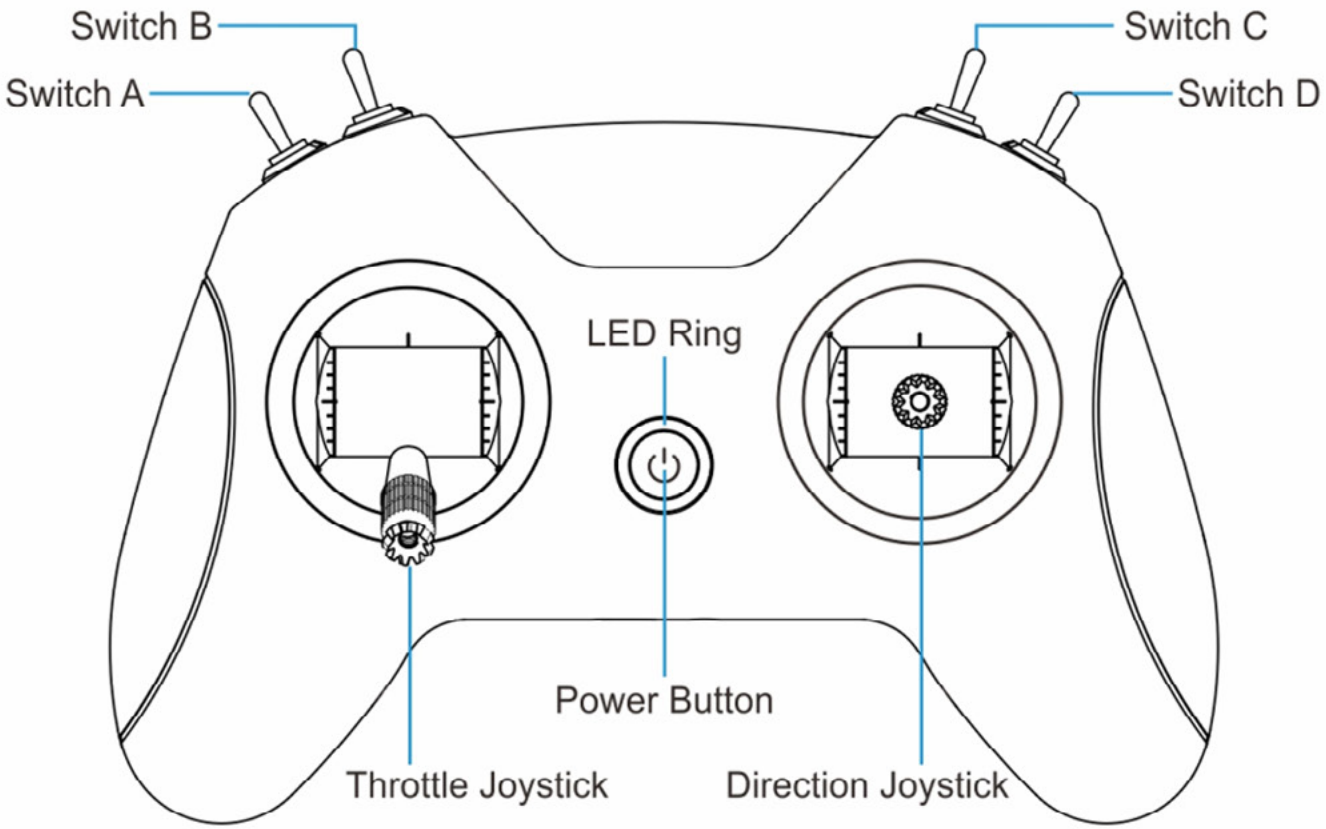

● Appairing: On the drone, press the "Bind" button while plugging in the battery until the blue LED is fixed.
On the radio: After the boot, press the "Bind" button on the back of the radio. The LED will flash red and blue and switch to pairing mode for 10 seconds. If pairing is successful, the blue LED will flash.
If the pairing does not work, start again.

● Start the drone: Push the inter A to unlock the drone.

● Turn off the radio: Hold the on/off button for 5 seconds, release it when the radio vibrates, and the LED goes out.

● Recharge: When the radio's LED turns blue and blinks slowly, and then starts to vibrate, the radio's battery is empty. The radio must be turned off immediately.
Then connect the USB cable to a power source and then to the radio. The LED will turn red when charging and turn off when charging is complete.

LED status	Cause	Solution
Steady Red	The throtle stick or the switch are not in neutral position	Lower the throttle stick and put switch to neutral position
Steady green	successful Bind	
Blue (slow blinking)	Battery is nearly empty	Recharge the battery

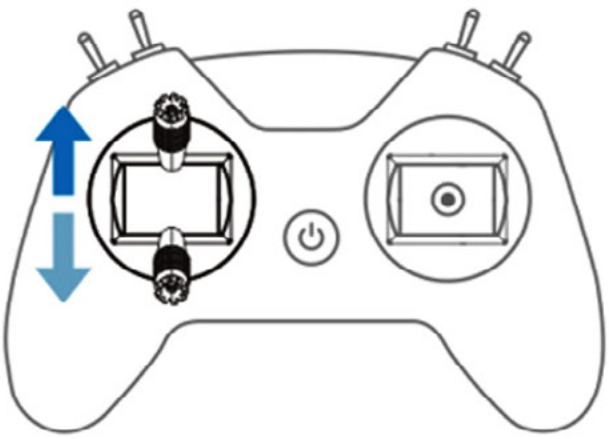

Joystick up/down

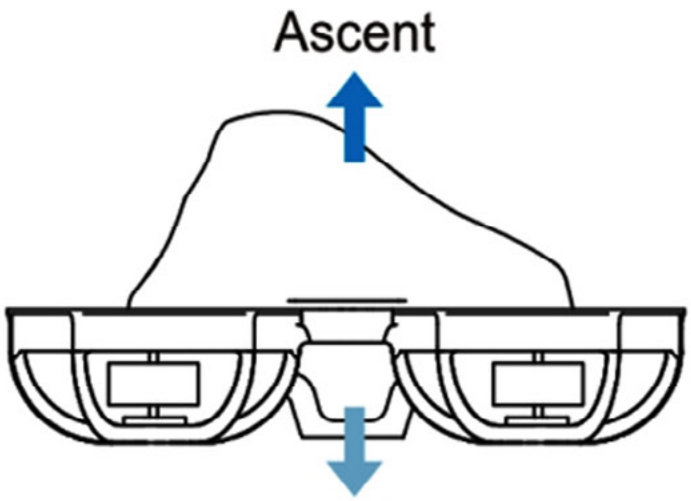

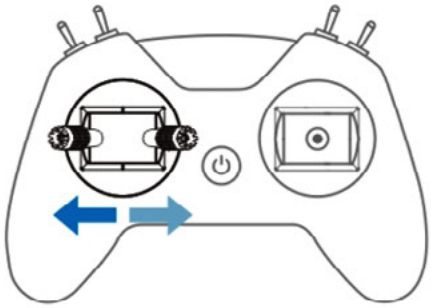

Joystick left/right

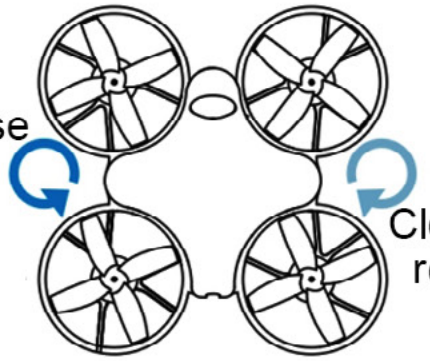

● Recharge: Use the USB cable, the LED will turn red for recharge and turn green once the charge is complete.

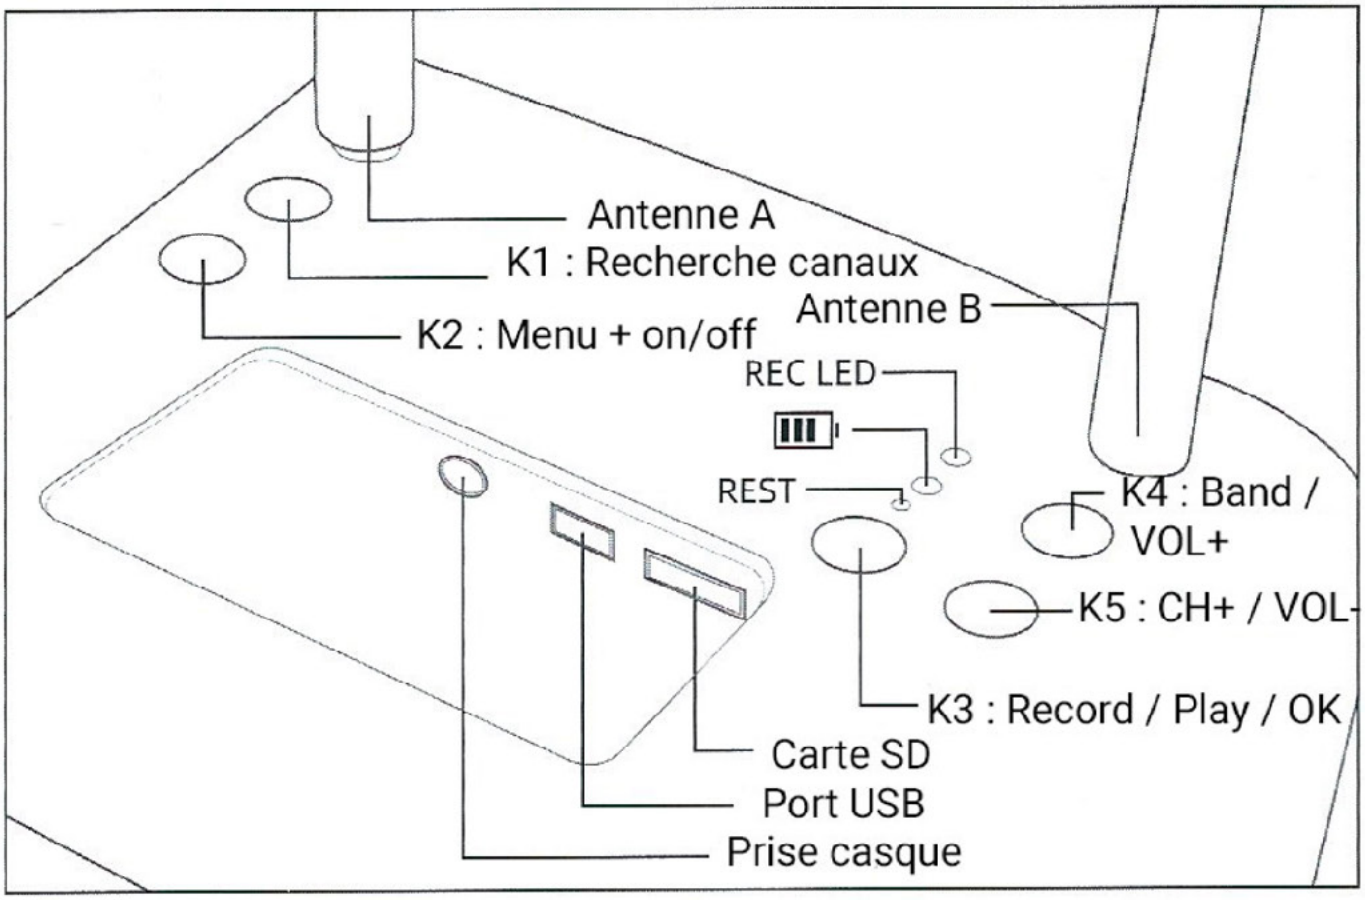

Warning and security

- Make sure all the connections and the drone are in good use condition before each flight.
- Keep batteries away from the fire.
- Fly to a place safe and away from people.
- Follow BetaFPV's instructions for drone manipulation without adding accessories or electronics from another supplier/brand.
- Do not use this product if you have a physical illness or if you are tired or under the influence of alcohol or drugs.
- Do not use this product to degrade the public environment or for illegal activities.
- Do not fly where it is prohibited by local law.

betafpv.com