

# Platform lift type A5

## CiDis menu overview

Models: Cibes A4000, A5000



Cibes Lift AB reserves the right to change the configuration or design of the product without prior warning and is not responsible for any technical faults or typographical errors in the manual.

The Cibes Lift brand is owned by Cibes Lift Group AB. © CIBES LIFT GROUP AB 2017. All rights reserved.

Cibes Lift AB manufactures lifts that are type approved and certified by third-party bodies in accordance with the requirements of the Machinery Directive 2006/42/EC. Products from Cibes Lift AB undergo extensive inspection and quality checks before they leave the factory. After assembly and testing a Declaration of Conformity is issued and a CE marking is affixed.

---

## Contents


|          |                          |          |
|----------|--------------------------|----------|
| <b>1</b> | <b>Menus .....</b>       | <b>1</b> |
| 1.1      | Displays.....            | 1        |
| 1.2      | Main menu .....          | 3        |
| 1.3      | Status/Fault codes ..... | 4        |
| 1.4      | Status display .....     | 7        |
| 1.5      | Nodes .....              | 8        |
| 1.6      | Reset.....               | 9        |
| 1.7      | Service.....             | 9        |
| 1.8      | Parameters.....          | 10       |
| 1.9      | Lighting.....            | 12       |
| 1.10     | Safe CRC.....            | 13       |
| 1.11     | Show version.....        | 13       |
| 1.12     | Installation.....        | 13       |

---

---

# 1 Menus

## 1.1 Displays

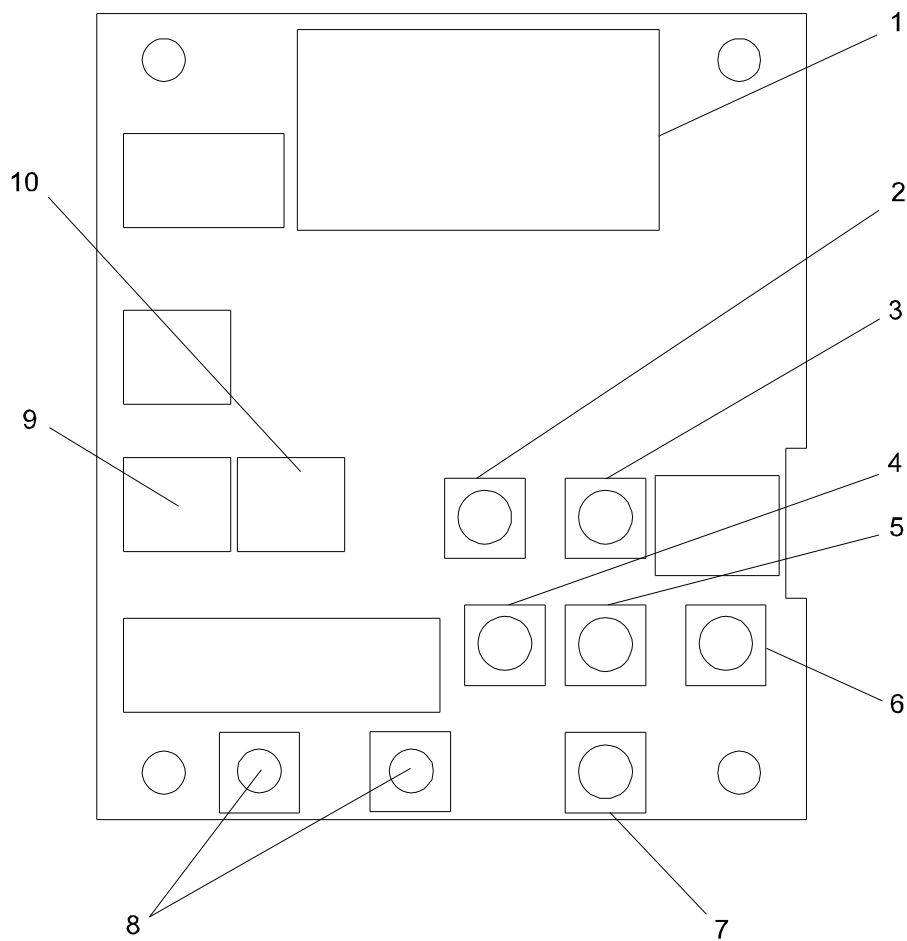


FigA5 CiCon\_Op\_01.wmf

Figure 1 CiDis

| Item | Description                  | Item | Description                 |
|------|------------------------------|------|-----------------------------|
| 1    | Display                      | 6    | RIGHT                       |
| 2    | Deactivate standby – Wake-up | 7    | DOWN                        |
| 3    | UP                           | 8    | Hold to run in service mode |
| 4    | LEFT                         | 9    | Jumpered for normal mode    |
| 5    | Enter                        | 10   | Jumpered for service mode   |

Table 1 CiDis with display and control buttons

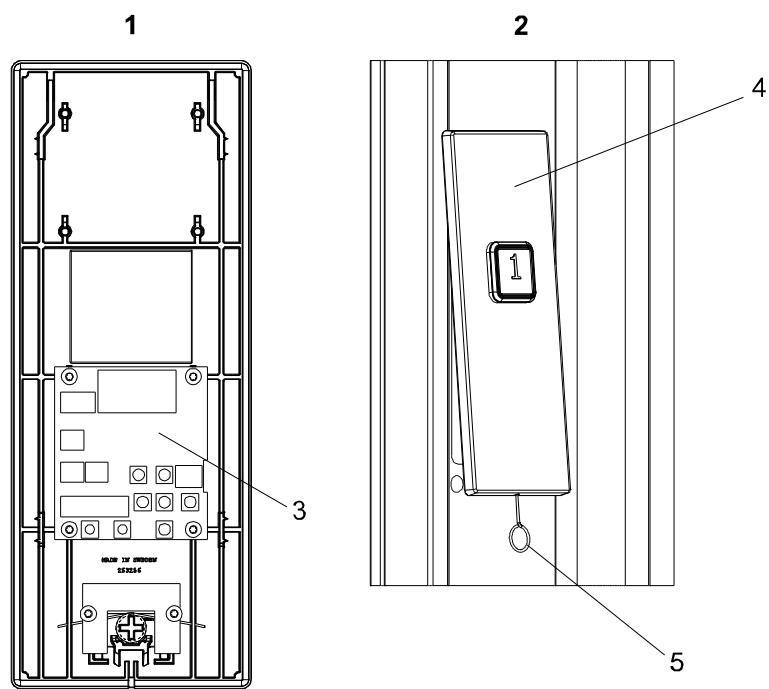

FigA5 CiCon\_Op\_02.wmf

Figure 2 Frame with CiDis

| Item | Description                        | Item | Description       |
|------|------------------------------------|------|-------------------|
| 1    | Rear of frame with CiDis           | 4    | Frame             |
| 2    | Front of frame with calling button | 5    | Frame opening key |
| 3    | CiDis                              |      |                   |

Table 2

---

## 1.2 Main menu

Table 3 shows the main menu which is visible on the CiDis display (1) Figure 1 followed by a short description. The CiDis display is located behind the lift calling button, see Figure 2.

| Text             |   | Description                                                                                                   |
|------------------|---|---------------------------------------------------------------------------------------------------------------|
| Floor: 1 +120 mm | > | Shows the lift's distance from a particular floor in mm                                                       |
| Safety OK        | > | Shows current status or fault codes. See section 1.3, Status/Fault codes.                                     |
| Normal mode      | > | Status information, See section 1.4, Status display.                                                          |
| Nodes            | > | Information about the system, there are several display options. See section 1.5, Nodes.                      |
| Reset            | > | Reset after entering the shaft (emergency opening). Press "UP" and "DOWN" for 2 seconds to reset              |
| Service          | > | Displays all the information about the system, see section 1.7, Service                                       |
| Parameters       | > | Adjustment of different parameters.<br>E.g. time for door closure, autolock, etc; see section 1.8, Parameters |
| Locking          |   | Locking option                                                                                                |
| Lights           | > | To adjust light parameters see section 1.9, Lighting                                                          |
| Button switch    |   | Special function for two doors on the same floor. Contact Support                                             |
| Safe CRC         | > | Shows CRC (Cyclic Redundancy Checking) check that CPU version is correct                                      |
| Show version     | > | Shows a complete list of all connected units and their hardware and software versions                         |
| Installation     | > | Landing programming (shaft measurement), battery operation etc.                                               |

*Table 3*

---

### 1.3 Status/Fault codes

Table 4 shows current software status or fault codes.

| Text in display       | Description                                                                     |
|-----------------------|---------------------------------------------------------------------------------|
| 1-CiLow black         | Open circuit on cable SW80 between node 1 and CiLow                             |
| Battery drive         | Battery mode, e.g. if there is a power supply failure                           |
| Brake 1 ON            | Displayed if brake 1 has not been “On” when checked before starting             |
| Brake 1 OFF           | Displayed if brake 1 has not been raised at the start signal                    |
| Brake 2 ON            | Displayed if brake 2 has not been “On” when checked before starting             |
| Brake 2 OFF           | Displayed if brake 2 has not been raised at the start signal                    |
| Brakes no move        |                                                                                 |
| Brake stuck           | The brakes are stuck. Special situation                                         |
| Cabin door A          | N/A on A5                                                                       |
| Cabin door C          | N/A on A5                                                                       |
| Cable from CiButt     | TW30/31 open circuit cable 4 or 5 in safety circuit                             |
| Cable from CiLow      | TW10 open circuit cable 4 or 5 in safety circuit                                |
| Cable from CiLow no 5 | TW10 open circuit cable 4 or 5 in safety circuit                                |
| Cable to CiButt       | TW30/31 open circuit cable 4 or 5 in safety circuit                             |
| Contactor 1 fail      | Contactor 1 fault mode                                                          |
| Contactor 1 stuck     | Contactor 1 stuck                                                               |
| Contactor 2 fail      | Contactor 2 fault mode                                                          |
| Contactor 2 stuck     | Contactor 2 stuck                                                               |
| Contactor sense error | Contactor monitoring safety fault                                               |
| Do reset              | Perform a reset                                                                 |
| Door opened at: 2     | Specified door opened and no landing level contact detected (lift not at floor) |
| Edge left             | Left safety edge strip is activated                                             |
| Edge right            | Right safety edge strip is activated                                            |
| Emergency stop        | Emergency stop on the control panel has been activated                          |
| Service mode          | The lift is in “Service mode” (battery mode)                                    |
| Encoder one channel   | One encoder channel is missing. Lift stopped                                    |
| Floor: 1-CiLow brown  | Open circuit on brown cable SW80 between node 1 and CiLow                       |
| Floor: 2 Door         | Door is open on indicated landing                                               |
| Floor: 2 Lock         | Lock is open on indicated landing                                               |
| Floor: 2 Limit sw     | End limit switch is activated                                                   |
| Floor: 2 safe error   | Internal fault on indicated node                                                |
| Floor: 2-1 brown      | Open circuit on brown cable SW80 between indicated                              |

|                      |                                                                                                                                      |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------|
|                      | nodes (2 and 1)                                                                                                                      |
| Floor: 2-3 black     | Open circuit on blue cable SW80 between indicated nodes (2 and 3)                                                                    |
| Limit switch         | “Limit” input on CiCon. N/A on A5                                                                                                    |
| Lock A               | N/A A5                                                                                                                               |
| Lock C               | N/A A5                                                                                                                               |
| Lock opened at: 2    | Lock open and no signal from landing contact on the indicated level (2). Lock opened with emergency key                              |
| Lost node err        | Communication lost with a node                                                                                                       |
| Manual drive         | Manual operation enabled. Use the Up and Down buttons on CiDis or the first and second buttons on the control panel                  |
| Mate is shorted      | Fault text from safety CPU                                                                                                           |
| Min start            | Min start distance value                                                                                                             |
| No com               | Fault text from safety CPU                                                                                                           |
| No connect           | CiDis has no communication with CiCon                                                                                                |
| No safe CPU working  | Fault text from safety CPU                                                                                                           |
| Node num error       | Number of nodes does not correspond to number of nodes installed                                                                     |
| Nut switch           | Nut switch enabled                                                                                                                   |
| On floor err         | Lift position and landing contact not the same                                                                                       |
| Other has error      | Fault text from safety CPU                                                                                                           |
| Overtemperature      | Fault text from safety CPU - overtemperature                                                                                         |
| Overvoltage          | Fault text from safety CPU - overvoltage                                                                                             |
| Overspeed            | Overspeed – trips at 0.3 m/s                                                                                                         |
| Pit safety           | Safety prop activated – extended                                                                                                     |
| Reset error at: 2    | Indicated node not reset during reset                                                                                                |
| Roof hatch           | N/A A5                                                                                                                               |
| Safe U2 not working  | Fault text from safety CPU                                                                                                           |
| Safe U3 not working  | Fault text from safety CPU                                                                                                           |
| Safe error CiButt    | Safety fault in CiButt                                                                                                               |
| Safe error CiLow     | Safety fault in CiLow                                                                                                                |
| Safe error CiCon     | Safety fault in CiCon                                                                                                                |
| Safe off             | Overcurrent in safety circuit – short-circuit                                                                                        |
| Safe on error        | “Safety:OK” message not displayed when starting. Safety circuit check negative                                                       |
| Safety check CiButt  | Safety check fault in CiButt. Fault during “Safe on error”. Detects fault in safety circuit, e.g. voltage still present during check |
| Safety check CiCon   | Safety fault in CiCon                                                                                                                |
| Safety check CiIO: 2 | Safety fault in displayed Ci/IO                                                                                                      |

---

|                    |                                                                                     |
|--------------------|-------------------------------------------------------------------------------------|
| Safety check CiLow | Safety fault in CiLow                                                               |
| Safety overcurrent | Safety circuit, overcurrent                                                         |
| Safety:OK          | Safety circuit is OK. Lift is ready for operation                                   |
| Service cover      | Service cover opened                                                                |
| Shorted            | Fault text from safety CPU                                                          |
| Speed: 0.150 m/s   | Lift speed displayed                                                                |
| Stop by safety     | Lift stopped by safety feature                                                      |
| Stop in brake OFF  | Stop command during brake check                                                     |
| Stop in brake ON   | Stop command “ON” during brake check                                                |
| Stop in Cont sense | Stop command during contactor check                                                 |
| Stop is safe OFF   | Stop command during safety check                                                    |
| Stop in safe ON    | Stop command “ON” during safety check                                               |
| Stop in run        | Stop when operating activated (relates to platform) status help for troubleshooting |
| Stop run           | Stop command when operating (relates to platform)                                   |
| Stop run down      | Stop command when operating downwards (relates to platform)                         |
| Stop run up        | Stop command when operating upwards (relates to platform)                           |
| Top handle         | Top safety edge activated                                                           |
| Undertemperature   | Safety CPU, undertemperature                                                        |
| Undervoltage       | Safety CPU, undervoltage                                                            |
| Wrong direction    | The platform moves in the wrong direction                                           |
| No encoder         | Encoder is missing. Check brake contacts                                            |
| Reset too long     | Reset function takes too long                                                       |
| Reset too short    | Reset function too short                                                            |
| Resetting          | Text displayed while reset in progress                                              |
| Safe com problem   | Fault text from safety CPU                                                          |

Table 4

---

## 1.4 Status display

Table 7 shows the current lift status.

| Text in display        | Description                                                                                                                                                                                                                                                                           |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A60 mode               | N/A A5                                                                                                                                                                                                                                                                                |
| Alarm button           | The alarm button is activated                                                                                                                                                                                                                                                         |
| Battery capacity low   | The battery capacity is below the values set under “Parameters – battery capacity +0.5 Ah”. Go to “SERVICE” in the menu to perform a “RESET” on the battery test. Then the lift can be used for 14 days before a new test is performed. Starts charging the batteries.                |
| Battery init           | Battery checking function initiated                                                                                                                                                                                                                                                   |
| Battery missing        | No battery connected to CiLow                                                                                                                                                                                                                                                         |
| Battery mode           | Perform emergency lowering of the lift to the nearest landing by pressing one of the buttons on the control panel or from CiDis. “Battery mode” is activated when the voltage $V_{in}$ from the power supply $< V_{batt} - 0.5 V$ . ( $V_{batt}$ = current voltage in the batteries). |
| Cabin mode             | The last command from the lift car/cabin or safety device has been activated on the lift car/cabin. The lift can only be operated from the lift car/cabin. This operating mode stops when a landing door is opened or a reset is performed.                                           |
| Change battery         | The battery capacity is below the level specified in “Parameters – battery cap”                                                                                                                                                                                                       |
| Charge error battery   | The battery has been unsuccessfully charged for 48 hours. Fault in the batteries. The lift cannot be used. Replace batteries.                                                                                                                                                         |
| Charge level low       | The battery must be charged to at least 20% of its capacity in order to use the lift. Wait until the battery has been charged.                                                                                                                                                        |
| Connection CiCon wrong | The 8-pin contacts on CiCon are connected incorrectly. Try switching their positions.                                                                                                                                                                                                 |
| Door blocked: 2        | Shows the floor on which the door has been prevented from opening or closing. Press any button to try again.                                                                                                                                                                          |
| Door button A          | N/A A5                                                                                                                                                                                                                                                                                |
| Door button C          | N/A A5                                                                                                                                                                                                                                                                                |
| Service mode           | The lift can be operated from CiDis without the safety circuit for the doors. The safety prop and the emergency stop in the bottom of the shaft are still active.                                                                                                                     |
| Fire 1 mode            | The fault text is activated by a signal from the fire alarm system.                                                                                                                                                                                                                   |
| Fire 2 mode            | The fault text is activated by a signal from the fire alarm system.                                                                                                                                                                                                                   |
| Floor contact OFF      | The control system thinks that the lift car has reached a landing but there is no signal from the landing contact; the door lock is not opened.                                                                                                                                       |

|                        |                                                                                                                                                                      |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Frequency no connect   | The fault text is displayed if there is no communication between VVFD (frequency converter) and CiCon. No modbus.                                                    |
| Frequency trip         | VVFD (frequency converter) is not working. Perform a reset                                                                                                           |
| Installation mode      | Shows that the lift is in installation mode/manual operation (used only when the lift car is being assembled).                                                       |
| Key mode               | Input from key on lift car has been activated. See the “LOCKING – KEY LOCK” menu to activate.                                                                        |
| No battery             | Battery (accumulator) is missing.                                                                                                                                    |
| No measure done        | The landing level is not yet programmed (shaft measurement has not yet been performed).                                                                              |
| Normal mode            | The lift is in user mode                                                                                                                                             |
| Overload cabin         | Overload on the platform. Only activated when the platform is at a landing.                                                                                          |
| Photocell A            | N/A A5                                                                                                                                                               |
| Photocell C            | N/A A5                                                                                                                                                               |
| Pit mode               | After a reset has been performed (due to “SHAFT BREAK IN”) the lift car must be taken to the lowest landing to return to normal mode.                                |
| Press a button         | After an event requiring action from the user (e.g. door blocked, motor refuses to start). The sequence starts again if one of the control panel buttons is pressed. |
| Shaft break in         | The door lock has been opened on a landing where there is no lift car. Check that there is nobody underneath the lift car before resetting.                          |
| Central lock/Shut down | The lift has an active signal for an input that has been programmed to shut down the lift. Central lock.                                                             |
| Voltage is high        | The voltage on CiLow is > 30 V from the power supply.                                                                                                                |
| Voltage is low         | The voltage on CiLow is < 28.9 V when stationary or < 28.1 V when the lift is moving.                                                                                |

Table 5

## 1.5 Nodes

Shows information about the number of nodes connected to the lift, the motor current and motor output measured by the frequency converter, the DC voltage in the frequency converter and the input voltage in CiLow.

---

## 1.6 Reset

A system reset must be performed after emergency opening of a landing door or after the lift is in an unpowered state and the batteries have also been disconnected.

| Text in the display | Description                                                     |
|---------------------|-----------------------------------------------------------------|
| Press up and down   | Shown in the display                                            |
| 2 sec to RESET      | Press the Up and Down buttons for 2 seconds to perform a reset. |
| Safety OK           | The safety circuit is intact and the lift can be used.          |

Table 6

## 1.7 Service

Table 9 shows all the information about the different units in the CiCon system.

| Text in the display |   | Description                                                                                        |
|---------------------|---|----------------------------------------------------------------------------------------------------|
| Wifi                | > | Future function                                                                                    |
| CiCon information   | > | Shows information about the values related to current, outputs, inputs etc.                        |
| CiLow and battery   | > | Shows information about the values related to current, shaft circuits, CiCon current, battery etc. |
| Node information    | > | Shows a list of available door nodes (CiIO), their location, status, temperature etc.              |
| Reset battery test  | > | Resets the status of the battery test and a new test is performed after 14 days.                   |

Table 7

---

## 1.8 Parameters

Shows available parameter settings for landing doors, automatic doors, etc.

| Text in the display  |   | Description                                                                                                                                           |
|----------------------|---|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Door time: 12.0 sec  | > | Door opening time between 2-100 seconds                                                                                                               |
| Stop time: 3.0 sec   | > | Time before starting when there is an external call 1-10 seconds                                                                                      |
| Impulse: NO          | > | Hold to run/Autorun<br><b>⚠ Note:</b> Autorun, not permitted within the EU for open lift cars in accordance with MD 2006/42/EC                        |
| Cabin light: 40 sec  | > | Setting the light in the lift car (not A5) or if CiRel is used (also on A5)                                                                           |
| Door lock: 0.5 sec   | > | Time before the door is locked after the door is closed (closed door contact)                                                                         |
| Lock wait: 3.0 sec   | > | The lock re-opens after a set time if the safety circuit is not intact                                                                                |
| Autolock: 10 sec     | > | Time before the door is locked (school lock) 1-600 seconds                                                                                            |
| Return time: 0 sec   | > | Time (1-600 seconds) before the lift starts towards the “Home floor”, at 0 no function                                                                |
| Return floor: 1      | > | Choice of “Home floor”                                                                                                                                |
| Ramp time: 2.5 sec   | > | Set the ramp time for a frequency of 1-10 seconds                                                                                                     |
| Input CiLow: No func | > | Activation of fire detector 1 or 2 or Shut down/central lock and alarm reset                                                                          |
| Input CiLow:         | > | Choice between NO or NC on the input                                                                                                                  |
| Output CiLow:        | > | Can be set to: No func, service, busy, running, door open, light, Door A and Door C                                                                   |
| Output CiLow: NO/NC  | > | Choice between NO or NC on the output                                                                                                                 |
| Single Butt: Yes/No  | > | Used when there is more than one door on a landing. If “Yes” it is a button that opens the doors. If “No” it is a button for the side concerned (A/C) |
| Fire 1 floor: 1      | > | In case of fire the lift travels to the set landing                                                                                                   |
| Fire 2 floor: 1      | > | In case of fire the lift travels to the set landing                                                                                                   |
| Freq type: 1         | > | Frequency type value is not changed (should always display 1)                                                                                         |

---

|                     |   |                                                                                                                              |
|---------------------|---|------------------------------------------------------------------------------------------------------------------------------|
| Max. freq: 60 Hz    | > | Frequency at maximum speed (adjusting the frequency downwards reduces the speed)                                             |
| Battery cap: 1.5 Ah | > | Minimum battery capacity is displayed (1.5 Ah = amperage of 1.5 A for one hour)                                              |
| Sound volume: 70%   | > | Volume setting for CiVoice in %                                                                                              |
| ID delay: 10 s      | > | Indicates how long an identification with a tag is valid (maximum time from activation with a tag until a button is pressed) |

*Table 8*

---

## 1.9 Lighting

Settings for time and brightness of lighting in the shaft and in the lift car.

| Text in the display  |   | Description                                                                                                                                                    |
|----------------------|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Doze: 40 sec         | > | The “DOZE” lighting mode is activated if the lift is not used during the period indicated                                                                      |
| Sleep: 2 min 00 sec  | > | The “SLEEP” lighting mode is activated if the lift is not used during the period indicated                                                                     |
| Shaft lights         |   | Shaft lighting settings                                                                                                                                        |
| Active ramp: 1 sec   | > | Setting for ramp to active lighting in seconds                                                                                                                 |
| Active level: 50%    |   | Setting level for active lighting in %                                                                                                                         |
| Doze ramp: 3.0 sec   | > | Setting for ramp to “DOZE” lighting mode in seconds                                                                                                            |
| Doze level: 15%      | > | Setting level for “DOZE” lighting mode in %                                                                                                                    |
| Sleep ramp: 4.0 sec  | > | Setting for ramp to “SLEEP” lighting mode in seconds                                                                                                           |
| Sleep level: 5%      | > | Setting level for “SLEEP” lighting mode in %                                                                                                                   |
| Emerg. light: 5%     | > | Emergency lighting level in %. Min 5%                                                                                                                          |
| Cabin lights         |   | Settings for lift car lighting                                                                                                                                 |
| Active level: 50%    | > | Setting level for active lighting in %                                                                                                                         |
| Doze ramp: 3.0 sec   | > | Setting for ramp to “DOZE” lighting mode in seconds                                                                                                            |
| Doze level: 15%      | > | Setting level for “DOZE” lighting mode in %                                                                                                                    |
| Sleep ramp: 4.0 s    | > | Setting for ramp to “SLEEP” lighting mode in seconds                                                                                                           |
| Sleep level: 5%      | > | Setting level for “SLEEP” lighting mode in %                                                                                                                   |
| Emerg. light: 5%     | > | Emergency lighting level in %. Min 5%                                                                                                                          |
| Batt test emerg: Yes | > | “YES” if the emergency lighting level should be displayed when testing the batteries. If “NO”, emergency lighting is not connected when testing the batteries. |

Table 9

---

## 1.10 Safe CRC

CRC information (Cyclic Redundancy Checking) check that CPU version is correct. See Table 3.

## 1.11 Show version

Information about revisions to programs and hardware for all units.

## 1.12 Installation

Shows installation settings available for landing doors, battery operation etc.

| Text in the display |   | Description                                                                                                                          |
|---------------------|---|--------------------------------------------------------------------------------------------------------------------------------------|
| Shaft measure       | > | Landing programming. See Operation and Maintenance Instructions                                                                      |
| Battery drive       | > | Operating the lift on battery power. Use the “UP” and “DOWN” buttons on CiDis                                                        |
| Power off           | > | Disconnection of batteries, shuts down the lift, the supply voltage must be disconnected before the function can be activated        |
| Floor display       | > | The floor menu shows the options available. Setting how the landing position indicator display shows each landing (e.g. text colour) |
| Floor adjust        | > | Precise adjustment of landing programming $\pm 15$ mm                                                                                |
| Cabin door setup    | > | N/A A5                                                                                                                               |
| Node parameters     | > | Programming CiI/O                                                                                                                    |
| Measure erase       | > | Resets shaft measurement                                                                                                             |
| Restart system      | > | Restarts the entire system                                                                                                           |

Table 10



---

**Postal address**  
Utmarksvägen 13  
SE-802 91 Gävle, Sweden

**Street address**  
Utmarksvägen 13  
**E-mail:** [techsupport@cibesliftgroup.com](mailto:techsupport@cibesliftgroup.com)

**Tel:**  
+46 (0)26-17 14 00

**Fax:**  
+46 (0)26-17 14 02

**Company Reg No**  
556226-7806

**Member of EPSA**  
**Website:** [www.cibeslift.com](http://www.cibeslift.com)