

HP Mount Gearless Machine

PARAMETER NAME	DESCRIPTION	RANGE
F00.00	0-Async. Motor, 1-Sync. Motor	1
F00.01	Control Mode-close loop vector control,sensor vector control	2
F00.02	Rated speed of motor	0.100-4.000m/s
F00.05	0-keypad control, 2-Terminal control	2
F06.00	Pre torque slection, 0-No pre torque function, 4-No weighing auto capensation suiteable for all PG	0/4
F06.14	No weighing current coefficent	500 (0-9999)
F06.15	No weighing speed loop KP	500 (1-9999)
F06.16	No weighing speed loop KI	500 (1-9999)
F10.01	Motor Rated Power	
F10.02	Motor Rated Voltage	
F10.03	Motor Rated Current	
F10.04	Motor Rated Frequency	
F10.05	Motor Rated RPM	
F11.00	Encoder Type	3-for 1387 encoder
F11.01	PPR	2048
F11.02	PG Direction setting 0-The same Direction, 1-The revarse Direction	0/1
F12.06	For ARD	8
F12.15	Break Relay	6
F12.16	Break Relay	5
F12.17	Motor Contactor	6
F12.18	Motor Contactor	5

For tuning F00.05-0 and F10.10-1,then press entre,then press motor contactor After that press RUN

After Tuning complete F00.05-2,then press entre,then Back to main Display,Display should be shown 0.200

After that we have to Run machine in Maintance untill Machine stop Once by itself,after that set speed
parameter as on next page

PARAMETER NAME	DESCRIPTION	RANGE
F05.01	Main speed	0.100-1.00m/s
F05.02	Slow speed	0.100m/s
F05.03	Inspection speed	0.200m/s
F05.09	ARD speed	0.050m/s

DRIVE CONNCTION

DI1	BB
DI2	UPD
DI3	DND
DI4	FS
DI5	SS
DI6	ARD
COM	DCM
R1A	RA
R1C	RC
R2A	MRA
R2C	MRC
P+/BR	DBR

For Reset the Drive


PARAMETER NAME	DESCRIPTION	RANGE
F01.02	RESET	1

Easy Elevator India Pvt. Ltd, Jaipur


1) TOP-BOTTOM FINAL SAFETY LIMIT AND INTERLOCK-1 & INTERLOCK-2 WIRING :



2) UP & DOWN SLOW SAFETY LIMIT WIRING :



3) UP & DOWN STOP SAFETY LIMIT WIRING :

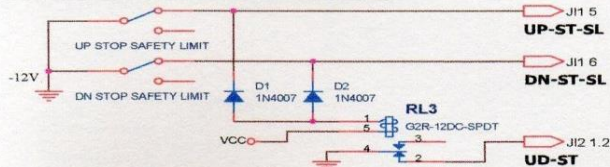

Title			
IO WIRING FOR ETPL 4032 SINGLE LP			
Size	Document Number	Rev	
Custom00		00	