


8. Diagnostic

8.3 See errors

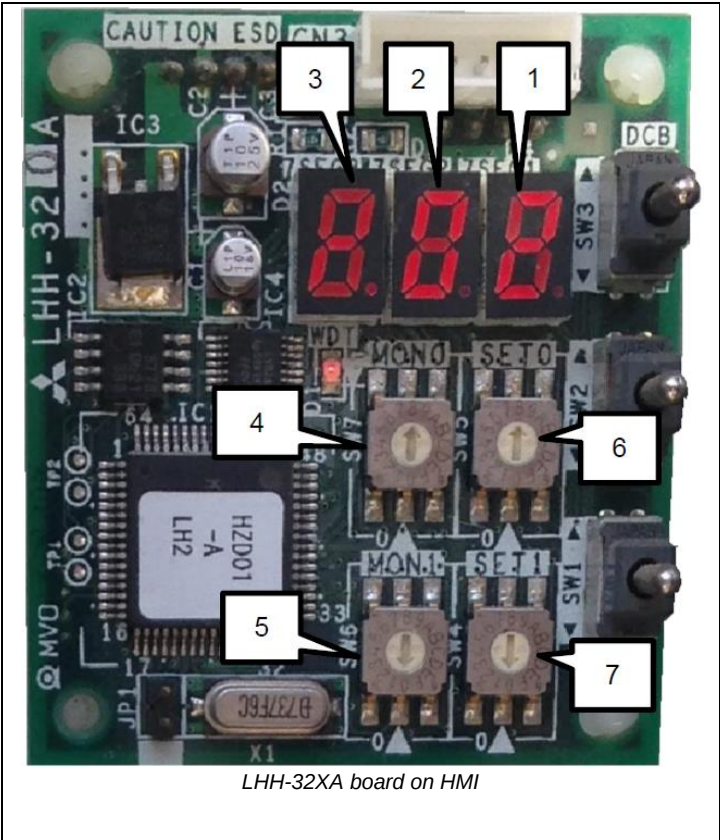

The outside HMI has a set of rotary switches and displays that allow us to set the parameters of the installation and troubleshooting.

In normal operation the rotary switches must be in the following condition:

SET0 = 8
SET1 = 0
MON0 = 0
MON1 = 8

1	Display 1
2	Display 2
3	Display 3
4	MON0 rotary switch
5	MON1 rotary switch
6	SET0 rotary switch
7	SET1 rotary switch

8. Diagnostic

8.3 See errors

To view the installation errors, turn the HMI rotary switches (landing operating panel box) to:


1	Place the rotary MON0 to 0.
2	Place the rotary MON1 to 1 or 5. 1: Current status of the installation. 5: Condition when the error occurred.

Note: The other rotary switches are in normal condition: SET0 = 8 and SET1 = 0.

The HMI display shows:

	E: Shows an error. 0: Shows the rotary MON0 value. X: Shows the error in the installation
--	---

Now change the value of the rotary switch MON0, setting it to 1. Display shows:

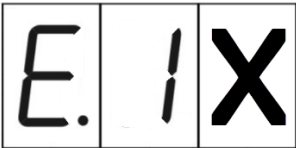	E: Shows an error. 1: Shows the rotary MON0 value. X: Shows the error in the installation
--	---

Now change the value of the rotary switch MON0, setting it to 2. Display shows:

	E: Shows error. 2: Shows the rotary MON0 value. X: Shows the error in the installation
--	--

Now change the value of the rotary switch MON0, setting it to 3. Display shows:

	E: Shows an error. 3: Shows the rotary MON0 value. X: Shows the error in the installation
--	---

Now change the value of the rotary switch MON0, until it passes through the values from 0 to E, and check the error displayed on the display 1.
In one position of the rotary switch, more than one error may be displayed. This is displayed alternately every 2 seconds. For example: ED1 > ED5 > ED1 > ED5, etc.

8. Diagnostic

8.3 See errors

Table of errors "0":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E00	No errors registered
MON0 = 1	E10	No errors registered
MON0 = 2	E20	No errors registered
MON0 = 3	E30	No errors registered
MON0 = 4	E40	No errors registered
MON0 = 5	E50	No errors registered
MON0 = 6	E60	No errors registered
MON0 = 7	E70	No errors registered
MON0 = 8	E80	No errors registered
MON0 = 9	E90	No errors registered
MON0 = A	EA0	No errors registered
MON0 = B	EB0	No errors registered
MON0 = C	EC0	No errors registered
MON0 = D	ED0	No errors registered
MON0 = E	EE0	No errors registered

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "1":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E01	Frequency converter temperature exceeds 90°.
MON0 = 1	E11	There has been an installation reset.
MON0 = 2	E21	Failure contactor 5.
MON0 = 3	E31	
MON0 = 4	E41	There has been an installation emergency stop.
MON0 = 5	E51	Failure at some point in the safety circuit.
MON0 = 6	E61	The frequency converter voltage is below the appropriate value.
MON0 = 7	E71	
MON0 = 8	E81	There has been an over-current in the brake coil "1" of the machine.
MON0 = 9	E91	There has been an emergency stop caused by the frequency converter.
MON0 = A	EA1	Machine encoder error:
MON0 = B	EB1	The elevator has not been used in more than 10 minutes.
MON0 = C	EC1	There was an error between the estimated speed and the actual installation speed.
MON0 = D	ED1	There has been a failure in data transmission of landing operating panel 1.
MON0 = E	EE1	There has been a failure in data transmission of landing operating panel 5.

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "2":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E02	There has been one emergency stop.
MON0 = 1	E12	
MON0 = 2	E22	There has been two emergency stops.
MON0 = 3	E32	The speed of the car is less than expected by the controller.
MON0 = 4	E42	The voltage of the frequency converter is too low.
MON0 = 5	E52	There was an error in the static part of the safety circuit (LED 29).
MON0 = 6	E62	Error in the control circuit of the IGBT gates of the frequency converter.
MON0 = 7	E72	There was an abnormal functioning of controller software four times.
MON0 = 8	E82	There has been an over-current in the brake coil "2" of the machine.
MON0 = 9	E92	There has been an over-current in the traction motor.
MON0 = A	EA2	The speed provided by the encoder does not match the pattern that should follow.
MON0 = B	EB2	The elevator has not been used in more than 16 minutes.
MON0 = C	EC2	Emergency stop caused by speed limit control.
MON0 = D	ED2	There has been a failure in data transmission of landing operating panel 2.
MON0 = E	EE2	There has been a failure in data transmission of landing operating panel 6.

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "3":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E03	There was an abnormal functioning of controller software four times.
MON0 = 1	E13	Serial communication error.
MON0 = 2	E23	
MON0 = 3	E33	There was an error due to abnormal high car speed.
MON0 = 4	E43	There has been a reset following an installation emergency stop.
MON0 = 5	E53	DC power failure for lack of an input phase.
MON0 = 6	E63	
MON0 = 7	E73	There was an abnormal functioning of controller software three times.
MON0 = 8	E83	No current through the brake coil 1.
MON0 = 9	E93	
MON0 = A	EA3	Emergency stop by frequency converter software.
MON0 = B	EB3	The elevator has not been used in more than 10 minutes.
MON0 = C	EC3	Emergency stop by speed limit control.
MON0 = D	ED3	There has been a failure in data transmission of landing operating panel 3.
MON0 = E	EE3	There has been a failure in data transmission of landing operating panel 7.

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "4":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E04	There have been four abnormal car speed detections.
MON0 = 1	E14	The capacitor of the frequency converter is defective.
MON0 = 2	E24	There has been an installation reset.
MON0 = 3	E34	The maximum travel time of the car has been exceeded.
MON0 = 4	E44	Failure in the relay coil LB.
MON0 = 5	E54	
MON0 = 6	E64	Failure in the static part of the safety circuit which is displayed on the LED 29.
MON0 = 7	E74	The car speed and that expected by the software are not suitable on 5 occasions.
MON0 = 8	E84	Disconnected brake coil 1.
MON0 = 9	E94	Motor overload during startup.
MON0 = A	EA4	Braking resistance failure.
MON0 = B	EB4	The elevator has not been able to start in more than 10 minutes.
MON0 = C	EC4	Speed limit protection is enabled.
MON0 = D	ED4	There has been a failure in data transmission of landing operating panel 4.
MON0 = E	EE4	There has been a failure in data transmission of landing operating panel 8.

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "5":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E05	Overcurrent in traction motor
MON0 = 1	E15	Car maintenance control panel activated.
MON0 = 2	E25	Failure of the circuit that generates the signal of the IGBT gates.
MON0 = 3	E35	The car is moving in the wrong direction:
MON0 = 4	E45	Failure in the contactor number 5 coil.
MON0 = 5	E55	12 Vdc power supply failure.
MON0 = 6	E65	12 Vdc power supply failure.
MON0 = 7	E75	The car speed and the speed expected by the software are not suitable on 4 occasions.
MON0 = 8	E85	Failure in coil 1 of the brake activation.
MON0 = 9	E95	The car speed is too high with respect to the expected. It is 0.125 m/sec higher than expected.
MON0 = A	EA5	
MON0 = B	EB5	The door does not open within more than 2 minutes.
MON0 = C	EC5	Door open.
MON0 = D	ED5	Communication failure between the controller and car.
MON0 = E	EE5	Communication failure between the controller and car.

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "6":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E06	Overload in frequency converter braking resistance.
MON0 = 1	E16	Incorrect information from the machine encoder.
MON0 = 2	E26	
MON0 = 3	E36	The maximum travel time of the car has been activated.
MON0 = 4	E46	Activation failure of the brake coil BK1.
MON0 = 5	E56	Control cabinet open.
MON0 = 6	E66	Frequency converter temperature above 75°
MON0 = 7	E76	The car speed and the speed expected by the software are not suitable on 3 occasions.
MON0 = 8	E86	Failure in coil 2 of the brake activation.
MON0 = 9	E96	Failure in the car load measurement system.
MON0 = A	EA6	Maximum travel time activated.
MON0 = B	EB6	The fuse has failed for more than 2 minutes.
MON0 = C	EC6	Trip curves RAM memory failure.
MON0 = D	ED6	Communication failure between the controller and car door.
MON0 = E	EE6	Communication failure between the controller and car door.

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "7":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E07	Failure of the safety series corresponding to the outer lock and car door. Checked by LED 41DG.
MON0 = 1	E17	There have been five failures in controller LB switch.
MON0 = 2	E27	Control RL relay constantly ON.
MON0 = 3	E37	The maximum control travel time of the car has been activated.
MON0 = 4	E47	Failure in coil 2 of the brake activation.
MON0 = 5	E57	Overload has occurred when the installation was being operated in recall mode.
MON0 = 6	E67	The temperature of the frequency converter exceeded 90°.
MON0 = 7	E77	
MON0 = 8	E87	Brake coil BK1 short-circuited.
MON0 = 9	E97	Controller power transformers failure.
MON0 = A	EA7	Overcurrent in control frequency converter
MON0 = B	EB7	Operating relay 60 failure:
MON0 = C	EC7	
MON0 = D	ED7	Communication failure between controller and car display.
MON0 = E	EE7	Communication failure between controller and car display.

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "8":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E08	Failure of systems that check limit slowdown.
MON0 = 1	E18	Relay 5 failed five times.
MON0 = 2	E28	Installation water sensor activated.
MON0 = 3	E38	There was an overvoltage on the frequency converter.
MON0 = 4	E48	The input voltage is present on the installation.
MON0 = 5	E58	Abnormal software command.
MON0 = 6	E68	Communication from frequency converter temperature sensor interrupted.
MON0 = 7	E78	
MON0 = 8	E88	Brake coil BK2 short-circuited.
MON0 = 9	E98	The car speed is too high with respect to the expected. It is 0.125 m/sec higher than expected.
MON0 = A	EA8	Car position error.
MON0 = B	EB8	Car door cannot be opened.
MON0 = C	EC8	
MON0 = D	ED8	There has been a failure in the data transmission of the operating control panel.
MON0 = E	EE8	There has been a failure in the data transmission of the operating control panel.

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "9":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E09	
MON0 = 1	E19	There has been a failure in the brake coil BK1 five times.
MON0 = 2	E29	End of the anti-flooding operation.
MON0 = 3	E39	Low frequency converter voltage
MON0 = 4	E49	
MON0 = 5	E59	The software initiated an installation emergency stop.
MON0 = 6	E69	Overcurrent in the frequency converter.
MON0 = 7	E79	
MON0 = 8	E89	Power supply failure of the brake coil BK1.
MON0 = 9	E99	Machine encoder error:
MON0 = A	EA9	Transmission failure of the load measurement system.
MON0 = B	EB9	Car Operation Panel (COP) failure.
MON0 = C	EC9	
MON0 = D	ED9	Car communication failure.
MON0 = E	EE9	

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "A":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E0A	Load weighing system error.
MON0 = 1	E1A	There have been five failures in the BK2 brake switch.
MON0 = 2	E2A	
MON0 = 3	E3A	There have been four failures in the controller software.
MON0 = 4	E4A	
MON0 = 5	E5A	
MON0 = 6	E6A	Frequency converter over voltage
MON0 = 7	E7A	
MON0 = 8	E8A	Power supply failure of the brake coil BK2.
MON0 = 9	E9A	Machine encoder communication error:
MON0 = A	EAA	Machine encoder communication error:
MON0 = B	EBA	Door operator contacts error, end of opening or closing.
MON0 = C	ECA	
MON0 = D	EDA	Communication failure between the controller and outside landing operating panels/displays.
MON0 = E	EEA	

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "B":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E0B	Error on the board E1.
MON0 = 1	E1B	There has been a low voltage on the frequency converter more than five times.
MON0 = 2	E2B	Contact failure of the folding balaustrade on the car roof.
MON0 = 3	E3B	The car speed and the speed expected by the software are not suitable on 4 occasions.
MON0 = 4	E4B	Error on the Frequency Converter load circuit
MON0 = 5	E5B	Abnormal braking distance.
MON0 = 6	E6B	Lack of a phase on DC power supply.
MON0 = 7	E7B	
MON0 = 8	E8B	Failure of brake coil BK1.
MON0 = 9	E9B	Overcurrent in traction motor
MON0 = A	EAB	Failure in controller leveling system.
MON0 = B	EBB	Car alarm failure.
MON0 = C	ECB	
MON0 = D	EDB	Communication failure between the controller and car.
MON0 = E	EEB	

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "C":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E0C	Error in the UHS / DHS contacts.
MON0 = 1	E1C	E1 circuit error.
MON0 = 2	E2C	Brakes error.
MON0 = 3	E3C	Overcurrent on the frequency converter.
MON0 = 4	E4C	
MON0 = 5	E5C	
MON0 = 6	E6C	E1 circuit error.
MON0 = 7	E7C	Load sensor temperature less than 30°.
MON0 = 8	E8C	Error on the BK2 brake coil.
MON0 = 9	E9C	
MON0 = A	EAC	Machine encoder error:
MON0 = B	EBC	Cabin alarm not working.
MON0 = C	ECC	
MON0 = D	EDC	Communication failure between the controller and landing operating panels/displays.
MON0 = E	EEC	

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "D":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E0D	Failure of the circuit that checks the signal of the door area.
MON0 = 1	E1D	Frequency converter ventilation error.
MON0 = 2	E2D	Error in opening brake retry.
MON0 = 3	E3D	Emergency stop due to the car speed not following the pattern preset by the controller.
MON0 = 4	E4D	
MON0 = 5	E5D	
MON0 = 6	E6D	DC power supply error.
MON0 = 7	E7D	Load sensor temperature between 30° and 40°.
MON0 = 8	E8D	
MON0 = 9	E9D	
MON0 = A	EAD	
MON0 = B	EBD	Elevators group malfunction
MON0 = C	ECD	
MON0 = D	EDD	
MON0 = E	EED	

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "E":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E0E	Relay 5 error.
MON0 = 1	E1E	Error on the board E1.
MON0 = 2	E2E	
MON0 = 3	E3E	Encoder fails during normal operation.
MON0 = 4	E4E	
MON0 = 5	E5E	
MON0 = 6	E6E	Three phase supply poor.
MON0 = 7	E7E	Load sensor temperature over 60°.
MON0 = 8	E8E	
MON0 = 9	E9E	Car power supply source error.
MON0 = A	EAE	
MON0 = B	EBE	Electric main supply shut off.
MON0 = C	ECE	
MON0 = D	EDE	
MON0 = E	EEE	

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8

8. Diagnostic

8.3 See errors

Table of errors "F":

MON1 = 0 Current condition		MON1 = 5 Condition when the error occurred
MON0 = 0	E0F	LB relay error.
MON0 = 1	E1F	Frequency converter ventilation error.
MON0 = 2	E2F	Brake relays (BK) constantly activated.
MON0 = 3	E3F	Encoder error when the car is moving in inspection mode.
MON0 = 4	E4F	Encoder error.
MON0 = 5	E5F	
MON0 = 6	E6F	Power supply failure.
MON0 = 7	E7F	Failure of the A/D converter of the load measurement device.
MON0 = 8	E8F	Brake slide detection.
MON0 = 9	E9F	
MON0 = A	EAF	
MON0 = B	EBF	Car door contacts error (end closing or opening).
MON0 = C	ECF	
MON0 = D	EDF	
MON0 = E	EEF	

Rotary switches in normal condition:

SET0 = 8, SET1 = 0, MON0 = 0, MON1 = 8