


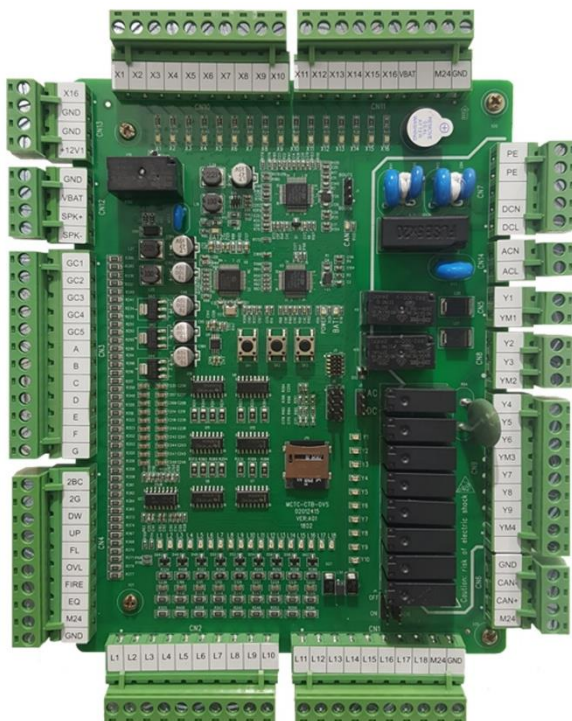

Basic information


Compatibility: NICE1000^{new} & CTB-OVS


Firmware version No.

FA-05= F145.0F45.00.04.01.L01.14

FA-43 = CTV-OVS version

1 Physical appearance and mounting dimensions

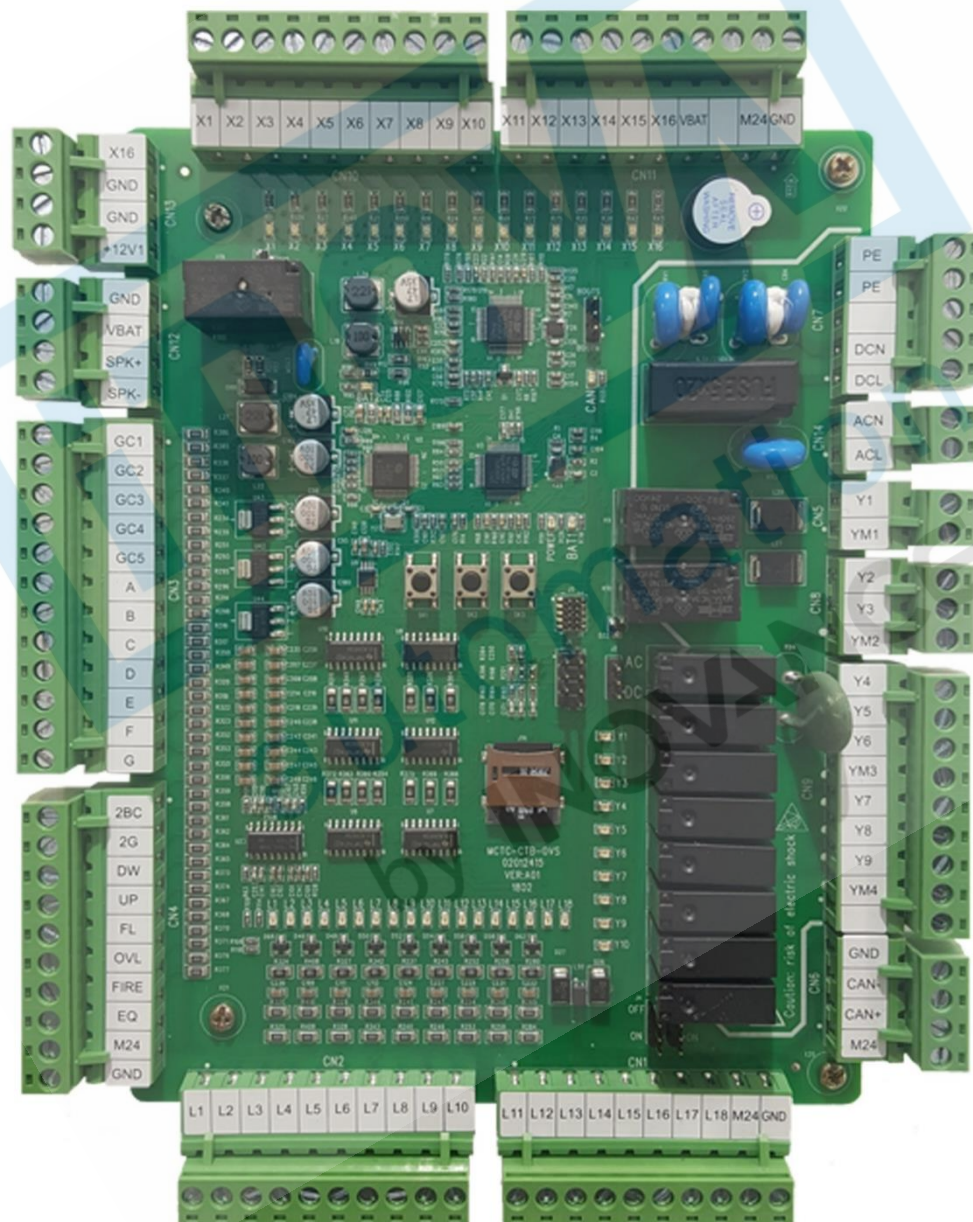

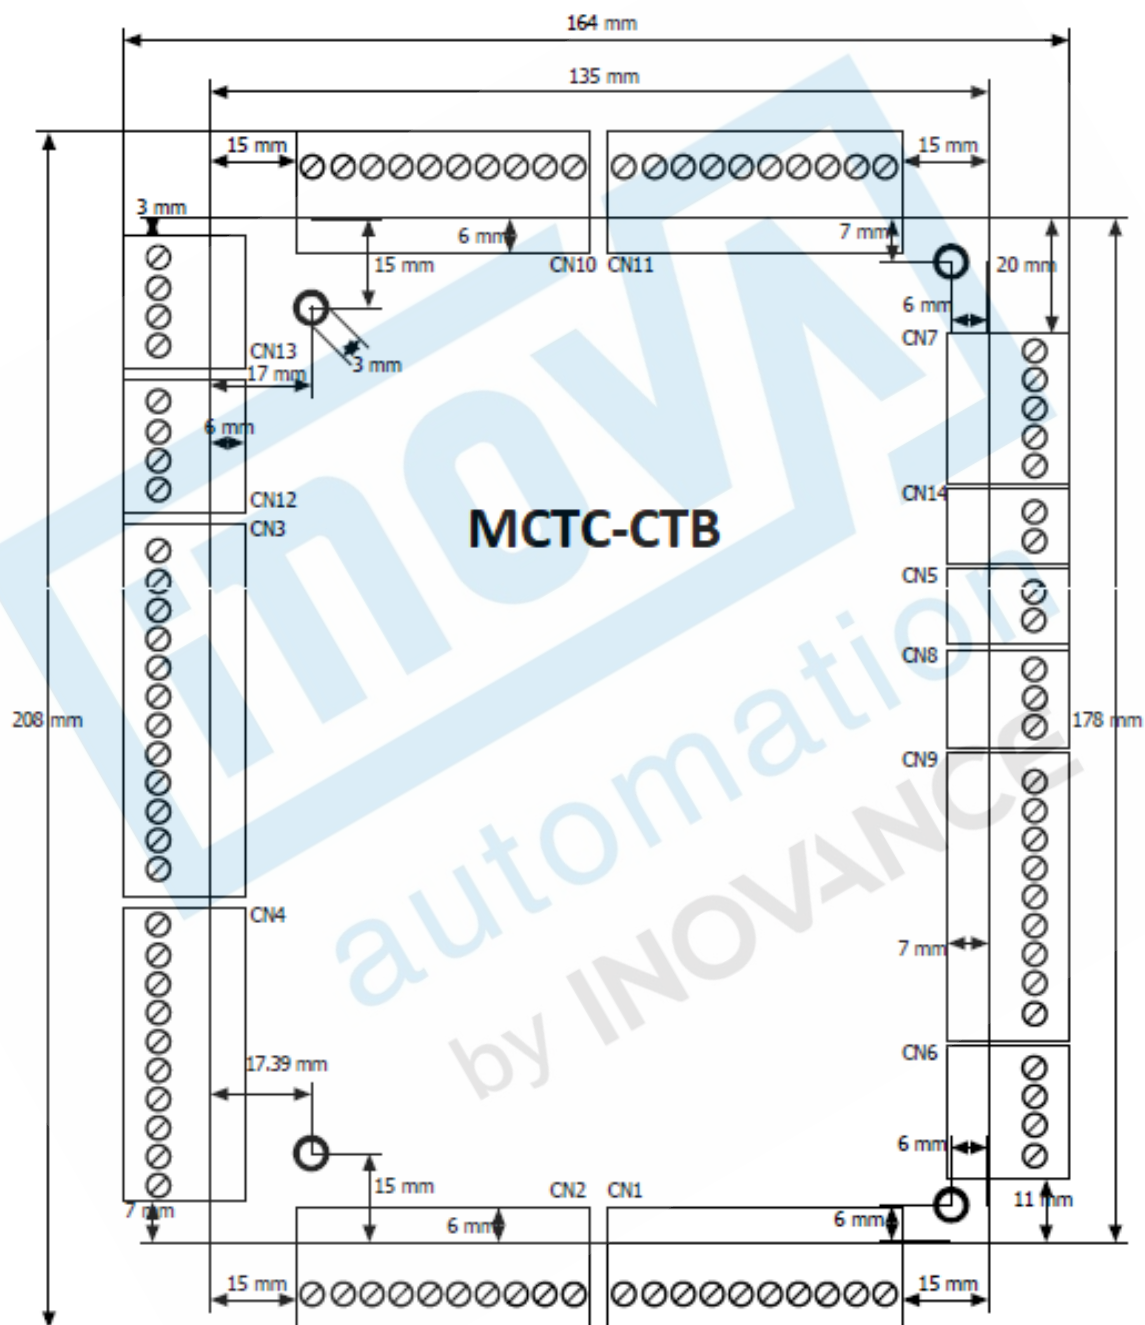

2 System commissioning

2-1 CTB-OVS commissioning

F6-66 function selection, bit0 is used for selectin whether system use CTB or not.

Function Code	Parameter Name	Setting Range
F6-66-bit0	Program control selection 3	0: Use CTB-OVS
		1: Not use CTB-OVS

F6-66 function selection, bit5 is used for selectin how system use Inspection signal.

Function Code	Parameter Name	Setting Range
F6-66-bit5	Program control selection 3	0: CTB-OVS inspection Enable
		1: CTB-OVS inspection Disable

0: Only inspection Signal is effective on CTB. The inspection signal will be enabled automatically on MCB

1: No matter whether CTB be used or not, only inspection signal is effective on MCB.

Use CAN communication between MCB and CTB-OVS.

Note: Set FD-05-Bit2=1 if you use CTB-OVS.

Note: System report E51-101 if the CAN bus is abnormal.

System will reset the error Automatically if the CAN communication work properly.

Note: You can check CTB-OVS version (FA-43) if the CAN communication work properly.

You can check the current communication quality of the system in FA-24, as described in the NICE1000^{new} User Manual.

FA-24 the rightest digital tube shows the communication quality of CAN bus which between CTB and MCB. The value range is 0~9. The number lower means the quality is better, 0 is the best.

2-2 Parallel control commissioning

Parallel control of 2 elevators is implemented by directly connector CN10 on the monitor port if you use CTB-OVS.

Function Code	Parameter Name	Setting Range
FD-05-bit2	Duplex communication port selection	0: Use CAN port
		1: Use monitor Port

Set FD-05-Bit2=1 if you use CTB-OVS.

When using the monitor terminal to Parallel control commissioning, the baud rate of the two devices should be set equal.

Function Code	Parameter Name	Setting Range
FA-00	Baud Rate	0: 9600
		1: 38400

2-3 Description of CTB-OVS Terminals

CN6	GND	M24/GND: External 24 VDC power supply for the entire CTB CAN+/CAN-: CAN bus communication interface, Connect to the MCB for CAN bus communication
	CAN-	
	CAN+	
	M24	

CN1 & CN2	L1	L1 ~ L16 :Car call buttons, use GND for button illumination L17: Door open button, use GND for button illumination L18: Door close button, use GND for button illumination <u>Support double click to clear the registered call command</u>
	L2	
	~	
	L16	
	L17	
	L18	
	M24	
	GND	

CN3	GC1	GC1 ~ GC5: Gray code & Binary output terminals A ~ G:7- segment output terminals (common anode)
	~	
	GC5	
	A	
	B	
	C	
	D	
	E	
	F	
	G	

Function Code	Parameter Name	Setting Range
F7-28	Car display mode selection	0: 7-segment
		1: Gray code
		2: Binary

CN4	2BC	2BC & 2G: 7-segment high-bits output DW & UP: Down/Up arrow display output FL: Full-load output OVL: Overload output FIRE: Fire output EQ: Earthquake
	2G	
	DW	
	UP	
	FL	
	OVL	
	FIRE	
	EQ	
	M24	
	GND	

CN12	GND	GND, VBAT: Emergency battery (12V, 1.2Ah) SPK+, SPK-: Speaker output
	VBAT	
	SPK+	
	SPK-	

CN13	X16	X16, GND: Emergency alarm output (12 V) +12V1, GND: Emergency lamp output (12 V, 3 W)
	GND	
	GND	
	+12V1	

CN10	X1	X1 :Auto/Attendant mode switch X2 :Direct change under attendant mode X3: Disable car calls X4: Full-load signal (NC or NO) X5: Overload signal (NC or NO) X6: Door machine 1 light curtain signal (NC or NO) X7: Door machine 2 light curtain signal (NC or NO) X8: Door 1 open limit signal (NC or NO) X9: Door 1 close limit signal (NC or NO) X10: Door 2 open limit signal (NC or NO)
	X2	
	X3	
	X4	
	X5	
	X6	
	X7	
	X8	
	X9	
	X10	

CN11	X11	X11: Door 2 close limit signal (NC or NO) X12: Fan signal (ON or OFF) X13: Inspection signal (only NC) X14: Inspection up signal (only NO) X15: Inspection down signal (only NO) X16: Emergency alarm Button signal VBAT: Emergency Battery output (Use for Emergency alarm)
	X12	
	X13	
	X14	
	X15	
	X16	
	VBAT	
	-	
	M24	
	GND	

F6-76 use to set the X input signal type (NC or NO)


Set to 0 means this port is NC,

Set to 1 means this port is NO.

F6-76 – CTB-OVS input type					
Bit	Function	Default value	Bit	Function	Default value
Bit0	Light curtain 1	0	Bit4	Door 1 close limit	0
Bit1	Light curtain 2	0	Bit5	Door 2 close limit	0
Bit2	Door 1 open limit	0	Bit6	Full load	0
Bit3	Door 2 open limit	0	Bit7	Over load	0

Note: The inspection signal on CTB is 0 (NC), Inspection UP/DOWN signals is 1(NO).

FA-42 using to see the state of the input port. The details of the specific digital tube are as follows:

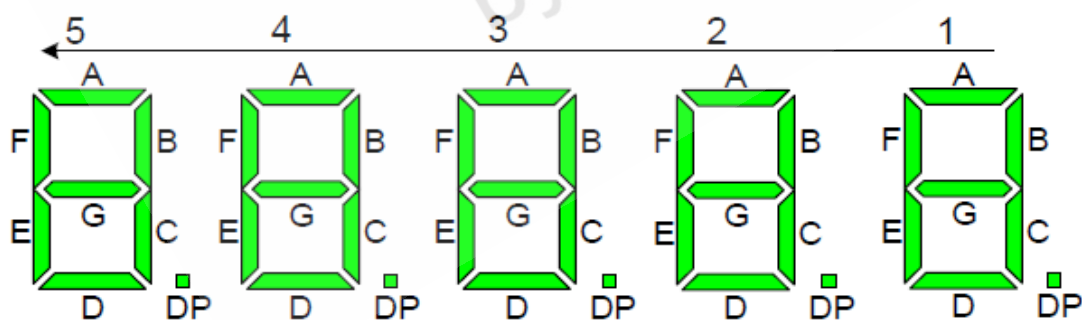

FA-42					
	1	2	3	4	5
A	Light curtain 1	DO	Door open1	DO display	Inspection on CTB-OVS
B	Light curtain 2	DC	Door close1	DC display	Inspection Up
C	Door 1 open limit	//	Force close1	//	Inspection DN
D	Door 2 open limit	//	Door open2	//	//
E	Door 1 close limit	Attendant mode	Door close2	//	//
F	Door 2 close limit	Direction change	Force close2	//	//
G	Full load	//	Up arriving gong	//	//
DP	Over load	//	DN arriving gong	//	//

CN7	PE	PE: Grounding terminal DCN: Input AC Phase for Semi-auto door (220VAC) DCL: input AC Null for Semi-auto door (220VAC)
	PE	
	DCN	
	DCL	

CN14	ACN	AC Output E-lock signal for Semi-auto door (220VAC)
	ACL	

CN5	Y1	DC Output E-lock signal for Semi-auto door (220VDC)
	YM1	

CN8	Y2	Y2: Fan output
	Y3	Y3: Light output (Automatic & Timer)
	YM2	YM2: COM for Y2 & Y3

CN9	Y4	Y4: Door 1 open output Y5: Door 1 close output Y6 :Door 1 force close output YM3: COM for Y4 & Y5 & Y6 Y7: Door 2 open output Y8: Door 2 close output Y9 :Door 2 force close output YM4: COM for Y7 & Y8 & Y9
	Y5	
	Y6	
	YM3	
	Y7	
	Y8	
	Y9	
	YM4	
	-	

3 Fault information

First of all, Set F6-76 properly. The CTB-OVS has 2 pieces of alarm information. The faults are handled according to the following table.

Error code	Fault	Probable causes & solutions
Err51	CAN Communication between MCB & CTB-OVS is abnormal	• Check the communication cable connection. • Check the power supply of the CTB. • Check whether the 24 V power supply of the controller is normal. • Check whether strong-power interference on communication exists.
Err90	MCB & CTB-OVS inspection signals are Enable in the same time.	• Set one of them in automatic mode • Set F6-66, Bit5=1 if you don't use to CTB-OVS inspection signal. • Check the inspection wiring • Check FA-42, To be sure CTB-OVS work properly.