



IRIS_NV Control Panel

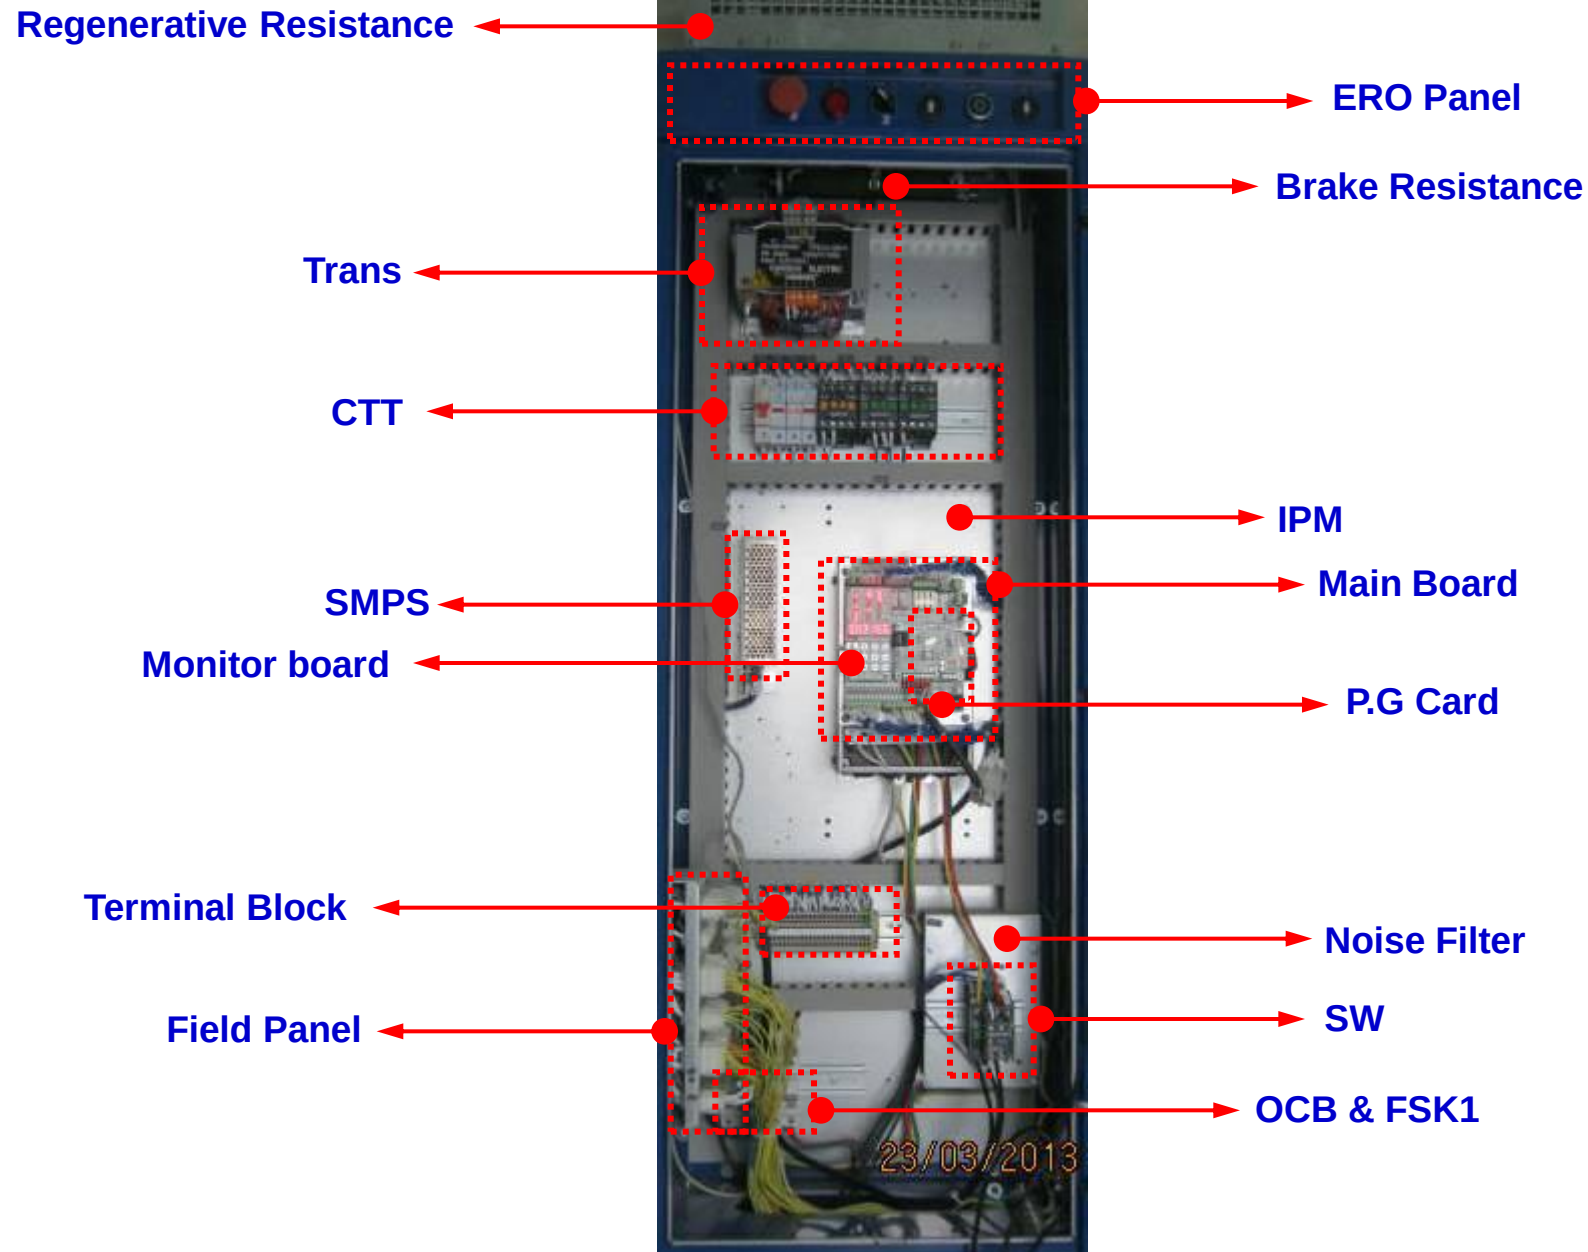

❖ ERO Panel






❖ RZ1

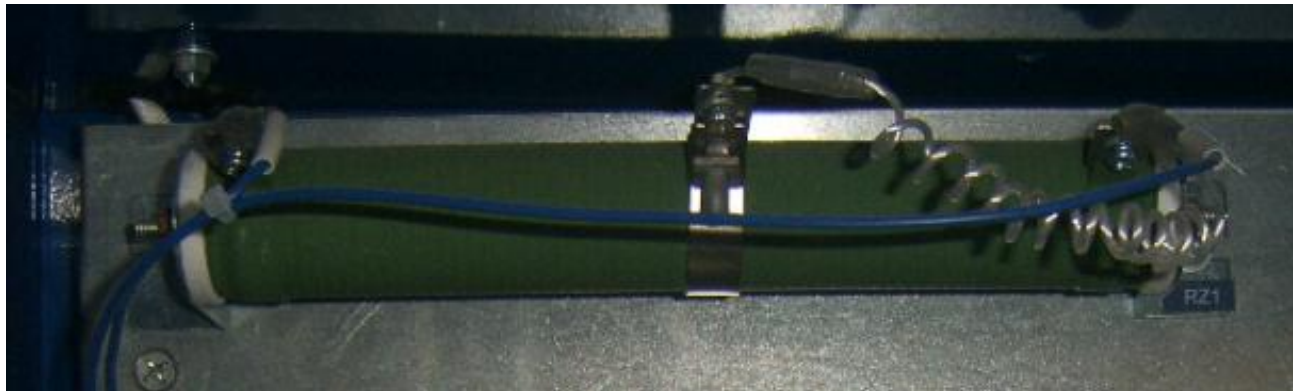


(Brake Resistance)

❖ Trans

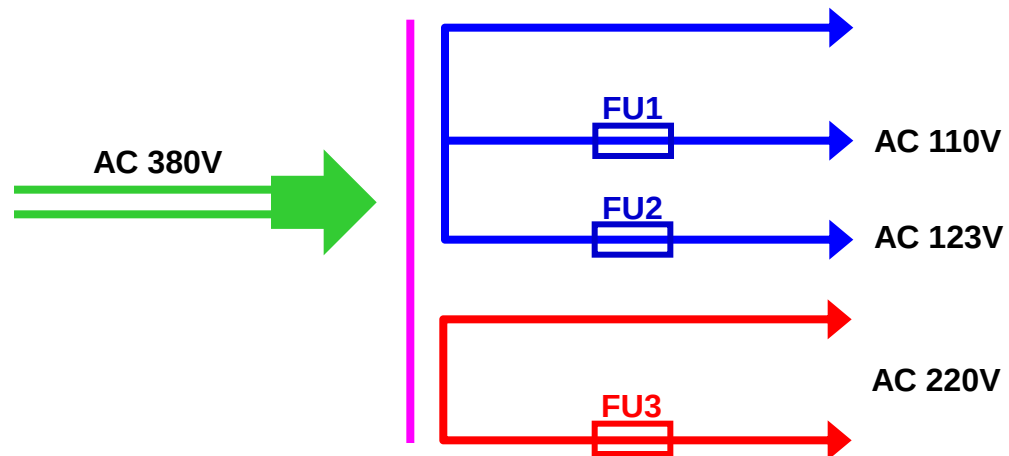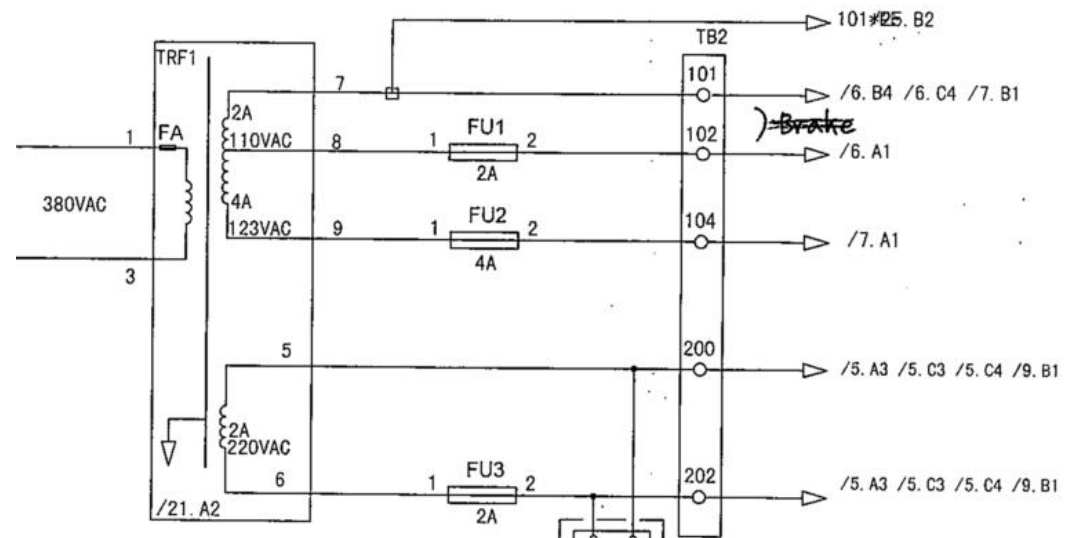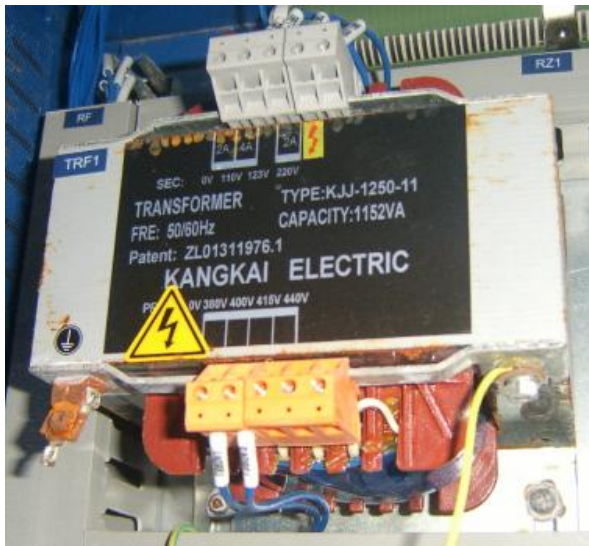


❖ Circuit Breaker & CTT

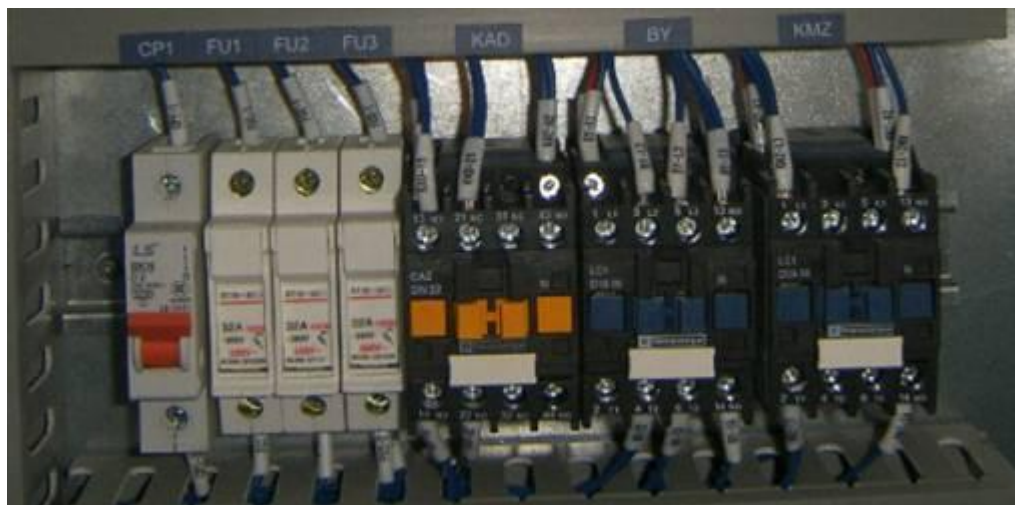

CP1	Circuit Breaker for input voltage of SMPS
FU1	AC 110V Fuse [2A] → Safety Chain
FU2	AC 123V Fuse [4A] → Brake
FU3	AC 220V Fuse [2A] → Car Door
KAD	Safety Chain (Car Door & Landing Door)
BY	Brake CTT
KMZ	Starting CTT (10T, C1ST...)

❖ SW CTT

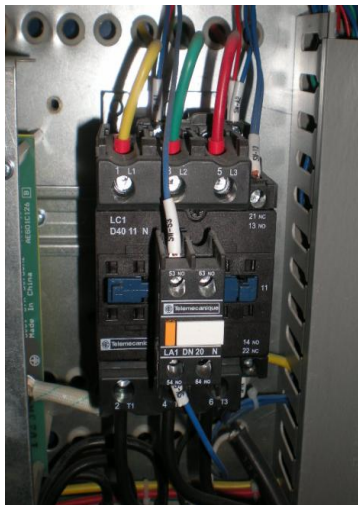


❖ FSK1 & OCB



SW	For Drive voltage of Motor
OCB	Main Breaker in control panel
FSK1	Car Light Switch
FSK2	Hoistway Light Switch
FSK3	Hoistway Light Switch


❖ SMPS

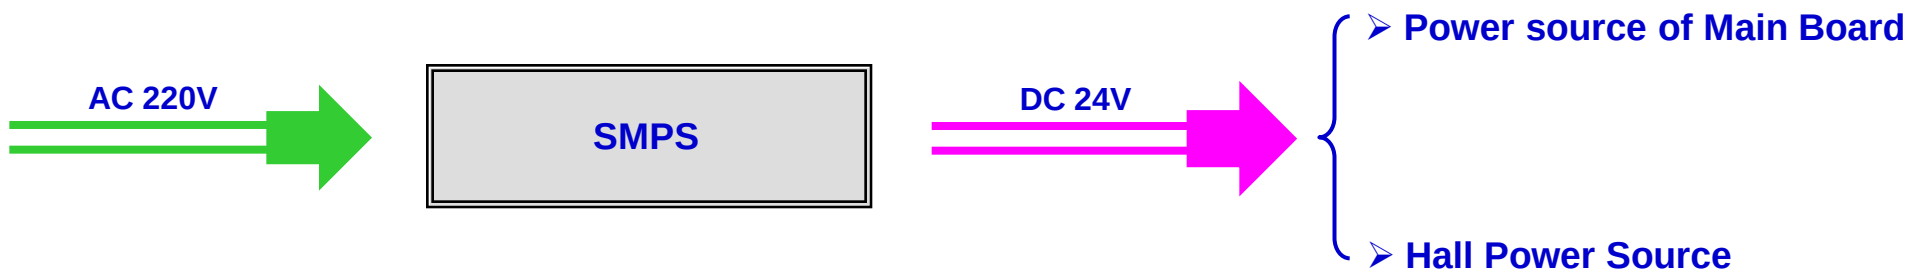

◆ P.G Card

(ABZ Incremental 5V PG card)

Matched with UVW encoder

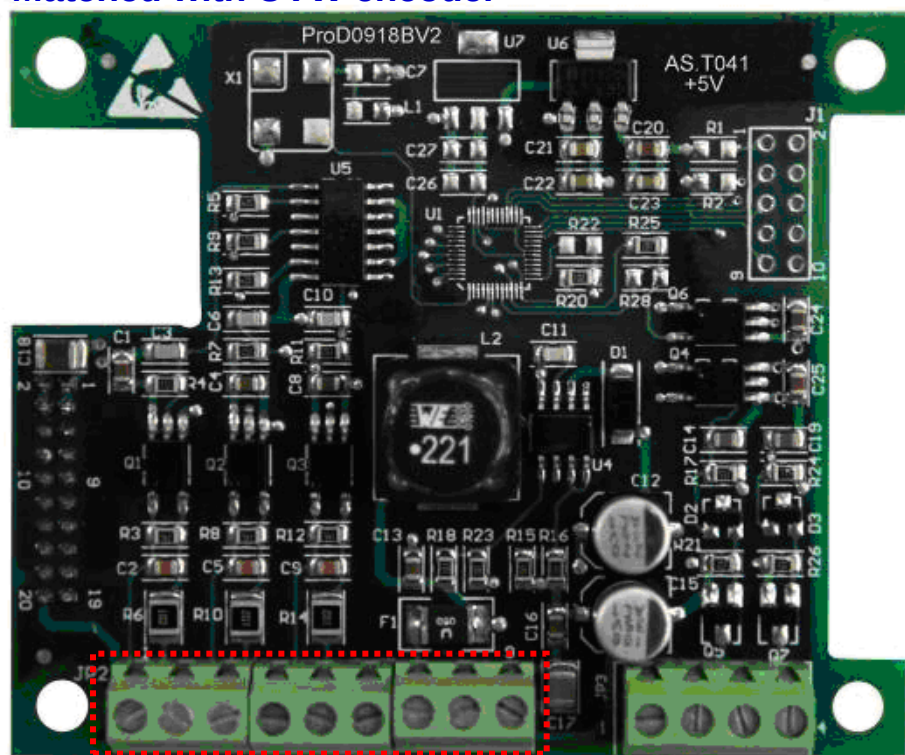

JP2

A+	A-	B+	B-	Z+	Z-	V+	V-	PE
----	----	----	----	----	----	----	----	----

Pin	Terminal Label	Function
JP2.1	A+	Encoder A phase signal +
JP2.2	A-	Encoder A phase signal -
JP2.3	B+	Encoder B phase signal +
JP2.4	B-	Encoder B phase signal -
JP2.5	Z+	Encoder Z phase signal +
JP2.6	Z-	Encoder Z phase signal -
JP2.7	V+	Encoder power positive pole
JP2.8	V-	Encoder power negative pole
JP2.9	PE	Shield earth



◆ P.G Card

(AS T024)


Matched with SINCOS encoder



Terminal Label	Function
A+, A-	Encoder A phase signal
B+, B-	Encoder B phase signal
R+, R-	Encoder Z phase signal +
C+, C-	Encoder SIN signal
D+, D-	Encoder COS signal
V+	+5V
0V	GND



◆ Main Board

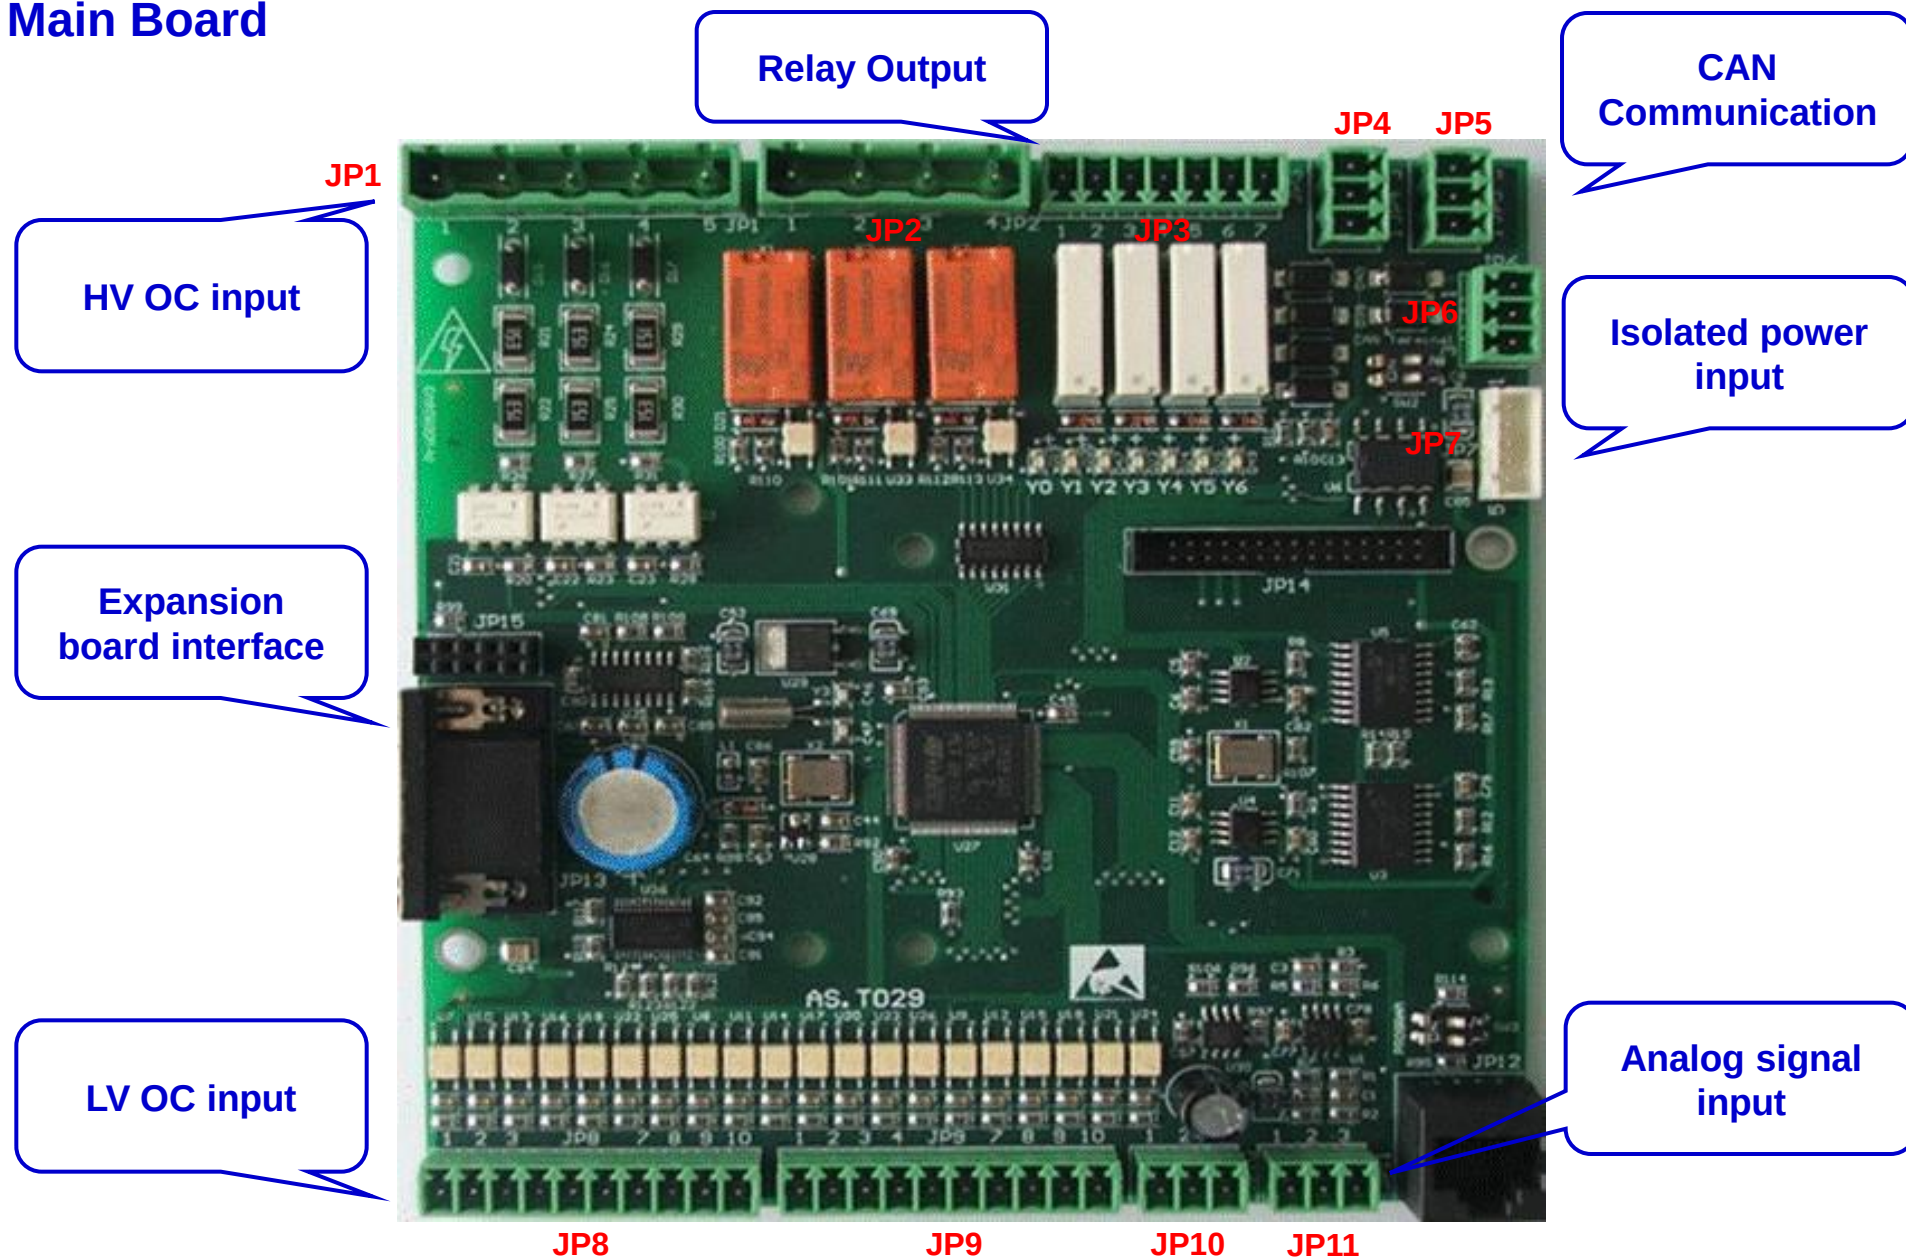

MIC	ID No.	Name	Description	Assembly
JP1	JP1.1	XCOM	X20-X22 input signal common port 0V	
	JP1.2	X20	Positive voltage position in safety loop, 110V/220V input	Input
	JP1.3	X21	Positive voltage position in door lock loop, 110V/220V input	Input
	JP1.4	X22	Positive voltage position in hall door lock, 110V/220V input	Input
	JP1.5	XCOM	X20-X22 input signal common port 0V, connect with JP1.1 internally	
JP2	JP2.1	Y0	Brake contactor output	Output
	JP2.2	Y1	Brake excitation contactor output	Output
	JP2.3	Y2	Main contactor output	Output
	JP2.4	COM1	Common port of output relay Y0-Y3	
JP3	JP3.1	Y3	Pre-opening relay	Output
	JP3.2	Y4	ALP signal output	Output
	JP3.3	COM2	Common port of output relayY3-Y4	
	JP3.4	Y5	Firefighting signal output	Output
	JP3.5	COM3	Common port of output relayY5	Output
	JP3.6	Y6	Reserved for spare	
	JP3.7	COM4	Common port of output relayY6	
JP4	JP4.1	0V	0V DC	
	JP4.2	CAN0H	Call serial communication signal end (TXA0+)	
	JP4.3	CAN0L	Call serial communication signal end (TXA0-)	

MIC	ID No.	Name	Description	Assembly
JP5	JP5.1	0V	0V DC	
	JP5.2	CAN1H	Parallel connection serial communication signal end (TXA1+)	
	JP5.3	CAN1L	Parallel connection serial communication signal end (TXA1-)	
JP6	JP6.1	0V	Isolated 0V DC	
	JP6.2	CAN2H	Community monitor (TXA2+)	
	JP6.3	CAN2L	Community monitor (TXA2-)	
JP7	JP7.1	G5VIO	Isolated power 0V	
	JP7.2	+5VIO	Isolated power +5V	
	JP7.3		NC, undefined	
	JP7.4	G24VIO	OC output isolated power 0V	
	JP7.5	+24VIO	OC input isolated power+24V	
JP8	JP8.1	X0	Inspection signals 1, disconnection indicates Inspection, X0 and X1 all connection indicate automatic	Input
	JP8.2	X1	Inspection signals 2, disconnection indicates Inspection, X0 and X1 all connection indicate automatic	Input
	JP8.3	X2	Up signal, Inspection: inching upward; attendant : Upward diversion	Input
	JP8.4	X3	Down signal, Inspection: inching downward; attendant: downward diversion	Input

MIC	ID No.	Name	Description	Assembly
JP8	JP8.5	X4	First upward slow down switch	Input
	JP8.6	X5	First downward slow down switch	Input
	JP8.7	X6	Up-leveling switch	Input
	JP8.8	X7	Down-leveling switch	Input
	JP8.9	X8	Motor power contactor detection	Input
	JP8.10	X9	Brake contactor detection	Input
JP9	JP9.1	X10	Left band-type brake switch detection	Input
	JP9.2	X11	Right band-type brake switch detection	Input
	JP9.3	X12	Motor temperature examination signal	Input
	JP9.4	X13	Advanced door opening relay detection	Input
	JP9.5	X14	Door signal detection	Input
	JP9.6	X15	fireman return/ fireman's switch (parameter selection)	Input
	JP9.7	X16	Emergency leveling input for power cut/earthquake/backup power (parameter selection)	Input
	JP9.8	X17	Door lock loop relay detection	Input
	JP9.9	X18	Second upward slow down switch	Input
	JP9.10	X19	Second downward slow down switch	Input

MIC	ID No.	Name	Description	Assembly
JP10	JP10.1	+24VIO	Input isolated power+24V, connect with P7.5 internally	
	JP10.2	VSIO	Connect with JP10.1 externally, it is valid if input is low power, JP10.3 is input common port; When connect with JP10.3 externally, it is valid if input is high power, JP10.1is input common port	
	JP10.3	G24VIO	Input isolated power 0V, connect with JP7.4 internally	
JP11	JP11.1	0V	Analog signal output 0V	
	JP11.2	AIN -	Difference analog signal input –	
	JP11.3	AIN +	Difference analog signal input +	

SW2	ON	Monitor CAN terminal resistance valid state	Factory setup is OFF for SW2
	OFF	Monitor CAN terminal resistance null state	
SW3	ON	Program burning state	Factory setup is OFF (Maintain OFF during operation)
	OFF	Normal working state	



◆ Monitor Board



Display	Meaning	Remark
Monitor	Community communication Supervisory panel	flash-communication is connected
State	CPU working condition	Rapid flashing -normal medium speed -in self study slow -elevator fault no flash -contact manufacturer
CAN	Cabin/shaft communication	Flash-communication connected
Group	Duplex/group control communication	Flash-communication is connected
IN/SOR	Inspection/automatic mode	Light on-auto/light off-inspection
Encode	Rotary encoder	Light on-speed feedback
Safety	Safety circuit	Light on-safety circuit is connected
DL	Door lock	Light on-door lock is connected
HDL	Hall door lock	Light on-hall door lock is connected



❖ IPM



❖ Terminal Block



❖ Noise Filter



❖ Housing Function

GOV	Information	Description
GOV-01	Safety line	CA:03-OS
GOV-02		OS-CA:02
GOV-03	No use	
GOV-04	No use	
GOV-05	No use	
GOV-06	No use	

CIN	Information	Description
CN10-01	Duplex	JP8.1-JP8.1
CN10-02		JP8.2-JP8.2
CN10-03		JP8.3-JP8.3
CN10-04		JP8.4-JP8.4
CN10-05	No use	
CN10-06	No use	

HE	Information	Description
HE-01	Interphone (Supervisory Room)	12V
HE-02		GND
HE-03		T
HE-04	No use	
HE-05	No use	
HE-06	No use	

CE	Information	Description
CE-01	Aircon.	AIR1-1
CE-02		AIR
CE-03	No use	
CE-04	No use	
CE-05	No use	
CE-06	No use	

MB	Information	Description
MB-01	Brake power	Brake(+)
MB-02		Brake(-)
MB-03	Motor Thermal	
MB-04	Brake s/w	BS1
MB-05		BS2
MB-06	COM	

HS	Information	Description
HS-01	No use	
HS-02	No use	
HS-03	No use	
HS-04	No use	
HS-05	No use	
HS-06	No use	

❖ Housing Function

HD	Information	Description
HD-01	Hall Communication	TXV+
HD-02		TXV-
HD-03		TXA+
HD-04		TXA-
HD-05	No use	
HD-06	No use	

INT	Information	Description
INT-01	Interphone (Controller)	12V
INT-02		GND
INT-03		T
INT-04	No use	
INT-05	No use	
INT-06	No use	

Mic Name	Information	Description
HB-01	No use	
HB-02	No use	
HB-03	No use	
HB-04	No use	
HB-05	Safety line	ERO-2BFS
HB-06	No use	
HB-07	No use	
HB-08	Safety line	Final limit-Fire1
HB-09		Fire1-2PES
HB-10	No use	
HB-11	No use	
HB-12	No use	

Mic Name	Information	Description
HC-01	Safety line	Landing door
HC-02		Landing door
HC-03	No use	
HC-04	No use	
HC-05	No use	
HC-06	No use	

EST	Information	Description
EST-01	No use	
EST-02	No use	
EST-03	No use	
EST-04	No use	
EST-05	No use	
EST-06	No use	

❖ Housing Function

Mic Name	Information	Description
HA-01	Main Board Input	UL
HA-02		DL
HA-03		2LS
HA-04		1LS
HA-05		EFK
HA-06		Com.
HA-07		4LS
HA-08		3LS
HA-09	Safety line	Final limit-GOV
HA-10		Final limit-1PES
HA-11		Pit safety line
HA-12		Pit safety line

Mic Name	Information	Description
CC-01	No use	
CC-02	No use	
CC-03	No use	
CC-04	EFS1	1st Firman S/W
CC-05	Interphone	12V
CC-06		GND
CC-07	No use	
CC-08	Interphone	T
CC-09	PE	2SQ
CC-10	No use	
CC-11	No use	
CC-12	Interphone	Warning Light


Mic Name	Information	Description
CB-01	No use	
CB-02	No use	
CB-03	No use	
CB-04	Inspection Run	
CB-05		
CB-06	TCI-ERO	
CB-07		
CB-08	1LV	
CB-09	2LV	
CB-10	1LV/2LV COM	
CB-11	1LV/2LV 24VDC	
CB-12	No use	

❖ Housing Function

Mic Name	Information	Description
CA-01	Safety line	TCI-ERO
CA-02		TB2:102-ESB
CA-03		SOS-OS
CA-04		MES-GS
CA-05		TB2:116-GS
CA-06	CAR LIGHT/EMPU	TB2:501
CA-07		TB2:502
CA-08	Safety line	ESB JUMP
CA-09		EEC JUMP
CA-10	CAR SMPS	TB2:200-SMPS(CAR TOP)
CA-11		TB2:202-SMPS(CAR TOP)
CA-12	220VAC	FAN-FIRE1

Mic Name	Information	Description
MSK-01	Safety line	Safety Start
MSK-02		Before GOV
MSK-03		After GOV
MSK-04		Safety End
MSK-05		Safety End(Car Door)
MSK-06		Safety End(Landing Door)
MSK-07		Safety End(Com)
MSK-08	Inspection line	Before TCI
MSK-09		Start(UP)
MSK-10		Start(DOWN)
MSK-11	No use	
MSK-12	No use	
MSK-13	No use	
⋮	No use	
MSK-19	No use	
MSK-20	No use	
MSK-21	No use	

❖ Field panel

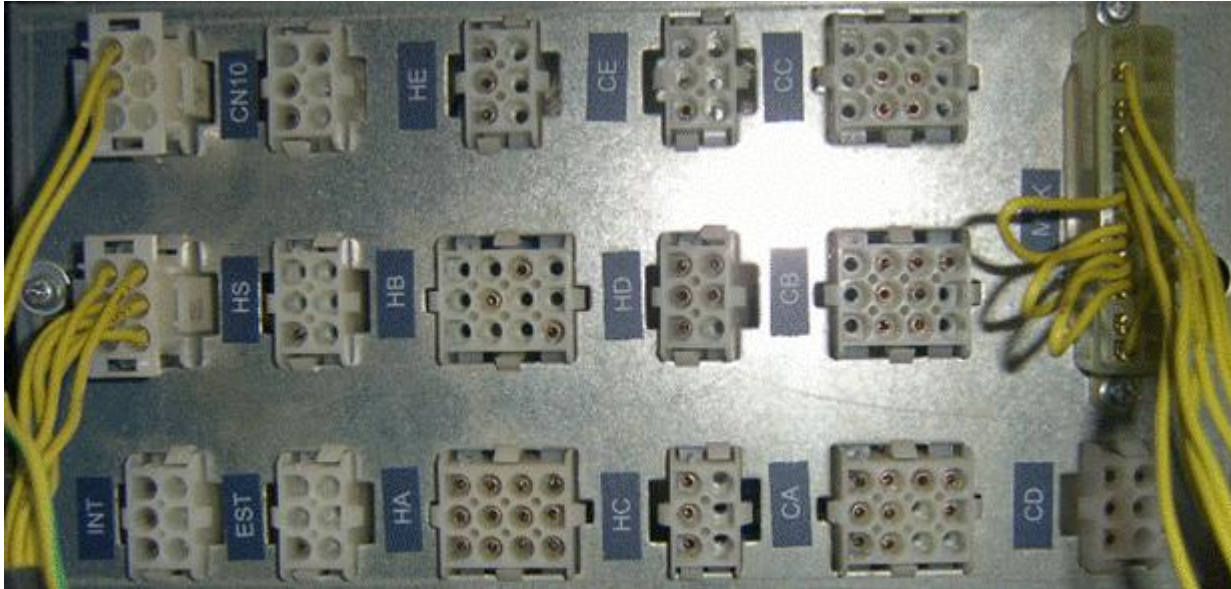

InTae, Park

Overseas Support Team

itpark@sigmaelevators.com

itpark@otis.co.kr