


MANUAL PENGOPERASIAN KEY PAD UNTUK LIFT YUNG TAY

Pasang dengan benar Socket Kabel (warna hitam) yang ada pada Key Pad pada PCB MPUGB pada tempat yang sudah disediakan, dan pasang Socket Kabel warna hijau (4 wires) pada Key Pad. Disarankan sebelum memasang socket kabel tersebut, MCCB Lift tidak diaktifkan terlebih dahulu.

Berikut ini adalah cara-cara penggunaan Key Pad

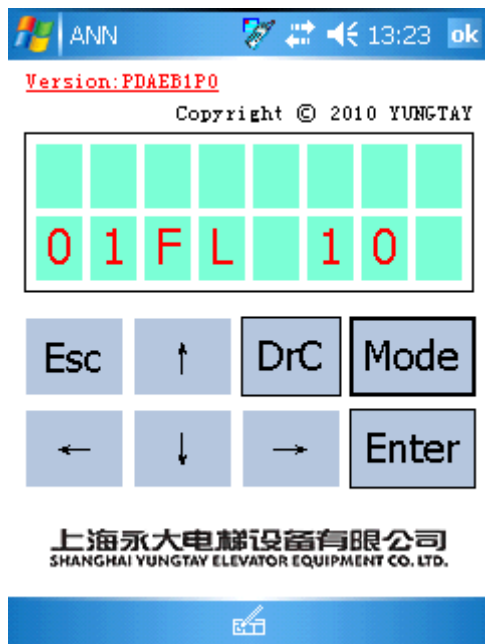

Mode Tombol ini digunakan untuk mengawali membaca program

Enter Tombol ini digunakan untuk mengakhiri membaca program, misalkan untuk membaca Trouble History, maka tekan tombol **Mode** maka akan muncul angka **02**, kemudian tekan **Enter**

Esc Tombol ini digunakan untuk kembali ke menu awal

DrC Tombol ini digunakan untuk tidak mengaktifkan Motor Pintu (Door Motor). Apabila Tombol ini ditekan, maka Lift beroperasi tanpa membuka atau menutup pintu



Tombol ini digunakan untuk menambahkan bilangan . Misalkan jika hendak membuka program untuk memanggil lift agar ke lantai teratas (Mode 07 Enter) maka harus tekan Tombol **Mode**, maka akan muncul angka **02**, maka untuk mengganti menjadi **07**, setelah cursor dipindahkan ke angka **2**, tekan Tombol  untuk menambahkan angka



Penggunaan Tombol ini adalah kebalikan dari penggunaan Tombol



Tombol ini digunakan untuk memindahkan cursor yang flicker (berkedip) dari kiri ke kanan. Misalkan jika membuka program dengan menekan Tombol **Mode**, maka angka yang muncul adalah **02**, dimana angka **0** flicker (berkedip), untuk memindahkan flikkernya maka gunakan Tombol , sehingga angka **2** menjadi flicker dan angka tersebut bisa dirubah (ditambahkan atau dikurangi)



Penggunaan Tombol ini adalah kebalikan dari penggunaan Tombol



01 FL Artinya Lift tersebut berada di lantai 1 atau lantai paling bawah

ANGKA 10 ATAU ANGKA LAINNYA setelah 01 FL, adalah angka error yang terjadi pada Lift tersebut

HURUF CL berarti Pintu Lift tersebut sedang tertutup

HURUF OP berarti Pintu Lift tersebut sedang terbuka

MODE OPERATION OF YUNG TAY ELEVATOR

MODE NUMERATION	Enter (MODE·Enter)	Esc	REMARK
0	Reset to the normal status		
1	Travel time display (hr)		
2	Read out the barrier resume		
3	The machine room is in low speed operation		
4	Car calling operation at the base floor		
5	Car calling operation in the middle floor		
6	Car calling operation of any floor		
7	Car calling operation in the top floor		
11	Step height determination operation		
13	WD 110% CUT		
14	SDS experiment	One travel auto RESET	
15	Motor current display (displayed value X10=actual current value)		Current at the half way point of the time (decimal)
16	Zone indication for the halfway of the travel		
17	Micro level operation function CUT	One travel auto RESET	Valid at the time
21	Landing operation of the memory calling		
22	Read out the information of main MICON		Only for reading
24	Rewriting of the travel time		
25	Travel times of the elevator		Decimal
26	Rewriting of the travel times		
28	Indication of car loading		Decimal
33	Read-out or alternation from MICON data		
34	Setting of 0% of the loading		Load address=CD3D, 0% setting Turn E.STOP DIP SW1 to ON
35	Setting of 100% loading		Load address=CD3D, 100% setting
36	Overload setting		
44	Burn in main MICON E ² PROM		
45	Burn in main MICON E ² PROM		
46	Read out information of main MICON E ² PROM		
47	Read out information of main MICON E ² PROM		
50	Permission code of ACD operation way		03: STOP 04: Maintenance 06: Earthquake 08: Rescue 0A: Step height determination 1A: Fire control operation 1B: Fire control 1C: Temperature abnormality of machine room 1F: Self-control 22: Stop 24: Spot inspection (exclusive) 25: Manual 27: Auto (normal)

53	Adjustment to the landing level of UP operation		Inductor plate length (UP)
54	Adjustment to the landing level of DOWN operation		Inductor plate length (DN)
60	Time display		
61	Date display		
62	Setting of time		
63	Setting of date		
65		Elimination of the travel time	
66		Elimination of the travel times	
67	Digital Floor display		Hexadecimal
77		Elimination of the step height TABLE	
78			
E3	Compulsory signal inputted of ANN low speed operation		Code shall be interpreted before operation
EE	Modification to the parameter of the main MICON		
F0	Burn in entrance EEPROM data of IND		Such as barrier telephone number

TROUBLE CODE OF YUNGTAI ELEVATOR

No.	Content	Rank Class	Hold
TCD 10	50B ON Failure	A1	?
TCD 11	10T ON Failure	A1	?
TCD 12	15B ON Failure	A1	?
TCD 13	SDC abnormal <u>Abnormal</u> Running	A2	
TCD 14	System Halted From MICON <u>MICON</u>	A2	
TCD 15	SDA halted	A2	
TCD 16	Abnormal principal and subordinate parallel communication	A2	
TCD 17	Abnormal SDA, SDC serial communication	A3	
TCD 18	50BC Failure or E.Stop is cut off	A3	
TCD 19	99G Failure	A3	
TCD 20	Double Input <u>Input</u> BUFFERFailure	A1	?
TCD 21	Overload current found <u>found</u> (IPM FAULT)	A1	?
TCD 22	Overload voltage found	A1	
TCD 23	SDC Safeguard switch abnormal	A2	?
TCD 24	Aided MICON <u>MICON</u> DRAM ERROR	A2	?
TCD 25	Aided MICON <u>MICON</u> EEPROM ERROR	A2	?
TCD 26	DSP SUM ERROR	A1	?
TCD 27	Frequency Failure Found	A1	?
TCD 28	P15V Voltage Abnormal	A2	?
TCD 29	Main MICON <u>MICON</u> EEPROM ERROR	A1	?
TCD 30	Main MICON <u>MICON</u> NVSRAM ERROR	A2	?
TCD 31	DSP DRAM ERROR	A2	?
TCD 32	Restraining Circuit Abnormal	A1	
TCD 33	Abnormal BDCC voltage	A2	?
TCD 34	Low voltage Found	A2	
TCD 35	40G, 40D ON Failure	A3	?

No.	Content Description	Rank Class	Hold
TCD 36	SDC Operation Mode Error	C1	
TCD 37	Reverse Running Found	A2	?
TCD 38	DSP Halt Found	A2	
TCD 39	100R ON/OFFFailure	A1	?
TCD 40	ROTARY ENCODERFailure	A2	?
TCD 41	Low Speed OVER SPEED	A2	?
TCD 42	50B OFFFailure	A1	
TCD 43	SPD Circuite CircuitFailure	A1	?
TCD 44	48V Powersupply of SDCLAN Board Abnormal	C1	
	OPBLAN-I24B OR I48AFailure	C1	
	SDCLAN-I24B OR I48AFailure	C1	
	Communication between SDCLAN and OPBLAN Broken	C1	
TCD 45	BKSW Action Check	A1	?
TCD 46	Open Lock over 3 times	A2	?
TCD 47	Load Circuit Error Found	C1	
TCD 50	High Speed OVER SPEED	A2	?
TCD 51	Speed Deviation Found	A2	?
TCD 52	10T OFFFailure	A1	
TCD 53	15B OFFFailure	A1	
TCD 54	REFailure(U, V , W , <u>V</u> , <u>W</u> phase angle abnormal)	A1	?
TCD 55	Large HCT Off Set Deviation	A1	?
TCD 57	Mg.B two-phrased power supply abnormal	A1	?
TCD 58	DLAN Halt	C1	
TCD 59	Building Height>9m , No Conducting Board Found	A2	?
TCD 60	Step Height TABLE SUM ERROR	B1	
TCD 61			
TCD 62	Positions of same time abnormal	B2	
TCD 63	SDS ONFailure	B2	
TCD 64	SDS Speed Abnormal Found	A1	

No	Content Description	Rank Class	Hold
TCD 65	40D Abnormal OFF During Running	E	
TCD 66	40G Abnormal OFF During Running	E	
TCD 67	Close Door Failure in Flat Layer <u>Layer</u> (40D or 40G NOT on)	E	
TCD 68	SDA halt over 8 times	A2	?
TCD 69	SDA RAM ERROR	A2	?
TCD 70	Shared RAM ERROR	A2	?
TCD 71	Main MICON <u>MICON</u> Halt	A2	?
TCD 72	Aided MICON <u>MICON</u> Halt over 8 times	A2	?
TCD 73	FML POSI OPENFailure	B1	?
TCD 74	Frequency Save-out Running	A2	?
TCD 75	POWER MODULE Over Heat	B2	
TCD 76	Abnormal Micro-speed Running time	C1	
TCD 77	Door Motor Over heat	C1	
TCD 78	Door Machine Abnormal	A2	
TCD 81	Photoelectricity POSI OPENFailure	E	
TCD 82	Photoelectricity POSI Short-circuit Failure	E	
TCD 84	OLS ONFailure	C2	
TCD 85	CLS ONFailure	C2	
TCD 86	Abnormal Open-door action Found	E	
TCD 87	Abnormal Close-door action Found	C2	
TCD 88	Lost power found	E	
TCD 91	DZ POSI OPENFailure(Qianniao ,Through)	A1	
TCD 92	DZ POSI Short Failure(Qianniao ,Through)	A1	
TCD 95	Final Failure Level		
TCD 96	Final Failure Elevator Position		
TCD 97	Elevator Failure Final Speed		
TCD 98	Save-out running times		
TCD 99	Final Main TCD		

SYMBOL OF YUNGTAI ELEVATOR

SYMBOL	REMARK	SYMBOL	REMARK	SYMBOL	REMARK
MCTT	Contactora for Inverter	PITS	Safety pit switch	SDCGB	Input & Output PCB on Cage
BCTT	Contactora for Brake	GWS		OPBLA N	OPB Pcb
HDRR	Hall Door Switch relay	SDSD1	Slow Down Switch Down 1	CLS	Close Limit Switch
CDRR	Cage Door Switch relay	SDSU1	Slow Down Switch Up 1	OLS	Open Limit switch
HCDR	Cage & Hall Door Switch relay	SDSD2	Slow Down Switch Down 2	SHOE	Safety shoe Switch
SFCR	Relay for Safety Switch	SDSU2	Slow Down Switch Up 2	DLS	Down Limit switch
RLSR		DFLS	Final Limit Switch Down	ULS	Up Limit Switch
RLCR		UFLS	Final Limit Switch Up	DZ	Positector for Front Door
RLAR	Start Door Motor relay	HCT1	Over current detector 1	DZR	Positector for rear Door
WSCCTT		HCT2	Over current detector 2		
SCS	Safety Chatch Switch	BPS			
MHS	Man Hole Switch	R.E	Rotary Encoder		
GRS	Governor switch	DR MOTOR	Door Motor		
RLD	Micro Levelling Down	CJBOX	Cage Junction Box		
RLU	Micro Levelling Up	CHOKE			
SSRT	switch for back up Safety shoe Switch	EMI			
PH1		CNV	Converter		
PH2		AVR	Automatic Voltage regulator		
LEV	Level Positector	BZ	Buzzer		
RFS	Resistant for Inverter	ECVT			
LD_%	Weighting Device	TR1	Transformer 1		
HIB2		PL	Pilot Lamp		
HIA4		FAN	Fan		
MG.BR	Magnetic Brake	FFB	Main Circuit Braker		
DGONG	Down Gong	FILC	Filter Capasitor		
UGONG	Up Gong	RR	regenerative Resistor		
CNT	Running Time Counter	FILR	Filter resistor		
FTHS		BSR			
LVDT1	Elektrik Weighting Device 1	DMC	Door Machine		
LVDT2	Elektrik Weighting Device 2	FIOGB	Input & Output Buffer PCB		
MGB.C	Magnetic Brake Capasitor	HLAN	Hall IndicaTor PCB		
HDRS	Hall Door Switch	IGD	Inverter PCB		
CDRS	Cage Door Switch	SBDC	Inverter PCB		