
3 Wired Controller & Parameters Settings

3.1 Wired Controller (LCD)

3.1.1 Interface

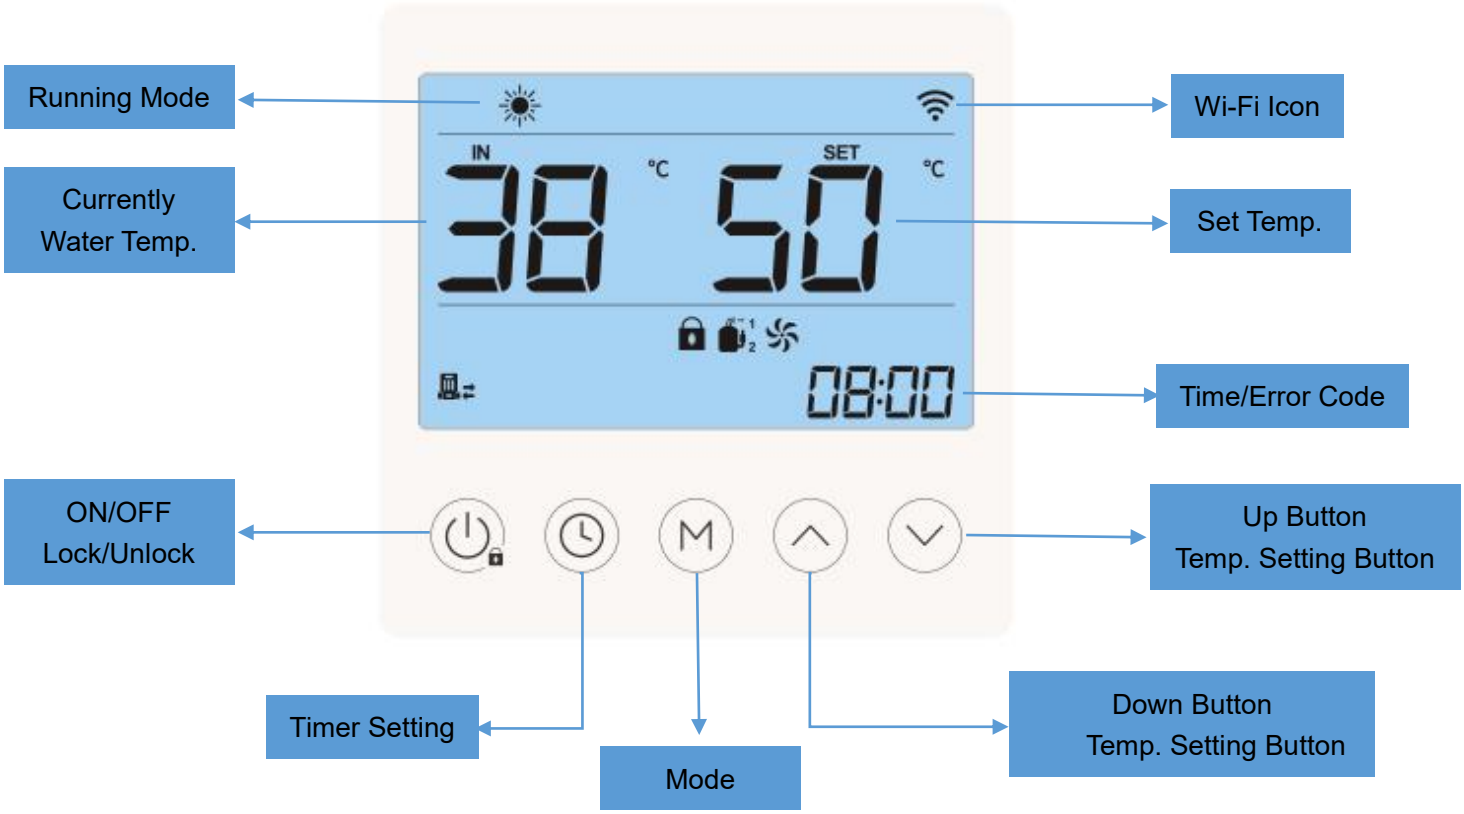

3.1.2 Mode Setting

When the wired controller appears “ ”, long press “ ” to unlock, at this time, the wired controller can be operated.

3.1.2.1 Silent Mode

With the wired controller unlocked, press “ ” and “ ” at the same time until the “ ” icon appears on the wired controller and the unit enters the silent mode.

3.1.2.2 Sterilization Mode

ON:

With the wired controller in the unlocked state, press and hold “ ” and “ ” and “ ” at

the same time for 5S until the wired controller appears the “  “ icon, the unit enters the sterilization mode.

OFF:

With the wired controller in the unlocked state, press and hold “  ” and “  “ and “  “ simultaneously for 5S until the wire controller “  ” icon disappears, the unit enters off sterilization mode.

3.1.2.3 Quick Heating Mode



When the unit is running and the wire controller is unlocked, press “  “ and “  “ at the same time, the “  “ icon appears on the line controller and it enters the fast-heating mode.

3.1.3 Parameter Setting

Parameter setting method:

1. When the unit is in the unlocked state of the wire controller, long press “  ” for 5S to enter the parameter setting interface.


2. After entering the setting interface, long press “  ” to switch different types of parameters.

3. In the parameter setting interface, press “  “ or “  ” to switch the parameter number, at this time, the parameter icon is flashing, press “  “ 1S, the parameter value in the lower right corner is flashing, press “  “or”  ”for value modification, press “  “1S, confirm the value.

4. After the modification is completed, no operation within 5S or press “  “to save the value and return to the main interface

3.1.3.1 Sterilization Setting

Enter the parameter setting interface, switch to L12 parameter “  “, modify the value to enable the sterilization function, of which L13-L16 are the setting parameters of the sterilization function, refer to section 2.7.1.3 for parameter setting.

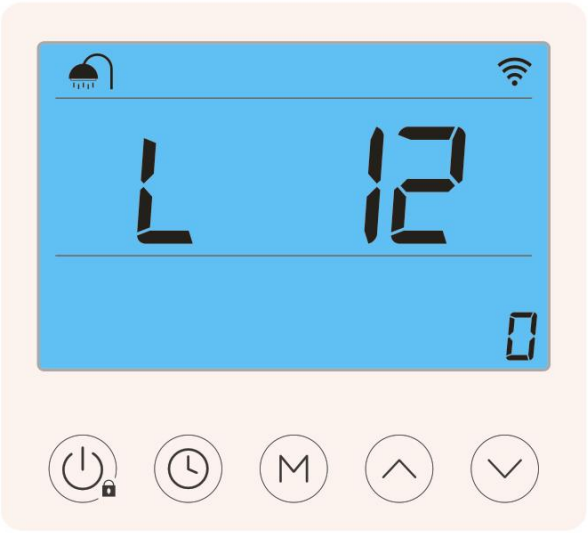

3.1.3.2 DHW Return Water Setting

Enter the parameter setting interface, switch to the “L” parameter, modify the values of “L22-L26” to set the water return function, and refer to section 2.7.1.3 for parameter setting.

3.1.3.3 Daul Temperature Zone Setting

Enter the parameter setting interface, switch to the P257 parameter, and refer to section 2.7.6 for parameter setting.

3.1.3.4 SG Ready Setting


Enter the parameter setting interface, switch to the P255 parameter, and refer to section 2.7.8 for parameter setting.

3.1.3.5 Cascade Setting

Enter the parameter setting interface, switch to the P164 parameter, and refer to section 2.7.7 for parameter setting.


3.1.4 Running Status Query

1. Long press “  ”5S to enter the running parameter query page.

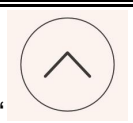2. Display the parameters and corresponding values, press “  “ or “  “ to query the values of different parameters.

Running status query in cascade mode:


1. Press and hold “  “ for 5 seconds to enter the running status query page, and then enter the host status parameter interface “  “

2. Press “  “ or “  ” to query the values of different parameters of the master unit.

3. Press and hold “  ” for 1S to switch the parameter of different salve unit “  ”

4.Press “  ” or “  ” to check different parameter of the salve unit

5. To back to the master unit status query interface, press “  ” for 1S and return

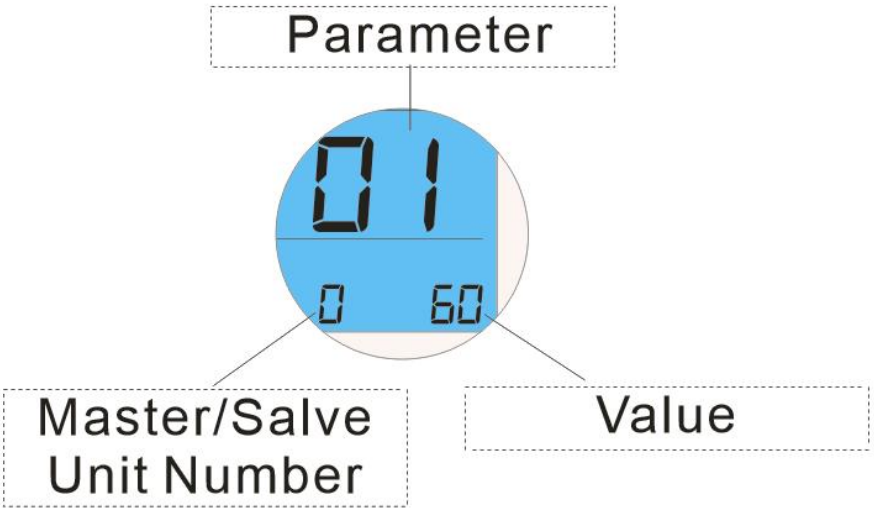


3.1.5 Factory Reset

1.In standby mode, press “  “ for 3S, enters the maintenance mode interface;



2. In the maintenance mode interface, press “  ” for 5S.

3.The wired controller displays the following page, indicating that the factory settings have been restored successfully. It will return to the main interface after 3 seconds.

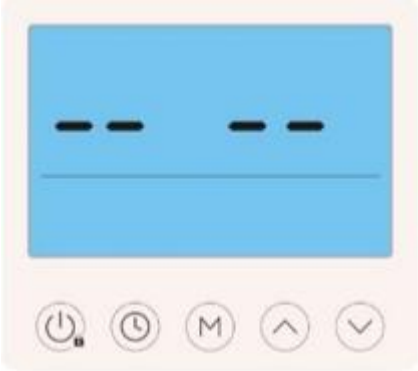

3.1.6 APP & Unit Binding

The heat pump supports remote control by mobile phone. You need to download the APP in the app store and register an account to perform network distribution operations. The heat pump supports smart distribution network and AP distribution network. Under normal circumstances, it is recommended to use smart distribution network connection.

For more APP operations, please refer to “Operation Manual.”

0. Search “Smart Life” in the App Store or scan the following QR code with your mobile phone to download.

4.2 Error Code

4.2.1 Motherboard

Error Code	Error Description	Troubleshooting
E01	Wrong Phase	Power Supply Connect Wrong Phase
E02	Missing Phase	Power Supply Missing Phase
E03	Water Flow Failure	1.Check whether the circulating water pump is normal and whether the water system is blocked.
		2.Check whether the water flow switch is normal and whether the installation direction is correct.
		3.Check whether the wiring of the water flow switch is correct or not.
		4.Check whether the water pump head meets the actual requirements
		5.Check whether the water pump is reversed and installed in the wrong direction.
E04	Abnormal Communication between Motherboard and Remote Module (Reserved)	Check the communication connection between the motherboard and the remote module
E05	High Pressure Switch Failure	1.Check pressure switch for damage, wiring error
		2.Check if there is too much refrigerant in the system.
		3.Check whether the fan is working properly and whether the water flow of the unit is normal.
		4.Check whether there is air or blockage in the fluorine system.
		5.Check whether the water-side heat exchanger is seriously caked with whitewash.
E06	Low Pressure Switch Failure	1.Check pressure switch for damage, wiring error
		2.Check if there is not enough refrigerant in the system.
		3.Check whether the fan is working properly
		4.Check whether there is air or blockage in the fluorine system.
E09	Wire Controller Communication Failure	Check the communication connection between the wire controller and the main board
E10	Reserve	Reserve
E11	Out of Use Time	The free trial period has expired, enter the boot password

Error Code	Error Description	Troubleshooting
E12	Exhaust Temp. Too High	1.Fluorine system clogging
		2.Lack of refrigerant in the fluorine system or bad sensor
E14	Water Tank Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E15	Water Inlet Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E16	Coil Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E18	Exhaust Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E20	Indoor Ambient Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E21	Outdoor Ambient Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E22	DHW Return Water Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E23	Water Outlet Temp. Too Low in Cooling Mode	1.Check whether the water flow is too low or no water flow
		2.Check if the water outlet sensor is damaged
		3.Fluorine system clogging
E24	Antifreeze Temp. Sensor Failure (Fluorine Circuit)	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E25	Reserve	Reserve
E26	Antifreeze Temp. Sensor Failure (Water Circuit)	1. The sensor wire is loose or damaged
		2. Sensor is damaged

Error Code	Error Description	Troubleshooting
		3. The motherboard port is damaged
E27	Water Outlet Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E29	Suction Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E30	Suction Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E31	Water Pressure Failure	1.Water pressure switch wiring error
		2.Water pressure switch failure
E32	Water Outlet Temp. Sensor T15 Failure	1.Water flow is not enough
		2.Sensor failure
E33	High Pressure Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E34	Low Pressure Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E37	Large Temp. Difference between Water Inlet and Outlet	1.The water inlet or outlet sensor is damaged
		2.Water inlet or outlet sensor not placed or in the wrong position
		3.Water flow is not enough
E38	Fan Failure	Fan driver board or motor failure
E42	Cooling Coil Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E44	Ambient Temp. Too Low	Normal protection
E47	Economizer Inlet Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
E48	Economizer Inlet Temp. Sensor	1. The sensor wire is loose or damaged

Error Code	Error Description	Troubleshooting
	Failure	2. Sensor is damaged
		3. The motherboard port is damaged
E49	Economizer Outlet Temp. Sensor Failure	Same as E47
E51	High Pressure Too High	Same as E05
E52	Low Pressure Too Low	Same as E06
E55	Expansion Board Communication Failure	1.Poor contact or broken signal wire
		2.Expansion board damage
		3.Motherboard damage
E80	Power Supply Error	Single-phase power supply unit detects a three-phase electrical signal
E88	Inverter Drive Module Protection	Compressor or compressor driver board is damaged, specific faults see 4.2.2
E94	Built-in pump over/under voltage	1. Input power supply voltage＜165V
		2. Input power supply voltage＞265V
		3. Electronic components on the pump drive board are damaged or damp
		4. Water pump failure
E96	Compressor Drive Board Communication Failure	1.Poor contact or broken signal wire
		2.Electronic components on the motherboard are damaged or damp.
		3.Compressor drive board on the electronic components are damaged or moisture
		4.Compressor drive board power supply is not powered on
E98/E99	Fan Board Communication Failure	1.Poor contact or broken signal wire
		2.Electronic components on the motherboard are damaged or damp.
		3.Fan drive board on the electronic components are damaged or moisture
		4.Fan drive board power supply is not powered on
EA0 (100)		
EA1 (101)	Cascade Model Mismatch	Different series of units are not allowed to be cascaded
EA2 (102)	Solar Water Heater Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged

Error Code	Error Description	Troubleshooting
		3. The motherboard port is damaged
EA3 (102)	Zone 2 Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
EA4 (104)	Buffer Tank Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
EA5 (105)	Total Water Outlet Temp. Sensor Failure	1. The sensor wire is loose or damaged
		2. Sensor is damaged
		3. The motherboard port is damaged
EB6 (116)	Zone1 Temp. Sensor Failure	
EB7 (117)	Anti-freeze Switch 1 Failure	
EB (118)	Anti-freeze Switch 2 Failure	
EB9 (119)	Heat Recovery Rear Temp. Sensor Failure	
EC0 (120)	Low Water Flow Protection	
EC1 (121)	Refrigerant Sensor Failure	
EC2 (122)	Refrigerant concentration exceeds the limit	
EC3 (123)	Refrigerant Sensor Life Expiry	

4.2.2 Driver Board (Compressor)

Compressor Drive Error Description Table		
E88	P1	IPM Module Overheat and Shutdown
	P2	Compressor Driver Failure
	P3	Compressor Overcurrent
	P4	Input Voltage Missing Phase
	P5	IPM Supply Voltage Failure
	P6	Power Component Overheating and Shutdown
	P7	Pre-charge Circuit Voltage Failure
	P8	DC Bus Overvoltage
	P9	DC Bus Undervoltage
	P10	AC Input Undervoltage
	P11	AC Input Overvoltage

Compressor Drive Error Description Table		
	P12	Input Voltage Sampling Failure
	P13	DSP and PFC Communication Failure
	P14	Board Radiator Temp. Sensor Failure
	P15	DSP and Communicate Board Communication Failure
	P16	Communication Failure with Motherboard
	P17	Compressor Overcurrent Alarm
	P18	Compressor Weak Magnetic Protection Alarm
	P19	IPM Overheat Alarm
	P20	PFC Overheat Alarm
	P21	AC Input Overcurrent Alarm
	P22	EEPROM Error Alarm
	P23	N/A
	P24	EEPROM Refresh Complete
	P25	Temperature Sensing Failure Limit
	P26	AC Undervoltage Frequency Limit Protection Alarm；
	P27	N/A
	P28	N/A
	P29	N/A
	P30	N/A
	P31	N/A
	P32	N/A
	P33	IPM Module Overheat and Shutdown
	P34	Compressor Missing Phase
	P35	Compressor Overload
	P36	Input Current Sampling Failure
	P37	IPM Supply Voltage Failure
	P38	Pre-charge Circuit Voltage Failure
	P39	EEPROM Failure
	P40	AC Input Overvoltage Failure
	P41	Microelectronics Failure
	P42	Compressor Type Code Failure
	P43	Current Sampling Signal Overcurrent
Wire controller blinks to cycle through E88 and above codes		