

Operation Instruction

Control Panel

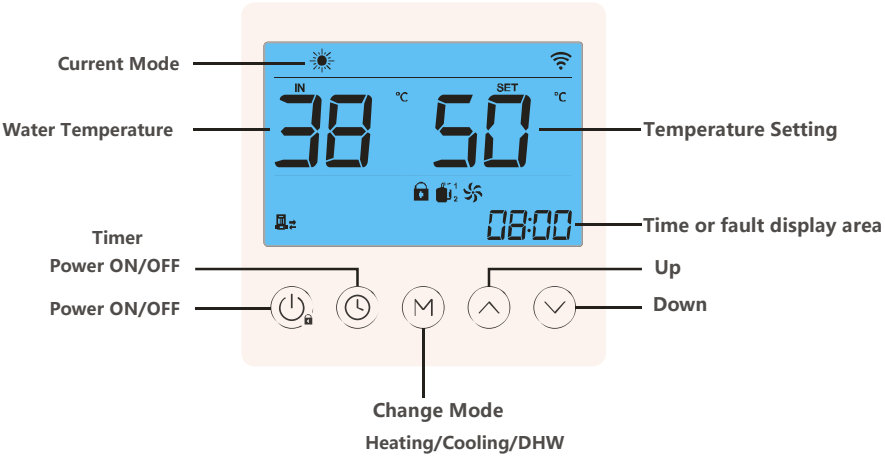

1. Operation Instruction

Power On/Off

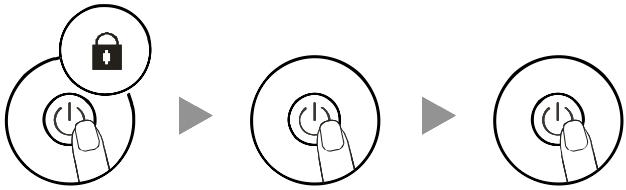


When the lock symbol is displayed, press and hold 5s to unlock the screen

Long press 2s to turn off the heat pump


Long press 2s to turn on the heat pump

Mode Setting

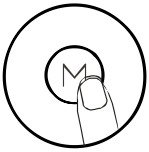

Press M to switch mode Cooling/Heating/DHW

Temperature Setting

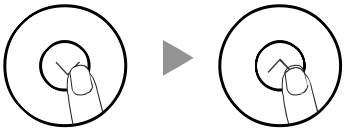


Press the up button
to raise the temperature

Press the down button
to lower the temperature

If there is no operation or press the on/off button within 5 seconds, the setting temperature will be saved automatically and return to the homepage

Time Setting



Press the clock button for 1s to enter the current clock setting

Press the clock key again, the hour area flashes

Press the up and down keys to adjust the value

Press the clock button again to enter the minute clock setting




Press the clock button again, the minute area flashes

Press the up and down keys to adjust the value

If there is no operation or press the on/off button within 5 seconds, the setting temperature will be saved automatically and return to the homepage

Scheduled Power On




Press and hold the clock key for 5s to enter the timer boot time setting

Press the clock key again, the hour area flashes

Press the up and down keys to adjust the value

Press the clock button again to enter the minute clock setting




Press the clock button again, the minute area flashes

Press the up and down keys to adjust the value

If there is no operation or press the on/off button within 5 seconds, the setting temperature will be saved automatically and return to the homepage.
Three timings can be set.

Temperature Setting

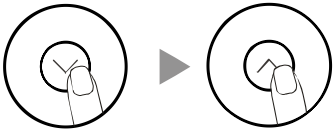

Press the up button
To increase the setting temperature

Press the down button to lower the set temperature

If there is no operation or press the on/off button within 5 seconds, the setting temperature will be saved automatically and return to the homepage

Status Search




Long press the down button for 5 s to enter the status search page

Enter the status search page

Adjust the status parameter serial number in combination with the up and down keys


ECO Mode

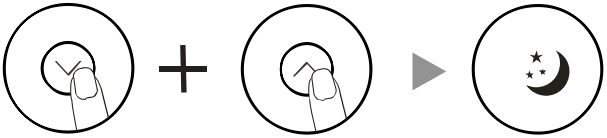

Unlock the case while holding down the up button + down button to enter ECO energy-saving mode

ECO symbol lit

Pump forced evacuation mode



Press and hold the on/off button + up button at the same time in the unlocked state to enter the intelligent distribution mode

When the water pump symbol flashes enter forced emptying mode


2. Wi-Fi Setting

2.1 Software Download and Account Registration

2.1.1 Search for Smart Life in the app store on the mobile phone, and download and install it.
2.1.2 Users who do not have an account can apply by clicking the "Create New User" function on the login page.
2.1.3 Create a new account → Enter your cell phone number or email address, → get the verification code → to enter the verification code → set the password → complete, in the following order.
2.1.4 After registration is complete, you need to create a family: create a family, → set the family name → set the location → to add a room → ultimately, in the following order.
2.1.5 Click on the device name to enter the main interface of the device
1) Family name, which allows access to family management.
2) Adding devices.
3) Added room; click on it to view the devices added to that room.
4) Room management

2.2 Connection (Intelligent Mode)

Manual Intelligent Distribution Network

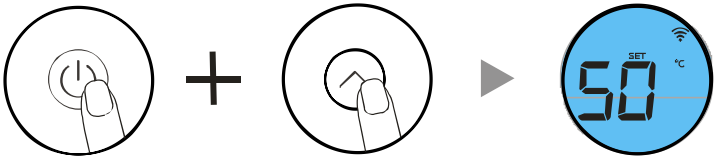

In the unlocked state, press and hold the on/off button + up button at the same time to enter the intelligent distribution mode

Wifi signal flashes
Enter distribution network status


Step 1
Open the "Smart Life" APP, login to the main interface, click the "lift" icon in the upper right corner to add devices or "Add Device" in the interface, enter the device type selection, and select "Smart Heat Pump (Wi-Fi)" in the "Main Appliance" device, enter the add device interface.

Step 2
Select Smart Heat Pump (Wi-Fi) and enter into the Wi-Fi connection interface, enter the Wi-Fi password that the phone has been connected to (must be the same as the Wi-Fi connection to the phone), click Next, and confirm that the line controller has selected the intelligent distribution mode, " " icon is fast-flashing, click "Confirm that the indicator is flashing, then start adding devices directly, click the "lift" icon to add devices.
Note: The icon flashes slowly when the Wi-Fi module is connected to the Wi-Fi hotspot.

Step 3
The system prompts "Add Device Successfully" and then the network is successfully distributed. Click on the icon in this interface to change the device name, select the device installation location (living room, main bedroom), and click Finish to enter the main interface of device operation.

2.3 Connection (AP Mode)

Manual AP Distribution Network

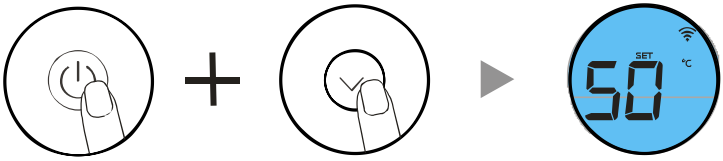

In the unlocked state, press and hold the on/off button + down button at the same time to enter the intelligent distribution mode

Wifi signal flashes
Enter distribution network status

Step 1 and **Step 2**: Be consistent with the Intelligent Mode

Step 3

Select innovative heat pump (Wi-Fi) after entering into the Wi-Fi connection interface, enter the phone has been connected to the (Wi-Fi) password (must be consistent with the Wi-Fi connected to the phone), click next, confirm that the line controller has selected AP distribution mode, an icon in the slow flashing state" ", click "Confirm that the indicator is in slow flashing," then connect the phone Wi-Fi to the device hotspot (as shown below), confirm that the connection hotspot is correct to continue to the next step then directly begin to connect the device interface, find the device → registers to the cloud → device initialization is complete.

Note: When the wire Wi-Fi module is connected to the Wi-Fi hotspot, the icon " "slows flashing.

Step 4 The same as the Intelligent Mode

Note: If the connection fails, manually enter the AP network configuration mode again and repeat the preceding steps to connect again.

2.4 Software Function Operation

4.4.1 A device is automatically bound to a virtual gateway. The "My Home Heat Pump" (device name, which can be changed) operation page is displayed.

Buy a ticket to enter the device operation page of "My Home Heat Pump" by clicking on "My Home Heat Pump" in the "All Devices" screen of smart Life.

4.4.2 Modify device name and modify device location information Click "Name" to rename the device name and "Location" to alter the device location.

2.5 Device Sharing

Share bound devices in the following sequence:

1) After successful sharing, the list is added to display the shared person.

2) To delete the shared user, long-press the selected user, and the deletion interface will pop up, click "Delete"

3) User interface operations are as follows:

4) Enter the account of the shared user and click "Finish" to display the newly shared history in the list of successful sharing

5) The interface of the shared person is as follows. The shared device received is displayed. Click in to operate and control the device.

Operation Parameter Query

Query Code	Description	Range
1	Compressor Running Frequency	0 ~ 99 Hz
2	Fan Motor Running Frequency	0 ~ 99 Hz
3	Main EEV Opening	0 ~ 480 P
4	EVI EEV Opening	0 ~ 480 P
5	AC Input Voltage	0 ~ 500 V
6	AC Input Current	0 ~ 50 A
7	Compressor Phase Current	0 ~ 50 A
8	Compressor IPM Mould Temperature	-50 ~ 200 ℃
9	Condensing Temperature	-50 ~ 200 ℃
10	Vaporization Temperature	-50 ~ 200 ℃
11	Outdoor Ambient Temperature	-50 ~ 200 ℃
12	Outdoor Coil Temperature	-50 ~ 200 ℃
13	Indoor Coil Temperature	-50 ~ 200 ℃
14	Gas Suction Temperature	-50 ~ 200 ℃
15	Gas Exhaust Temperature	-50 ~ 200 ℃
16	Water Inlet Temperature	-50 ~ 200 ℃
17	Water Outlet Temperature	-50 ~ 200 ℃
18	Economizer Inlet Temperature	-50 ~ 200 ℃
19	Economizer Outlet Temperature	-50 ~ 200 ℃
20	Dialer Value	0 ~ 15

Display Fault: When the machine has a fault, the fault is flashing in the timing area and the fault code is displayed cyclically; when the fault is eliminated, the standard display is restored.

Trouble Analysis

Error code	Fault Description	Failure Causes
E01	Wrong-Phase Protection	Power supply phase sequence error
E02	Power Supply Lack Of Phase	The power supply is out of phase
E03	Outside Water Flow Switch Fault	1. Circulating pump failed, or water system blocked 2. Water flow switch failed, or opposite installed direction 3. The lift of the circulating pump is not enough 4. Circulating pump has opposite installed direction
E04	Abnormal Communication Between The Main Control Board And Remote Module	Check the communication connection
E05	High-Voltage Switch One Fault	1. High-voltage switch failed 2. Excessive refrigerant 3. Fan doesn't work typically, or water circulated abnormally 4. Air or other objects mixed into the refrigeration system 5. Too much scale in the water heat exchanger
E06	Low-Voltage Switch One Fault	1. Low-voltage switch fault 2. Lack of refrigerant 3. Fan doesn't work normally 4. Block exists in refrigeration system
E07	High-Voltage Switch Two Fault	Same as E05
E08	Low-Voltage Switch Two Fault	Same as E06
E10	Indoor Side Water Flow Failure	Same as E03
E11	Limited Time Protection	Enter the power-on password
E12	Exhaust Gas Temperature One Too High Fault	Lack of refrigerant in the fluorine circuit system or sensor damage
E13	Exhaust Gas Temperature Two Too High Fault	Lack of refrigerant in the fluorine circuit system or sensor damage
E14	Hot Water Tank Temperature Failure	Damaged motherboard or sensor
E15	Water Inlet Temperature Sensor Failure	Damaged motherboard or sensor
E16	Coil Sensor One Failure	Damaged motherboard or sensor
E17	Coil Sensor Two Failure	Damaged motherboard or sensor
E18	Exhaust Gas Sensor One Fault	Damaged motherboard or sensor
E19	Exhaust Gas Sensor Two Fault	Damaged motherboard or sensor
E20	Indoor Temperature Sensor Failure	Damaged motherboard or sensor
E21	Environmental Sensor Failure	Damaged motherboard or sensor
E22	User Return Water Sensor Failure	Damaged motherboard or sensor
E23	Cooling Subcooling Protection	Normal anti-freeze protection
E24	Board Change Out Temperature Fault	Damaged motherboard or sensor
E25	Water Level Switch Malfunction	Damage to the mainboard or water

		level sensor
E26	Anti-Freeze Sensor Malfunction	Damaged motherboard or sensor
E27	Water Outlet Sensor Failure	Damaged motherboard or sensor
E28	Reservation	Reservation
E29	Return Air Sensor One Fault	Damage to the mainboard or water level sensor
E30	Return Air Sensor Two Fault	Damage to the mainboard or water level sensor
E31	Water Pressure Switch Failure	Water pressure switch failure
E32	Excessive Water Temperature Protection	Insufficient water flow or a damaged sensor
E33	High Pressure One Sensor Fault	Damaged motherboard or sensor
E34	Low Pressure One Sensor Fault	Damaged motherboard or sensor
E35	Reservation	Reservation
E36	Reservation	Reservation
E37	The Excessive Temperature Difference Between Inlet And Outlet Water Protection	Insufficient water flow
E38	DC Fan One Failure	Fan drive board or motor damage
E39	DC Fan Two Failure	Fan drive board or motor damage
E40	DC Fan Three Failure	Fan drive board or motor damage
E41	DC Fan Four Failure	Fan drive board or motor damage
E42	Cooling Coil Sensor One Fault	Damaged motherboard or sensor
E43	Cooling Coil Sensor Two Fault	Damaged motherboard or sensor
E44	Low Ambient Temperature Protection	It is a standard protection
E45	High Voltage Two Sensor Failure	Damaged motherboard or sensor
E46	Low Voltage Two Sensor Failure	Damaged motherboard or sensor
E47	Economizer Inlet Sensor One Failure	Damaged motherboard or sensor
E48	Economizer Inlet Sensor Two Failure	Damaged motherboard or sensor
E49	Economizer Outlet Sensor One Failure	Damaged motherboard or sensor
E50	Economizer Outlet Sensor Two Failure	Damaged motherboard or sensor
E51	High Voltage One Overvoltage Protection	Same as E05
E52	Low Voltage One Undervoltage Protection	Same as E06
E53	High Voltage Two Overvoltage Protection	Same as E05
E54	High Voltage Two Undervoltage Protection	Same as E06
E55	Expansion Board Communication Exception	Poor or broken signal cable contact
E80	Power Supply Error	Single-phase power unit detects a three-phase electrical signal.
E88	Inverter Module 1 Protection	Compressor or compressor driver board damaged
E89	Inverter Module 2 Protection	Compressor or compressor driver board damaged
E94	Water Pump Feedback Failure	Damaged DC pump or poor signal line contact
E96	Abnormal Communication between	Poor or broken signal cable contact

	Compressor One Driver and Main Control Board	
E97	Abnormal Communication between Compressor Two Driver and Main Control Board	Poor or broken signal cable contact
E98	Abnormal Communication between Fan Motor One Driver and Main Control Board	Poor or broken signal cable contact
E99	Abnormal Communication between Fan Motor Two Driver and Main Control Board	Poor or broken signal cable contact

Fault Protection Instructions

1. The machine stops running when a fault is detected;
2. When the fault is removed, the compressor is shut down for three minutes before the machine can be put back into operation;
3. If there are three consecutive low-pressure faults, high-pressure fault, over the current spot, and gas exhaust temperature too high within 30 minutes, the machine will immediately stop running. After the fault is rectified, turn the power on again, start the controller, and the device can be put into operation.
4. If the machine stops running due to the inlet water temperature sensor or the coil temperature sensor fault due to compressor protection, the device will have to be back into operation 3mins later after the spot is removed. If the ambient temperature sensor fails, the machine continues to run.

Maintenance Instructions

1. The machine is equipped with an inspection needle valve on the suction and exhaust pipes. The maintenance personnel can connect the pressure gauge to check the high and low-pressure conditions of the system.
2. If the machine is filled with refrigerant under operating conditions, the refrigerant must be served at the needle valve of the low-pressure side. Suppose the refrigerant is added to the suction side. In that case, the refrigerant opening must be small so that the refrigerant in the refrigerant bottle slowly enters the system to prevent liquid slamming.
3. Refrigerant leakage detection
   Check if there is any leakage at the joints with soapy water or a refrigerant leak detector. When a refrigerant leak occurs, the leak point must be found, and the leak point must be repaired. Please ensure no refrigerant or other pressures are left in the system when improving the leak point. Otherwise, it will easily cause copper pipe explosive during welding. The tube is blasted by refrigerant pressure or additional pressure, causing accidental injury to the operator.
   Note: When refrigerant leakage occurs in a small space, open all vents or forced ventilation to discharge the refrigerant before performing related operations to prevent people from suffocating accidents.