



WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect all electric power to the machine and accessories before servicing.
- Close gas shut-off valve to gas dryer before servicing.
- Never start machine with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the machine is properly grounded.
- Washer motor not grounded! Disconnect electric power before servicing motor.

W502

59. Electrical Circuit To Ignition System (Gas Models)

- While supporting the access panel, remove two screws from bottom edge of access panel.
- Gently lower the access panel to disengage locators from bottom edge of front panel.
- Close main gas shut-off valve. Refer to *Figure 19*.
- Remove valve wire harness disconnect block from the holding and booster coil. Refer to *Figure 37*.
- Plug dryer power cord into wall receptacle, and start the dryer in a heat setting (refer to the Operating Instructions supplied with dryer).
- Set test meter to read AC voltage and apply meter probes into terminals on the dryer harness plug that would correspond to terminals "1" and "2" on the coil. *Figure 36*. Meter should register line voltage in all Fabric settings, except FLUFF which should read "zero" VAC.
- If meter does not read line voltage in Step "f", check motor switch, thermostats, fabric switch, accumulator, or timer.

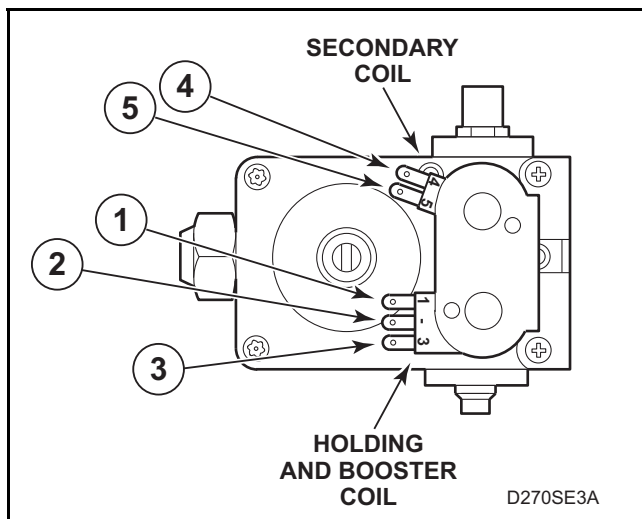


Figure 37



WARNING

To reduce the risk of fire, explosion and electric shock, close the valve in the gas supply line to the gas dryer and disconnect the electrical power unless gas or power supplies are required to perform test procedure.

W263

60. Gas Valve Coils Check (Gas Models)

- While supporting the access panel, remove two screws from bottom edge of access panel.
- Gently lower the access panel to disengage locators from bottom edge of front panel.
- Close main gas shut-off valve. Refer to *Figure 19*.
- Remove disconnect blocks from gas valve coils.
- Set test meter to read Ohms and put meter probes to terminals shown in *Figure 37*, and in the following chart.

COIL TOLERANCE READINGS

Meter probes to terminals:	Meter should read:
Holding Coil – Terminals 1 & 2	1365 ± 25 Ohms
Booster Coil – Terminals 1 & 3	560 ± 25 Ohms
Secondary Coil – Terminals 4 & 5	1220 ± 50 Ohms

NOTE: If meter registers any other readings than those listed above, the respective coil(s) should be replaced.