


Detailed User Manual

FM-1 Synthesizer

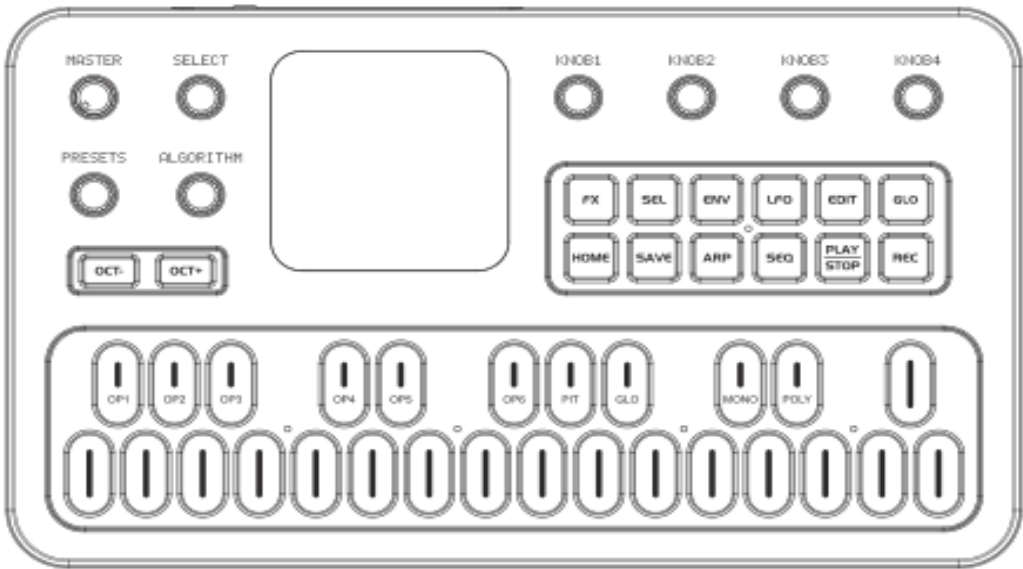

1. Left Panel — Master Controls

EN

■ ① MASTER (Potentiometer)


Controls the **main audio output volume**.

- Turn **clockwise** to increase volume, **counter-clockwise** to decrease.

■ ② SELECT (Encoder)

Switches between **pages within the current mode**. Many modes have 2 pages of parameters.

- Turn **clockwise** → go to Page 2
- Turn **counter-clockwise** → go back to Page 1
- The bottom bar of the display shows the current page, for example: 1/2 Arpeggio or 2/2 Arpeggio
- In **FX mode**, SELECT scrolls through the 6 effect slots (positions 1–6 in the chain)

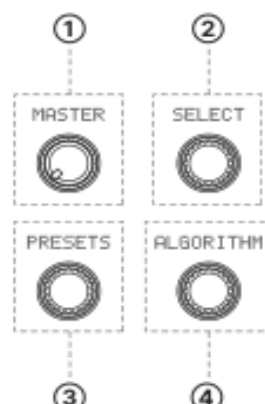

■ ③ PRESETS (Encoder)

Scrolls through the **128 presets** (numbered 001–128).

- Turn **clockwise** to go to the next presets, **counter-clockwise** for the previous presets
- The selection **wraps around**: scrolling past 128 goes back to 001, and vice versa
- Each turn **immediately loads** the selected presets — you will hear the change right away
- While scrolling, a **presets list popup** appears on screen showing:
 - The presets number (e.g. 001)
 - The presets name (e.g. PIANO 3)
 - A highlight on the currently selected presets
 - The popup disappears after about 1 second of inactivity
- The top bar of the display always shows the currently loaded presets number and name

■ ④ ALGORITHM (Encoder)

This encoder has **two functions** depending on whether OCT–/OCT+ is held:

Normal (no buttons held) — Algorithm Select:

- Turn to select the FM synthesis **algorithm** (01–32)
- The FM-1 has 32 algorithms that define how the 6 operators are connected
- When changed, the screen shows the **algorithm diagram** — a visual representation of how operators are routed (which ones are carriers, which are modulators, and the feedback path)
- The diagram popup disappears after about 1 second

While holding OCT– or OCT+ — Transpose:

- Hold **OCT–** and turn ALGORITHM → adjust transpose downward (0 to –12 semitones)
- Hold **OCT+** and turn ALGORITHM → adjust transpose upward (0 to +12 semitones)
- The screen shows:

Transpose
XX


- Where XX is the current transpose value (e.g. -3 or +5)
- Transpose shifts all notes by the set number of semitones without changing octave
 - Transpose is saved to global settings automatically

■ ⑤ OCT- / OCT+ (Buttons)

Shift the entire keyboard up or down by **one octave per press**.

- Press **OCT-** → shift down one octave (range: down to -3)
- Press **OCT+** → shift up one octave (range: up to +3)
- Each press shows a popup:

Octave
XX



Where XX is the current octave offset (e.g. -2 or +1 or 0)

Octave LED indicator (the LED next to OCT- or OCT+):

Octave Value	LED Behavior
0 (default)	Both LEDs off
±1	Slow blinking
±2	Fast blinking
±3	Solid on

The LED is on the **OCT-** side if octave is negative, on the **OCT+** side if positive.

Combo — Reset Octave & Transpose:

Press **OCT-** and **OCT+** simultaneously to reset both Octave to 0 and Transpose to 0.

2. Center — 1.54" TFT Display

EN

The display is divided into three areas:

Area	Content
Top bar	Current voice number + voice name (e.g. '032 BRASS 1')
Center area	Mode-specific content — parameters, oscilloscope waveform, effect chain grid, algorithm diagram, etc.
Bottom bar	Current mode name and page indicator (e.g. '1/2 LFO')


Battery icon appears in the top-right corner with a visual level indicator.

Temporary popups appear in the center area (overlying the current mode) when you:


- Change preset → shows voice list
- Change algorithm → shows algorithm diagram
- Change octave → shows Octave X

- Change transpose → shows Transpose X
- Adjust volume → shows Volume X
- Save preset → shows Preset Saved
- Battery critically low → shows LOW BATTERY (stays until battery recovers)

All popups disappear automatically after about 1 second unless noted otherwise.

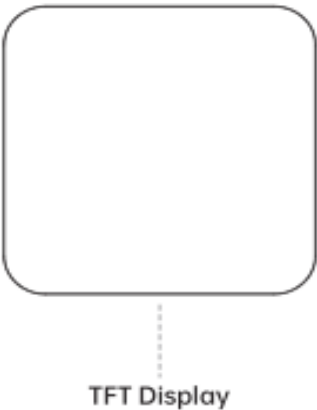

3. Right Panel — Parameter Knobs & Function Buttons EN

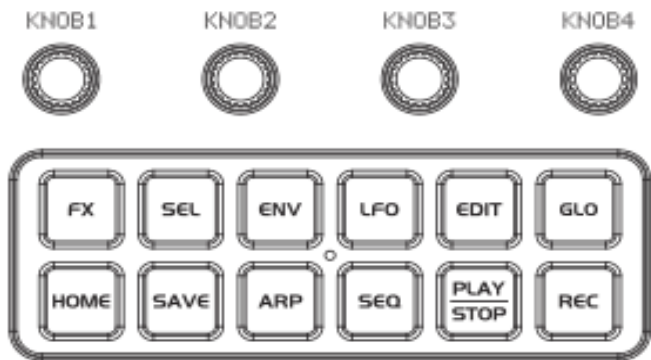

■ 3.1 KNOB 1 – KNOB 4 (Encoders)

Four parameter encoders whose function **changes depending on the current mode**. The bottom bar on the display always indicates what each knob controls. Specific mappings per mode:

■ In FX (Effect Chain) Mode

The knobs control the **currently selected effect** (highlighted with a blinking dot):

For Filter and Reverb (effects with sub-types):

KNOB 1	Type — select sub-type
KNOB 2	Parameter 1 — first audio parameter
KNOB 3	Parameter 2 — second audio parameter
KNOB 4	Effect On/Off

For Delay, Distortion, Chorus, Phaser:

KNOB 1	Parameter 1
KNOB 2	Parameter 2
KNOB 3	Parameter 3
KNOB 4	Effect On/Off

Detailed effect parameters:

Effect	KNOB 1	KNOB 2	KNOB 3
Filter	Type: Low Pass / Band Pass / High Pass	CutOff: 100 Hz – 20,000 Hz (100 steps, logarithmic)	Q (resonance): 0 – 100
Reverb	Type: Room / Hall / Plate	Decay: 0% – 100%	Mix: 0% – 100%
Delay	Decay: 0% – 100%	Rate: 0% – 100%	Mix: 0% – 100%
Distortion	Gain: 0% – 100%	Tone: 0% – 100%	Level: 0% – 100%
Chorus	Freq: 0% – 100%	Depth: 0% – 100%	Mix: 0% – 100%
Phaser	Freq: 0% – 100%	Depth: 0% – 100%	Mix: 0% – 100%

The bottom bar shows the exact parameter value, for example: CutOff: 1004Hz or Mix: 70%.

■ In ENV Mode

KNOB 1	KNOB 2	KNOB 3	KNOB 4
Attack (0–100%)	Decay (0–100%)	Sustain (0–100%)	Release (0–100%)

Each value is shown as a bar graph on screen (more blocks = higher value).

■ In LFO Mode

Page 1:

KNOB 1	KNOB 2	KNOB 3	KNOB 4
Wave	Speed (0–99)	PMD (0–99)	AMD (0–99)

Page 2:

KNOB 1	KNOB 2	KNOB 3	KNOB 4
Delay (0–99)	Pitch Sens (0–7)	Lfo Sync (On/Off)	Osc Sync (On/Off)

Wave types: Triangle, Saw Down, Saw Up, Square, Sine, Sample & Hold

■ In Edit Mode

OP1–6 (6 pages of parameters per operator):

Page Numbers	Parameters (KNOB 1–4)
Page 1 – Tuning & Level	Detune (-7-7), FreqCoarse (0-31), FreqFine (0-99), Out Level (0-99)
Page 2 – Envelope	Rate 1, Rate 2, Rate 3, Rate 4 (0-99)
Page 3 – Envelope	Level 1, Level 2, Level 3, Level 4 (0-99)
Page 4 – Sensitivity & Mode	A ModSens (0-3), KeyVelocity (0-7), OscMode (Ratio/Fixed)
Page 5 – Keyboard Scaling	L Depth (0-99), R Depth (0-99), BreakPoint (A-1 — C7)
Page 6 – Keyboard Scaling	L Curve (-LN/-EX/+LN/+EX), R Curve (-LN/-EX/+LN/+EX), RateScale (0-7)

PIT (Pitch Envelope):

Page Numbers	Parameters (KNOB 1-4)
Page 1 – Envelope	Rate 1, Rate 2, Rate 3, Rate 4 (0-99)
Page 2 – Envelope	Level 1, Level 2, Level 3, Level 4 (0-99)

GLO (Global Synthesis Parameters):

Page Numbers	Parameters (KNOB 1-4)
Page 1	Algorithm (1-32), Feedback (0-7), Osc Sync (On/Off), Transpose (0-48)
Page 2	Init Voice, Rename, Copy Voice

■ In Globe Mode**Page 1:**

KNOB 1	KNOB 2	KNOB 3	KNOB 4
MIDI Channel MIDI Ch (ALL / 1-16)	Effect Channel (1-16)	Pitch Bend Up (1-24)	Pitch Bend Down (1-24)

Page 2:

KNOB 1	KNOB 2	KNOB 3	KNOB 4
Reset Patches	Velocity (1-127)	Glide (Full Time / Fingered)	Glide Val (0-100)

■ In ARP Mode**Page 1:**

KNOB 1	KNOB 2	KNOB 3	KNOB 4
Mode	Octave (1-4)	Rate	Tempo (30-300 BPM)

Page 2:

KNOB 1	KNOB 2	KNOB 3	KNOB 4
Gate (20-100%)	Swing (50-75%)	Latch (On/Off)	Sync (On/Off)

■ In SEQ Mode**Page 1:**

KNOB 1	KNOB 2	KNOB 3	KNOB 4
Pattern (1-16)	Clear	Chain (1-16)	Step (1-16)

Page 2:

KNOB 1	KNOB 2	KNOB 3	KNOB 4
Voice (1-128)	Rate	Tempo (30-300BPM)	Gate (20-100%)

Page 3:

KNOB 1	KNOB 2	KNOB 3	KNOB 4
Swing (50-75%)	Sync (On/Off)	Transpose (-24 < 0 > 24)	-

■ 3.2 Function Buttons — Top Row

■ FX (Effect Chain)

Press to **enter Effect Chain mode**. The screen shows a 3×2 grid of the 6 effect slots, each displaying:

- Effect name (Filter, Reverb, Delay, Distortion, Chorus, Phaser)
- A **blinking dot** under the currently selected slot
- **Bright box** = effect is ON, **dim box** = effect is OFF

How to use FX mode:

- Turn **SELECT** to move the blinking dot between the 6 effect slots
- Turn **KNOB 1-4** to adjust the selected effect's parameters (displayed in the bottom bar)
- Press **FX again** to return to Home screen

■ SEL (Effect Select / Reorder)

Works only inside **FX mode**. Used to **lock an effect for reordering**:

- Press **SEL** → the currently highlighted effect becomes "grabbed" (dot stops blinking, becomes solid; SEL LED turns on)
- Turn **SELECT** → the grabbed effect **swaps positions** with adjacent effects in the chain
- Press **SEL again** → release the effect into its new position (SEL LED turns off)

This lets you rearrange the order effects are applied (e.g. put Distortion before Reverb, or Delay before Chorus).

On/Off toggle: Turn the rightmost knob (Encoder 4) clockwise to turn the selected effect ON, counter-clockwise to turn it OFF. The effect box changes brightness accordingly.

■ ENV (Envelope)

The ENV function is disabled by default.

Press the ENV button (LED illuminates) to enter ADSR envelope edit mode. Four parameter frames appear on the display:

- **Attack** — Time taken for the sound to hit full volume after a key is pressed. Range: 0–100%. 0% = Instant attack (full volume instantly), 100% = Very slow fade-in.
- **Decay** — Rate at which volume falls from peak to sustain level. Range: 0–100%.
- **Sustain** — Fixed volume level when holding a key. Range: 0–100%. Higher values result in louder sustained audio.
- **Release** — Length of fade-out after key release. Range: 0–100%. 0 = Immediate mute, 100% = Long fade-out.

Use KNOB 1–4 to adjust corresponding parameters. Press ENV once more to turn off the envelope function.

■ LFO (Low Frequency Oscillator)

Press to enter LFO editing mode. The LFO adds periodic modulation to the sound.

Page 1 (use SELECT to navigate):

- **Wave** (KNOB 1): LFO waveform shape. Options: Triangle, Saw Down, Saw Up, Square, Sine, Sample & Hold.
- **Speed** (KNOB 2): LFO oscillation speed. Range: 0–99. Higher = faster modulation.
- **PMD** (KNOB 3): Pitch Modulation Depth. Range: 0–99. Higher = wider pitch wobble.
- **AMD** (KNOB 4): Amplitude Modulation Depth. Range: 0–99. Higher = more tremolo.

Page 2:

- **Delay** (KNOB 1): Time before LFO kicks in after note-on. Range: 0–99.
- **Pitch Sens** (KNOB 2): How much the LFO affects pitch. Range: 0–7.
- **Lfo Sync** (KNOB 3): Whether LFO resets on each new note. 0 = Free, 1 = Sync.
- **Osc Sync** (KNOB 4): Whether the oscillator phase resets on each new note. 0 = free-running, 1 = sync.

Press **LFO again** to return to Home.

■ EDIT (Operator Editing)

Press to enter **deep FM synthesis editing**. This is where you shape the fundamental tone of each FM-1 voice.

The FM-1 synth has **6 Operators (OP1–OP6)**. Each operator is a sine wave oscillator that can either produce sound (carrier) or modulate another operator (modulator). The Algorithm setting (changed via the ALGORITHM encoder) determines how operators connect.

Operation Instructions:

- Press EDIT to enter edit mode. Buttons on the bottom keyboard act as function selectors.
- Select the target parameter set (LED of the selected operator/function stays solid lit):

• OP1 – OP6:

Short-press any OP button to access its parameter edit page (the unit retains the last displayed page for each operator).

Long-press any OP button to mute the corresponding operator; audio restores when switching voices.

- **PIT**: Pitch Envelope (how pitch changes over time)
- **GLO**: Global Synthesis Parameters (Algorithm, Feedback, Oscillator Sync, Transpose, Voice Template, Rename Voice, Copy Voice)

Init Voice — Rotate KNOB 1 clockwise to reset all parameters to factory default values

Rename — Rotate KNOB 2 clockwise to open the rename panel (OP1–OP5 for character selection/deletion, KNOB 3 for character pick, SELECT to confirm; rotate KNOB 2 counterclockwise to cancel)

Copy Voice — Rotate KNOB 3 clockwise to open the voice selection panel (rotate counterclockwise to exit). Use KNOB 4 to select the source voice for copying, then press SELECT to confirm overwriting the target voice.

- **MONO**: Switch to monophonic mode (single note playback only, last-note priority)
- **POLY**: Switch to polyphonic mode (up to 12 simultaneous voices)

- Rotate the SELECT knob to flip through parameter pages for the current section (max. 6 pages per operator). Adjust parameters via KNOB 1–4.
- Press EDIT again to return to the main display.

■ GLO (Globe — Global Settings)

Press to enter **global device settings**.

Page 1 — MIDI & Pitch:

- **MIDI Channel** (KNOB 1): MIDI receive channel for the keyboard. Range: ALL / 1–16.
- **Effect Channel** (KNOB 2): Which MIDI channel controls effect parameters. Range: 1–16.
- **Pitch Bend Up** (KNOB 3): Maximum upward pitch bend range in semitones. Range: 1–24.
- **Pitch Bend Down** (KNOB 4): Maximum downward pitch bend range in semitones. Range: 1–24.

Page 2 — System:

- **Reset Patches** (KNOB 1): Rotate clockwise to open factory reset panel:
Use KNOB 1–4 to select reset bank (A/B/C/D). Rotate SELECT clockwise to confirm reset (counterclockwise to cancel).
The screen displays "Reset Success" upon completion (the selected bank restores to the previously imported voices).
- **Global Velocity** (KNOB 2): Adjust overall keyboard velocity response. Range: 1–127.
- **Glide** (Only functional under MONO mode):
KNOB 3 (Trigger Mode):
Full Time — Glide activates for all incoming notes
Fingered — Glide only triggers during legato performance (previous key held); no glide if keys are released between notes
KNOB 4 (Glide Value): 0–100 (corresponding to 0–1 second). Higher values yield longer glide time.

■ 3.3 Function Buttons — Bottom Row

■ HOME (BT / Home Screen)

Long-press to toggle BT. HOME LED blinking = BT on but not connected; HOME LED solid = BT connected; HOME LED off = BT off.

Press at any time to return to the **Home / Oscilloscope screen**. The oscilloscope shows the synthesizer output as a real-time waveform — a yellow line on a gray background that moves with the sound you play.

■ SAVE

Press and hold to save the current preset to flash memory.

- When pressed, the device saves any pending changes (voice parameters, effect settings, sequencer patterns, global settings)

- The SAVE LED lights up while saving
- The screen shows Preset Saved briefly
- After releasing the button, the LED turns off

FM-1 SysEx Bank Save (via MIDI):

When the device receives a FM-1 voice bank via MIDI SysEx, a bank selection screen appears. Turn **KNOB 1-4** to choose which bank (A/B/C/D) to save the received voices into. Saved successfully after a brief delay.

■ ARP (Arpeggiator)

To activate:

- Press **ARP** → the ARP LED lights up, arpeggiator becomes active
- The display enters ARP settings mode

To use:

- Hold one or more keys on the keyboard
- The arpeggiator plays them automatically in the selected pattern
- Key LEDs light up as notes are triggered
- Adjust settings with KNOB 1-4 (see parameter table)

Arpeggiator Modes:

Mode	Pattern
Up	Low note → High note, repeat
Down	High note → Low note, repeat
Inclusive	Low → High → Low (bouncing, including endpoints)
Exclusive	Low → High → Low (bouncing, excluding endpoints)
Random	Random order
Order	In the order keys were pressed
Repeat	Repeat each note before moving to the next

Latch mode: When Latch is ON, notes continue playing even after you release the keys. Press new keys to change the pattern. Turn Latch OFF to stop.

Sync (BPM Synchronization): When enabled, the arpeggiator BPM runs in sync with the external MIDI clock.

To deactivate:

Press **ARP** while in ARP mode → the arpeggiator stops, ARP LED turns off, returns to Home.

Important: If the sequencer (SEQ) is currently active, pressing ARP will show "Disable SEQ to enter" on screen. You must turn off SEQ first.

■ SEQ (Sequencer)

A **16-step pattern sequencer** for creating and playing back note sequences.

Activation Method:

- Press **SEQ** → SEQ LED illuminates, STOP LED lights orange, sequencer activated
- The display switches to the SEQ setting page
- The keyboard keys now function as 16 step indicators (LEDs show filled/empty steps)

Sequence Recording:

- Press **REC** → REC LED illuminates red to start recording
- Play notes on the keyboard — each note is recorded into the next step
- Filled steps have their LEDs lit
- Press **REC** again to stop recording (switches to playback mode)

Adjust RATE During Recording:

- You may adjust the Rate value of each Step while recording a SEQ sequence (Rate parameter is controlled by KNOB 2 on Page 2)

Recording Long Notes:

- On the active step, hold down the target note and rotate SELECT, then release at the desired step. Recorded long notes will not erase pre-existing notes.

Rests and Note Replacement:

- In recording mode, long-hold REC and rotate SELECT to navigate step positions within the sequence. Hold keys on the target step to add or replace notes, or leave empty slots to insert rests.

Playback:

- Press **PLAY/STOP** → PLAY LED illuminates in green
- The sequence plays through the filled steps
- The current step's LED blinks as it plays
- Press PLAY/STOP again to halt playback, STOP LED illuminates in orange

Chain Mode:

- Plays multiple patterns consecutively starting from the current pattern, controlled by KNOB 3 on SEQ Page 1 (Range: 1–16)

Step Selection:

- Loops playback according to the selected Step value (1–16), controlled by KNOB 4 on SEQ Page 1 (Range: 1–16)

Gate:

- Adjusts note length of the sequencer, controlled by KNOB 4 on SEQ Page 2 (Range: 20–100%)

Swing:

- Adjusts the swing intensity of sequence playback, controlled by KNOB 1 on SEQ Page 3 (Range: 50–75%)

SYNC (BPM Synchronization):

- When activated, the sequencer BPM synchronizes with the external MIDI clock (ON/OFF toggled via KNOB 2 on SEQ Page 3)

Transpose:

- Supports global transpose for the SEQ sequencer, controlled by KNOB 3 on SEQ Page 3 with a range of -24 to +24 semitones (0 indicates no transposition)

Step LED Indicator Description:

LED Status	Meaning
Solid On	Note exists on this step
Off	Empty step
Flashing	Currently playing this step

Pattern Management:

A total of 16 independent Patterns (1–16), selectable via KNOB 1 on SEQ Page 1. Each Pattern can be assigned a preset Voice, controlled by KNOB 1 on SEQ Page 2. When SEQ is enabled, the PRESETS knob on the panel becomes inactive, and the voice is determined by this parameter. All Patterns and their assigned voices are automatically saved to flash memory.

Deactivation Method: Press SEQ again under SEQ mode to stop the sequencer, all status LEDs turn off, and the system returns to the main screen.

Important: If the arpeggiator (ARP) is currently active, pressing SEQ will show "Disable ARP to enter" on screen. You must turn off ARP first.

■ **PLAY/STOP**

Transport control for the **sequencer** (only works when SEQ is active):

- Press in stopped status → Start playback (PLAY LED lights up in green)
- Press during playback or recording → Stop operation (STOP LED lights up in orange)
- If SEQ is not active, shows "Enable SEQ first" on screen


■ **REC**

Recording control for the **sequencer** (only works when SEQ is active):

- Press in stopped or playback status → Enter recording mode (REC LED lights up in red)
- Press in recording status → Exit recording mode (REC LED turns off, STOP LED remains illuminated)
- If SEQ is not active, shows "Enable SEQ first" on screen

4. Bottom — Keyboard & Combo Keys

EN

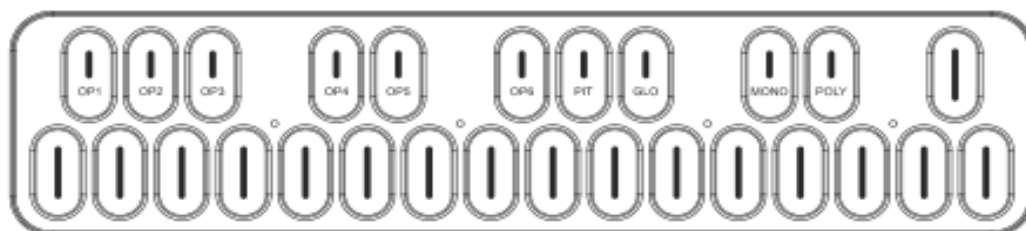

4.1 Piano Keys (27 Keys)

Standard piano-style keys for playing notes.

- Each key has an LED that lights up when pressed
- The actual MIDI note number is calculated as: key position + 53 + (octave × 12) + transpose
- The default range (octave 0, transpose 0) covers roughly F3 – G5
- In normal mode: keys play notes directly (polyphonic or monophonic depending on setting)
- In ARP mode: keys are fed into the arpeggiator
- In SEQ mode: keys input notes into sequencer steps

4.2 Combo Function Keys

Certain keys are labeled with secondary functions. These labels are active only in Edit mode:

Key Label	Function
OP1-OP6	Select Operator 1-6 for editing. LED solid when selected.
PIT	Select Pitch Envelope for editing
GLO	Select Globe parameters (Algorithm, Feedback, Osc Sync, Transpose)
MONO	Switch to Mono mode — only one note plays at a time
POLY	Switch to Poly mode — up to 12 notes can play simultaneously

When in Edit mode, **all 8 OP/PIT/GLO keys have LEDs that blink** to indicate they are selectable. The currently active selection has a **solid LED**. The MONO/POLY LEDs indicate the current mode: the active mode has a solid LED, the inactive mode blinks.

5. MIDI Connectivity

EN

Three MIDI interfaces are active **simultaneously** — you can use all three at once:

Interface	Connection
USB MIDI	Connect via USB cable to a computer or DAW. Appears as a standard USB MIDI device.
BLE MIDI	Wireless MIDI to iOS/Android/Mac/Windows devices that support BLE MIDI
3.5 MIDI IN	Traditional MIDI cable (31250 baud). Connect to hardware synths, controllers, etc.

What the FM-1 receives via MIDI:

- **Note On/Off** with velocity → Triggers the internal synthesis engine. Note On messages carrying a velocity value of 0 are interpreted as Note Off (e.g., 90 30 00 will be parsed as 80 30 00).
- **Pitch Bend** → Modulates pitch within the configured bend range (refer to Global Settings).
- **Control Change** → Adjusts multiple functional parameters. CC messages map to effect parameter scales; refer to the Official MIDI Response Table for full details.
- **Program Change** (PC Code for Tone Control) → Supports tone switching via MIDI PC codes ranging from 0 to 127.
- **FM-1 SysEx voice dumps** → import standard Yamaha DX7 voice banks (32 voices per bank). After receiving, you choose which bank slot (A/B/C/D) to save to.

What the FM-1 sends via MIDI:

- **Note On/Off** with velocity from keyboard, arpeggiator, or sequencer

6. Battery & Power

EN


- **Battery level** is shown as an icon in the top-right corner of the display
- When battery is **critically low**, a full-screen **LOW BATTERY** warning appears and stays visible until the battery is recharged or the device is powered off
- The warning takes priority over all other screen content — you need to recharge to clear it

■ Speaker

- The FM-1 has a **built-in speaker** for monitoring without headphones; plugging in headphones automatically mutes the speaker.

7. Rear Panel Interface

EN

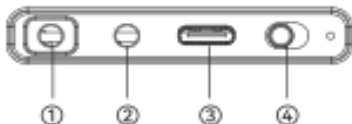

- ① 3.5mm Audio Output: It is recommended to use headphones with a standard TRS connector. Using other types of connectors may cause audio output noise and prevent the built-in speakers from being muted.
- ② MIDI input Port: Use a 3.5 mm-to-MIDI adapter to connect to external devices that support MIDI OUT.
- ③ USB: USB connection port.
- ④ Power: Used to turn the FM-1 synthesizer on/off.



TRS Audio Headphones

8. Technical Specifications

EN

Product Dimensions	161.5 (L) x 96.5 (W) x 28.6 (H) mm
Product Weight	251 g
Keys	27-key silicone keybed
Knobs	1 x 300° Volume Knob, 7 x 360° Control Knobs
Battery Life	12 hours
Output	USB Type-C port Wireless MIDI (Windows/Mac/iOS/Android) 3.5mm Audio Out Jack
Input	3.5mm MIDI IN Jack
Power	Battery or USB Bus Power
Battery Model	DTP704060
Nominal Voltage	3.7V
Rated Capacity	2000mAh
Operating Frequency Band	2403~2478MHz
Maximum RF Power	9dBm

9. FCC Warning Statement

EN

★ Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.