HJ Digital Servo Tester


Description:

Press **Select** button to switch the mode in cycle.
1.S-1 manual mode (Manual)
2. S-2-bit mode (neutral)
3. S-3 automatic mode (automatic)


Press **Pulse Width** to switch 3 signal for analog or digital servo.
1. 50H analog servo 20us signal, frequency 50HZ
2. 125H digital servo 8US signal, frequency 125HZ
3. 250H digital servo 4US signal, frequency 250HZ

Input voltage: DC 5~6V
Output signal width: 800~2200us

Connection:

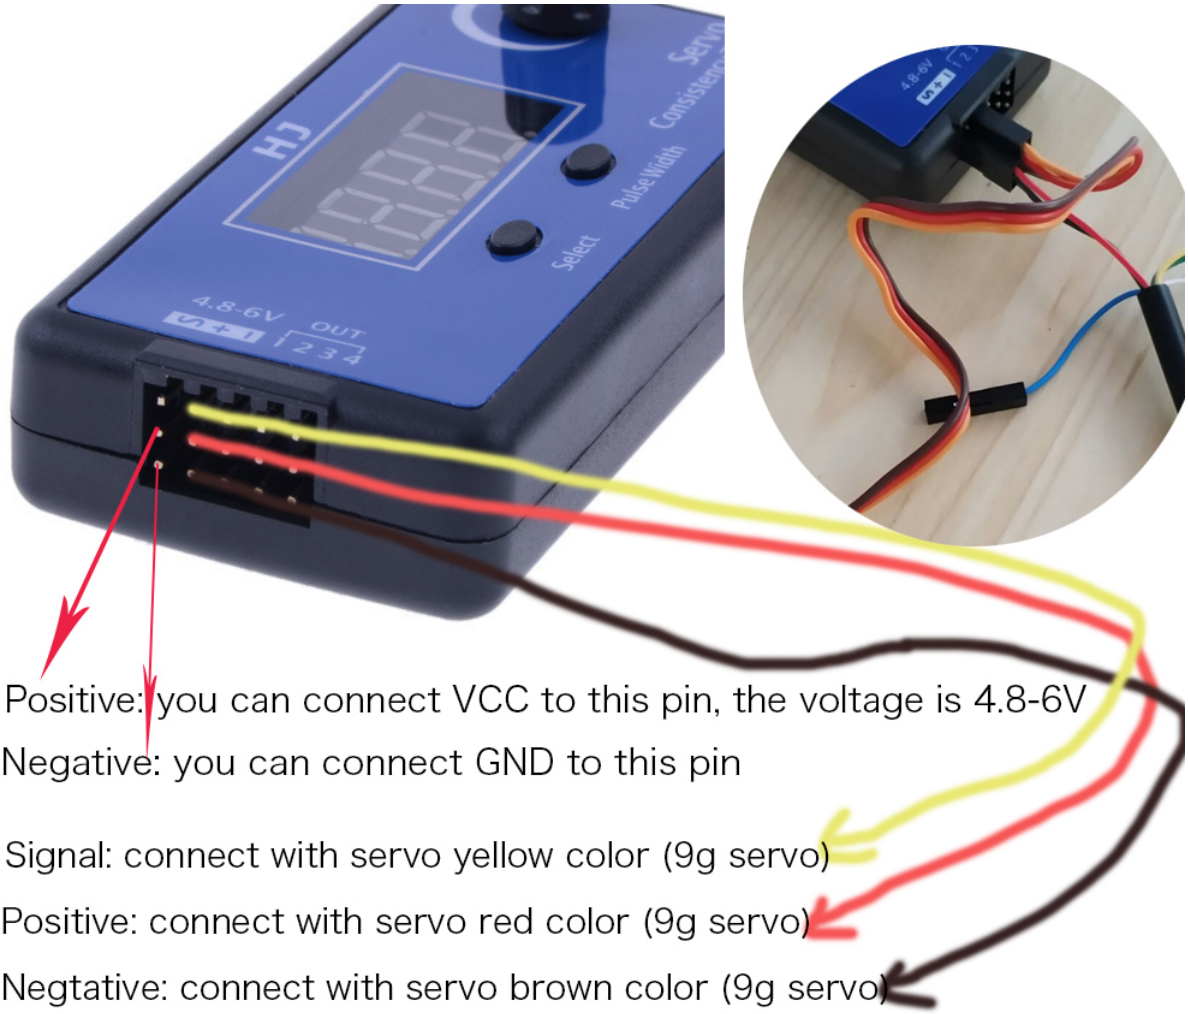

This servo tester can connect with 4 servos at the same time

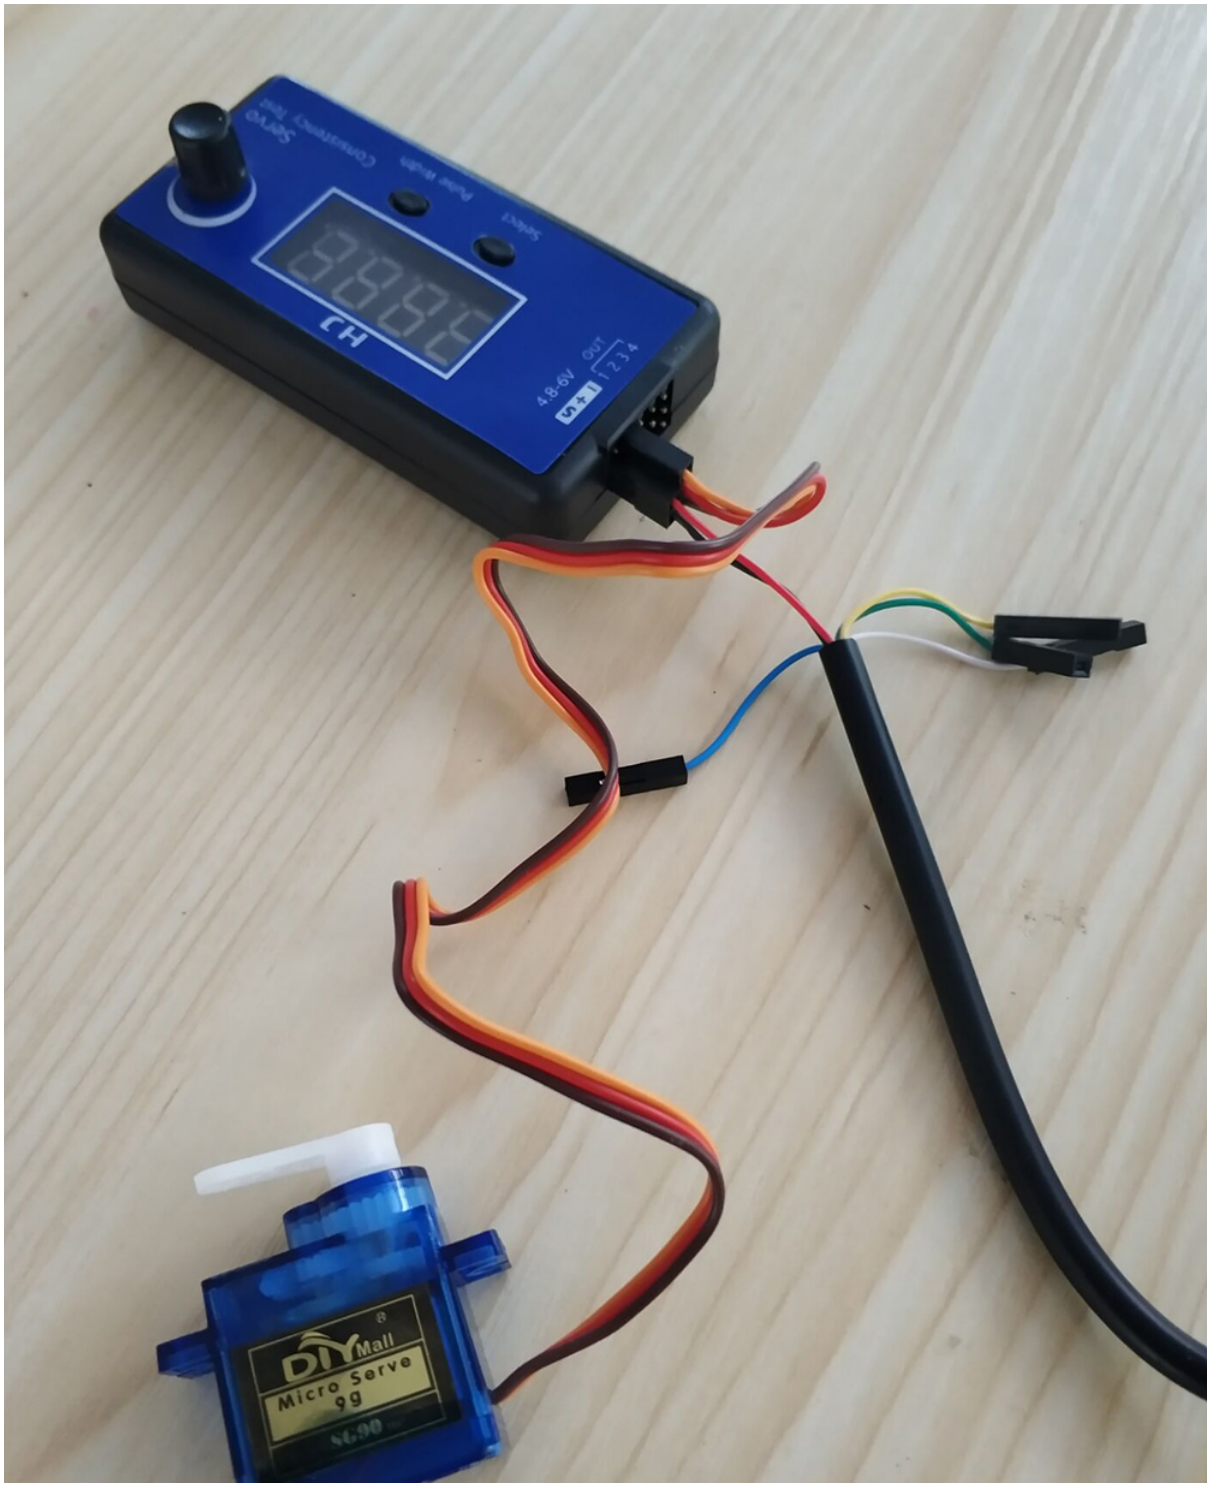
SERVO
Continuous Test
Pulse width
Select
CH
4.8-6V
OUT
1 2 3 4
DIYMall
Micro Serve
9g
9690