


Awake mode

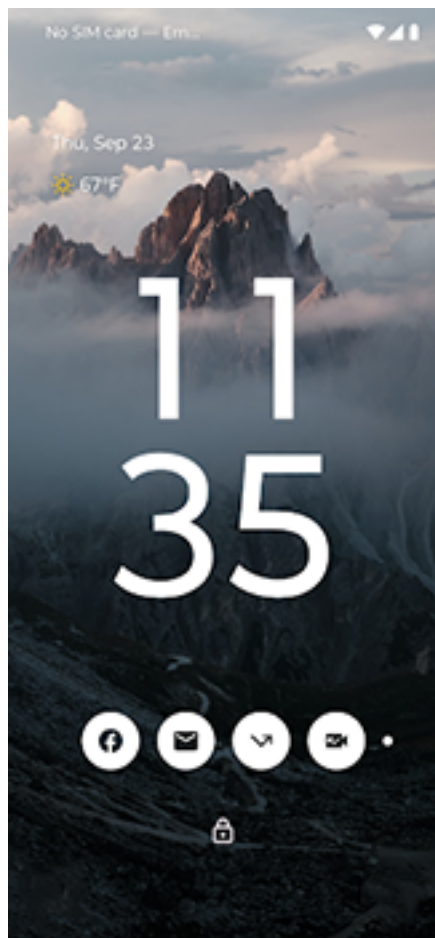

Your wallpaper and screen are fully illuminated in awake mode. Your lock screen goes into awake mode when you:

- Touch a notification icon
- Press the Power button

What you can do from the lock screen

- [Make an emergency call](#). Swipe up from the bottom of the screen.
- [View and respond to notifications](#). Double touch one to open it.
- [Open quick settings](#). Swipe down from top of the screen for your top four settings and notifications, then swipe again to see the rest.
- [Start a voice command](#). Swipe up diagonally from either bottom corner.
- [Go into Lockdown](#). Temporarily turn off notifications and fingerprint unlocking.

You can [customize your lock screen](#) to add a message and control what content and features appear.