


The displayed erection procedure is valid for the luffing jibs W12 and W18, for the erection procedure of the luffing jibs W24 and larger, see SDW-assembly

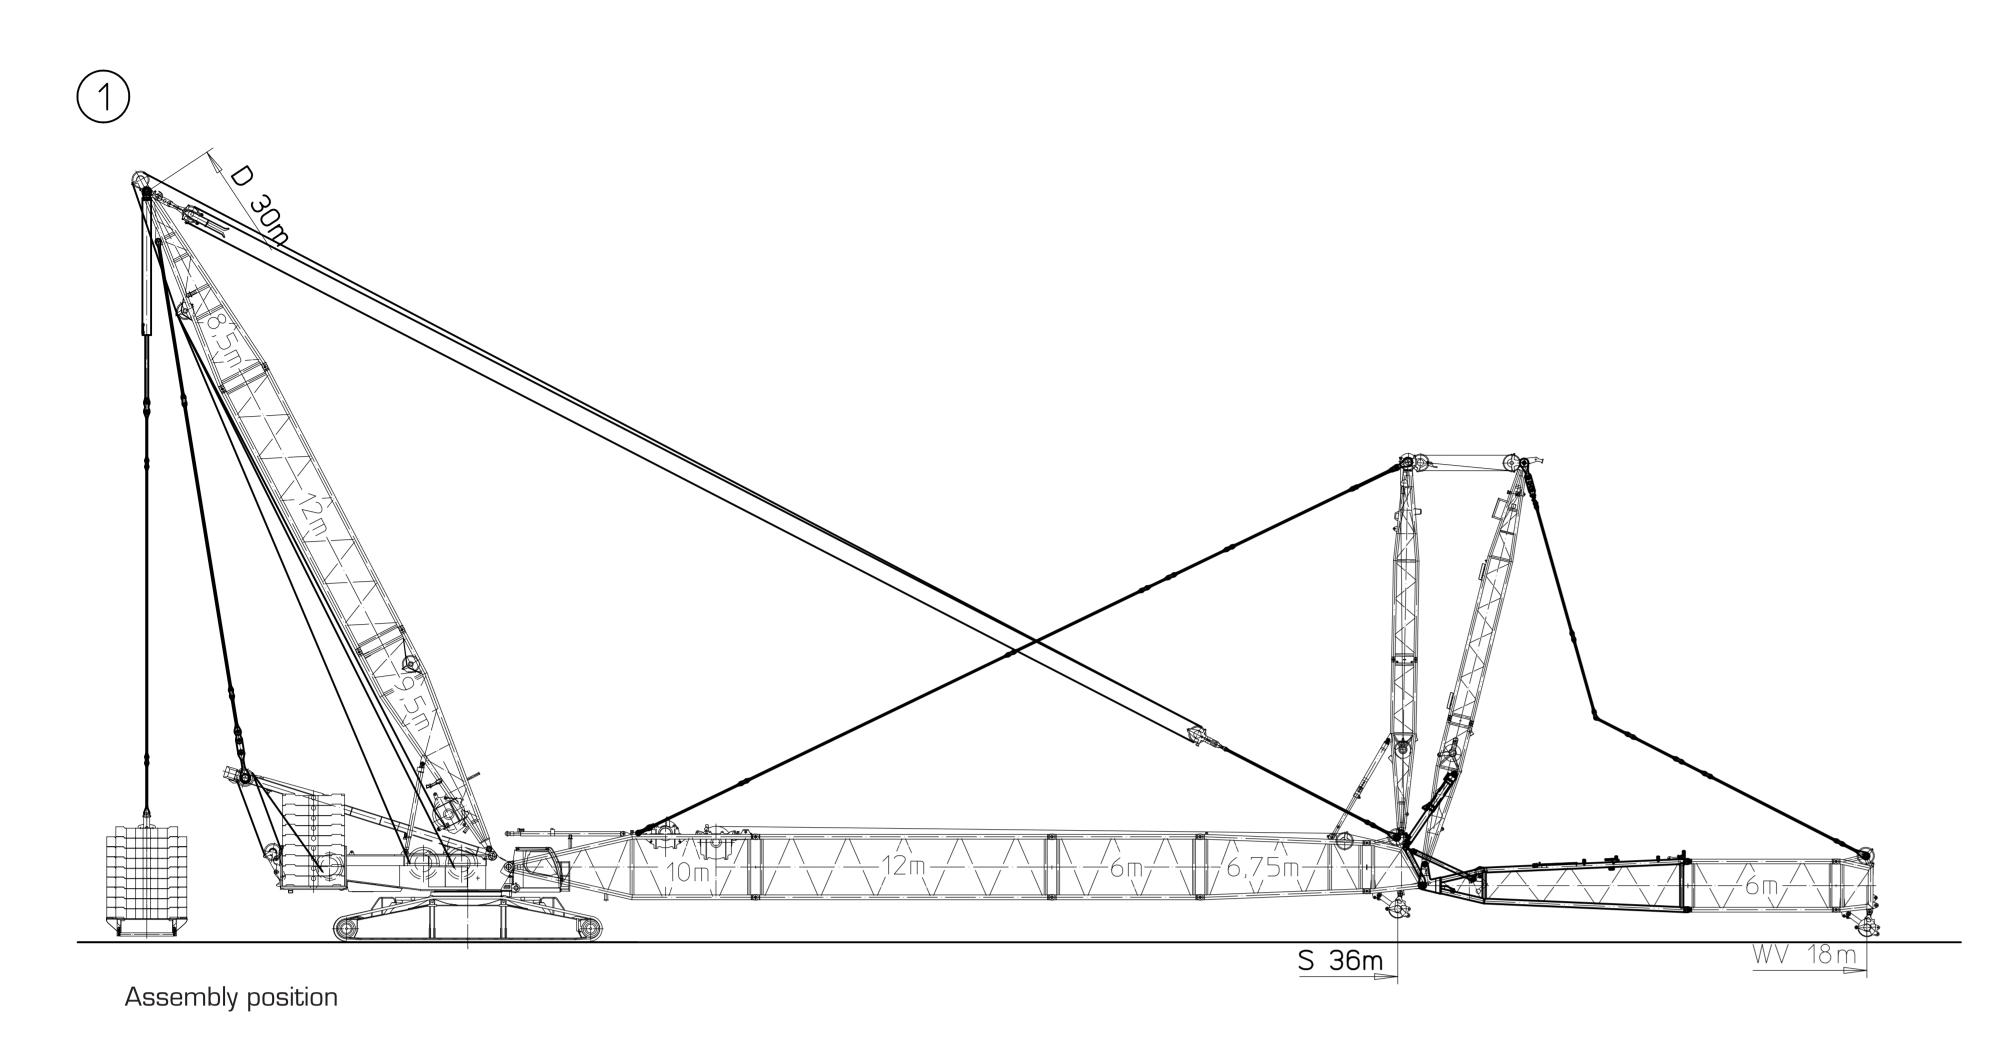


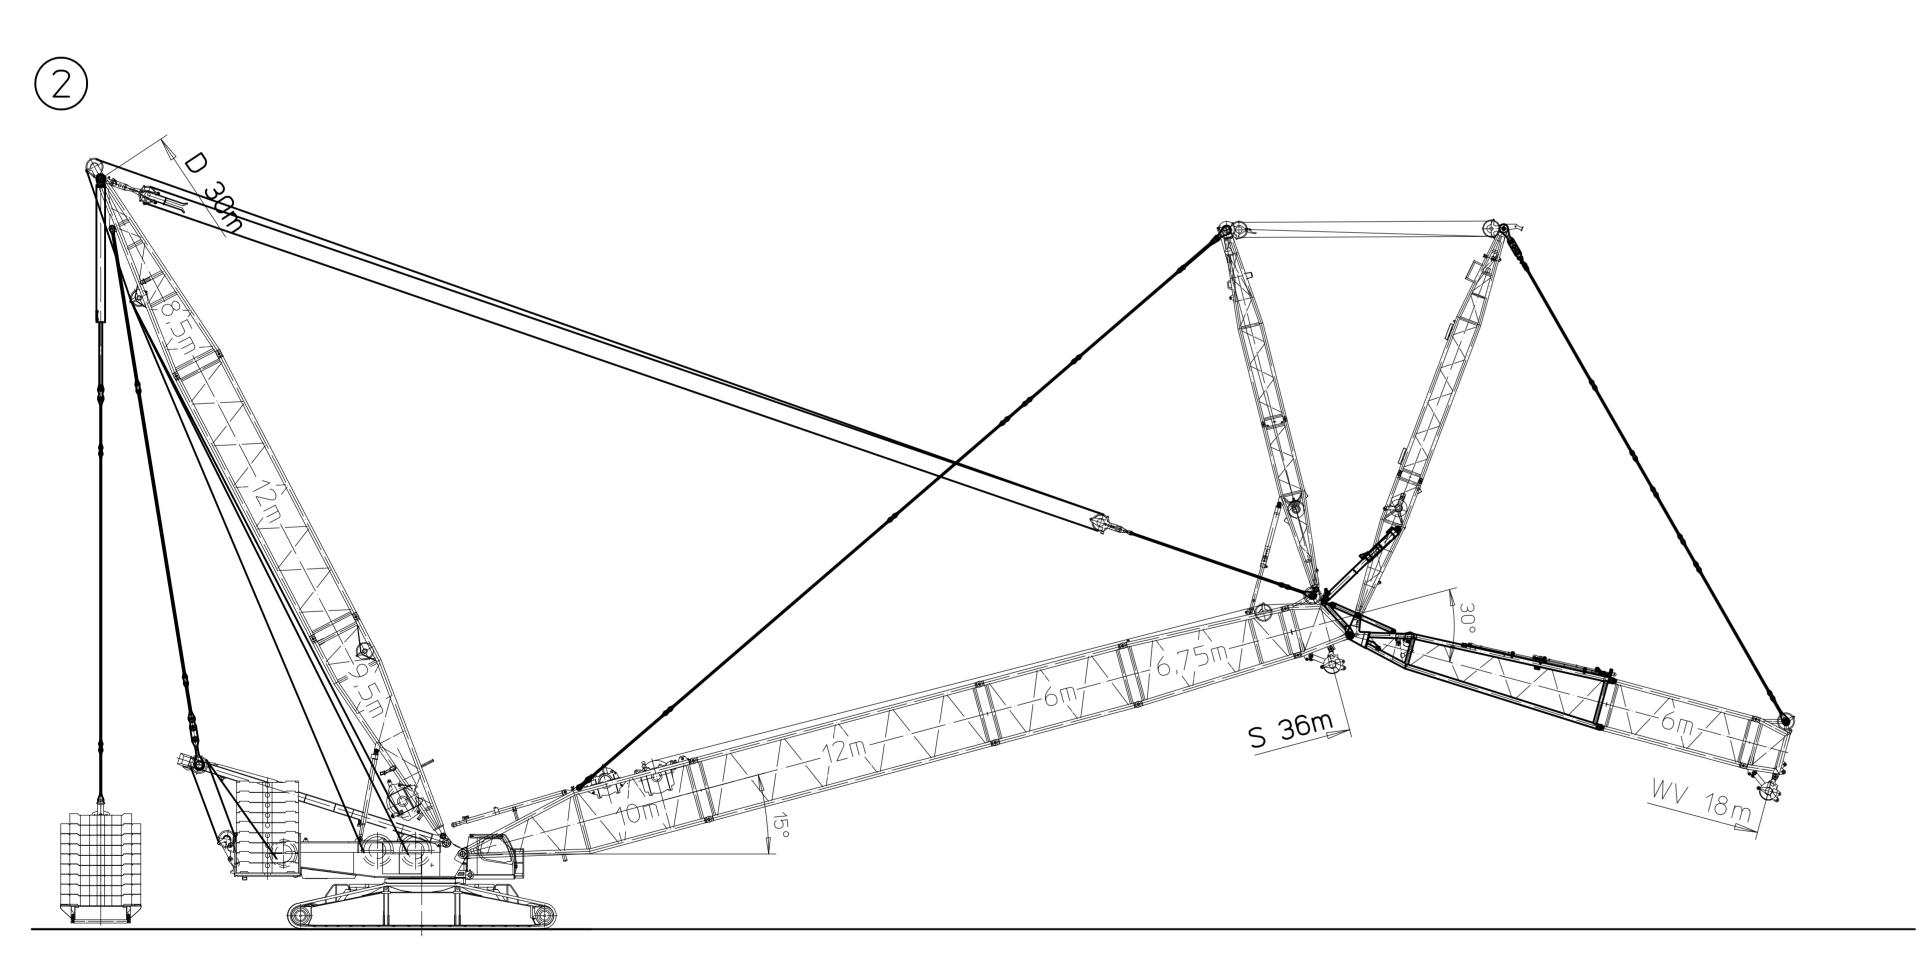

Luff the S-boom up to 15° Lower the WV-boom to -15° (30° difference angle)

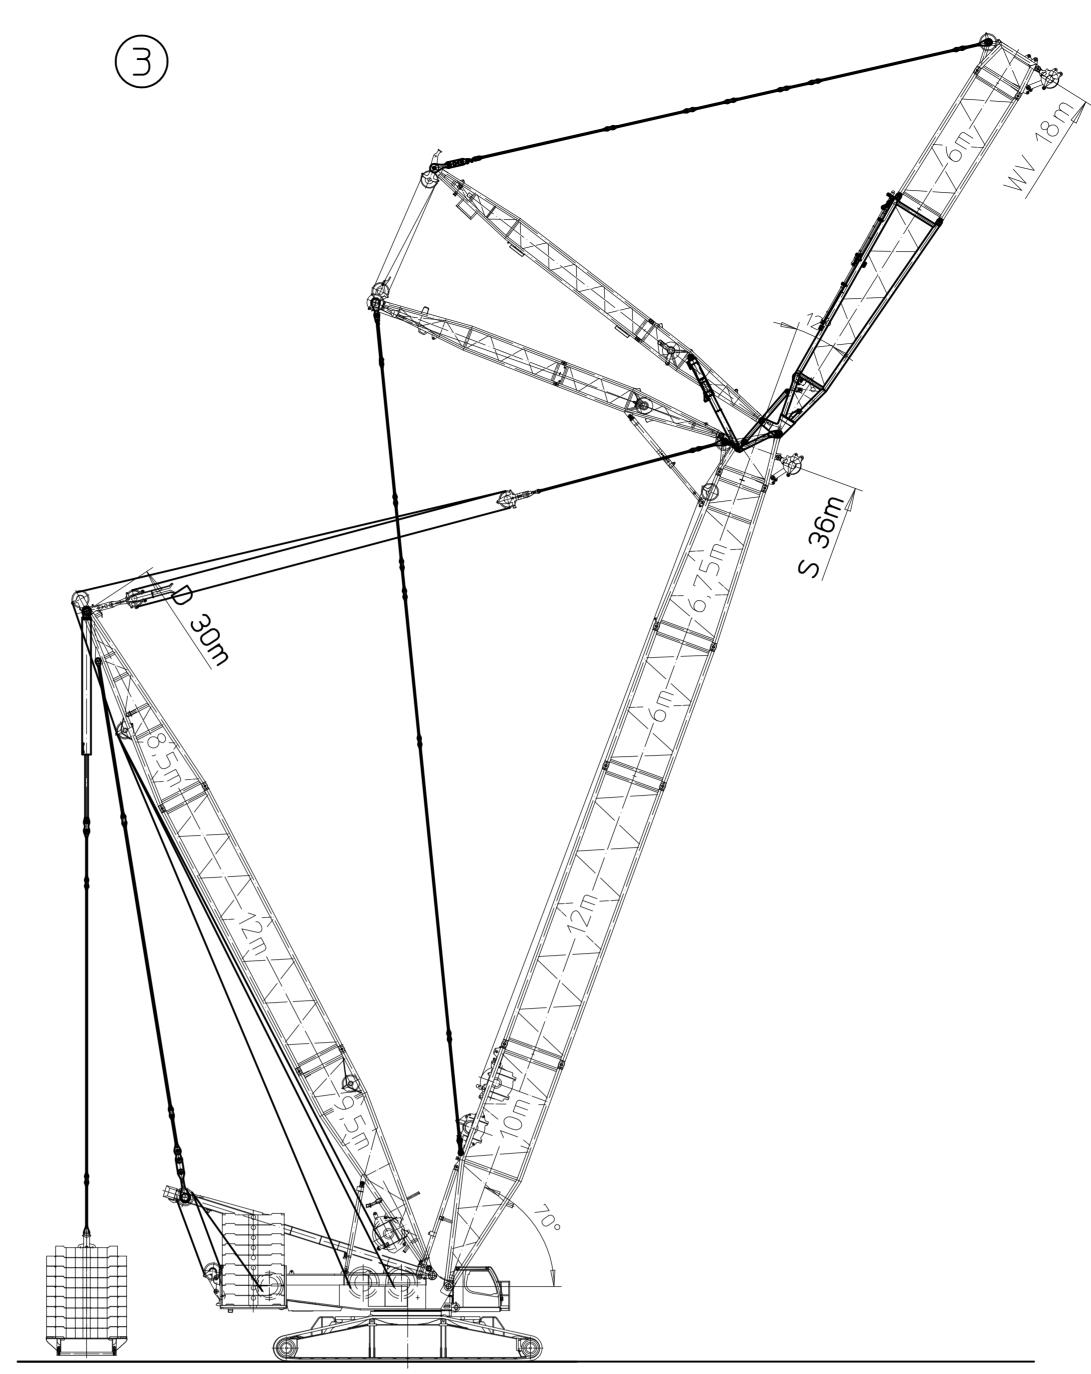

Erect to main boom 70° then move luffing jib into operating position 12° or 20°

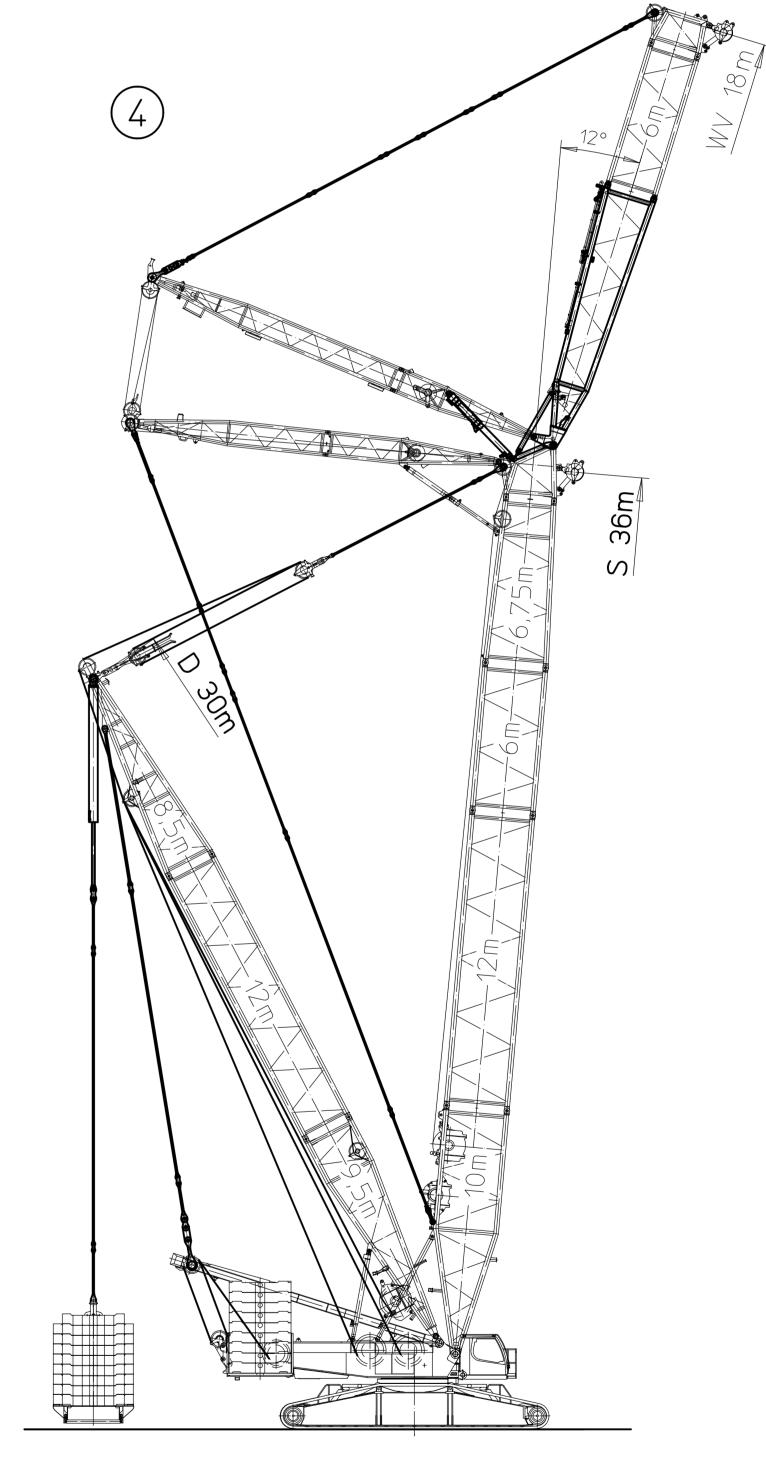

Move main boom into operating position

