
SailTimer Wind Instrument™

Owner's Manual



Wireless. Solar-powered.

SailTimer Inc.
www.SailTimerWind.com

Contents

Quick Start	2
The Design Thinking Behind Your New Anemometer	3
Secure Transmissions	5
Installation	6
Mounting Pattern for Drilling Holes	6
L-Bracket	7
Stanchion Mount with Wing-Nut Hose Clamps	7
Off-Season Removal	8
How to Install at Masthead without Lowering or Climbing Mast	8
Cantilever Method	8
SailTimer Track Slider™	9
NMEA 0183 Sentences	11
Repair and Maintenance	12
Power Management	12
End-User Licensing Agreement	13

SailTimer, TTD ®, and SailTimer Wind Instrument are trademarks of SailTimer Inc. internationally. All rights reserved. Copyright 2005–2015 (c) SailTimer Inc.

Quick Start

Your new Wind Instrument is the result of precision manufacturing for the axles and jewel bearings, and sophisticated electronics for the power management system and solar charging. It uses Bluetooth LE (Low Energy, also called Bluetooth 4 or Bluetooth Smart). It opens up some capabilities that have never been possible for sailors.

Many technical specifications, features and FAQs are provided on the web site www.SailTimerWind.com although this Owner's Manual provides some additional details and procedures to allow you to use and enjoy this state-of-the-art new device. It is designed to be self-sufficient and provide its own power outdoors in the wind, ready to transmit to you for years to come.



The Design Thinking Behind Your New Anemometer

Your new Wind Instrument has so many innovative new features that a patent was filed to document the completely different approach that was taken with this product. Nearly all masthead anemometers have had a horizontal arm. But that attracts large sea birds, which can cause damage. Why not make it vertical? We did. It is a nuisance to have to run wires down the mast and through the cabin liner to the helm, so why not make the anemometer completely wireless? We did; SailTimer Inc. made the first masthead anemometer that could transmit to smartphones and tablets, and this is the next generation. It is also awkward to have circuit boards and wiring running through an anemometer, since the wiring breaks and the circuit boards can get wet. So as another design innovation, we put the circuit board right inside the tail of the wind direction arrow.

Durable, Top-Quality Materials: Maybe you have noticed some parts on your boat that are stainless steel but still need to be polished to keep the rust off them. To avoid that problem with the Wind Instrument, the Mounting Rod is marine-grade stainless steel, which has increased resistance to corrosion. The accessories (L-Bracket, Track Slider and Extension Bar) are also marine-grade stainless steel. For the body of the Wind Instrument, we use a special low-friction, abrasion-resistant thermoplastic called acetal (polyoxymethylene) for the vertical cylinders. The other black metal parts are rigid 6061 aluminum, with the surface anodized to prevent chalking or corrosion. We also use a distinctive solid brass nose cone, and solid brass for other parts such as the threaded housing on the jewel bearings, since brass is non-corrosive.

Lock Nut on the Mounting Rod: This metric M6 nut tightens against the Spindle or base of the Wind Instrument. This helps to protect the threads on the base, so that they can't be turned past the bottom of the threads onto the rod itself. Also, if you turn the Mounting Rod all the way in without the lock nut, it could damage the jewel bearing inside. So it is important to always use the lock nut on the Mounting Rod. If you turn the Mounting Rod all the way in, and it hits the end of the thread inside the Spindle (base), turn it back a bit and then tighten the nut. That way you won't risk over-tightening the Mounting Rod into the Spindle, and damaging the jewel bearing inside.

The friction between the nut and the bottom housing also stops it from coming unscrewed. Give the nut a gentle tug with a wrench or pliers to make it snug against the plastic, so they won't come unscrewed. You can still unscrew the Wind Instrument from the Mounting Rod by hand or with a pair of pliers quickly and easily, without needing to unscrew the Mounting Rod from the masthead.

If you want a quick release for the Mounting Rod, you can replace the lock nut with an M6 stainless steel wing-nut instead, for quick removal with no tools. We don't supply the Mounting Rod with a wing-nut because most users want it to be streamlined at the masthead. But for quick removal and portability, a wing-nut is very handy.

If you are concerned that the Spindle could still work itself loose from rotation of the wind direction arrow, you could also add thread adhesive to the Mounting Rod when the Spindle is threaded on. This depends on how often you may want to remove the Wind Instrument from the Mounting Rod.

The Electronics are Encapsulated in the Tail

The tail of the wind direction arrow has been encapsulated in UV-resistant plastic, because the electronics are actually all right in the tail. That way, the wind direction arrow knows which way it is pointing, with no calibration. This is a very advanced design that we have not seen before. The encapsulation is clear so that the sunlight can pass right through, to the solar panels inside. The material has been carefully tested to be as durable and scratch-resistant as possible. At the same time, we wanted it to have some flexibility so that if the metal parts work against it, the material has the ability to flex rather than crack. We also use

anodized aluminum on the metal parts with the encapsulation, because the encapsulation adheres better to anodized aluminum than to stainless steel.

That adhesion helps to avoid leaks. However, if you do ever notice any wearing or gaps around the 3 metal parts in the encapsulation in future years, a simple solution will be to put a drop of clear caulking around the gap. We don't anticipate that this should be necessary, but as we know, a good mariner is always on the look-out for wear & tear, and chafe.


There is also a design innovation for how the spinning wind cups are measured for wind speed, when the electronics are all sealed inside the tail of the wind direction arrow. There is a tiny magnet on the bottom flange of the wind cups. Rather than the usual approach of running a wire from an axle sensor on the cups to a circuit board, we use a tiny magnet on the flange of the wind cup base. As it comes around, it reaches through the sealed plastic of the tail, and triggers a sensor inside. That lets your Wind Instrument be waterproof and submersible.

2-Jewel Mechanism

To provide rotation with virtually no friction, we use needle bearings with jewels, similar to those used in precision watch mechanisms. The peephole or viewing window in the Spindle or base of the Wind Instrument ensures that the Wind Direction Arrow is seated properly on the jewel.

Typical masthead anemometers use ball bearings packed in grease around an axle, all of which adds drag. But think of the point of a pin rotating on a surface harder than steel: no friction whatsoever. That is how the jewel bearings work in the Wind Instrument. Unlike electronic sensors (potentiometers) and axle bearings, jewels are also submersible, which is another advantage of this innovative new design.

The viewing window is shown in the picture below. It lets water drain if necessary, and allows you to adjust the spacing with a flat-blade jeweler's screwdriver, if an adjustment is needed in future. You can insert the jeweler's screwdriver into the Spindle from below to turn the jewel thread, which will adjust the spacing between the Spindle and the Pivot Rod above it. Similarly, you can turn the brass thread in the jewel in the top of the wind cups, to adjust their spacing above the Pivot Rod. These have all been pre-set at the factory, but can be adjusted in future if necessary.

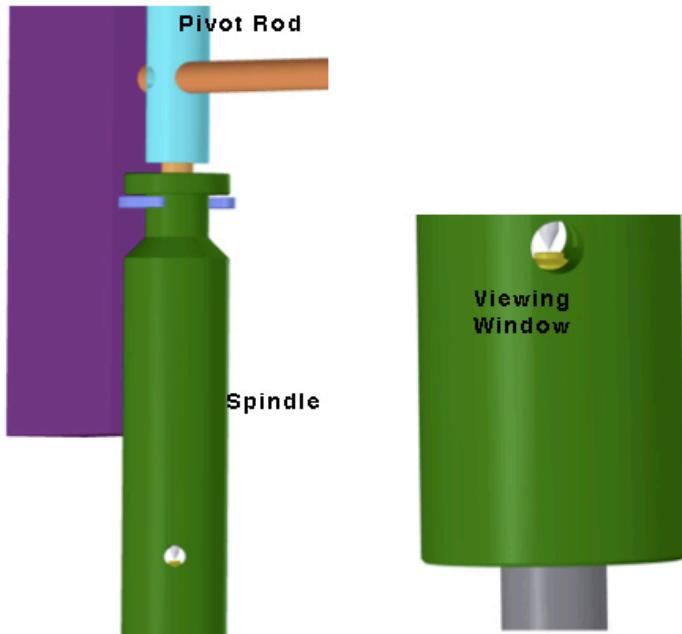

Adjustable jewel bearing in top of wind cup blades:



Secure Transmissions

Only one device can pair with the Wind Instrument at a time, to minimize power consumption. If it was communicating with two users (or more), it would use twice as much power (or more). However, you may be able to retransmit the wind data in the receiving unit. For example, the SailTimer™ app can retransmit wind data using wifi, as can the SailTimer Min-Server™ accessory for the Wind Instrument.


There are also security advantages to having only one user connect to the Wind Instrument, ensuring that someone else is not unintentionally receiving your wind data. They could not anyways, because the data transmitted from the masthead is encrypted.

When you get your Wind Instrument and first connect to it, you can rename serial number of the Bluetooth 4 connection, to make it easy to identify in future use. That way, you don't have any concern that you have connected to a different boat's Wind Instrument. (Which would not last long anyways, once they sailed away.) Bottom line: only you can connect to your Wind Instrument, with an encrypted, secure connection, and you cannot accidentally receive wind data from a neighboring boat.

Installation

Mounting Pattern for Drilling Holes

The drill pattern for the holes in the foot of the Mounting Rod are shown below. The units are in millimeters. For example, the four holes are 4.5 mm in diameter to fit the fasteners that come with the foot plate (which is just 21 mm square).

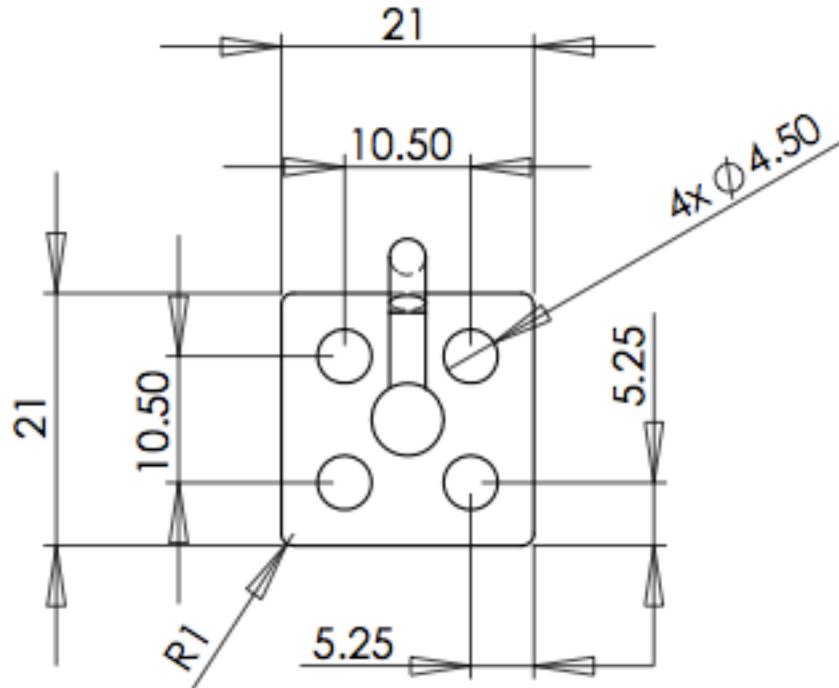

Units in mm.

The fasteners provided are size #8-32 stainless steel; nuts & bolts are provided in this size, and also screws in case you can't access the underside of the masthead to put a nut on.

For the #8 screws, drilling holes in the soft metal of the masthead with a 9/64-inch drill bit will provide a very snug fit, so the screws won't come loose. The screws have a wide head on them, so no washers are needed.

A threaded machine bolt and nut may hold better than a screw (assuming your masthead is aluminum). So the strongest attachment may be the bolt and nuts that come with the product -- although sometimes it is hard to get at the under side for the nut.

It is also possible to tap 4 threads in this pattern into the masthead, and add lock washers. Tapping is a way to get the same holding power, without needing the nut underneath.

L-Bracket

If you don't have space on top of the masthead, the optional L-Bracket allows you to mount on a vertical surface like a wall or the side of the mast. It has the 4-hole pattern on the horizontal part of the L, for the foot of the anemometer to bolt on to. For side-mounting, there are 3 holes, also for a #8 screw (4.5 mm in diameter). The outer two are 1.25" (31.75 mm) from center to center, with the center hole in the middle between these.



If mounting onto the side of masthead, it is better to put screws into the vertical side of the solid aluminum masthead itself, not into the thin aluminum of the hollow mast. Trying to hold screws in the side of the hollow mast itself doesn't give much purchase because the aluminum is so thin. You may also be able to put long stainless steel bolts right through, to have a more secure attachment. Or if you have a space free at the top of a small boat mast, you may be able to use hose clamps to securely hold the L-bracket, rather than trying to use screws in the side of a hollow mast.

Stanchion Mount with Wing-Nut Hose Clamps

In the photo below, rather than being mounted on top of a masthead, it is mounted on a stanchion using a handy L-bracket accessory.



Use the L-bracket with the L upside down, which ensures that it can't slide out the bottom of the hose clamps. The L-bracket comes with special wing-nut hose clamps that can be tightened by hand without any tools.


Off-Season Removal

You can leave the Mounting Rod or the L-bracket in place all winter if you want. That may less wear on the screw holes, than taking the screws out every year. It is fast and easy to unscrew the lock nut below the black base (the Spindle) of the anemometer, and turn the black base off of the stainless steel Mounting Rod.

It is also fine to leave the Wind Instrument in place in the off-season. It works in the winter too. If your mast is coming down for the off-season, you could also mount it outside at home to monitor winter storms (or leave it in a window to get sunlight). Then the solar panels can continue to charge the battery during the winter. You also have the option to periodically check the battery level to ensure that there is enough sun to keep it charged.

If your Wind Instrument has no off-switch, storing it in the dark for weeks or months with no charging could damage the battery (and is not covered by the warranty). If you do flatten the battery somehow, note that the battery level displayed is not correct until the battery has been fully recharged to recalibrate again.

Putting your Wind Instrument in storage during the off-season should only be done if your unit has a magnetic off-switch. In that case, the LED blinks every 10 seconds when Bluetooth 4 is not connected. You'll see that you can make the blinking stop/start by taping on the tiny magnet (on end) over the spot at the top of the circuit board shown at right, over the magnetic off-switch.

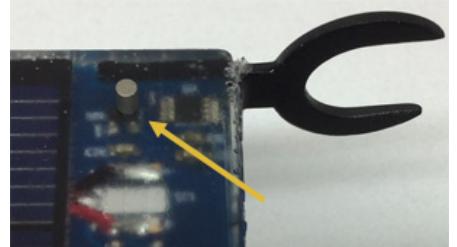

For users in northern (or southern) latitudes, the off-switch is recommended for storage during the off-season. When winter days are short, long stretches of cloudy weather may be a rare time when the Wind Instrument cannot get enough solar charging. So use the off-switch in that situation. If you have the original Wind Instrument with no off-switch, you will get better charging and the best battery care in the off-season with the Wind Instrument horizontal and aimed up at the sun. On the mounting rod, it may often be facing at the sun when the sun is out, which may not give enough charging in grey and cloudy winter light.

How to Install at the Masthead Without Lowering or Climbing the Mast

As described in the [mounting options](#) section of the web site, we have developed two procedures for raising your SailTimer Wind Instrument™ from deck level. Since this is really the beginning of wireless marine electronics, there has been little need to develop a system like this until now. But we get a lot of requests from customers who want to use our wireless anemometer on a boat that is already in the water, with the mast already up. So this gives you two convenient options for being able to use wind data right away.

Cantilever Method

You may have noticed the loop on the side of the Mounting Rod that came with your Wind Instrument. That is used with the Cantilever Method we have developed. This is the lowest-cost procedure.

Attach an extra pennant or foresail halyard to that metal loop on the Mounting Rod. Then add a thin line (e.g. 4-mm diameter) through 1 or 2 holes in the foot, as shown in the photo at right. It is amazingly simple: just raise the Wind Instrument with the halyard, then pull down on the thin line to swing the Wind Instrument upright like a cantilever.

Depending on the shackle or rope on the end of your halyard, you can usually make the Wind Instrument more vertical by tying around the Mounting Rod itself and through the loop. If you tie only to the loop (as with the shackle shown in the photo



on the bottom of the previous page), the Wind Instrument tends to tilt out a bit. It is better to connect around the Mounting Rod shaft and through the loop, if possible.

Pennant halyards are often found on a side deck, going up to a spreader. We don't recommend using the pennant halyard on a spreader, because the Wind Instrument would be blocked by the sails on some tacks. If you don't have a spare halyard going up to the masthead or want to try a different method, then it is best to use the Track Slider below.


SailTimer Track Slider™

Use this method if you don't have a spare halyard from a spinnaker or pennant, or if you need a more secure attachment. We hope that this procedure looks simple, but it actually took a lot of designing, prototyping, testing and refinement, since most mast tracks are unique.

The general approach is to raise the Track Slider up the mainsail mast track. Most mainsails have a rigid headboard on the top corner, and possibly also a few extra inches on the track above the mainsail. The Base Plate (photo at right) on the Track Slider is designed to sit flat against the mast, inside the mainsail halyard and the headboard on the top corner of the mainsail. The base plate itself only takes up 1 inch vertically at the top of the mast track. It has been tested with lots of different mast and sail types, although there may be rare examples where it won't fit (and can be returned for a refund).



The Base Plate is held in position by 2 slider cars in the mast track (which you provide, since there are different varieties on each different boat). A cable tie is provided that holds the slider cars in notches on the Base Plate. This holds the Base Plate in-between the two slider cars, straight and tight to the mast track.

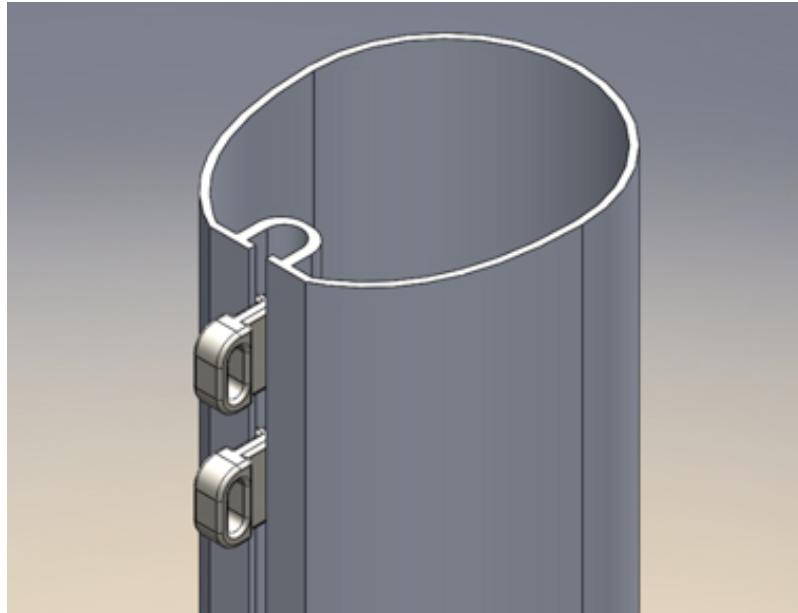

Next, attach two shackles through the two larger holes in the Base Plate, as shown in the photo at right. Use shackles that fit whatever clip or knot you have on the end of your halyard. Connect both shackles to the mainsail halyard, as shown in the photo below. If you tie the halyard rope directly to the two shackles, be sure the rope cannot rub on the edge of the base plate. If you use a shackle as shown in the photo below, use a shackle as short as possible, to let the base plate get closer to the masthead.

With the mainsail halyard being used to raise the Track Slider, you'll need another pulley block for the mainsail. Attach this pulley block for the mainsail to a shackle that is either on the mainsail halyard shackle or above it on the halyard itself (e.g., on a knot in the rope above - or on the loop attaching the shackle to the mainsail halyard), being careful to avoid any chafing areas on the rope. Then put a new rope through this new block to serve as the new mainsail halyard, so that the top plate on the mainsail will come up and over the Base Plate.



We provide cable ties, and three pairs of lock nuts and bolts in the Track Slider package. However, we thought you would prefer to provide your own block (pulley), because we didn't know which size you would want. Mainsail blocks/pulleys tend to be expensive, so this gives you some control over what size and price you prefer. The same is true with the additional mainsail halyard rope that you'll need to provide.

With the rig set up, you can then pull your original mainsail halyard to raise the SailTimer Track Slider™ to the masthead. It can stay there until you get access to the masthead for more permanent attachment of the Mounting Rod to the masthead with nuts & bolts. You can then also raise/lower the mainsail, using the additional block and halyard that you added. The photo above shows how most mainsails have an area at the top that will pass right over the base plate at the top of the mast track.

Finally, once the Track Slider rig is raised to the top of the mast, you can use a thin rope to pull the Mounting Rod vertical once the masthead is cleared. Attach this thin line to the loop on the Mounting Rod as shown in the photo below, or to base of Mounting Rod. It should be diagonal across above Base Plate, so that when you pull on the thin line, it will straighten the Mounting Rod and Wind Instrument to vertical. The thin line can also be used to pull down the SailTimer Track Slider™ later.





NMEA 0183 Sentence

NMEA 0183 is an open industry-standard format for data sent between marine electronics. The SailTimer Wind Instrument™ sends the wind speed and wind direction in NMEA 0183 format, as shown below. The SailTimer™ chartplotter app (and Charts Edition) can receive that data, and we also encourage third-party apps to receive the wind data too. It is also possible to send this data into the wiring for marine electronics, using the [SailTimer Mini-Server™](#).

1) NMEA WIND SPEED AND DIRECTION SENTENCE

The format of the NMEA sentence that we use is: \$WIMWD,148,T,166,M,1.2,N,0.6,M*--

The initial 2 letters after the \$ are the talker-ID, with WI specifying that it is Weather Information. Then the MWD indicates that it is wind speed and direction. Note: MWV is a common sentence for wind *angle*, which we have used previously. However, this new version of the Wind Instrument has a built-in compass, measuring wind direction. It does not need to be calibrated to the bow of the boat; it knows which way it is pointing. Therefore we use the MWD sentence for wind direction, not wind angle.

All of the wind data in MWD is True wind (not Apparent or Relative). 148,T is the wind direction in True (non-magnetic) degrees. 166,M in the above example is the Magnetic wind direction.

1.2,N is the wind speed in knots, which is represented by N in the sentence. 0.6,M is the wind speed in meters per second. Finally, the 2 digits after the '*' is a checksum.

Repair and Maintenance

If you ever needed to disassemble the unit (e.g. to replace broken wind cups), this is easily done. There are instructions here for loosening the dome nut and set screw, to allow the tail to be pulled back: www.sailtimerwind.com/replacement.html. That moves the retaining clip away from the flange of the wind cups, so that you can lift the wind cups off. We would recommend not unthreading the brass nose cone, since it is firmly in place with adhesive, and you don't want it to work itself loose in future. If you do remove it, add adhesive on the threads when you turn it back on.

If the wind cups are making sound when spinning, some maintenance may be needed if that becomes noticeable. Depending on where you have mounted the Wind Instrument, you may not hear a spinning sound over the wind noise. But lubricating the axle will eliminate all sound. It is best to remove the wind cups using the instructions on the link above. But if you want to try oiling the axle without taking the wind cups off, it may also be possible to just put one or more drops of oil on the small gap below the wind cups, where you can see the silver aluminum axle. Then turn the unit upside down until the oil runs down the axle, and wipe off any excess on the plastic.

Silicone lubricant and penetrating oil on the axle will work, although it is a bit thin, so it seems to disappear after awhile. We have gotten the best results with motor oil. Thicker oil generally maintains a better film of lubrication between moving parts. But even thin oil (lower viscosity) is enough for the wind cup blades, and is thicker than silicone lubricant spray. 5W-30 is thinner than 10W-40, although two drops of any motor oil would be fine. Spread it along the axle, and then give the wind cups a spin. Presto: completely silent!

Power Management

The Wind Instrument is one of the first devices in the world that can transmit to smartphones and tablets powered only by solar panels. At SailTimer Inc. our engineers have done extensive R&D to make the power consumption in the Wind Instrument extremely frugal.

When using the SailTimer API™ or a mobile app, there are a few things that you may want to be aware of regarding battery levels. First, there is a Disconnect button in the upper right corner of the API (on iOS). If you are not using the Wind Instrument while on board (e.g., at night), or are leaving the boat, this allows you to disconnect until next time. It shuts off the Bluetooth transmissions and also shuts off Location Services (the GPS) in your iPad/iPhone. That preserves power in your iPad/iPhone. Plus, when the Wind Instrument is not connected on Bluetooth, it uses 1/3 less power.

If your Wind Instrument is not functioning because the battery power is too low, it needs to be charged up to full again before the battery level readings are meaningful. That allows the Wind Instrument to calibrate the full range of voltages at all battery levels.

It may take 3-6 days of direct sunlight to build up enough voltage for the Wind Instrument to come back to life. But once it does, if it mounted outdoors it will be able to operate indefinitely, generating more than enough power.

End-User License Agreement

This End-User License Agreement (“Agreement” or “EULA”) governs your use of the software and hardware in the SailTimer Wind Instrument, and Services provided by SailTimer Inc., its subsidiaries and contractors (“SailTimer Inc.”). The Software is licensed, not sold.

You, the end-user of the Software, acknowledge that the Agreement is entered into by and between SailTimer Inc. and you. The Software includes, for the purposes of this Agreement, any dedicated hardware, such as circuit boards, and the Wind Instrument sold along with the Software for express use with the Software by SailTimer Inc.

Your purchase or use of the Software constitutes your acceptance of the terms of this Agreement, which may be amended from time to time by SailTimer Inc. This Agreement is also available in the Owner’s Manual. SailTimer Inc. reserves the right to change or modify this Agreement or any other SailTimer Inc. policies related to use of the Software or Services at any time, and at its sole discretion, by posting revisions on the relevant web site or Owner’s Manual online. Continued use of the Software and Services following the posting of these changes or modifications will constitute acceptance of such changes or modifications.

1. License.

Subject to the terms of this Agreement, SailTimer Inc. grants to you a nontransferable, nonexclusive, royalty-free, fully paid, worldwide license (without the right to sublicense) to install and use one copy of the Software, in executable object code format only, solely on your Computing Device or in The Saitimer Wind Instrument.

2. License Restrictions.

You agree to the following license restrictions: (a) to use the Software solely for your personal, noncommercial use; (b) to not duplicate, copy or distribute the Software except as necessary to use it on your Computing Device; (c) to not license, sell, rent, lease, transfer, assign, distribute, host, outsource, disclose or otherwise commercially exploit the Software or make the Software available to any third party; (d) to not copy the written materials accompanying the Software; (e) to not modify, translate, make derivative works of, disassemble, reverse compile or reverse engineer any part of the Software in order to build a similar or competitive product or service, including without limitation the look and feel of the Software; (f) to not use any trade-mark or trade-name in the Software without permission; (g) to not copy any physical design elements of a dedicated SailTimer Wind Instrument running with the Software, if applicable; and (h) to preserve all copyright and other proprietary rights notices on the Software and all copies thereof.

3. Copyrights and Trademarks.

You acknowledge that no title to the intellectual property in the Software is transferred to you. You further acknowledge that title and full ownership rights to the Software will remain the exclusive property of SailTimer Inc. and/or its suppliers, and you will not acquire any rights to the Software, except as expressly set forth above. All title and copyrights in and to the Software (including but not limited to any images, photographs, animations, video, audio, look and feel, music, text and dynamic interactive elements incorporated into the Software), the accompanying printed materials, and any copies of the Software, are owned by SailTimer Inc. or its suppliers. This Software is protected by copyright laws, international copyright treaties, other intellectual property laws and treaties.

4. Updates Or Upgrades To The Software.

SailTimer Inc. is not obligated to provide any updates or upgrades to the Software, but may do so from time to time at its sole discretion.

5. Services; Third-Party Materials.

A. Generally.

The Software may enable access to SailTimer Inc. and third-party services and web sites (collectively and individually, “Services”). Use of the Services may require Internet access and you accept additional terms of service by making use of these Internet-accessible Services.

Certain Services may display, include or make available content, data, information, applications or materials from third parties (“Third-Party Materials”) or provide links to certain third-party web sites. By using the Services, you acknowledge and agree that SailTimer Inc. is not responsible for examining or evaluating the content, accuracy, completeness, timeliness, validity, copyright compliance, legality, decency, quality or any other aspect of such Third-Party Materials or web sites. SailTimer Inc. does not warrant or endorse and does not assume and will not have any liability or responsibility to you or any other person for any Third-Party Materials or web sites, or for any other materials, products, or services of third parties. Third-Party Materials and links to other web sites are provided solely as a convenience to you.

DATA FROM THE SAILTIMER WIND INSTRUMENT, WHICH INCLUDES GPS DATA, MAPS AND NAVIGATIONAL DATA, PROVIDED BY ANY OF THE SERVICES IS FOR BASIC NAVIGATIONAL PURPOSES ONLY AND IS NOT INTENDED TO BE RELIED UPON IN SITUATIONS WHERE PRECISE LOCATION INFORMATION IS NEEDED OR

WHERE ERRONEOUS, INACCURATE OR INCOMPLETE LOCATION DATA MAY LEAD TO DEATH, PERSONAL INJURY, PROPERTY OR ENVIRONMENTAL DAMAGE. NEITHER SAILTIMER INC., NOR ANY OF ITS CONTENT PROVIDERS, GUARANTEES THE AVAILABILITY, ACCURACY, COMPLETENESS, OR RELIABILITY OF DATA DISPLAYED BY ANY OF THE SOFTWARE OR SERVICES. USE OF THE SAILTIMER INC. PRODUCTS, SOFTWARE AND/OR SERVICES IS AT THE MARINER'S OWN RISK. THE DEVELOPER ASSUMES NO LIABILITY FOR THE USE OR OPERATION OF THESE PRODUCTS. MARINERS ARE ADVISED NOT TO RELY SOLELY ON ANY SINGLE AID TO NAVIGATION.

You agree that the Services contain proprietary content, information and material that is protected by applicable intellectual property and other laws, including but not limited to copyright, and that you will not use such proprietary content, information or materials in any way whatsoever except for permitted use of the Services. No portion of the Services may be reproduced in any form or by any means. You agree not to modify, rent, lease, loan, sell, distribute, or create derivative works based on the Services, in any manner, and you shall not exploit the Services in any unauthorized way whatsoever, including but not limited to, by trespass or burdening network capacity.

SailTimer Inc. makes no representation that the Services are appropriate or available for use in any particular location. To the extent you choose to access such Services, you do so at your own initiative and are responsible for compliance with any applicable laws.

SailTimer Inc. reserves the right to change, suspend, remove, terminate, or disable access to any Services for any or no reason at any time without notice. In no event will SailTimer Inc. be liable for the removal of, termination, or disabling of access to any such Services. SailTimer Inc. may also impose limits on the use of or access to certain Services, in any case, and without notice or liability.

B. Use Of Your Personal Information.

In order to use certain aspects of the Software or to receive any technical support from SailTimer Inc., you may be required to provide an e-mail address. If you choose not to provide an e-mail address, you may not be able to use certain features of the software and services. By entering your e-mail address you agree that SailTimer Inc. can use your e-mail address to send you electronic communications concerning SailTimer Inc., the Software and Services. SailTimer Inc. will not distribute, rent or sell your e-mail address.

We may place e-mail links or forms in the software and services to allow you to contact SailTimer Inc. It is always your choice whether or not to provide any personal information.

Location Based Information. SailTimer Inc. does not collect personally identifying location-based data from you through the software and services. You agree that SailTimer Inc. may collect location-based data from you through the Software, and may use this information, as long as it is in a form that does not personally identify you. You will have the ability to utilize social media network location services which inherently share personally identifying location-based data, and are governed by EULAs, Terms & Conditions and Privacy Policies specific to those services. The Software may provide SailTimer Inc. with weather data gathered by it associated with the geolocation data, periodically.

International Transfers. Your e-mail address and non-personally identifying location-based information collected through the software and services may be processed in Canada or another country outside the one in which you reside. By using the software and services, you agree to any such transfer of information outside of your country.

6. No Warranty.

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE SOFTWARE IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE SOFTWARE AND SERVICES PERFORMED OR PROVIDED BY THE SOFTWARE ("SERVICES") ARE PROVIDED "AS IS" AND "AS AVAILABLE", WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND SAILTIMER INC. HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE SOFTWARE AND SERVICES, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY, OF FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS.

SAILTIMER INC. DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE, THAT THE FUNCTIONS CONTAINED IN, OR SERVICES PERFORMED OR PROVIDED BY, THE SOFTWARE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE SOFTWARE OR SERVICES WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE OR SERVICES WILL BE CORRECTED. SAILTIMER INC. ASSUMES NO RESPONSIBILITY FOR ANY ERROR, OMISSION, INTERRUPTION, DELETION, DEFECT, DELAY IN OPERATION OR TRANSMISSION, COMMUNICATIONS LINE FAILURE, THEFT OR DESTRUCTION OR UNAUTHORIZED ACCESS TO, OR ALTERATION OF, ANY COMMUNICATION. SAILTIMER INC.

IS NOT RESPONSIBLE FOR ANY PROBLEMS OR TECHNICAL MALFUNCTION OF ANY TELEPHONE NETWORK OR LINES, GLOBAL POSITIONING SYSTEMS, SATELLITES, COMPUTER ONLINE SYSTEMS, SERVERS OR PROVIDERS, COMPUTER EQUIPMENT, SOFTWARE, FAILURE OF ANY EMAIL OR PLAYERS DUE TO TECHNICAL PROBLEMS OR TRAFFIC CONGESTION ON THE INTERNET OR ON ANY OF THE SERVICES OR COMBINATION THEREOF, INCLUDING ANY INJURY OR DAMAGE TO USERS OR TO ANY PERSON'S COMPUTER RELATED TO OR RESULTING FROM PARTICIPATION OR DOWNLOADING MATERIALS IN CONNECTION WITH THE SAINTIMER INC. SERVICES. SHOULD THE SOFTWARE OR SERVICES PROVE DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY SAINTIMER INC. OR ITS AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY.

UNDER NO CIRCUMSTANCES SHALL SAINTIMER INC. BE RESPONSIBLE FOR ANY LOSS OR DAMAGE, INCLUDING PERSONAL INJURY OR DEATH, RESULTING FROM USE OF THE SERVICES, OR FROM THE CONDUCT OF ANY USERS OF THE SERVICES, WHETHER ONLINE OR OFFLINE.

SAINTIMER INC. CANNOT GUARANTEE AND DOES NOT PROMISE ANY SPECIFIC RESULTS FROM USE OF THE SAINTIMER INC. SERVICES.

Some jurisdictions do not allow the exclusion of implied warranties or limitations on applicable statutory rights of a consumer, so the above exclusion and limitations may not apply to you.

7. Limitation Of Liability.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL SAINTIMER INC. BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, LOSS OF DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE SOFTWARE OR SERVICES, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF SAINTIMER INC. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL SAINTIMER INC.'S TOTAL LIABILITY TO YOU FOR ALL DAMAGES (OTHER THAN AS MAY BE REQUIRED BY APPLICABLE LAW IN CASES INVOLVING PERSONAL INJURY) EXCEED THE AMOUNT PRICE PAID FOR THE SOFTWARE, IF ANY. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

Some jurisdictions do not allow the limitation of liability for personal injury, or of incidental or consequential damages, so this limitation may not apply to you.

8. Indemnification By You.

You agree to indemnify and hold SailTimer Inc., its subsidiaries, and affiliates, and their respective officers, agents, partners and employees, harmless from any loss, liability, claim or demand, including reasonable attorney's fees, made by any third party due to or arising out of your use of the Software or Services in violation of this Agreement, arising from a breach of this Agreement, or any breach of your representations or warranties.

9. Injunctive Relief.

You acknowledge that a violation of the provisions of this Agreement would cause serious and irreparable harm to SailTimer Inc. If a breach of this Agreement occurs, you agree that SailTimer Inc. shall be entitled to an injunction without the necessity of proving the usual prerequisites for injunctive relief. This does not affect in any manner any other legal or equitable remedies available to SailTimer Inc. for breach of this Agreement. SailTimer Inc. has the right to seek injunctive relief to enforce this Agreement or to stop or prevent an infringement of proprietary or other third-party rights.

10. Choice Of Law, Jurisdiction And Venue.

You agree that any disputes between SailTimer Inc. and you shall be resolved under the substantive law of the province of Nova Scotia in Canada (exclusive of its choice of law provisions). The Convention for the International Sale of Goods shall not apply. You and SailTimer Inc. agree to submit all disputes to the exclusive jurisdiction of the provincial and federal courts located in Halifax, Nova Scotia, Canada.

11. Assignment.

You may not assign your rights under this Agreement to any third party; SailTimer Inc. may assign your rights under this Agreement without condition. You acknowledge that the Software and any associated licenses have been assigned to SailTimer Inc., and release Indepth Navigation and its directors, shareholders and employees from any liability or obligation with respect to the Software.

12. Termination.

The Software license is effective until terminated by you or SailTimer Inc.. Your rights under this license will terminate

automatically without notice from SailTimer Inc. if you fail to comply with any term(s) of this license. Upon termination of the license, you shall cease all use of the Software, and destroy all copies, full or partial, of the Software.

13. Consent To Use Of Data.

You agree that SailTimer Inc. may collect and use technical data and related information, including but not limited to technical information about your device, system and application software, and peripherals, that is gathered periodically to facilitate the provision of software updates, product support and other services to you (if any) related to the Software. SailTimer Inc. may use this information, as long as it is in a form that is not intended to personally identify you, to improve its products or to provide services or technologies to you.

14. Agreement.

This Agreement constitutes the entire agreement between you and SailTimer Inc. regarding the use of the Software, and supersedes any prior or contemporaneous understandings and agreements between you and SailTimer Inc. related to its subject matter. The section titles in this Agreement are for convenience only and have no legal or contractual effect. SailTimer Inc.'s failure to exercise or enforce any right or provision of this Agreement shall not operate as a waiver of such right or provision. The parties agree that each provision of this Agreement is intended to be construed to be enforceable to the fullest extent possible. If any provision or part of a provision of this Agreement is held to be unlawful, void, or unenforceable, that provision or part of the provision shall be deemed severable from this Agreement and not affect the validity and enforceability of any remaining provisions.



Bon voyage.