NUC121Z 燒錄流程

參考資料:

https://www.nuvoton.com/export/resource-files/UM_Nuvoton_Nu-Link_Debug_Adapter_EN_Rev1.01.pdf

燒錄器說明

https://www.nuvoton.com/export/resource-files/UM_ICP_Programming_Tool_EN_Rev2.06.pdf

燒錄軟體說明

https://www.youtube.com/watch?v=fZTudSOlv_A

Youtube 影片教學


https://danchouzhou.blogspot.com/2017/11/numicro-isp.html

我學長寫的推薦文章

操作說明

1. 下載 NuMicro ICP Programming Tool


 $\underline{\text{https://www.nuvoton.com/tool-and-software/software-tool/programmer-tool/}}$

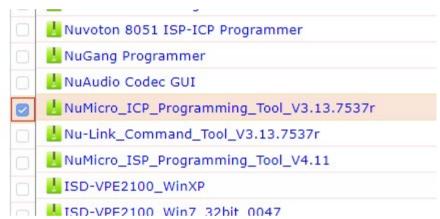

2. 安裝完後選擇 NUC121/NUC125



3. 按照 SWD 的介面接線主板與燒錄器

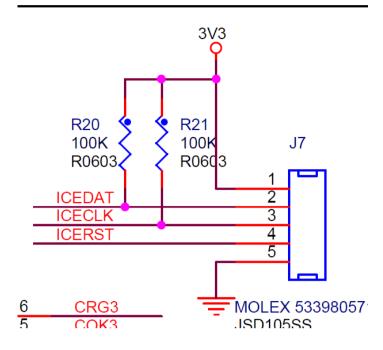

4. 連接燒錄器到電腦



5. PROM 來燒錄,把 Hex 檔選擇在這路徑底下



6. 只要選擇 APROM 就好,並按開始

文件數據				- 片上Flas	sh			脫機Flash					
LDROM	APROM	數據Flash	SPROM	LDROM	APROM	數據Flash	SPROM	LDROM	APROM	數據Flash	SPROM	信息	
											8位		
											○ 16位		
											○ 32位		
											刷	ÞE.	
L											, Europe	E) I	
編程													
LDR	OM	✓ APROM	□數據	象Flash	SPR	ом 🕝	配置區		選項		開始	á	
											ŧ	黄建: 74	43