



Ultrasonic Cleaner

User Manual

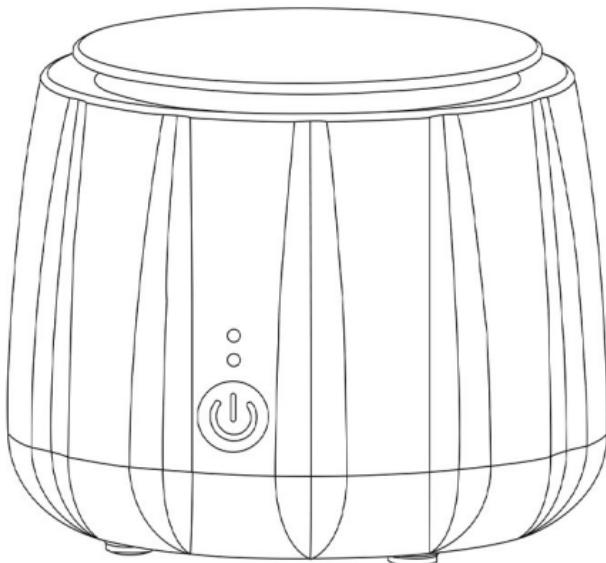


Dear users, thank you for choosing our company's products, in order to enable you to operate the machine smoothly and get the most perfect product experience, please carefully read and save the user instruction manual.

Product Structure

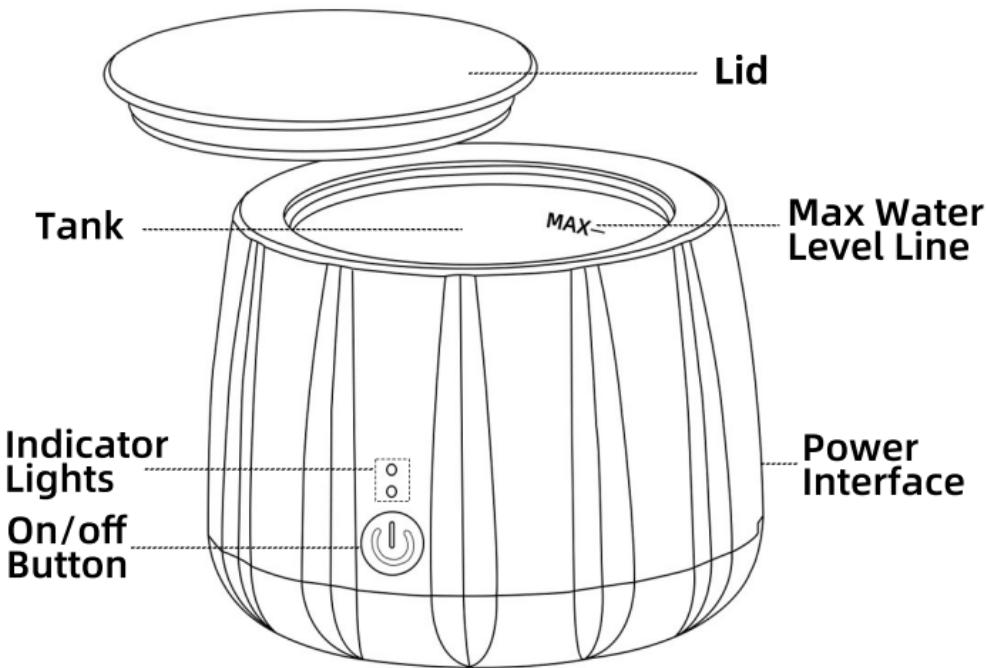


Scope of Application

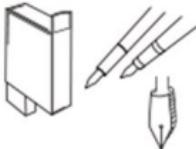


Dentures, necklaces, rings, earring, folding eyeglasses, waterproof watches, shaver heads, comb, toothbrush, penheads, small metal parts, coins, and so on.


Elimination of Dirt Through Ultrasonic Technology

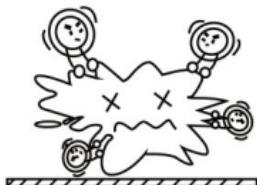

Many tiny bubbles are regenerated under the action of ultrasonic

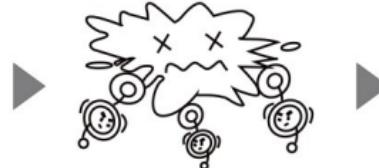

Bubbles are imploded constantly under the action of ultrasonic to impact the surface of the item

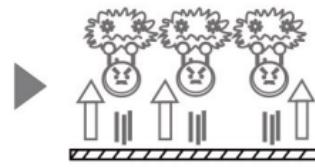

The impact splits up the dirt into many granules and separates them from the surface of the item, the granules then come into water

Operating Instructions



1. Open the lid, add water to the water tank (Note: Do not exceed the MAX water level line), and then put in the items to be cleaned. When cleaning, you can add detergent or cleaning tablets to be used in conjunction.




2. Cover the lid and connect the power supply. (Note: Please do not start the machine without water, the machine will be damaged).



3. Press the on/off button once, the machine will start to clean regularly for 5 minutes (red light will be on); press the on/off button again, the machine will start to clean regularly for 10 minutes (green light will be on); when the cleaning is finished the machine will stop automatically (light will be off).



4. During the cleaning process, the machine will make a humming sound. This indicates that the machine is working properly.

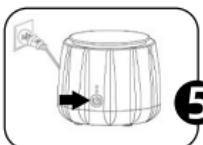

5. If you want to stop the machine during the cleaning process, simply press and hold the on/off button until the light turns off.



6. When you have finished cleaning, unplug the machine, open the lid and remove items. Empty the water tank and wipe it dry.

Cleaning method



1. General Cleaning

Use clean water for regular 5/10 minute cleaning. Objects should be fully immersed in water, but should not exceed the maximum water level indicated.



2. Intensive Cleaning

When the dirt on the object is stubborn, the surface of the object can be brushed first, followed by adding about 5-10 ml of detergent or cleaning tablets to the water to enhance the cleaning effect.
(Note: Do not exceed the labeled maximum water level line)




3. Large Objects Cleaning

Open the lid.

For larger objects, place them as shown in the picture.


Partial cleaning. (Note: Do not exceed the highest water level line indicated)

Machine Maintenance

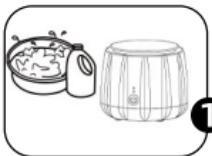

After use, please pour out the water and wipe clean the inner liner and body.

Do not rinse the unit directly with water to prevent electric shock.

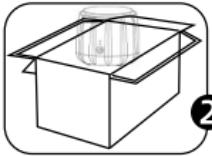

Please keep the product in a cool and dry place.


Attention



Keep the unit and cords away from heated surfaces and on a dry, level surface.



Do not leave the unit unattended when it is plugged in.

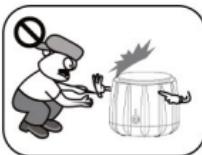

Do not disassemble the unit except for the authorized technician.




Do not fill the tank with abrasives or corrosive chemicals.




Remove the power plug before adding water. Do not exceed the "MAX-" mark.



Do not immerse the unit into water to avoid electric shock.

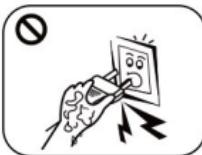

Do not touch the socket with wet hands to avoid electric shock.

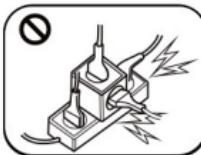

Use the unit properly as per its instruction manual. Do not use attachments not recommended by the manufacturer.

CAUTION: Do not operate the unit for long periods of time or continuously.