



大寰电机 SAC-NP2 驱动参数

导入/导出操作手册

1、连接驱动器。

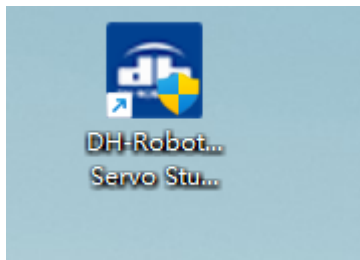

双击打开软件

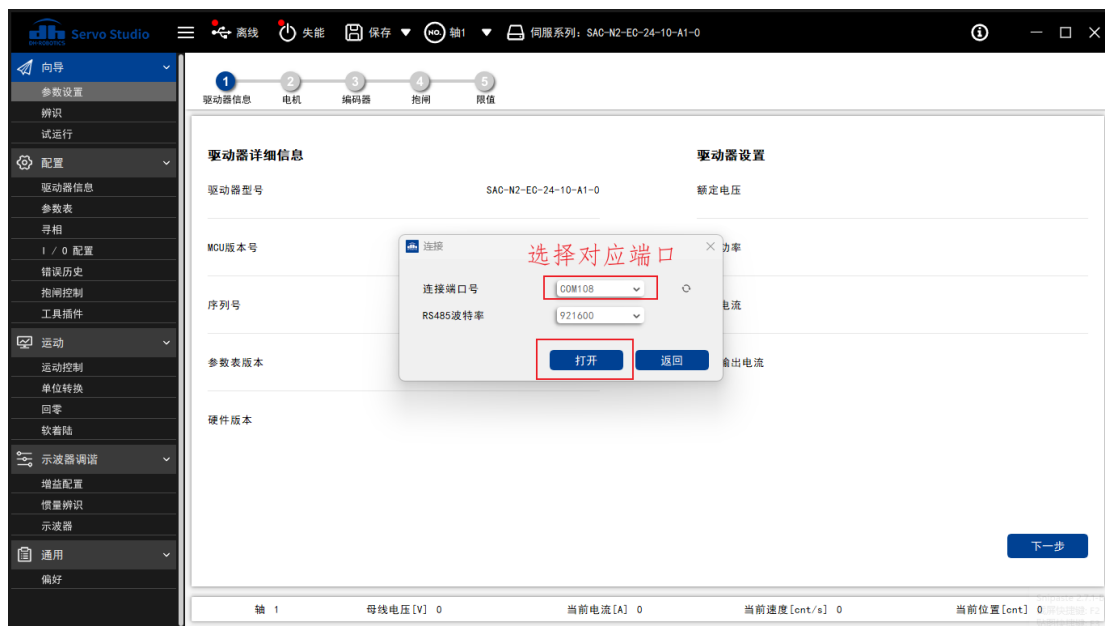

2、连接成功。



3、参数表功能详情。



4、导入参数。



	DLARA-13-45-R轴参数20251230.csv	2025/12/30 17:01	Microsoft Excel ...	68 KB
	DLARA-13-45-Z轴参数20251230.csv	2025/12/30 17:02	Microsoft Excel ...	68 KB



注意：导入时注意区分 Z、R 轴参数，轴 1 对应 Z 轴，轴 2 对应 R 轴。

5、导出参数。

