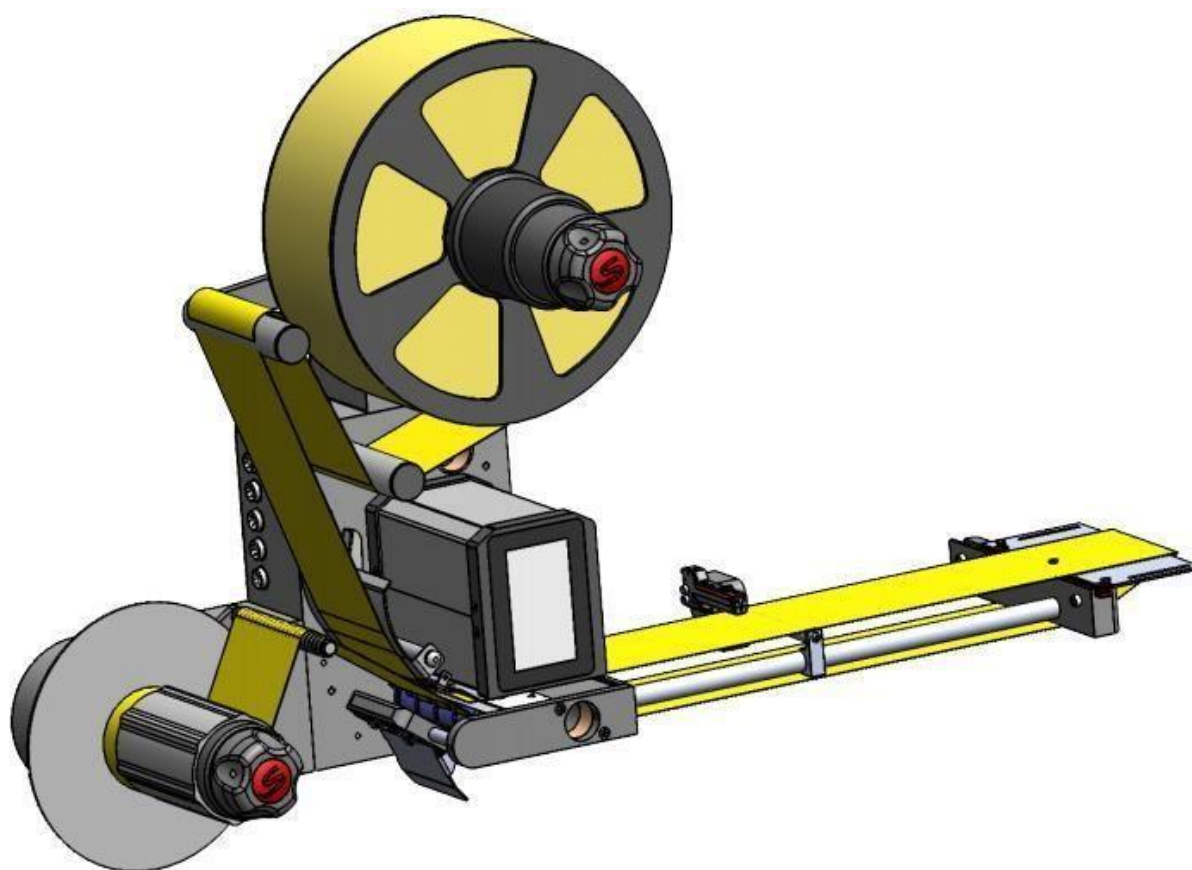


SERVICE MANUAL

DISPENSER S MODEL



Material Number of Documentation SM-02.00.01



Version: 27.08.24(V5)

First of all, thank you for choosing us.

Carefully read the instructions and warnings in this user manual. This user manual contains important information about the safe installation, use and maintenance of your product and the necessary warnings for you to make the most of the product. Some pictures in the user manual may differ from machine to machine due to version update.

Keep this manual in case it helps you later.

The manufacturer cannot be held responsible for any damage to people or the environment or to other materials resulting from the translation or printing of this book, resulting from incorrect use of the product.

Publication date of this document: 27.08.2024

**This service manual is provided by SAVEMA Marking and Coding Machines Ind. Trade Ltd.
Sti. belongs to the company.**

It can never be copied or reproduced.

**SAVEMA Company may make changes to the information and pictures in the user manual
without prior notice.**

Contact and Technical Support Number: +90 332 239 23 39

TABLE OF CONTENT

ABOUT SAVEMA	4
1. HEALTH AND SAFETY.....	5
2. LABEL DEFINITIONS	8
3. MANUFACTURER, SELLER AND TECHNICAL SERVICE CONTACT INFORMATION.....	10
4. PRODUCT FEATURES	11
5. MODEL DEFINITIONS.....	12
6. PRODUCT INSTALLATION AND HANDLING INFORMATION	13
7 MAIN MENU TREE.....	14
8 BOOT MENU	15
9 DISPENSER SETTINGS.....	16
1. MAIN MENU.....	16
1.1 START BUTTON.....	17
1.2 LABELLING PER MUNITE	17
1.3 SPEED INFORMATION	17
1.4 TOTAL NUMBER OF LABELLING.....	17
1.5 LABELLING SETTING	18
1.6 TASK LIST	19
1.7 INFO MENU	20
1.8 CLOCK.....	21
1.9 LABEL RATE.....	21
1.10 SYSTEM ERROR.....	21
1.11 ERROR	21
1.12 TEST BUTTON	21
1.13 ADVANCED SETTINGS.....	22
1.13.1 LANGUAGE SETTINGS	22
1.13.2 SIGNAL SETTINGS.....	23
1.13.3 LABEL SETTINGS.....	26
1.13.4 HARDWARE SETTINGS	31
1.13.5 PRINTER SETTINGS.....	34
1.13.6 CONTROL & SETTINGS	34
1.13.7 BLOW SETTINGS.....	36
1.13.8 COMMUNICATION SETTINGS.....	36
1.13.9 USER SETTINGS	38
ELECTRICAL CONNECTIONS	41
1. ELECTRONIC COMPONENTS AND BOARD CONNECTIONS OF THE MACHINE	41
1.1 MAINBOARD	41
1.1.2 MAINBOARD CONNECTION.....	42
1.2 MOTOR DRIVER BOARD.....	47
1.2.1 MOTOR DRIVER BOARD CONNECTION.....	48
1.3 POWER SUPPLY	51
2. DISPENSER CABLE CONNECTION	52
2.1 Product Photocell Connection	53
2.2 Blow out Connection	53
2.3 Encoder Connection.....	53
2.4 Fault-Busy Connection	53
2.5 Printer Connection.....	53
2.6 Power Input.....	54

2.7 Label Sensor Connection	54
2.8 USB Connection	54
2.9 Camera Connection	54

MECHANICAL ADJUSTMENTS.....55

1. ADHESIVE LABELS	56
2. THREADING THE LABEL WEB	56
2.1 LEFT DIRECTION LABEL DIAGRAM	56
2.2 RIGHT DIRECTION LABEL DIAGRAM	57
2.3 LEFT DIRECTION LABEL DIAGRAM DISPENSING PLATE WITH SPRING-LOADED ROLLER, 75 ° ANGULAR.....	57
2.4 RIGHT DIRECTION LABEL DIAGRAM DISPENSING PLATE WITH SPRING-LOADED ROLLER, 75 ° ANGULAR	57
3. OVERVIEW AND SUB-ASSEMBLIES	57
3.1 OVERVIEW	58
3.2 STANDARD WINDER	58
3.3 ADJUSTING THE REEL BRAKE	59
3.4 PRESSING ROLL ADJUSTMENT	59
4. DISPENSER EXPLODED PARTS.....	60
4.1 WINDER EXPLODED PARTS.....	60
4.2 WINDER LABEL SYSTEM EXPLODED PARTS	61
4.3 UNWINDER EXPLODED PARTS	61
4.4 UNWINDER LABEL SYSTEM EXPLODED.....	62
4.5 UNWINDER LABEL SYSTEM (1.5") EXPLODED	63
4.6 DISPENSER EXPLODED PARTS	67
4.7 CONSTRUCTION EXPLODED PARTS	70
4.8 SCRAPER EXPLODED PARTS.....	71

ABOUT SAVEMA

Savema Marking and Coding Machines Ind.Trade.Co.Ltd. was established in 1995 to manufacture packaging machines. Our company has always aimed to realize the firsts and to produce products that are not produced in Turkey. Our company, which established an organized team by determining the needs in the sector in 2006, completed its R&D studies within 3 years and produced its first machine and achieved a great success.

Savema Marking and Coding Machines Ind.Trade.Co.Ltd. by incorporating electronic, mechanical, software and machine design, it can offer special designs depending on the wishes of our customers. The main goal of our company is to complete the product range in thermal transfer printers. For this purpose, 32mm, 53mm, 107mm and 128mm printers are currently being produced. In addition, traverse printers, feeders and conveyors are produced by our company. Feeding and conveyor belts are used effectively with both thermal transfer printers and ink-jet printers.

Savema Marking and Coding Machines Ind.Trade.Co.Ltd. focuses on thermal printers and aims to discover all kinds of innovations and developments in this field and continues its research and development studies for this purpose. Our company, which works to increase its product range day by day, is proud of adding the dispenser product to its inventory.

Savema Marking and Coding Machines Ind.Trade.Co.Ltd. fixed and variable barcodes, text and graphics, real time information, production, expiry dates, prices, shift information, codes, etc. Many different types of information can be written effectively and economically.



1. HEALTH AND SAFETY

1.1 General Safety Rules

Before operating the machine, please read the following information;

1. Do not open the back cover of the machine without cutting off the electricity.
2. The machine should not be operated without the rear cover attached.
3. Be careful against accidents that may occur due to careless use during machine use.
4. Be sure to take precautions against all possible hazards while working near the machine. Keep the machine and itself clean at all times. Do not slide, drop or move the machine.
5. Do not throw anything into the machine, do not insert it, do not wash it with water.
6. Dispenser and parts sold together. Therefore, machine parts should not be attached to another dispenser.
7. Do not touch the machine or the display panel with wet or damp hands.
8. Do not operate the machine in open areas exposed to rain or snow.
9. Do not apply high voltage electricity to the machine outside of its operating range. This can cause the electronic parts of the machine to burn out and therefore break down.
10. It is recommended that the machine be used by qualified personnel.
11. For mechanical and electrical part replacements, the parts sent or recommended by SAVEMA should be used.
12. The above information has been written to create a general awareness. This information is necessary for safe use and storage.

1.2 Machinery Safety

The machine is designed to work in compliance with safety rules and these rules must be followed.

WARNING: Negligence will void the machine warranty.

1.3 General Security

1.3.1 Warning Notes



Use

Do not carry the machine by grasping the screen or label passing areas during transportation. These areas are not for transporting equipment. Use the foot part on which it is mounted to carry the dispenser.

Organic solvents

When cleaning the machine, do not use solvents or excessively moist materials that may cause residual conductivity.



Deadly tensions

When the machine is connected to the electricity mains, it should be used with care. Only authorized and trained personnel should perform the maintenance. All legal safety rules and practices should be followed. Otherwise, our company is not responsible for the dangers that may occur.



Hand/finger pinch hazard

There are rotating mechanisms in the machine. These mechanisms can be controlled with the help of the screen. When using the motor rotation feature from the control menu on the control panel, make sure that your finger is not near the motor. Otherwise, your hand/finger may be in danger of being pinched.

Insurance for fire hazard

In order to protect against the risk of fire and its recurrence, only the specified type and class of insurance should be used.

1.3.2 Cautions



Equipment damages

You should avoid the possibility of instantaneous electrical surges to avoid damage to the equipment. Do not unplug any connectors connected to the printer while the printer is on.

Mains voltage

Do not exceed the supply voltage specified in the manual to avoid equipment damage.

Cable routing

Controlled routing of cables with moving parts is required to avoid damage to equipment and cables.

Spare parts and consumables

Only use Savema spare parts and consumables to protect the machine from hazards.

1.4 Recommended Usage

This document and the accompanying USB content contain information on safe assembly, installation, operation, troubleshooting, illustrated parts, electrical schematics, recommended spare materials, preventive maintenance procedures. Use other than Savema's recommended use is considered to be abusive use of the product. Please get support from Savema technical support units.

Abuse includes the following situations and other situations not mentioned here.

- Operating the system with materials and parts that are missing without permission or not approved by Savema
- Operating without taking into account the system usage rules, general warnings and indicators recommended by Savema
- Use by people without technical training
- Operating the system that has been maintained and repaired with materials not recommended by Savema

The information in this document reflects the experience and knowledge of Savema as of the date of this document. The content of this document is for informational purposes only. The use of the parts mentioned in this document should only be done as specified, Savema will not be responsible if these parts are used in different combinations in another system.

Note: Savema Machines' warranty policy does not cover power surges, short circuits and damage caused by installation. Defects caused by water and moisture coming into the machine, cables and sockets removed while the machine is running are not covered by the warranty.

2. LABEL DEFINITIONS

The label on the bottom belongs to the side where the power cable is plugged. Their definitions are as follows.



At the top, there is the name of the device, the operating voltage range and the CE certificate.

This part of the label contains the power input and the on/off switch. In the "I" position the machine is on, in the "O" position it is off.

Plug: indicates the type of power cable used.

Label Sensor: the sensor that detects the progress of the package is installed.

The Danger sign draws attention to the presence of power input and emphasizes the need for caution.

USB/ETHERNET port is used for update or ethernet connection.

The label below contains the manufacturer's information.



There is the name of the manufacturer, the name of the machine and the emblem indicating that the device has a CE certificate.

The model, year of manufacture and serial number of the machine are indicated in this field.

The manufacturer's information and the power information of the device are specified in this area.



→ This connector use for product sensor input

→ This connector use for blow out connection.

→ This connector use for encoder connection

→ This connector use for dispenser busy and fault connections

→ This connector use for printer connection to give contact signal,fault and busy

→ The connector use for camera conneciton

The connection of the inputs and outputs mentioned in this section is mentioned in detail in the section Electrical Connection

The photos of the labels on the product are as in the figure. The location of the labels is within the jurisdiction of SAVEMA.

3. MANUFACTURER, SELLER AND TECHNICAL SERVICE CONTACT INFORMATION

1.1 Manufacturer Contact Information

Manufacturer Company Name: SAVEMA Marking and Coding Machines

Manufacturer Company Address: Fevzi Çakmak Mahallesi, Ahmet Petekçi Caddesi, No: 5L/1, Karatay/Konya

Manufacturer Tel. No: (0332) 239 23 39

2.1 Seller Contact Information

Vendor Company Name: SAVEMA Marking and Coding Machines

Vendor Address: Fevzi Çakmak Mahallesi, Ahmet Petekçi Caddesi, No: 5L/1, Karatay/Konya

Seller Company Tel. No: (0332) 239 23 39

3.1 Technical Service Contact Information

Technical Service Electronic Team

Phone Number: +90 535 453 65 55

Technical Service Mechanical Team

Phone Number: +90 530 956 56 18

4. PRODUCT FEATURES

DISPENSER	
Label Speed	Max 500 mm/s
Power Supply Input Voltage Range	100-240V - 50/60 Hz
Input / Output	Label Feed Signal / Error Output – Busy Output
Interface	USB / Ethernet
Connection Types	Relay (NPN-PNP) / Photocell (NPN-PNP)
Advanced Features	Encoder operation
Display Features	4.3" / 272 x 480 pixel resolution
Language Supports	Multi-Language Support
Maximum Label Roll Diameter	300 mm
Spool Holder	76 mm
Maximum Label Diameter	160 mm
Weight	35-45 kg

5. MODEL DEFINITIONS

D110S	
Maximum Label Width	110 mm
Maximum Label Diameter	30 cm
Maximum Feed Rate	500 mm/s
Power	100-240V 5.8 A 50-60 Hz 500W
Weight	35 kg
Feed Type	Automatic

6. PRODUCT INSTALLATION AND HANDLING INFORMATION

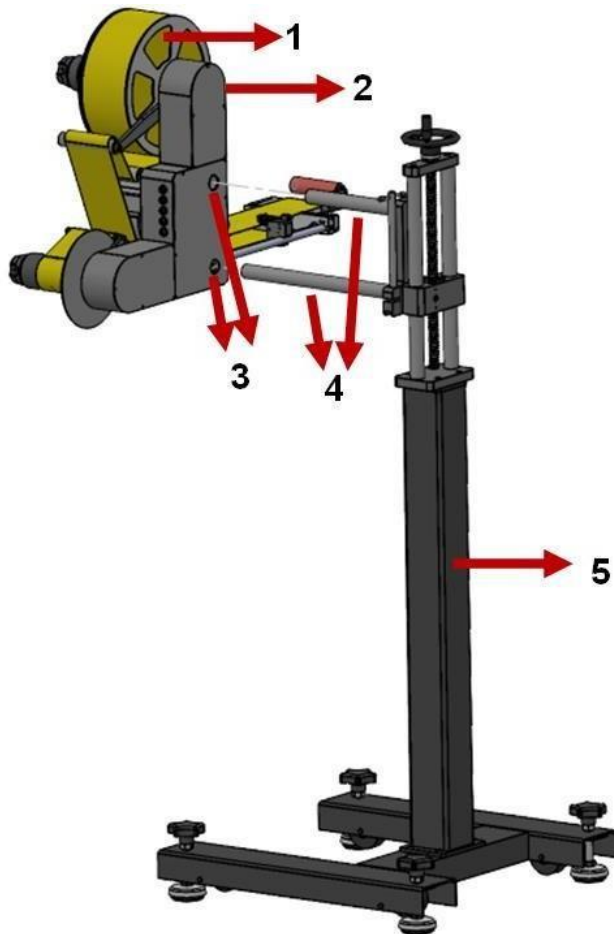
The product consists of 2 parts, the carrier leg and the machine part. These two parts are sent to the customer in wooden cases as fully assembled. The customer can get the machine ready for use by simply combining these two parts.

Pay attention to the following points during the transport process.

1. The carrier leg and the machine part should be carried separately and combined in the area to be used.
2. The carrier foot should be carried by 2 people by holding it from the bottom part.
3. The machine part should be carried by 2 people by holding it from the right and left sides of the machine.

Follow the steps below while installing.

1. Place the carriage on a flat surface with the stand upright. Pay attention to this issue as the uneven surface will cause overturning.
2. Remove the protective washers from the end of the support legs using 6 Allen Allen.
3. Hold the machine part by the ends of 2 people.
4. Insert the arms of the carrier foot into the carrier slots of the machine.
5. Make sure that the carrier arms are fully inserted into the carrier holes.
6. Replace the protective washers you removed in Step 2.
7. Insert the package you will use into the package slot. For detailed label placement information, you can check the sections 9.2 and 9.3.2 of the user manual.
8. After these steps, the product is ready for use. You can create a label signal by using the photocell that comes mounted on the machine.



No	Description
1	PACK SLOT
2	MACHINE PART
3	CARRIER HOLES
4	CARRIER FEET ARM
5	CARRIER FEET

7 MAIN MENU TREE

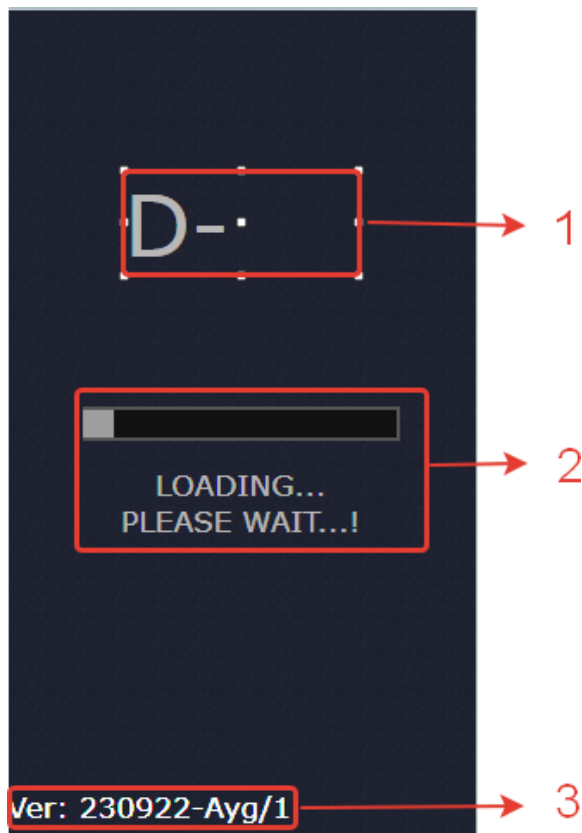
8. BOOT MENU

9. DISPENSER SETTINGS

1. MAIN MENU

- 1.1 START BUTTON
- 1.2 LABELLING PER MUNITE
- 1.3 SPEED INFORMATION
- 1.4 TOTAL NUMBER OF LABELLING
- 1.5 LABELLING SETTING
- 1.6 TASK LIST
- 1.7 INFO MENU
- 1.8 CLOCK
- 1.9 LABEL RATE
- 1.10 SYSTM ERROR LIST
- 1.11 ERROR
- 1.12 TEST BUTTON
- 1.13 ADVANCED SETTINGS
 - 1.13.1 LANGUAGE SETTINGS
 - 1.13.2 SIGNAL SETTINGS
 - 1.13.3 LABEL SETTINGS
 - LABELLING METHOD
 - 1.13.4 HARDWARE SETTINGS
 - SPEED MODE
 - 1.13.5 PRINTER SETTINGS
 - 1.13.6 CONTROL & SETTINGS
 - 1.13.7 BLOW SETTINGS
 - 1.13.8 COMMUNICATION SETTINGS
 - 1.13.9 USER SETTINGS

8 BOOT MENU



No	Description
1	DISPENSER MODEL
2	LOADING BAR
3	FIRMWARE VERSION

Table 1 Boot Screen

Figure 1 Boot Screen

It is the first menu that opens after the dispenser is powered up. General information about the Dispenser is shown and the necessary boot operations are done automatically.

1. Dispenser Model: Shows the dispenser model
2. Waiting Bar: Shows the time to wait for the boot process
3. Firmware Version: Shows the firmware version loaded in the Dispenser

9 DISPENSER SETTINGS

1. MAIN MENU

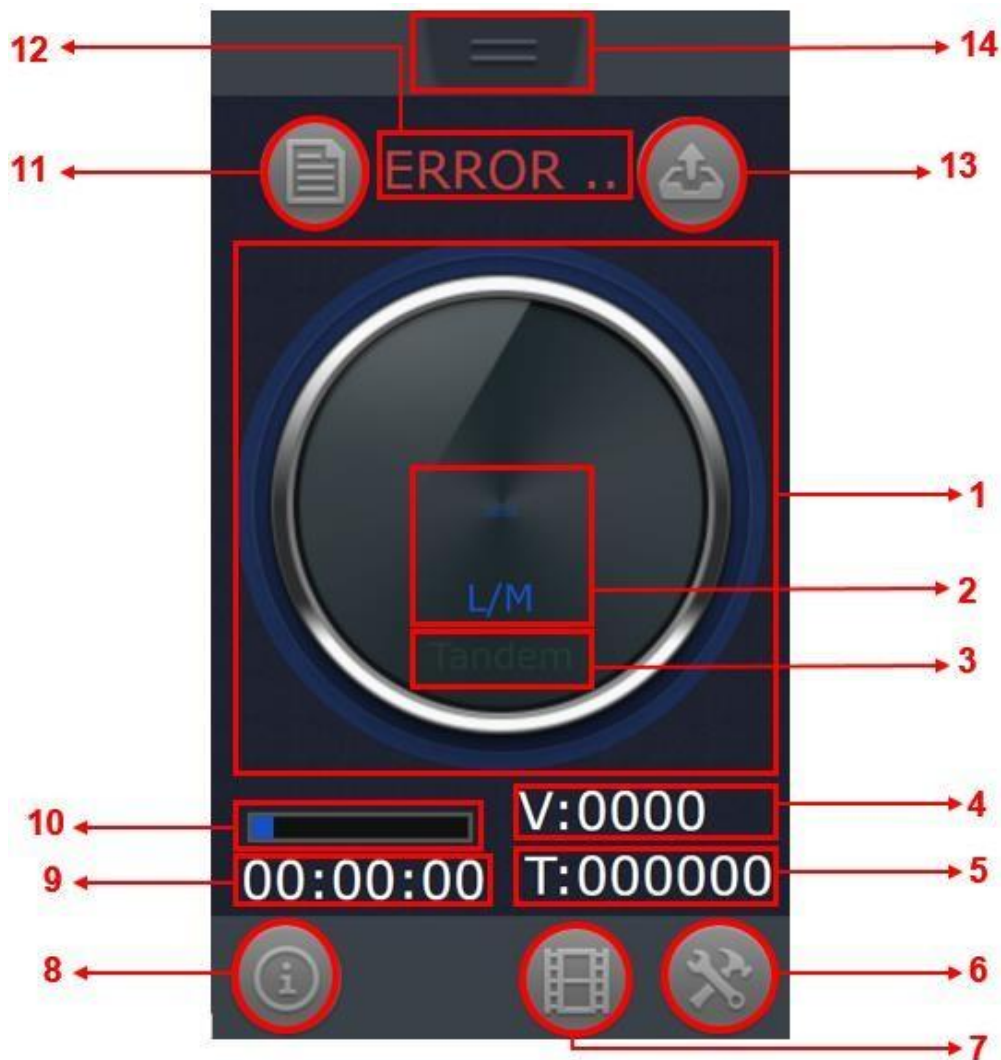


Figure 2 Main Menu Screen

Table 2 Main Menu

NO	Designation
1	START BUTTON
2	LABELLING PER MUNITE
3	TANDEM MOD OFF
4	SPEED INFORMATION
5	TOTAL NUMBER OF LABELLING
6	LABELLING SETTINGS
7	TASK LIST
8	INFO MENU
9	CLOCK
10	LABEL RATE
11	SYSTEM ERRORS LIST
12	ERRORS
13	TEST BUTTON
14	ADVANCED SETTINGS



Figure 3 Labelling passive (Left) and labelling active(right)

1.1 START BUTTON

The start button is used to start and stop the labeling process.

1.2 LABELLING PER MUNITE

Shows how many scrapes it will do in one minute.

1.3 SPEED INFORMATION

If an encoder is connected to the dispenser, it is the area where the packet speed information is displayed.

1.4 TOTAL NUMBER OF LABELLING

In this area, it shows the total labeling process since the dispenser started operating. This value is reset when the machine is turned off. Counter can be reset by touching 'T' after that will open Reset Counter.

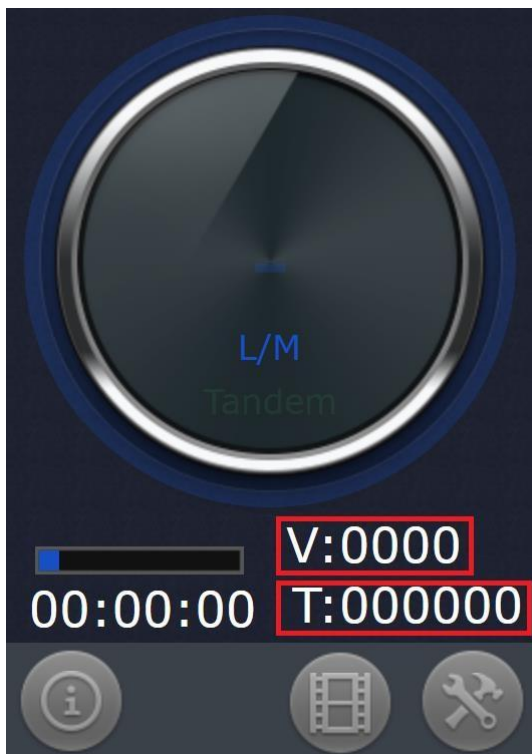


Figure 4 Speed and Total Number of Labelling


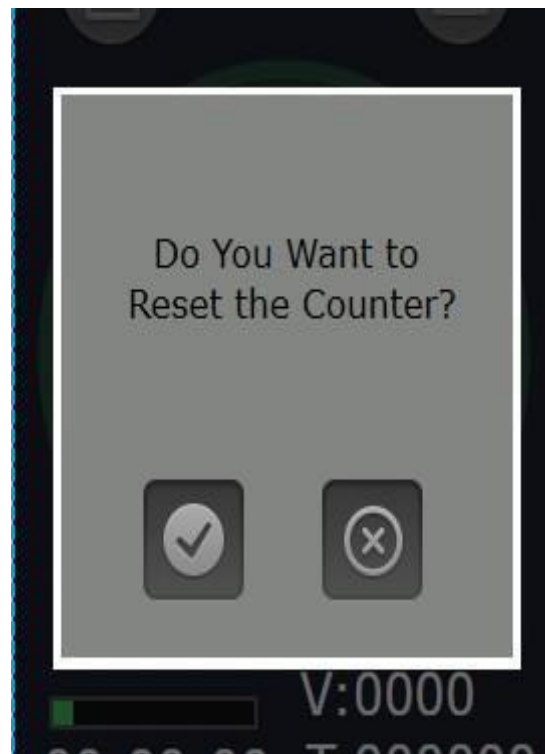


Figure 5 Reset Counter

1.5 LABELLING SETTING

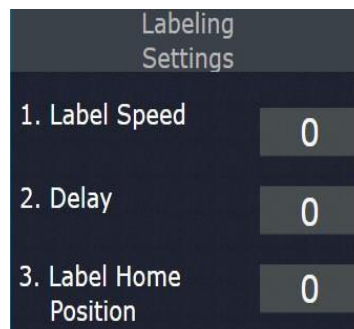Dispenser performs the labeling process according to the settings related to the position of the label.



Labeling Settings	
1. Label Speed	0
2. Delay	0
3. Label Home Position	0

Figure 6 Labelling Settings

- 1. Label Speed:** Used to determine the speed of the labeling process. Its maximum value is 500 and its minimum value is 0. Its unit is mm/s. Minimum Label length with gap 10mm, maximum speed 50mm/sec(30m/m).

Note: Label length must be longer than gap. If gap longer than label, fork sensor (label sensor) must be taught label inverse. Normally sensor must give high signal in gap. If gap longer than label length, sensor must give low signal in gap.

Note: When label sensor push button hold pressed more than 10s signal will be reserved.

- 2. Delay:** It is the parameter used to wait for a certain amount before labeling the package. Its maximum value is 500 and its minimum value is 0. Minimum delay is 10mm.

Note: Maximum delay value should not exceed two product distances

3. **Label Home Position:** It is the parameter value that sets where the labeling sensor should stand on the label while or after the labeling process is done. Its maximum value can be 2 units less than the label length and its minimum value is 0. Its unit is mm. Label home position can also be made mechanically, this section has been added for convenience for our customers with labels of different sizes.

Maximum label home position:

Label length + label gap > 10mm + Label home position

1.6 TASK LIST

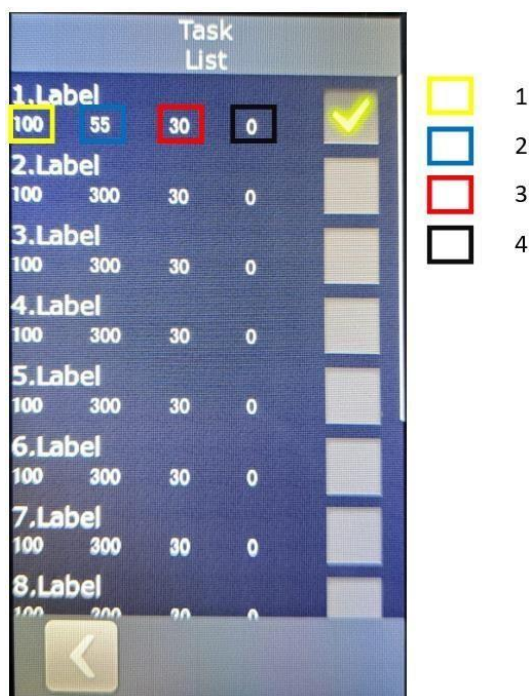


Figure 7 Task List Menu

NO	Designation
1	LABEL LENGTH
2	LABEL SPEED
3	DELAY
4	LABEL HOME POSITION

Table 3 Task List

The task list settings used on the machine are saved to the selected tag number. More than one recording can be made. The first three fields are marked for illustration. The fields numbered 4, 5, 6, 7 are the labeling parameters saved on the dispenser and these fields are updated when the relevant sections are changed. A maximum of 12 setting parameters can be saved.

1. **Label Length:** It is the value of the label size mentioned in [Section 1.13.3](#)
2. **Label Speed:** It is the value of the label speed mentioned in [Section 1.5](#)
3. **Delay:** It is the delay value mentioned in [Section 1.5](#)
4. **Label Home Position:** It is the label stop value mentioned in [Section 1.5](#)

Other values that are not visible in this menu but are included in each setting:

- **Label stripping Piece:** It is the value of the label stripping piece mentioned in [Section 1.13.3](#)

- **Label Stripping Waiting:** It is the value of the label stripping waiting mentioned in [Section 1.13.3](#)
- **Printer Signal output:** It is the value of the printer signal output mentioned in [Section 1.13.5](#)

If you want to change the values in the selected label in the task list, change the relevant value. It will automatically be recorded on the selected label.

1.7 INFO MENU

Contains information about the machine. Properties other than the system clock cannot be changed. This information is shown for informational purposes only. From this menu, the machine clock can be set by clicking on "System Clock". Hour and minute settings can be adjusted to the desired time with up and down movements on the screen.

System Clock	→ It shows the system time and also the clock setting is made here.
Firmware Type	→ Information about machine firmware.
Firmware Version	→ Information about machine version.
Machine Serial Number	→ Information about machine serial number.
Total Number of Labeling	→ Information about the total number of printed labels.
User Number	→ Information about the number of users.

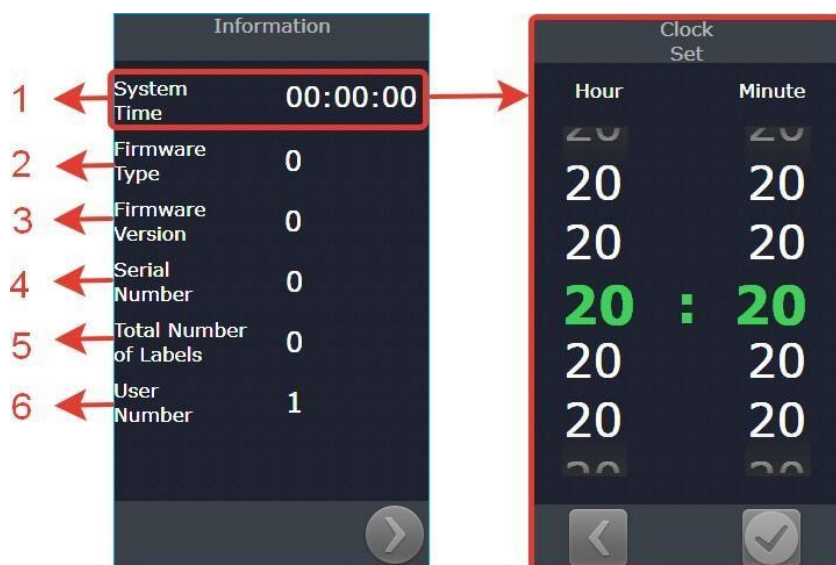


Figure 8 Info screen and clock setting

NO	Designation
1	System Time
2	Firmware Type
3	Firmware Version
4	Serial Number
5	Total Number of Labels
6	User Number

Table 4 Info Screen

1.8 CLOCK

This field displays the system time

1.9 LABEL RATE

The remaining label is shown in the main menu as the graph.



Figure 9 Label Rate

1.10 SYSTEM ERROR

This is the field where the error messages that occur in the system are displayed when an unexpected error is encountered in the operations performed after the machine has started.

1.11 ERROR

Shows a preview of the error that occurred during scraping

1.12 TEST BUTTON

It is a one-time labeling button. Generally, the settings changed on the machine are used for testing purposes.

1.13 ADVANCED SETTINGS

This area contains the machine and the settings that can be connected to the machine. After changing the setting of "✓" in the mark applied clicking this section is mandatory to sign. Otherwise, your settings will not be saved.

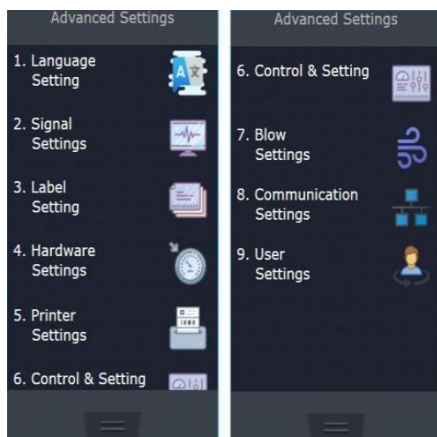


Figure 10 Advanced Setting Menu

No	Designation
1	LANGUAGE SETTING
2	SIGNAL SETTING
3	LABEL SETTING
4	HARDWARE SETTING
5	PRINTER SETTING
6	CONTROL SETTING
7	BLOW SETTING
8	COMMUNICATION SETTINGS
9	USER SETTINGS

Table 5 Advanced Setting

1.13.1 Language Settings

The system language can be changed with this field. Language supports include Turkish, English, Italian, German, Russian, Arabic, French, Spanish, Czech, Dutch, Chinese, Korean, Portuguese, Greek, Persian and Finnish language packs. The selected language pack appears in the "Active Language" tab and the selected language pack name should be green. After selecting the desired language, the transaction should be saved by clicking on the "✓" sign.



Figure 11 Language setting

1.13.2 Signal Settings



Figure 12 Signal Settings Menu

This field contains the parameters that allow us to choose whether the incoming signal comes internally or externally so that the machine can do the stripping operation.

1. External signal input: This parameter should be activated when the machine receives a contact signal from an external signal source (photocell, etc.). You can view the signals reaching the dispenser from section 1.5.16

2. External signal duty: It is used when external signal input is activated. It ignores the signals that will come to the machine during the value entered in this parameter. Its unit is ms. External signal duty time is not smaller than this value to print. Otherwise, no printing process. Standard duty time is 2 ms. The duty time cannot be more than 600 ms and less than 0 ms. This parameter is used to prevent undesired signal. Following sample is valid for the value is equal to 2 ms. The working principle of external signal is shown in Figure 11. This value can be a maximum of 600 and a minimum of 0.

3. Internal signal: It is used when the machine is required to receive a contact signal from the internal signal source depending on the package length.

4. **Internal signal duty:** The internal print signal packet length is two output distances. For the unit, [see 1.15.3.5](#). This value can be a maximum of 320 and a minimum of 0. The working principle of internal signal is shown in Figure 11.
5. **Label sensor Active/Passive:** This is the area where the label sensor is used or not in the stripping process. If this option is passive, the label is drawn as much as the Label Home position value in section 1.6.
6. **Break sensor Active/Passive:** When the sensor is connected and activated, it stops the device when a break occurs in the strip connected to the dispenser. Requires additional hardware. Activated without hardware, dispenser goes into continuous error mode.

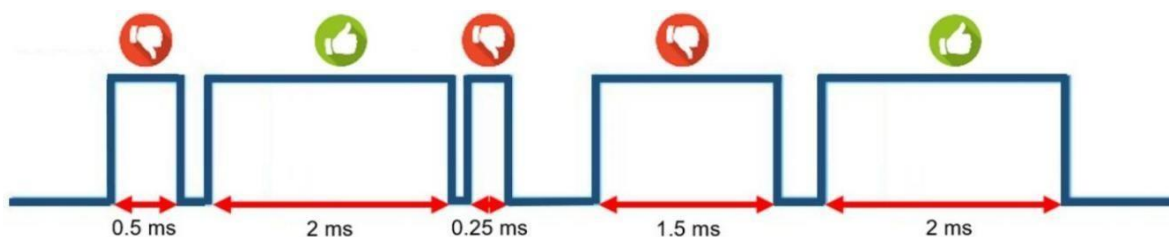


Figure 13 Signal duty time

7. **External Signal Blocking:** External signal block function is improved in signal setting window. Previously it can be used labeling mode 4 and 2, now it can be used labeling mode 4,3,2,1. When you enter product length for labeling mode 4 or 2, this function connected encoder. If labeling mode 3 or 1 selected, dispense calculate length from dispenser speed.

8. **External Signal Blocking length:** Blocks the incoming signal along the entered value when the external signal blocking button is activated. For this see [section 1.15.3.5](#). This feature works only in encoder mode. This value can be a maximum of 650 and a minimum of 0. Default unit is mm. An example signal blocking length of 125 is shown in Figure 12.

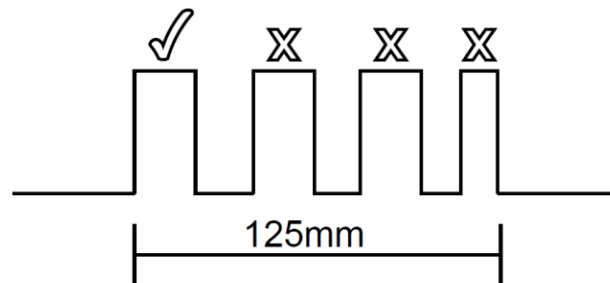


Figure 14 External Signal Blocking length

For external signal, PNP connection is made as in Figure 17,18, NPN connection is made as in Figure 19,20.

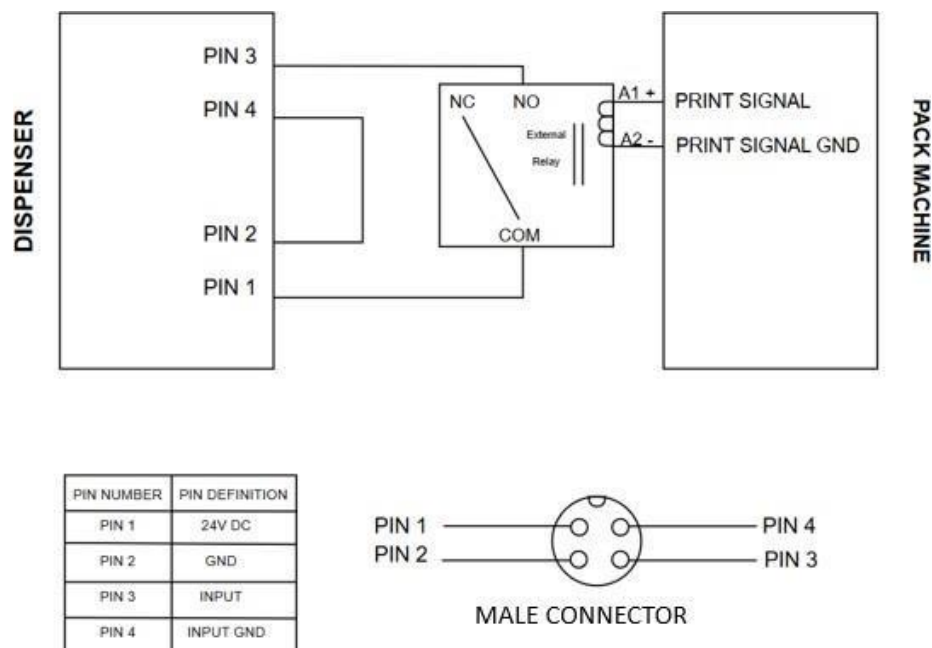


Figure 15 PNP Connection

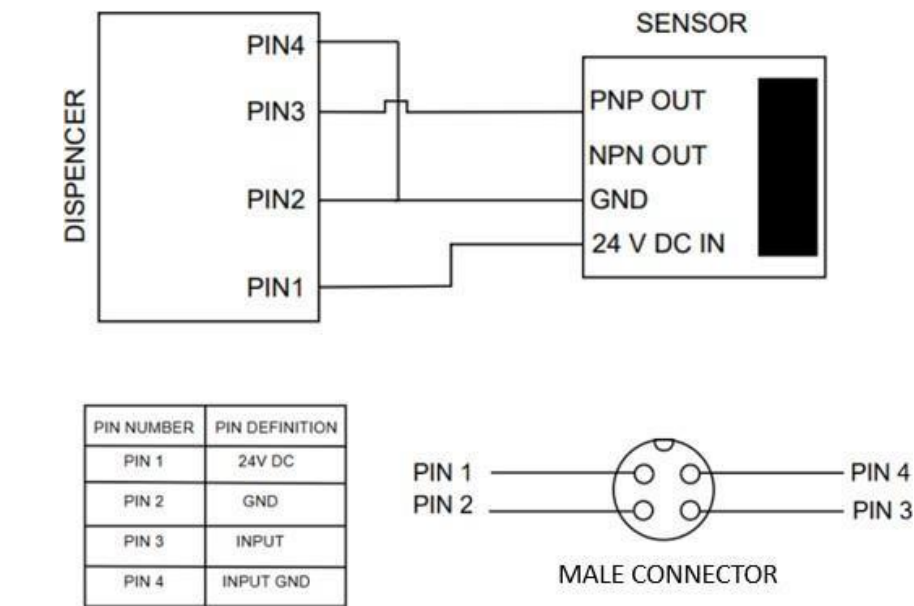


Figure 16 PNP Sensor Connection

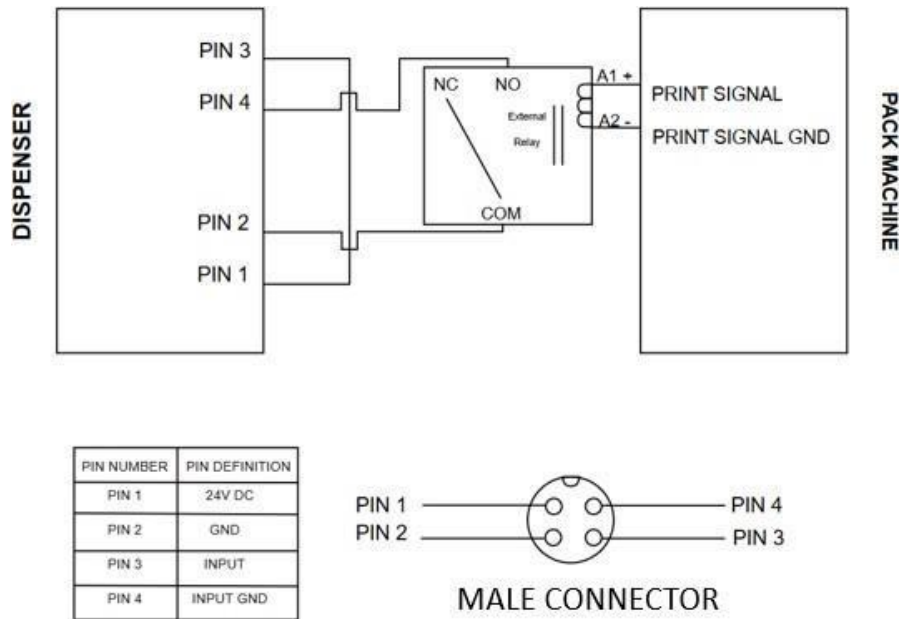


Figure 17 NPN Connection

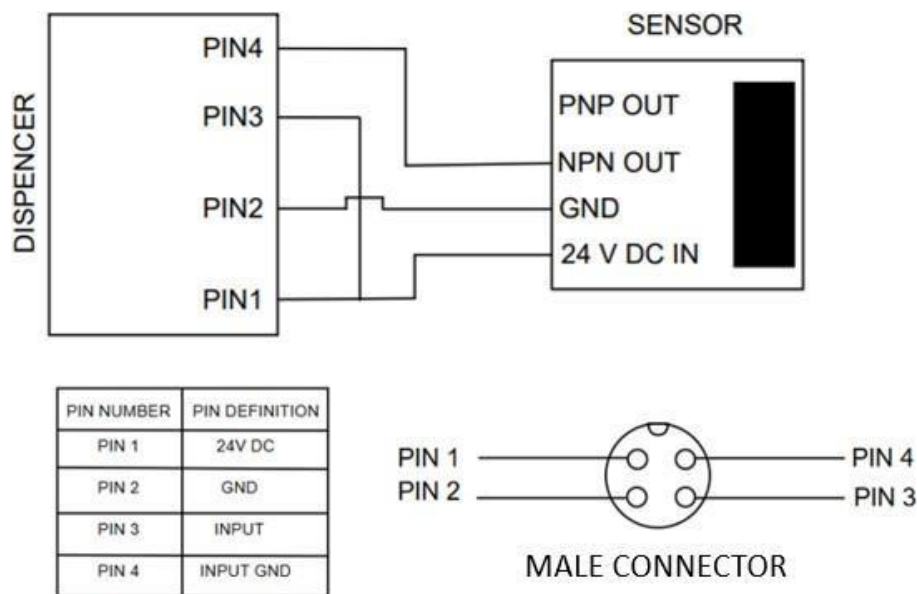


Figure 18 NPN Sensor Connection

1.13.3 Label Settings

This field contains the parameters to be used in labeling operations.

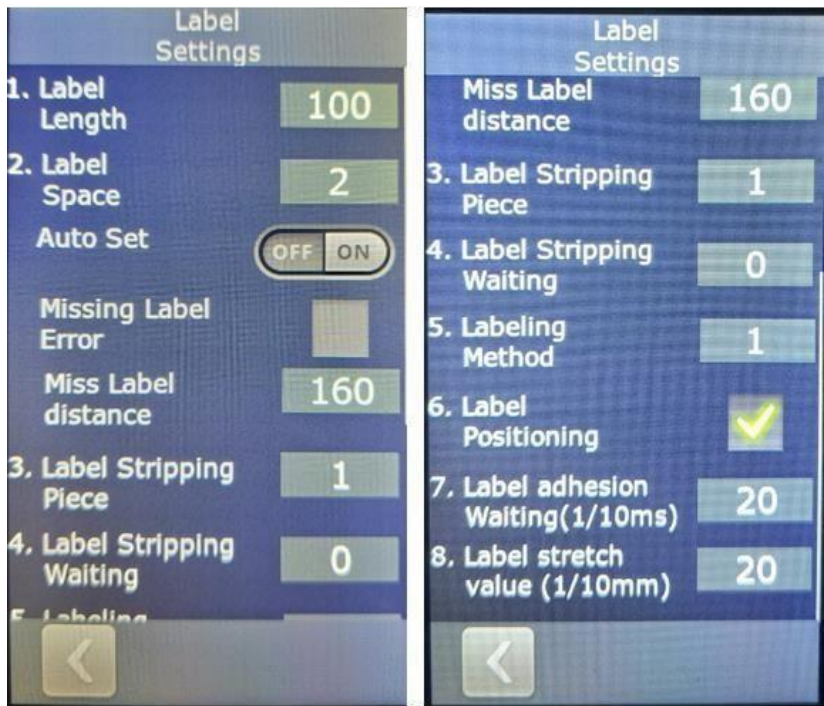


Figure 19 Label Settings Menu

- 1. **Label length:** This is the field where the label length to be used is determined. This value can be a maximum of 500 and a minimum of 0. See [Section 1.15.3.5](#) for the unit. The area indicated by an in Figure 8 shows the height of the label.

2. **Label Space:** The space between two labels must be written in this field in mm. This value can be a maximum of 500 and a minimum of 0. The area indicated by B in Figure 8 indicates the label space.
- Automatic Set:** When it is turned on, the device automatically feeds labels, automatically calculates the label length and gap parameters and saves the parameters. This feature will not work properly without the Label Sensor setting. If this feature is not working properly, re-adjust the label sensor.
 - Missing Label error:** If missing label available on label tape. Dispenser could eliminate one missing label. Miss label distance, label length and gap length must enter true value. If two or more missing label available dispenser show missing label error. This function activated when missing label error un-pressed. If missing label error button pressed, dispenser will give missing label error with one miss label. When this section is active, the label sensor detects the missing label area and the dispenser gives a "Missing label error" and stops the stripping process without stripping until the label has traveled the "Miss label distance" value. If this section is not active, the missing label area is detected and the label is automatically pulled up to the label length after the label has traveled the "Miss label distance" value, thus skipping the empty area and labeling the product.



Figure 20 Missing Label Error Passive/Active

- c. **Miss label distance:** It is used to calculate when the detected missing label area will be stripped. The distance between the sensor and the point to be stripped must be written manually in mm and $\text{label length} + \text{label space} \leq \text{label distance}$. This distance is shown in Figure 23.

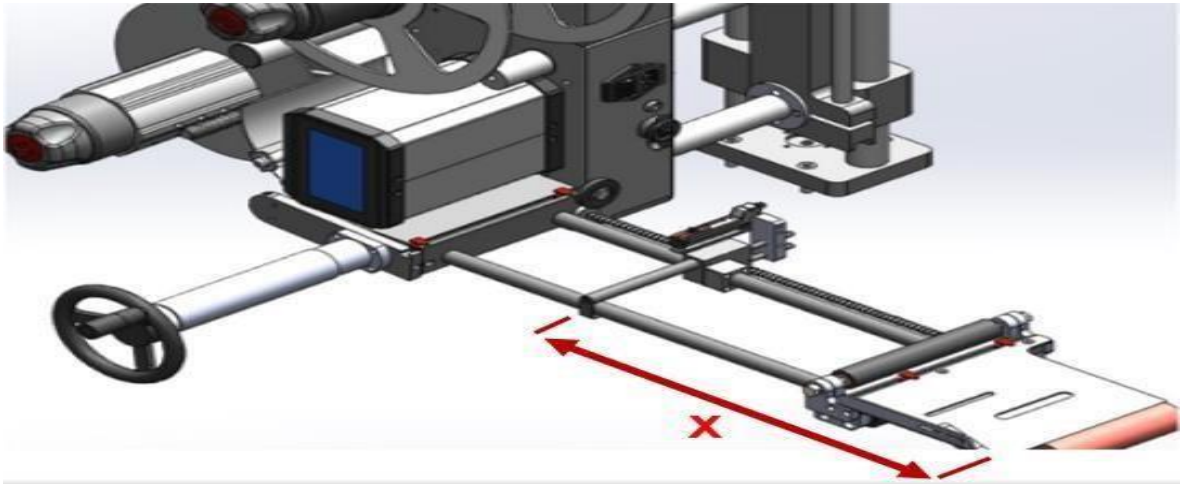


Figure 21 Miss Label distance

3. **Label Stripping Piece:** Enter this field how many labeling operations should be performed when a single signal comes to the machine. This value can be a maximum of 10 and a minimum of 1.
4. **Label Stripping Waiting:** If the Label Stripping Piece value is more than one, it is the place where the waiting time between the labels to be stripped is set. This value can be a maximum of 500 and a minimum of 0. The unit is mm. The area indicated by an in Figure 8 shows the length of the label.

5. Labeling Method: It determines the method that the dispenser will use while labeling.

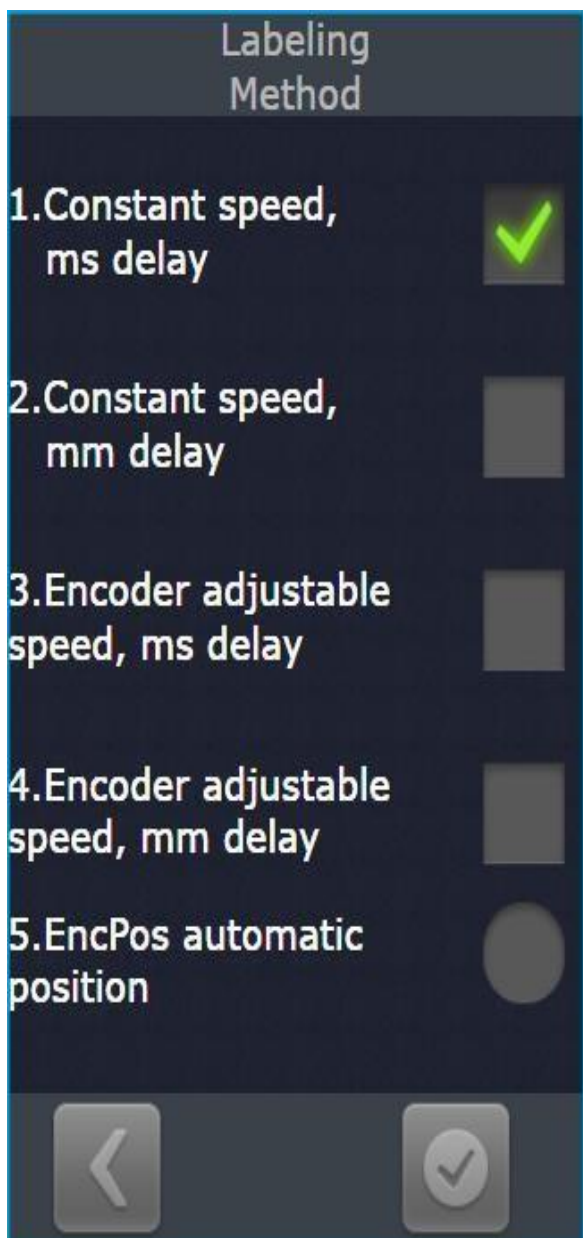


Figure 22 Labeling Method Menu

1. Constant speed, ms delay: The speed is set manually and the delay is set in ms.

2. Constant speed, mm delay: The speed is set manually and the delay is set in mm.

3. Encoder adjustable speed, ms delay: It allows the delay to be adjusted in time (ms) in systems where encoder is used to get speed information.

4. Encoder-adjusted speed, mm delay: It allows the delay to be adjusted in terms of length (mm) in systems where encoder is used to get speed information.

5. EncPos automatic position: This feature must be enabled if the speed of the products to be peeled is not constant, otherwise the label may be in different positions on the product. With this feature, automatic positioning can be made on the product at different speeds. For this feature to be active, an encoder must be connected to the distributor and a mode with an encoder must be selected at the same time. When this feature is activated, the delay value in section 1.6 changes automatically. This delay value changes according to the speed modes in [section 1.15.4.5](#). The delay value should be minimum 48 in Smooth Movement mode, minimum 23 delay value in Normal mode, and minimum 22 delay value in Sharp mode.

For constant speed, “[1.6 Label Setting](#)” “Label Speed” should be used. External encoder connection is required for encoder regulated speed.

There are 2 different options for speed setting. These

1. Constant Speed

2. Encoder Adjusted Speed

If we want to use an encoder in the dispenser system, the encoder adjusted speed option is selected.

There are two options for the delay unit. These

1. By time (ms)

2. By distance (mm)

It is necessary to adjust the stripping process according to the feature selected here.

After the changes are made, the transactions are saved. The “” mark indicates which selection is active.

6. Label Positioning: If this is active the process of separating the label from the dispenser is done precisely. It can also be used passively in very fast applications.

If Label Position is activated, the maximum value of Label Home Position in section 1.6 changes according to Label Length and according to the speed mode in [section 1.15.4](#). It is 21mm less than Label Length in Smooth movement mode. It is 12 mm less than Label Length in Normal mode. It is 10 mm less than Label Length in Sharp mode. The reason for this restriction is to do the stripping properly.

You can see the maximum values of Label home position

Maximum label home position:

Label length + Label gap > 10mm + Label home position

7. Label Adhesion Waiting(1/10ms): Label stretch fine adjustment on product. If label is not sticky on-time on product, label position staying back with speed up. This setting working as 1/10ms. This setting is needed to change if label position staying back with speed up on product. You need to increase this delay. For example 25 value mean is 2.5ms.

Adjustment: if 10mm/s to 500mm/s label shifting is 2mm.

value= $2 \times 10000 / 500 = 40$

When label touch on product, air flow, vibration, surface, stripping sheet to product distance affecting adhesion time.

8. Label Stretch Value(1/10mm): Label position shifting fine adjustment on stripping sheet.

This setting is working as 1/10mm. This setting is needed to change if label position staying back with speed up on stripping sheet. You need to increase this delay. For example 30 value mean is 3mm.

Adjustment: if 10mm/s to 500mm/s label shifting is 2mm.

Value= $2 \times 10 = 20$

1.13.4 Hardware Settings

This is the part where encoder settings to be used in the machine are made. In addition, error output and busy output can be active or inactive in this field.

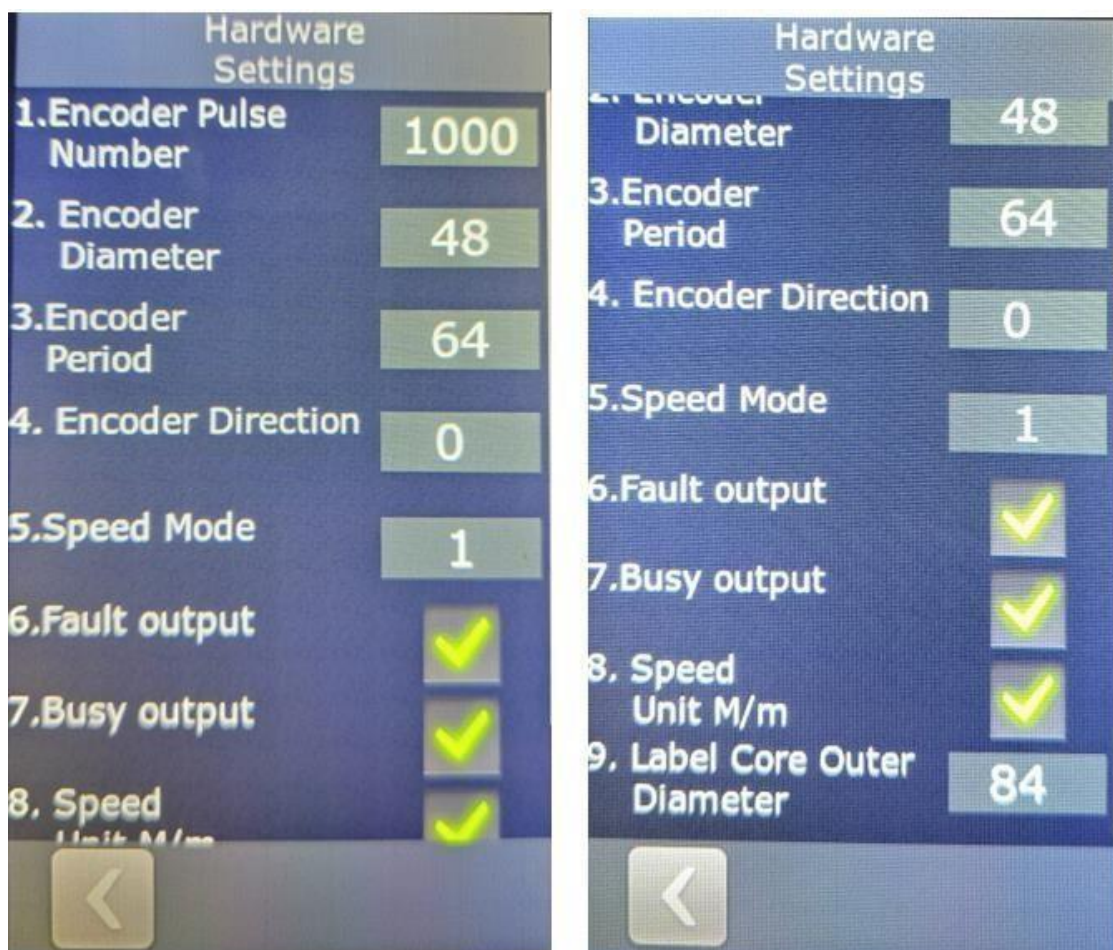


Figure 23 Hardware Setting Menu

1. **Encoder Pulse Number:** Indicates the number of encoder pulses generated in one turn. This value can be a maximum of 5000 and a minimum of 0. Default value is 1000.
2. **Encoder Diameter:** The diameter of the externally mounted encoder must be entered here. The encoder diameter is used in the labeling process. Therefore, it should not be entered incorrectly. This value can be a maximum of 200 and a minimum of 0. Default value is 48
3. **Encoder Period:** The value is entered in the time intervals to read the encoder pulse value. The value can be lowered at high speeds and increased at low speeds. This value can be a maximum of 64 and a minimum of 0. Default value is 16.
4. **Encoder Direction:** Enter "0" or "1" according to encoder rotation direction. "0" means the encoder rotates clockwise. "1" means the encoder rotates anticlockwise.

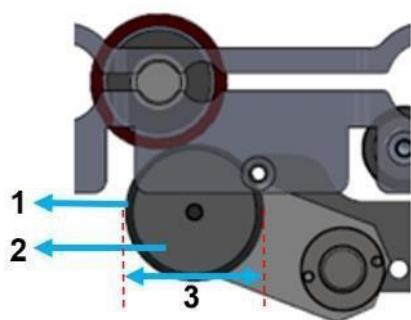


Figure 24 Encoder Diameter



Figure 25 Encoder Direction

Table 6 Encoder Description

No	Designation
1	O-ring
2	Encoder
3	Encoder wheel diameter

Table 7 Encoder Direction

No	Designation
0	ANTI CLOCKWISE TURN
1	CLOCKWISE TURN

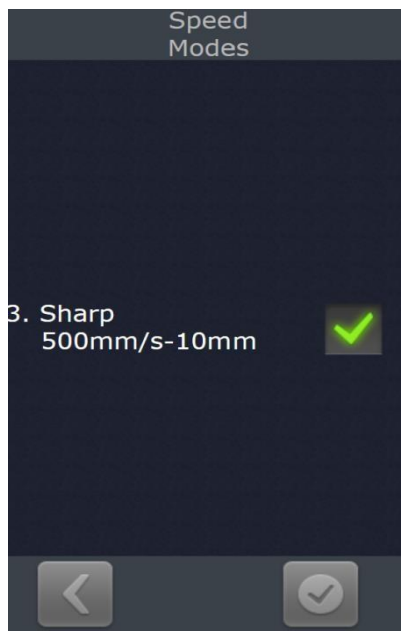


Figure 26 Speed Modes Menu

5. Speed Mode: It is the motor driving modes that adjust the label speed according to the label length. The “✓” mark indicates which selection is active.

5.1. Sharp mode: Stripping is used for slow operations. It can be used in applications with large label lengths and slow applications. Reaches the desired speed slower than other modes.

Note: It is recommended to operate in Soft Mode if the label is broken

6. **Fault Output:** If an error occurs in the dispenser when activated, it gives an error signal.
7. **Busy Output:** When activated, the dispenser gives a busy signal while labeling.
8. **Speed Unit M/m:** Converts dispenser labeling speed unit from mm/s to meters/minute.
9. **Label Core Outer Diameter:** This value is label radius value. Firmware accepted 84mm outer label core diameter for calculation as a default. If outer label core diameter is different, core diameter setting must be set in hardware settings. Low label error will appear when label diameter less than limit but low label error must be activated in communication setting page 4.



Figure 27 Label Core Outer Diameter

1.13.5 Printer Settings

It is used to control whether the signals that can be used when a printer is connected to the dispenser are active or passive.

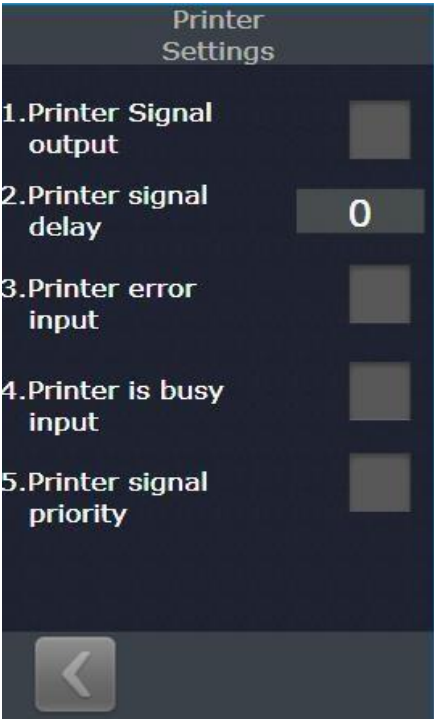


Figure 28 Printer Settings Menu

1. Printer signal output: It is the area where the contact (print) signal coming from the dispenser to the printer is selected as active/passive. The "✔" mark indicates that the output is active.

2. Printer Signal Delay: It is the area used to hold the contact signal going to the printer for a certain time. This value can be a maximum of 2500 and a minimum of 0. See Section [1.15.3.5](#) for the unit.

3. Printer Error Input: This is the area where the input that the dispenser will receive an error signal from the printer in case of an error in the printer is selected as active/passive. The "✔" mark indicates that the output is active.

4. Printer Busy Input: It is the area where the input that the busy signal generated while the printer is printing will be received by the dispenser is selected as active/passive. The "✔" mark indicates that the output is active.

5. Printer signal priority: It is the area where the priority order of the signal to be sent to the printer is determined.

1.13.6 CONTROL & SETTING

This area consists of two parts: motor control and I/O control.



Figure 29 Control & Settings Menu

No	Designation
A	Label Motor Control
B	I/O Control

Table 8 Control & Settings

Table 9 Control and Settings

No	Designation	No	Designation	No	
1	MOTOR CONTINUOUSLY TURNS RIGHT	4	LABEL SENSOR	7	FAULT SIGNAL
2	MOTOR CONTINUOUSLY TURNS LEFT	5	TRIGGER SIGNAL	8	BUSY SIGNAL
3	STOP MOTOR	6	ENCODER SIGNAL	9	PRINTER SIGNAL

→ Label Motor Control →

If the "Motor Active" box is checked, the label motor is moved by the buttons (shown with numbers 1,2 and 3) at the bottom. If the "Motor Disabled" button is active, the label engine is disabled and the right-left and stop buttons become non-functional.

→ I/O control →

4. **Label Sensor:** It is the area where the presence or absence of the label is checked by the sensor.
5. **Trigger Signal:** The indicator turns green when the scraper signal comes to the dispenser.
6. **Encoder Signal:** Displays the pulse number of the externally connected encoder. If the encoder direction is correct, the encoder value will increase. If the encoder direction is wrong, the encoder value will decrease.
7. **Fault Signal:** Used to control the error output of the dispenser. When the button is in the "ON" position, the dispenser gives output. If it is in the "OFF" position, it does not output any error.
8. **Busy Signal:** Used to control the busy output of the dispenser. When the button is in the "ON" position, the dispenser gives output. If it is in the "OFF" position, it does not give any busy output.
9. **Printer Signal:** It is used to control the contact (print) signal coming out of the dispenser for the printer. When the button is in the "ON" position, the dispenser gives output. If it is in the "OFF" position, it does not give any contact output.

1.13.7 BLOW SETTING

This is the setting area for blowing. Here the blowing module is activated and the vacuum clamp delay or blowing time is set.

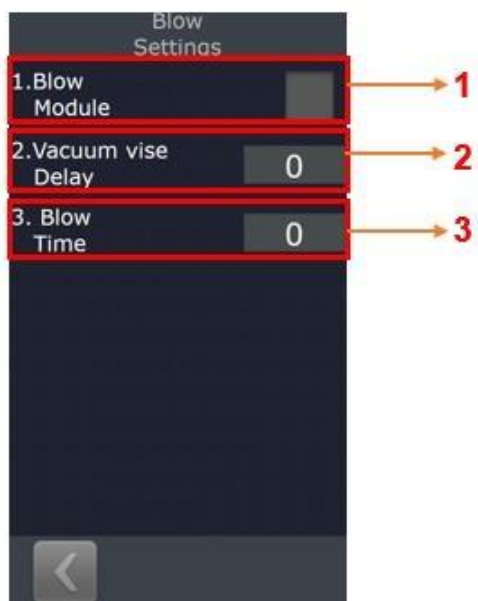


Figure 30 Control & Settings Menu

No	Designation
1	Blow Module
2	Vacuum vise Delay
3	Blow Time


Table 10 Control and Settings

- 1. Blow Module:** In the "  " state, the input is active, otherwise inactive. To activate this Blow module, you have the blow module mechanism and activate this setting.
- 2. Vacuum vise Delay:** This is where the Vacuum vise delay time is set.
- 3. Blow Time:** Sets the blowing time. You can extend or shorten this time depending on the length and adhesion of the label to be blown.

1.13.8 COMMUNICATION SETTINGS

It is used to control the dispenser in different communication modes with an external controller. Control commands for communication modes are also prepared in another document. Please contact the manufacturer for this document.

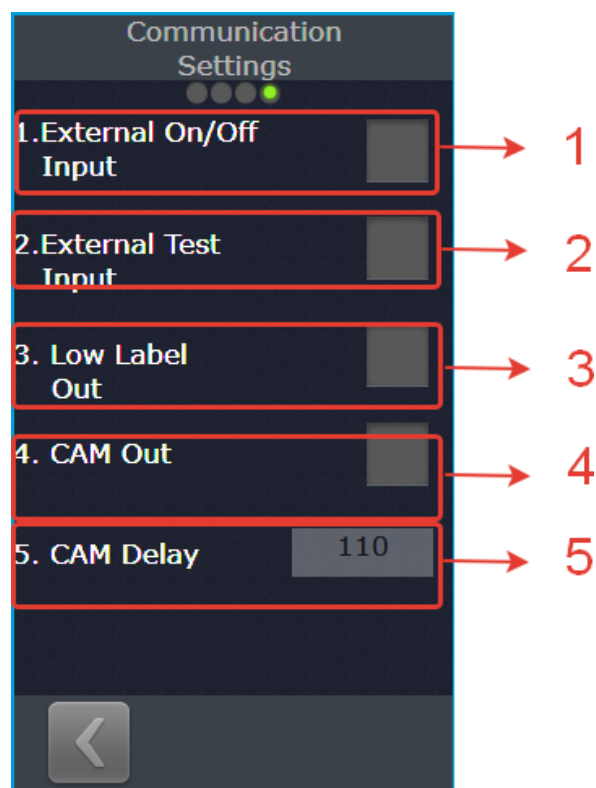1.13.8.1 External Connection



No	Designation
1	External On/Off Input
2	External Test Input
3	Low Label Out
4	CAM Out
5	CAM Delay

Table 11 External Connection

Figure 31 External Connection Menu

1. External On/Off Input: It is used to start and stop the dispenser remotely. In the "✅" state, the input is active, otherwise inactive. When a signal comes from the socket connected to this input and the input is active, the dispenser labeling process becomes ready.

2. External Test Input: It is used to give remote test output to the dispenser. In the "✅" state, the input is active, otherwise inactive. When a signal is received from the socket connected to this input and the input is active, the dispenser performs labeling once.

3. Low Label Warning Output: When the number of labels on the dispenser falls below a certain number, if this output is active, it signals to the outside. In the passive state, it does not signal outside.

4. CAM Out: Used to enable/disable the signal output for the camera. If a camera is attached to the dispenser, you must activate this feature.

5. CAM Delay: This is where the in-camera delay time is set

1.13.9 USER SETTINGS

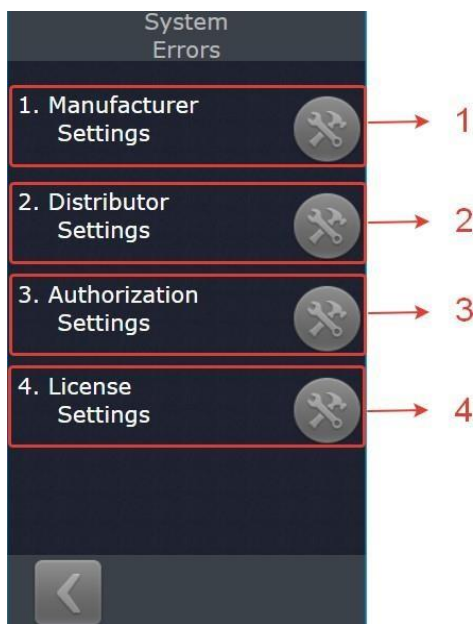


Figure 32 User Settings Menu

NO	DESIGNATION
1	MANUFACTURER SETTINGS
2	DISTRIBUTOR SETTINGS
3	AUTHORIZATION SETTINGS
4	LICENSE SETTINGS

Table 12 User Settings

This is the general machine settings area with settings for manufacturer, distributor, and user.

1.13.9.1 Manufacturer Settings: Password is required to enter this menu. Please contact the manufacturer.



Figure 33 Manufacturer Settings Menu

- Firmware Type:** This is where the firmware code is entered according to the dispenser type.
- Firmware Version:** This is where the firmware version is entered.
- Serial Number:** This is where the serial number of the dispenser is displayed.
- Total Labels Number:** It shows the total number of label stripping operations made by the dispenser.
- APP Direction:** This is where the dispenser direction is set.
- Speed Unit M/m:** Used to set the dispenser speed unit in meters/minute
- License Unit Moon:** This is the field where the license term is set.
- Date-d/m/y offset:** Shows date format
- Driver Type:** This is the field where the driver type is entered

D110S

FIRMWARE TYPE	500
FIRMWARE VERSION	1
SERIAL NUMBER	-
APP DIRECTION	0-1
DRIVER TYPE	0

Table 13 Description of Models

1.13.9.2 Distributor Settings: Password is required to enter this menu. Please contact the manufacturer.



NO	DESIGNATION
1	FIRMWARE TYPE
2	FIRMWARE VERSION


Table 14 Distributor Settings

10. Firmware Type: This is where the firmware code is entered according to the dispenser type.

11. Firmware Version: This is where the firmware version is entered.

Figure 34 Distributor Settings Menu

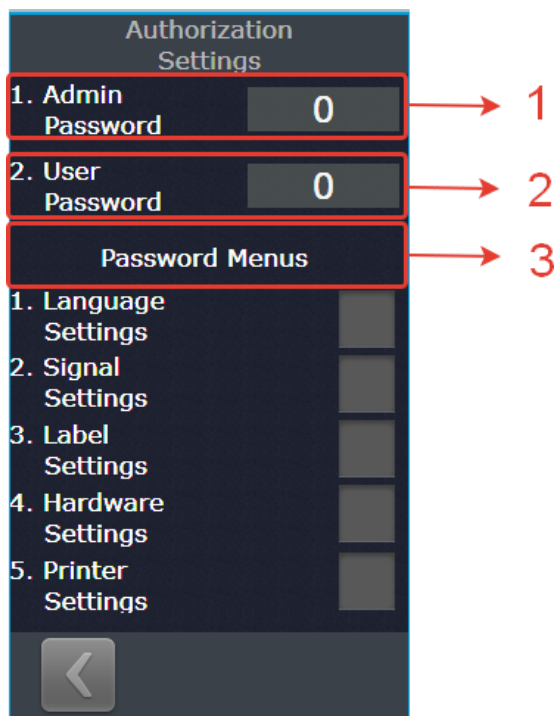1.13.9.3 Authorization Settings: This section is used to select the partitions to be encrypted and to create passwords. The default value used to enter this menu is 0.



NO	DESIGNATION
1	ADMIN PASSWORD
2	USER PASSWORD
3	PASSWORD MENUS

Table 15 Authorization Settings


12. Admin Password: Used to change the password used to enter the Authorization settings menu. Its default value is 0.

13. User Password: This is the place used to set the password to be used in encrypted menus. Its default value is 0.

Password Menus: It is used to encrypt the menus under the Advanced settings menu. The desired menu can be encrypted from the list below.

Figure 35 Authorization Settings Menu

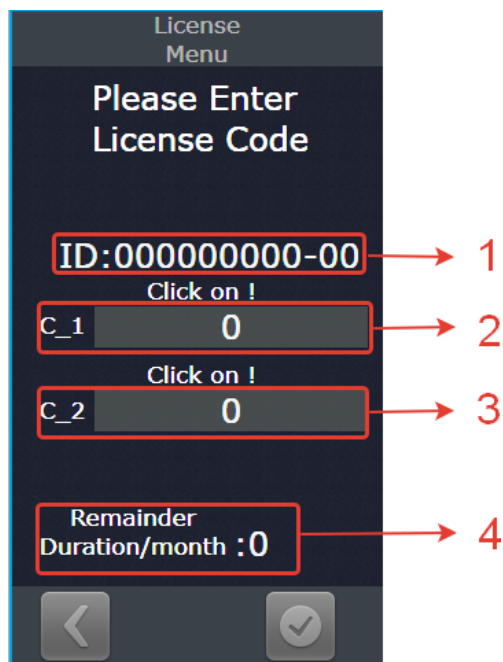1.13.9.4 License Settings: This is the area where Dispenser license information is displayed. Please contact the manufacturer for license information.



NO	DESIGNATION
1	ID
2	C_1
3	C_2
4	REMAINDER DURATION

Table 16 License Settings

14.ID: Used for licensing. Each dispenser is a unique number. License transactions are made with this number.

15. C_1: It is the license code to be given by the manufacturer according to the license number.

16. C_2: It is the license code to be given by the manufacturer according to the license number.

17. Remainder Duration: Shows license duration

Figure 36 License Menu

2

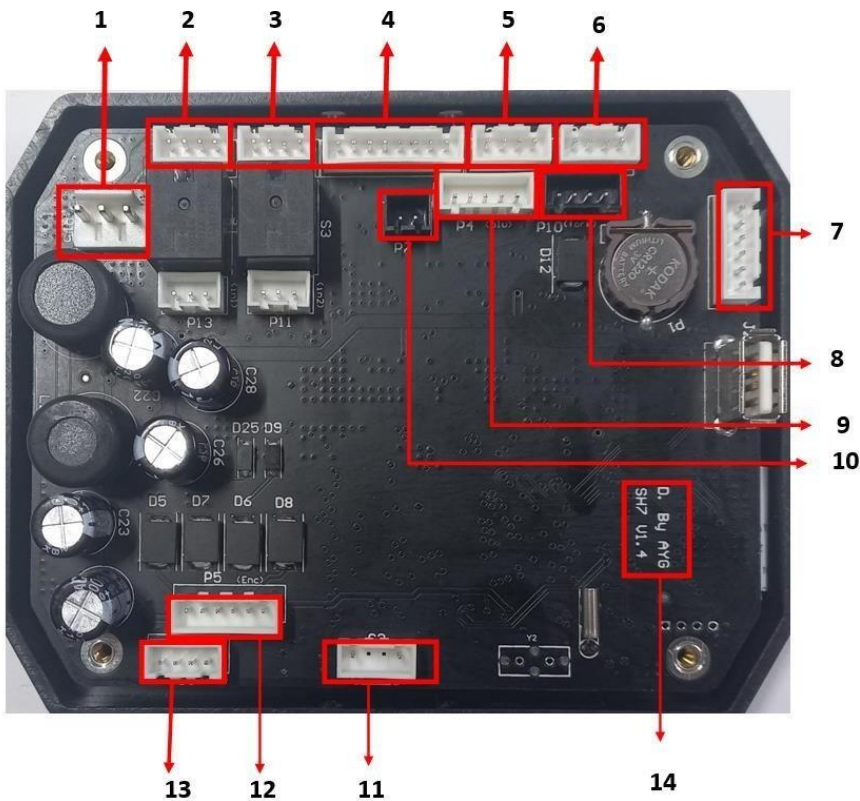
ELECTRICAL CONNECTIONS

1. ELECTRONIC COMPONENTS AND BOARD CONNECTIONS OF THE MACHINE

Basically, there are 3 boards in this machine.

- Mainboard
- Motor Driver board
- Power supply

1.1 MAINBOARD



NO	DESIGNATION
1	Power connection
2	Fault connection
3	Busy connection
4	Printer connection
5	Driver connection
6	Product sensor connection
7	-
8	Label sensor connection
9	Blow out connection
10	Motor driver communication connection
11	Motor driver communication connection
12	Encoder connection
13	-
14	Mainboard version number

Table 17 Description of Mainboard

Figure 37 Mainboard 1.4 connection

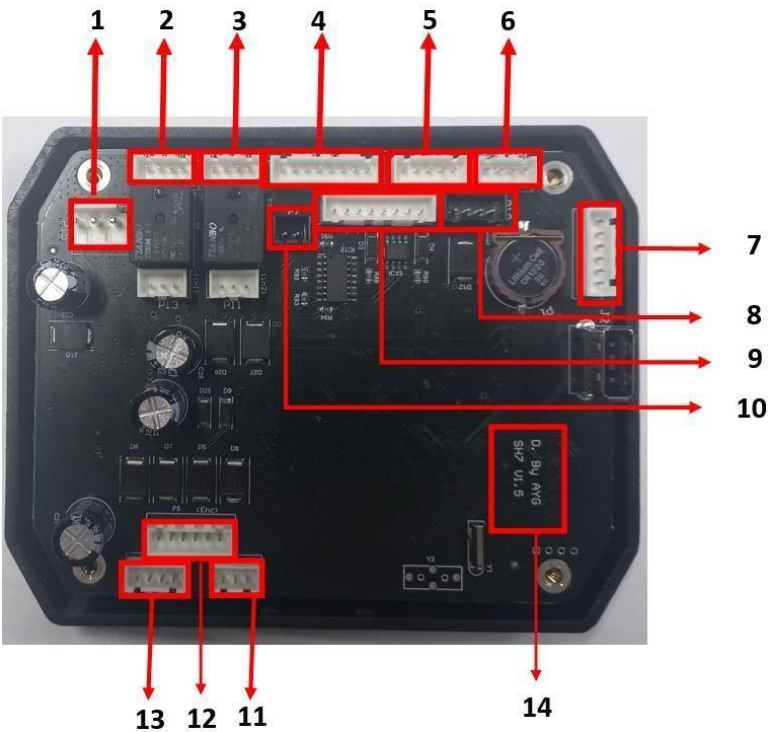


Figure 38 Mainboard 1.6 connection

NO	DESIGNATION
1	Power connection
2	Fault connection
3	Busy connection
4	Printer connection
5	Driver connection
6	Product sensor connection
7	-
8	Label sensor connection
9	Blow out connection
10	Motor driver communication connection
11	Motor driver communication connection
12	Encoder connection
13	-
14	Mainboard version number

Table 18 Description of Mainboard

1.1.1. MAINBOARD POWER CONNECTION

The power connections of the mainboard are as follows. There is a difference between versions on the mainboard, this difference is indicated in the table below. The table provides detailed information about the connection. 3*3.96mm connector is used. The first pin is as indicated in the photo.



Figure 39 Mainboard Power Connection

NO	DESCRIPTION OF THE PINS
1	-
2	+30V DC
3	GND

Table 19 Mainboard Power Connection for v1.4

NO	DESCRIPTION OF THE PINS
1	+5V DC
2	+30V DC
3	GND

Table 20 Mainboard Power Connection for v1.6

1.1.2 FAULT CONNECTION

Fault output connections are as follows. There is a difference between versions on the mainboard, this difference is indicated in the table below. Detailed information about the connections is given in the table. 4*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 40 Fault Connection

NO	DESCRIPTION OF THE PINS
1	Relay NO
2	Relay NC
3	Relay COM
4	+30V DC

Table 21 Fault Connection for v1.4

NO	DESCRIPTION OF THE PINS
1	Relay NO
2	Relay NC
3	Relay COM
4	GND

Table 22 Fault Connection for v1.6

1.1.3 BUSY CONNECTION

Busy output connections are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 4*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 41 Busy Connection

NO	DESCRIPTION OF THE PINS
1	Relay NO
2	Relay NC
3	Relay COM
4	+30V DC

Table 23 Busy Connection

1.1.4 PRINTER CONNECTION

Printer input connections are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 8*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 42 Printer Connection

NO	DESCRIPTION OF THE PINS
1	+30V DC
2	Printer Fault Input
3	+30V DC
4	Printer Busy Input
5	+30V DC
6	Mosfet
7	+30V DC
8	Mosfet

Table 24 Printer Connection

1.1.5 MOTOR DRIVER BOARD CONNECTION

Motor driver communication connections are as follows. There is a difference between versions on the mainboard, this difference is indicated in the table below. Detailed information about the connections is given in the table. 4*2.5 mm and 5*2.5mm connectors are used. The first pin is as shown in the photo.



Figure 43 Motor driver board connection for v1.4

NO	DESCRIPTION OF THE PINS
1	Can H
2	Can L
3	Enc A
4	Gnd

Table 25 Motor Driver Board Connection for v1.4



Figure 44 Motor driver board connection for v1.6

NO	DESCRIPTION OF THE PINS
1	Can H
2	Can L
3	Enc A
4	Enc B
5	Gnd

Table 26 Motor Driver Board Connection for v1.6

1.1.6 PRODUCT PHOTOCELL CONNECTION

Product Photocell connections are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 4*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 45 Product Photocell connection

NO	DESCRIPTION OF THE PINS
1	Gnd
2	Signal Gnd
3	Signal
4	+24 V DC

Table 27 Product Photocell Connection

1.1.8 LABEL SENSOR CONNECTION

Label Sensor connections are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 4*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 46 Label Sensor connection

NO	DESCRIPTION OF THE PINS
1	Gnd
2	Sensor Learning
3	Signal output with Optocoupler
4	+24 V DC

Table 28 Label Sensor Connection

1.1.9 CAMERA CONNECTION

Camera outputs are as follows. Detailed information about the connections is given in the table. 6*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 47 Camera Connection

NO	DESCRIPTION OF THE PINS
1	Gnd
2	Optocoupler Input
3	Optocoupler Input
4	Mosfet Output
5	Mosfet Output
6	+30V DC

Table 29 Camera Connection

1.1.11 MOTOR DRIVER COMMUNICATION CONNECTION

P13 outputs are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 3*2.5 mm connector is used. The first pin is as shown in the photo.

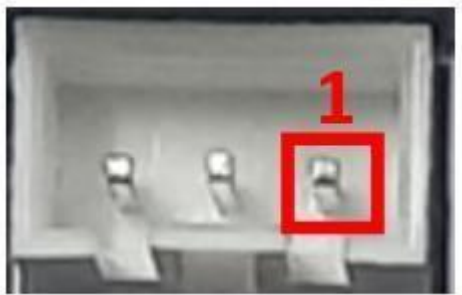


Figure 48 Motor Driver Communication Connection

NO	DESCRIPTION OF THE PINS
1	Gnd
2	Optocoupler Output
3	+30V DC

Table 30 Motor Driver Communication Connection

1.1.12 ENCODER CONNECTION

Encoder inputs are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 6*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 49 Encoder Connection

NO	DESCRIPTION OF THE PINS
1	A-
2	A
3	B-
4	B
5	Gnd
6	+30V DC

Table 31 Encoder Connection

1.1.13 P16 CONNECTION

P16 connections are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 4*2.5 mm connector is used. The first pin is as shown in the photo.

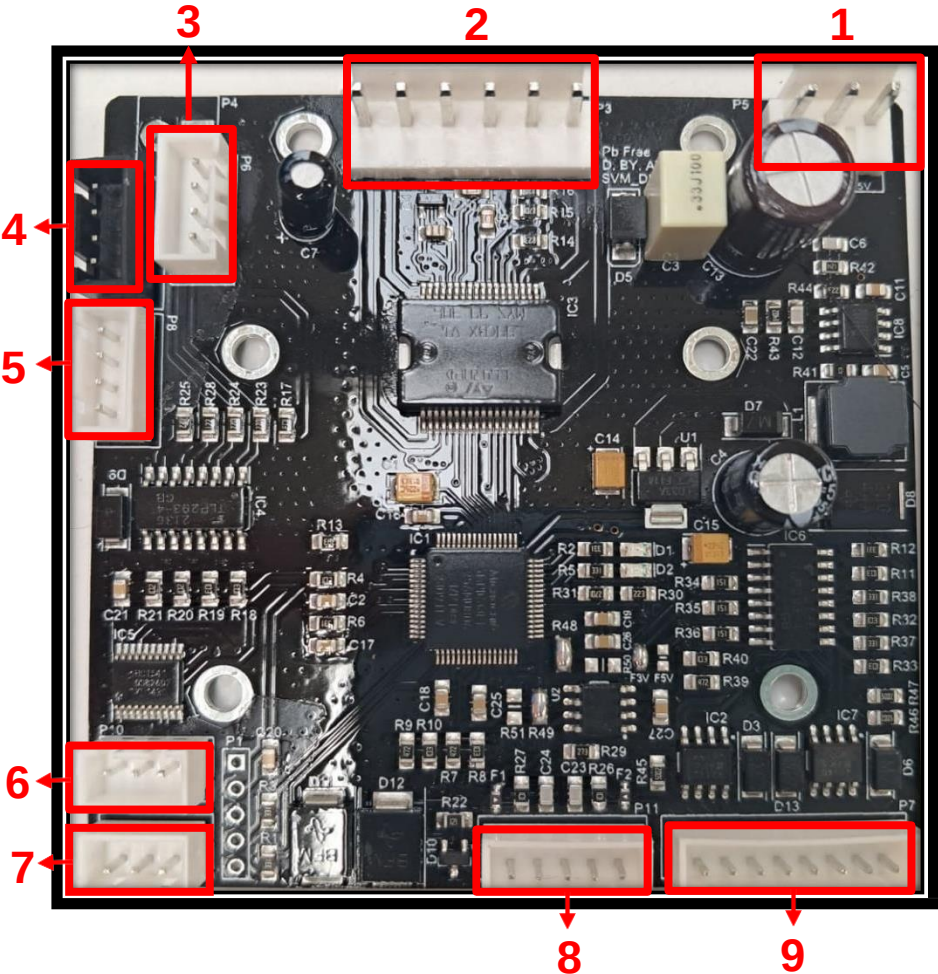


Figure 50 P16 Connection

NO	DESCRIPTION OF THE PINS
1	-
2	-
3	-
4	-

Table 32 P16 Connection

2. MOTOR DRIVER BOARD



NO	DESIGNATION
1	Power connection
2	Motor connection
3	-
4	Label sensor connection
5	Prodcut sensor connection
6	-
7	-
8	-
9	Printer connection

Table 33 Description of Motor Driver Board

Figure 51 Motor Driver board Connection

1.2.1 MOTOR DRIVER BOARD POWER CONNECTION

The power connections of the Motor driver board are as follows. There is a difference between versions on the mainboard, this difference is indicated in the table below. The table provides detailed information about the connection. 3*3.96mm connector is used. The first pin is as indicated in the photo.



Figure 52 Power Connection

NO	DESCRIPTION OF THE PINS
1	+30V DC
2	GND
3	5V

Table 34 Power Connection

1.2.2 MOTOR CONNECTION

Motor Driver board inputs are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 6*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 53 Motor Connection

NO	DESCRIPTION OF THE PINS
1	RED
2	GREEN
3	-
4	-
5	YELLOW
6	BLUE

Table 35 Motor Connection

1.2.3 P6 CONNECTION

P6 outputs are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 4*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 54 P6 Connection

NO	DESCRIPTION OF THE PINS
1	-
2	-
3	-
4	-

Table 36 P3 Connection

1.2.4 LABEL SENSOR CONNECTION

Label Sensor connections are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 4*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 55 Label Sensor Connection

NO	DESCRIPTION OF THE PINS
1	Gnd
2	Sensor Learning
3	Signal Output
4	+30V DC

Table 37 Label Sensor Connection

1.2.5 PRODUCT SENSOR CONNECTION

Product sensor connections are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 4*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 56 Product Sensor Connection

NO	DESCRIPTION OF THE PINS
1	Signal
2	-
3	+30V
4	-

Table 38 Product Sensor connection

1.2.6 P10 CONNECTION

P10 outputs are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 3*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 57 P10 Connection

NO	DESCRIPTION OF THE PINS
1	-
2	-
3	-

Table 39 P10 Connection

1.2.7 P9 CONNECTION

P9 outputs are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 3*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 57 P9 Connection

NO	DESCRIPTION OF THE PINS
1	-
2	-
3	-

Table 40 P9 Connection

1.2.8 P11 CONNECTION

P11 connections are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 4*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 58 P11 connection

NO	DESCRIPTION OF THE PINS
1	-
2	-
3	-
4	-

Table 41 P11 Connection

Printer connections are as follows. There is no difference in connectivity between mainboard versions. Detailed information about the connections is given in the table. 4*2.5 mm connector is used. The first pin is as shown in the photo.



Figure 59 Printer connection

NO	DESCRIPTION OF THE PINS
1	Printer Busy Input
2	-
3	GND
4	+30V DC
5	+30V DC
6	-
7	+30V DC
8	Printer Fault Input

Table 42 Printer Connection

1.3 POWER SUPPLY

A power supply with an output voltage of 30 volts DC should be used.

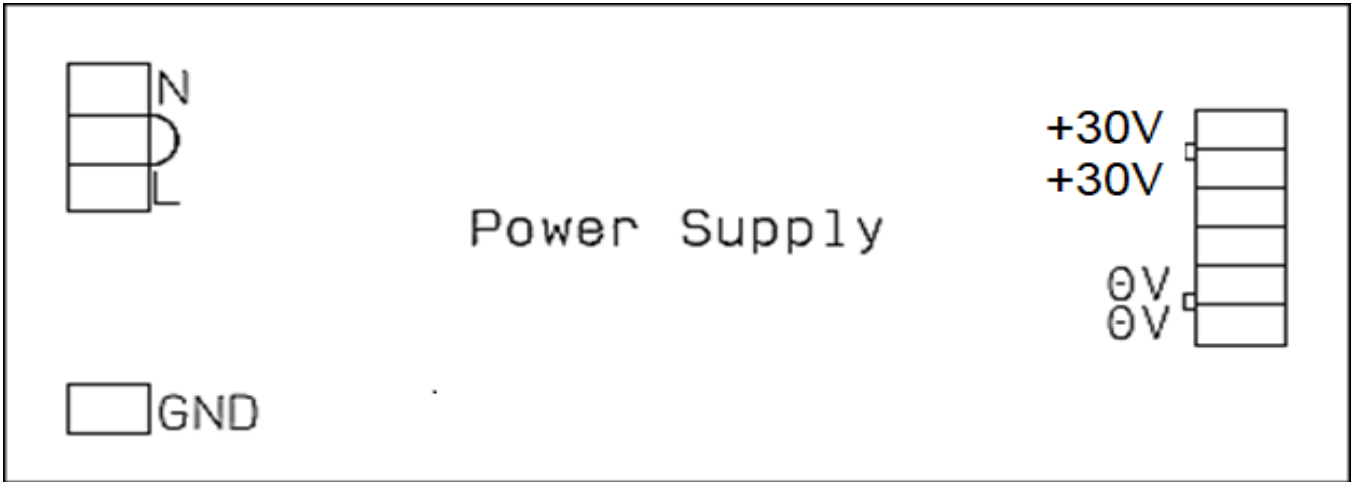


Figure 60 Power supply connection

1. DISPENSER CABLE CONNECTION

This section provides information about the external electrical wiring diagram of the machine. Machine peripherals must be made according to the following connection diagram.



Figure 61 Dispenser cable connection

NO	DESIGNATION
1	Product Photocell Connection
2	Blow Out Connection
3	Encoder Connection
4	Fault-Busy Connection
5	Printer Connection
6	Power Input
7	Label Sensor Connection
8	USB Connection
9	Camera Connection

Table 43 Dispenser cable connection

1.1 Product Photocell Connection

Please consider the table below when making photocell connection.

NO	DESIGNATION
1	Red(+30VDC)
2	Blue(GND)
3	Black(Input)
4	White(Input GND)

Table 44 Photocell male connector connection

NO	DESIGNATION
1	Brown (+30VDC)
2	Blue(GND)
3	Black(Input)
4	Blue(GND)

Table 45 Photocell female connector connection

Note: In the photocell female connector connection, the cable color may vary according to the brand.

1.2 Blow out Connection

Please consider the table below when making Blow out connection.

NO	DESIGNATION
1	Red(+30VDC)
2	Blue(GND)
3	White(A)
4	Brown(A-)
5	Black(B-)
6	Pink(B)

Table 46 Encoder male connector connection

1.3 Encoder Connection

Please consider the table below when making encoder connection.

NO	DESIGNATION
1	Red(+30VDC)
2	Blue(GND)
3	White(A)
4	Brown(A-)
5	Black(B-)
6	Pink(B)

Table 47 Encoder male connector connection

NO	DESIGNATION
1	Red(+30VDC)
2	Blue(GND)
3	White(A)
4	Brown(A-)
5	Black(B-)
6	Pink(B)

Table 48 Encoder female connector connection

1.4 Fault-Busy Connection

Please consider the table below when making fault-busy connection.

NO	DESIGNATION
1	Gray(Fault COM)
2	Yellow(Fault NO)
3	Green(Fault NC)
4	Black(Busy COM)
5	Blue(Busy NC)
6	Purple(Busy NO)
7	Red(30V DC)
8	Brown(0V DC)
9	No connection

Table 49 Fault-Busy male connector connection

1.5 Printer Connection

Please consider the table below when making printer connection.

NO	DESIGNATION
1	Gray (+30VDC)
2	Green (Printer Fault Output)
3	Black(+30VDC)
4	Blue (Printer Busy Output)
5	Yellow-White (+30VDC)
6	Brown-Yellow (Contact 2)
7	White (+30VDC)
8	Red (Contact 1)

Table 50 Printer male connector connection

NO	DESIGNATION
1	Gray (+30VDC)
2	Green (Printer Fault Output)
3	Black(+30VDC)
4	Blue (Printer Busy Output)
5	Yellow-White (+30VDC)
6	Brown-Yellow (Contact 2)
7	White (+30VDC)
8	Red (Contact 1)

Table 51 Printer female connector connection

2.6 Power Input

Power supply AC power input's voltage can change according to country voltage value (100V or 240V/ 50Hz or 60Hz). Make sure that the power supply you have purchased meets country standards

2.7 Label Sensor Connection

Please consider the table below when making label sensor connection.

NO	DESIGNATION
1	Brown(+30VDC)
2	Blue (GND)
3	Black (PNP Output)

Table 52 Label sensor male-female connector connection

Note: In the label sensor female connector connection, the cable color may vary according to the brand.

2.8 USB Connection

Usb connection is used for software updates.

2.9 Camera Connection

Please consider the table below when making camera connection.

NO	DESIGNATION
1	Green (+30VDC)
2	Yellow (NPN Out)
3	Brown (GND)

Table 53 Camera connection

3

MECHANICAL ADJUSTMENTS

1.ADHESIVE LABELS

Winding outside

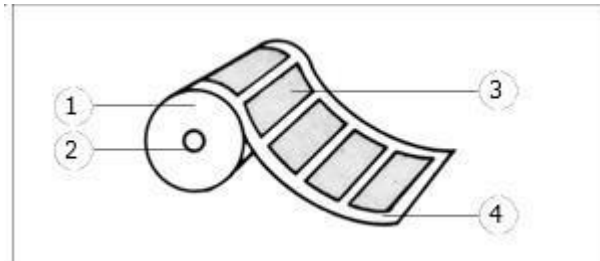


Figure 62 Winding outside

Winding inside

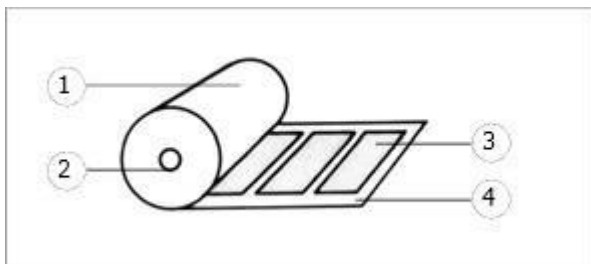
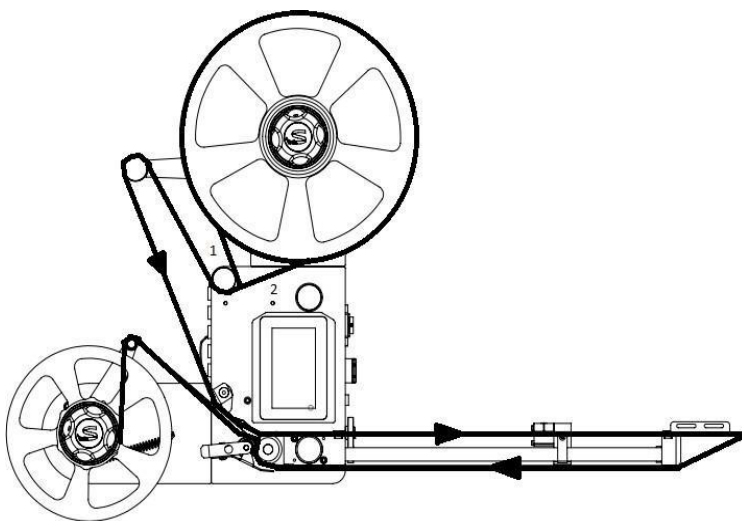


Figure 63 Winding inside

1. Label Reel
2. Label Core
3. Label
4. Backing Paper

2. THREADING THE LABEL WEB

The following diagrams show how to place the label mesh on the most common standard applicators.

2.1 LEFT DIRECTION LABEL DIAGRAM

1. Outside winding
2. Inside winding


2.2 RIGHT DIRECTION LABEL DIAGRAM

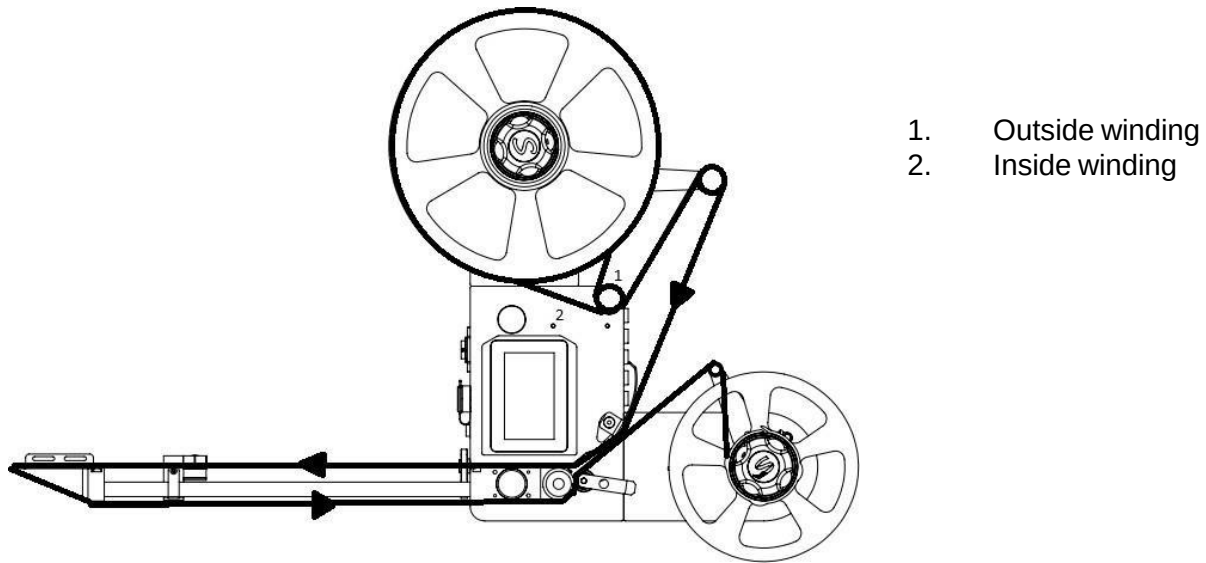Figure 65 Right direction label diagram

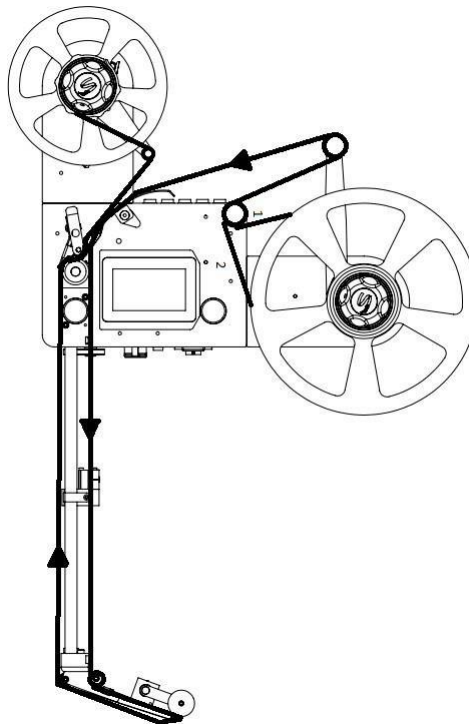
2.3 LEFT DIRECTION LABEL DIAGRAM DISPENSING PLATE WITH SPRING-LOADED ROLLER, 75 ° ANGULAR

Figure 66 Left Direction Label Diagram dispensing plate with spring-loaded roller, 75° angular

2.4 RIGHT DIRECTION LABEL DIAGRAM DISPENSING PLATE WITH SPRING-LOADED ROLLER, 75 ° ANGULAR

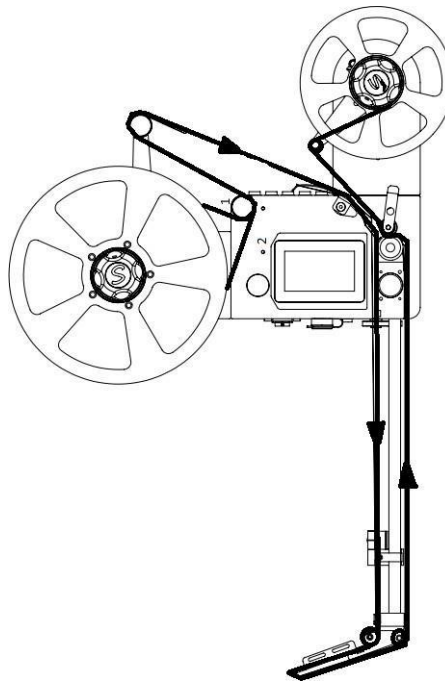


Figure 67 Right Direction Label Diagram dispensing plate with spring-loaded roller, 75° angular

3. OVERVIEW AND SUB-ASSEMBLIES

3.1 OVERVIEW

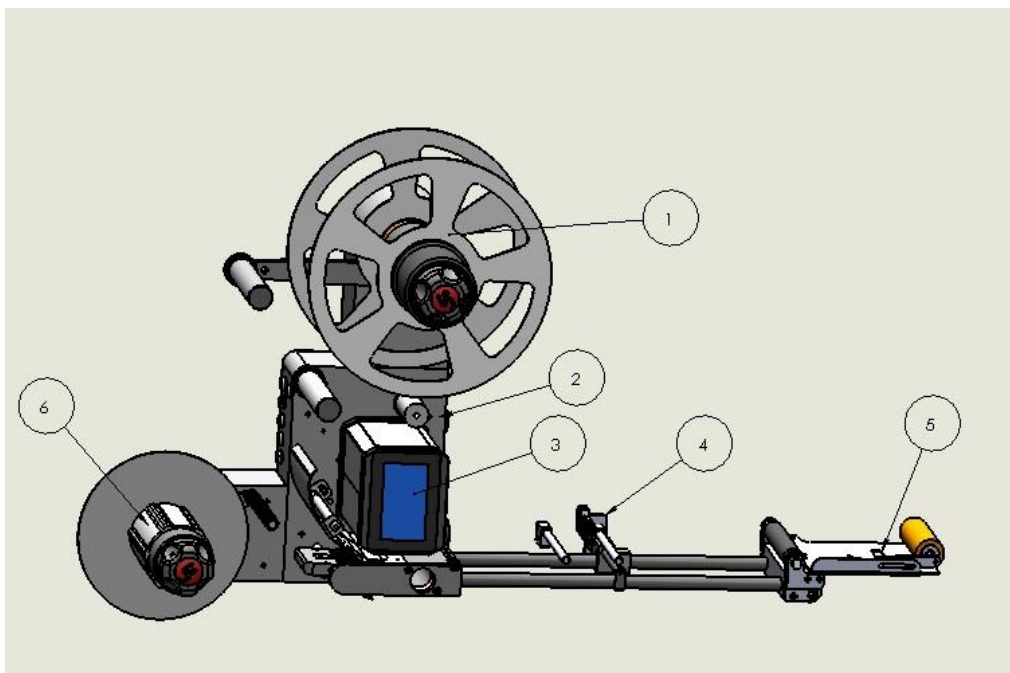


Figure 68 Overview drawing

1. Unwinder
2. Main Body
3. Screen
4. Sensor
5. Label Scraper
6. Winder

3.1.1 FUNCTION

The advancement of the label web is realized by the silicon roller driven by a servo motor.

3.2 STANDARD WINDER

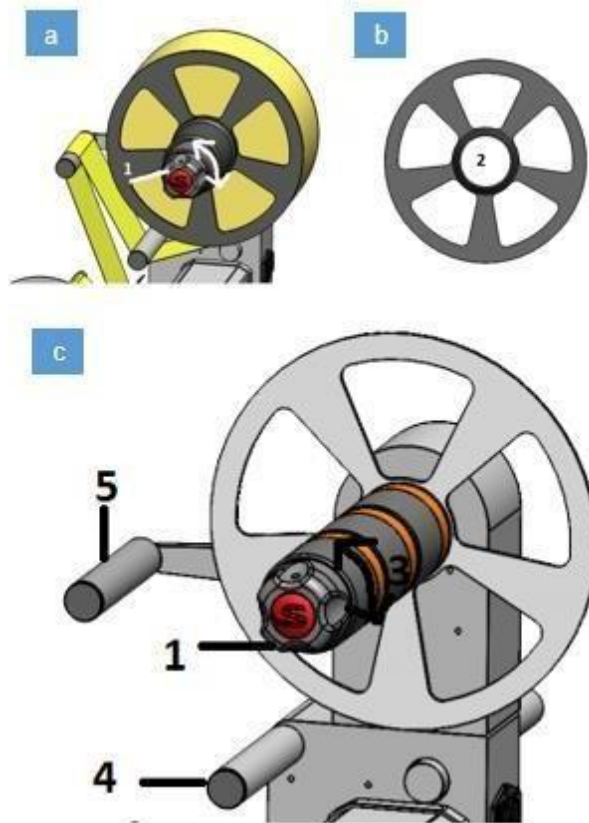


Figure 69 Standard winder drawings

- Turn Part 1 to release the label roll.
- Remove part 2.
- Place the label reel on the 3 part.
- Pass the label properly first through part 4 and then part 5.
- Insert Part 2 up to the label reel.
- Turn Part 1 until the label reel is securely secured.

3.3 ADJUSTING THE REEL BRAKE

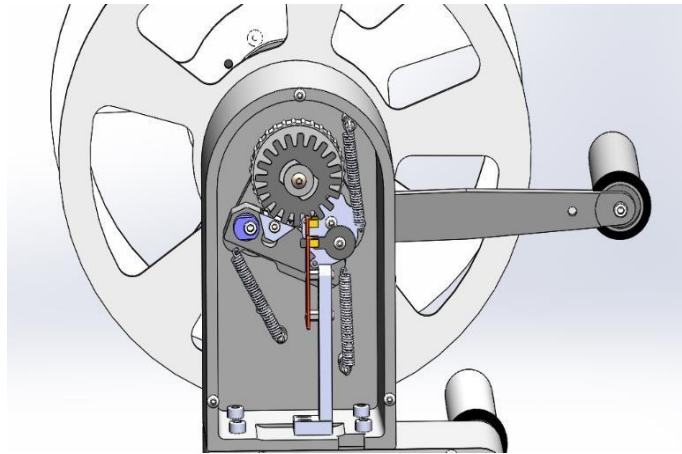
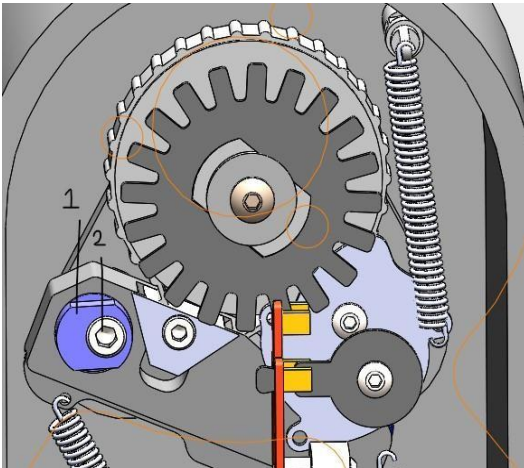


Figure 70 Basic position pendulum lever

- Loosen the bolt (2) and turn the eccentric piece (1) to the right or left.

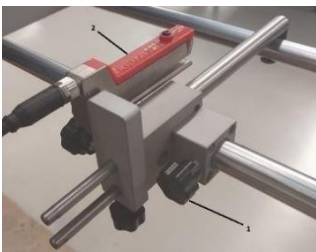


Figure 87 Sensor distance setting

- Turn the threaded piece (1) and move the sensor (2) back and forth



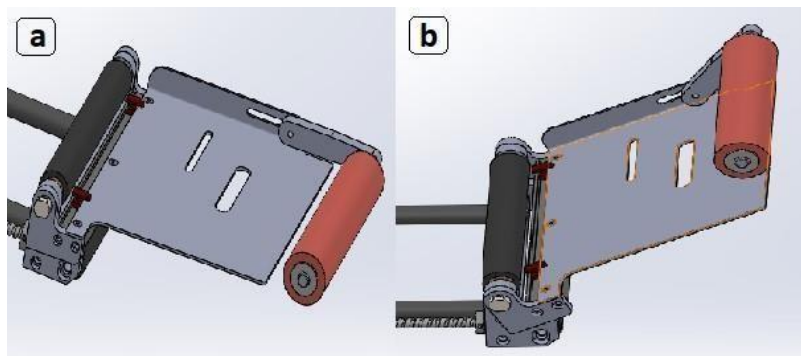


Figure 71 Straight Stripping(a). Adjustable Angle stripping(b)

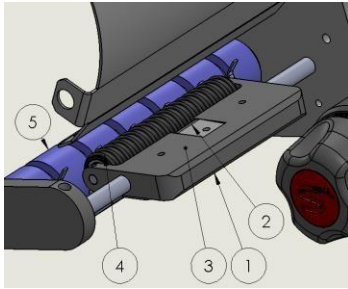
3.4 PRESSING ROLL ADJUSTMENT




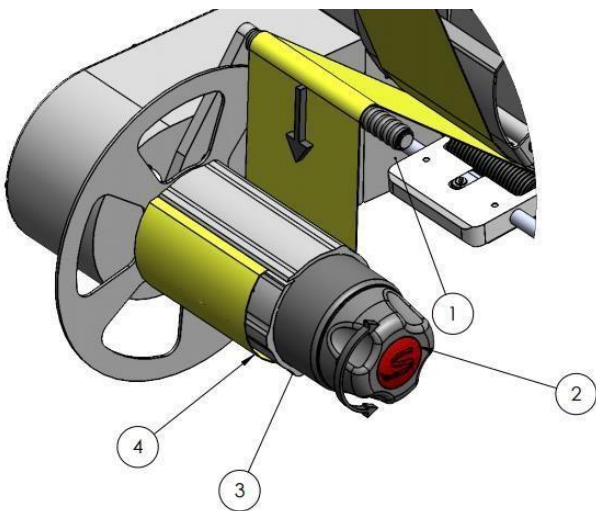
- Loosen bolt 1.
- Turn the (2) part with the (3) part.
- Adjust the pressure of roll 4 to roll 5
- After adjusting, tighten Part 1



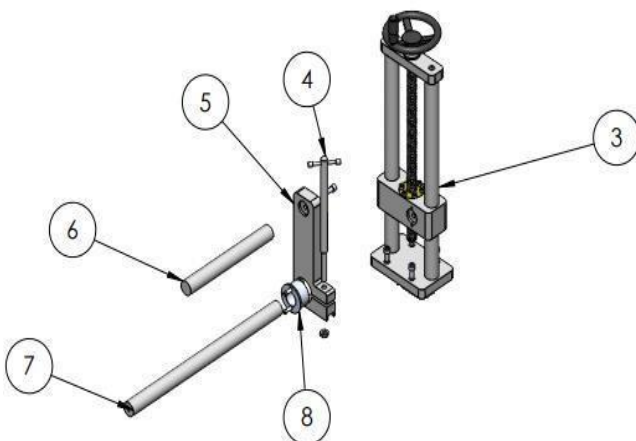- Move the label in the direction of the arrow over track 1
- Pass the piece no. 4 to the piece no. 3.
- Pass the label through the slit part of Part 3.
- Tighten the intervening label by turning the part 2.



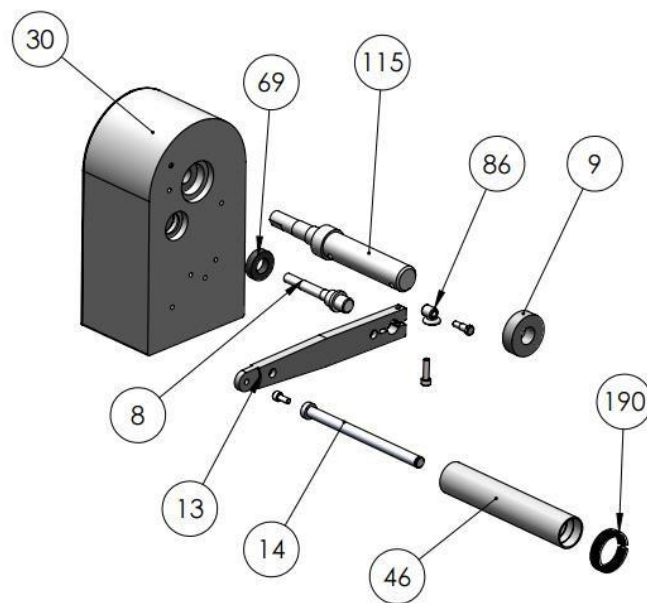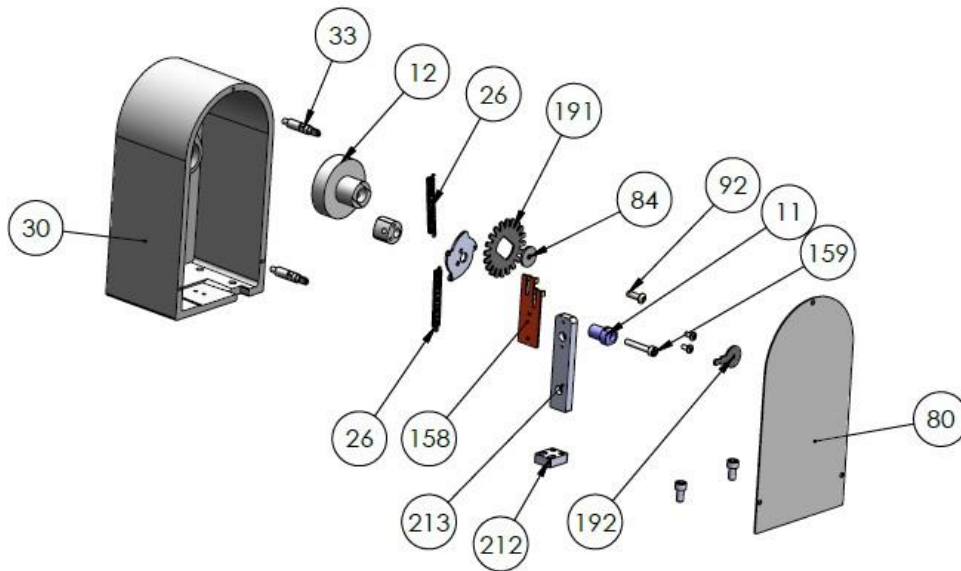- Connect Part (6) to Part (5) with a bolt.
- Insert Part (8) into part (5) and connect part (3)
- Connect Part (7) to Part (3) with a bolt.
- Part 4 tighten part 5
- In this way, you can rotate the machine in any direction

4. DISPENCER EXPLODED PARTS**4.1 WINDER EXPLODED PARTS****4.2**

ATTENTION!!!

For Left Hand


For Right Hand



30	T-1001/T-1070	Body	1
-----------	---------------	------	---


PART NU.	PART CODE	ENG.	QUA.
8	T-1041	Ballerina Break Shaft	1
9	H-1006	Bearing 6203	1
11	T-1046	Break Adjust Part	1
12	T-1047	Unwinder Pulley	1
13	T-1038	Ballerina Handle	1
14	T-1040	Ballerina Roller Shaft	1
26	H-1013	Spring	3
30	T-1001/T-1070	Body	1
33	T-1055	Break Spring Shaft	1
46	T-1039	Ballerina Roller	1
69	H-1017	Bearing 6902	1
80	S-1016	Sheet Cover	2
86	H-057	Stopper Part	2
11 5	T-1048	Unwinder Shaft	1
19 0	T-1177	Sensor Clamping Part	1
19 1	B-035	Alluminum Pipe Screw	1
19 2	T-1170	Bracket Support Piece	1
21 2	T-1160	Fork Sensor Connection	1
21 3	T-1161	Vertical Fork Sensor Connection	1

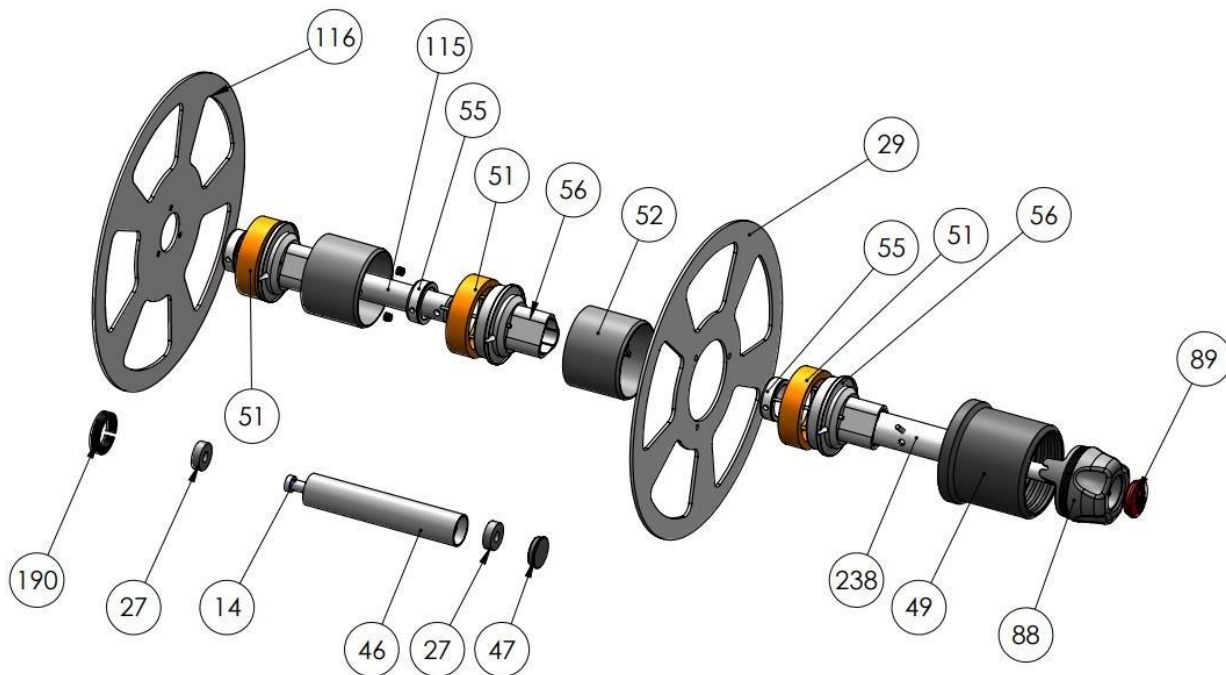4.3 WINDER LABEL SYSTEM EXPLODED PARTS




PART NU.	PART CODE	ENG	QUA.
14	T-1040	Ballerina Roller Shaft	1
27	H-1008	Bearing 6000	5
29	S-1006	Rubber Roller Cover Sheet	1
46	T-1039	Ballerina Roller	1
47	H-093	Stainless Pipe Cover - L	2
49	T-1075	Stopper Cover Part	1
51	H-1005	Sponge	5
52	H-1001	Pushing Ring	5
55	T-1053	Sponge Bearing Ring	5
56	H-1002	Sponge Bearing	3
88	H-1003	Knob	2
89	H-1004	Knob Cover	2
115	T-1048	Unwinder Shaft	1
116	S-1001	Full Label Support Sheet	1
190	T-1177	Sensor Connection Crimping Part	1
238	T-1049	Solid Label Shaft Insert Part	1

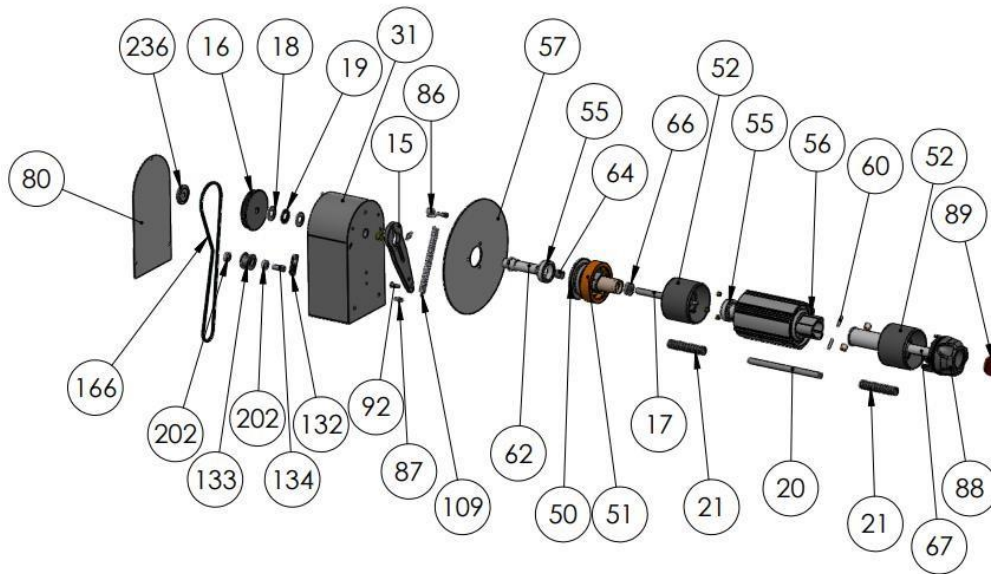4.4 UNWINDER EXPLODED PARTS




PART NU.	PART CODE	ENG	QUA.
15	T-1031	Ballerina Handle	1
16	T-1024	Pulley	1
17	T-1027	Rewinder Shaft	1
18	H-138	Bearing AXK 1226 Stamp	2
19	H-137	Bearing AXK 1226	1
20	T-1032	Ballerina Roller Shaft	1
21	T-1033	Ballerina Roller	2
31	T-1002	Body	1
50	H-1000	Sponge Stopper	2
51	H-1005	Sponge	5
52	H-1001	Pushing Ring	5
55	T-1053	Sponge Bearing Ring	5
56	H-1002	Sponge Stopper	3
57	S-1003	Winder Pulley	1
62	T-1028/T-1115	Empty label shaft	1
64	H-012	Bearing HF 1012	1
66	H-101	Bearing 608	1
67	T-1066	Blank Label Bush Insert Part	1
80	S-1016	Sheet Cover	2

86	H-057	Stopper Part	2
87	T-1034	Break Spring Shaft	2
88	H-1003	Knob	2
89	H-1004	Knob Cover	2
109	H-1020	Spring	1
132	S-012	Timing Tensioning Sheet	3
133	T-1211	Green Belt Tensioning Pulley	1
134	T-1020	Shaft Of Setting Belt	1
166	T-1124	Eccentric Stamp	1
202	T-1044	Break Ball	1
236	T-1212	Empty Label Shaft Stamp	1

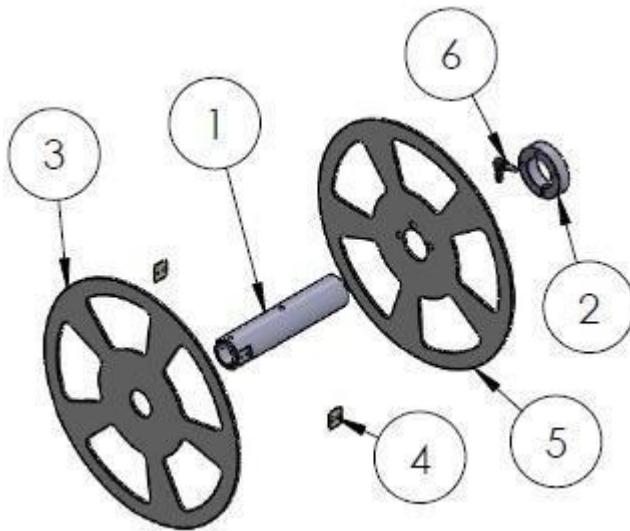4.5 UNWINDER LABEL SYSTEM (1.5") EXPLODED

PART NU.	PART CODE	ENG.	QUA.
1	T-1214	Winder Shaft	1
2	T-1215	Fixing Part	1
3	S-1061	Winder Pulley-1	1
4	S-1063	Label Fixing Sheet	2
5	S-1062	Winder Pulley-2	1
6	H-357	Switchblade Bolt	1

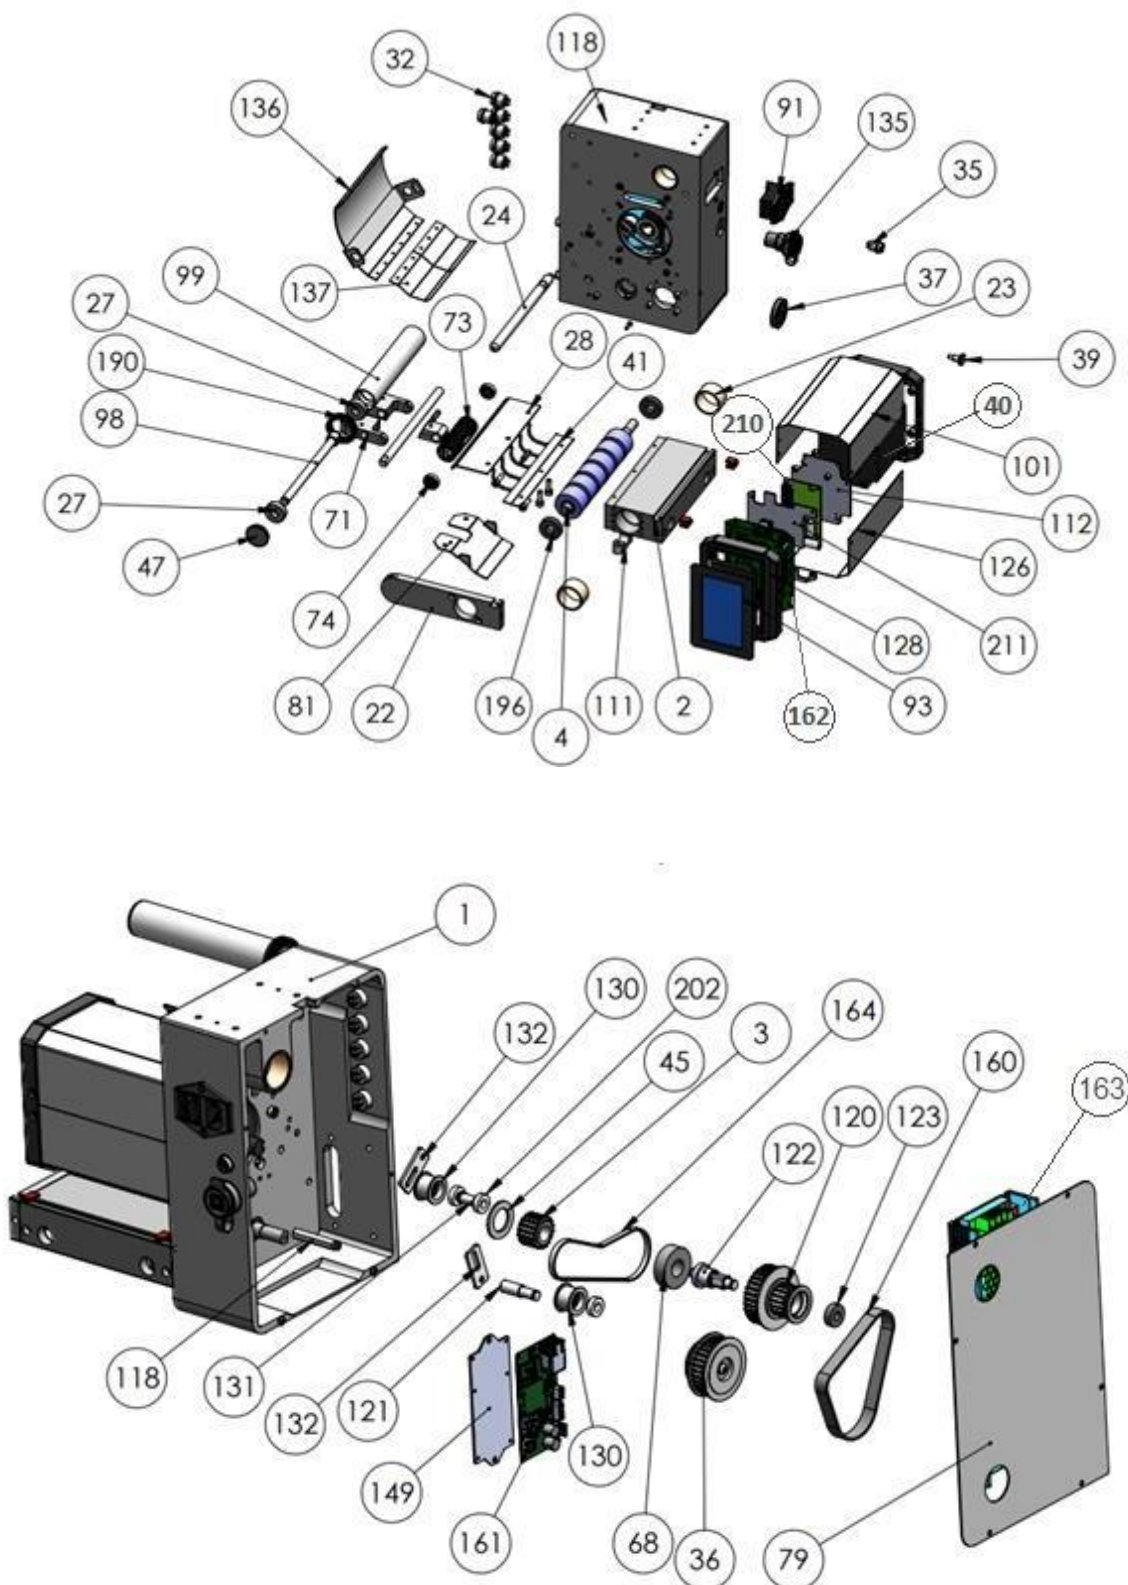4.6 DISPENSER EXPLODED PARTS




PAR T NU.	PART CODE	ENG.	QUA.
1	T-1000/T-1069	Body	1
2	T-1073	Trunk Block	1
3	T-1158	Stepper Motor Gear	1
4	T-1012	Drive Shaft	1
22	T-1006/T-1123	Block Cover	1
23	H-1007	Bearing Bush	4
24	T-1013	Brake Sheet Shaft	1
27	H-1008	Bearing 6000	5
28	S-1006	Rubber Roller Cover Sheet	1
36	T-1018	Rubber Roller Gear Stamp	2
37	T-1051	Sensor Place Adjustment Gear	1
39	T-1054	Gear Shaft	1
41	S-1007	Rubber Roll Nail Sheet	1
45	T-1016	Engine Drive Gear Stamp	2
47	H-093	Stainless Pipe Cover - L	2
68	H-108	Bearing 6202	2
71	T-1007	Print Body	1
73	T-1010	Pressure Roller	1
74	H-1010	Bearing 626	2
79	S-1044/S-1015	Body Cover Sheet	1
81	S-1008	Pressure Stopper Sheet	1
91		combo IEC-sws	1
93		Ekran	1
98	T-1037	Roller Shaft	1
99	T-1036	Roller	1
111	T-1077	Shaft Clamping Part	3
112	S-1019	Driver Sheet	1
118	T-1105	Board Shaft	3
120	T-1078	Gear Pulley	1
121	T-1014	Shaft Of Setting Belt	1
122	T-1082	Gear Pulley Shaft	1
123	H-1021	Bearing 698	1
126	S-1014	Under Screen Sheet	1
128			1
130	T-1019	Pulley Of Setting Belt	2
131	T-1023	Shaft Of Setting Belt	1

PART NU.	PART CODE	ENG.	QUA.
132	S-012	Timing Tensioning Sheet	3
135		BRJ45 int	
136	S-1004/S-1036	Label Brake Sheet	1
137	S-1005	Pressure Sheet	2
190	T-1177	Sensor Connection Squeezing Part	1
196	T-1185	Front Bracket Fixing Shaft	2
202	T-1044	Break Ball	1
211	S-1021	Graphics Card Sheet	1
36	**MDB-01	Motor Driver Board	1
38	**MB-01	Mainboard	1
39	**SC-02	Screen	1
41	**TP-01	Touch Panel	1
25	**MC-03/08	Connector -16	5
26	**SM-01	Motor	1
27	**PIS	Power Input Socket	1
28	**MK-02	Label Sensor Connection	1
29	**USB-01/**ES-01	USB/Ethernet Socket	1
43	**PS-01	Power Supply	1
55	**EB-01	Ethernet Board	1


Note: (**) Parts with this sign 110-130-160-240 code start varies according to the dispenser. Like as(220010- 220011- 220210-220211- 220310- 220311)

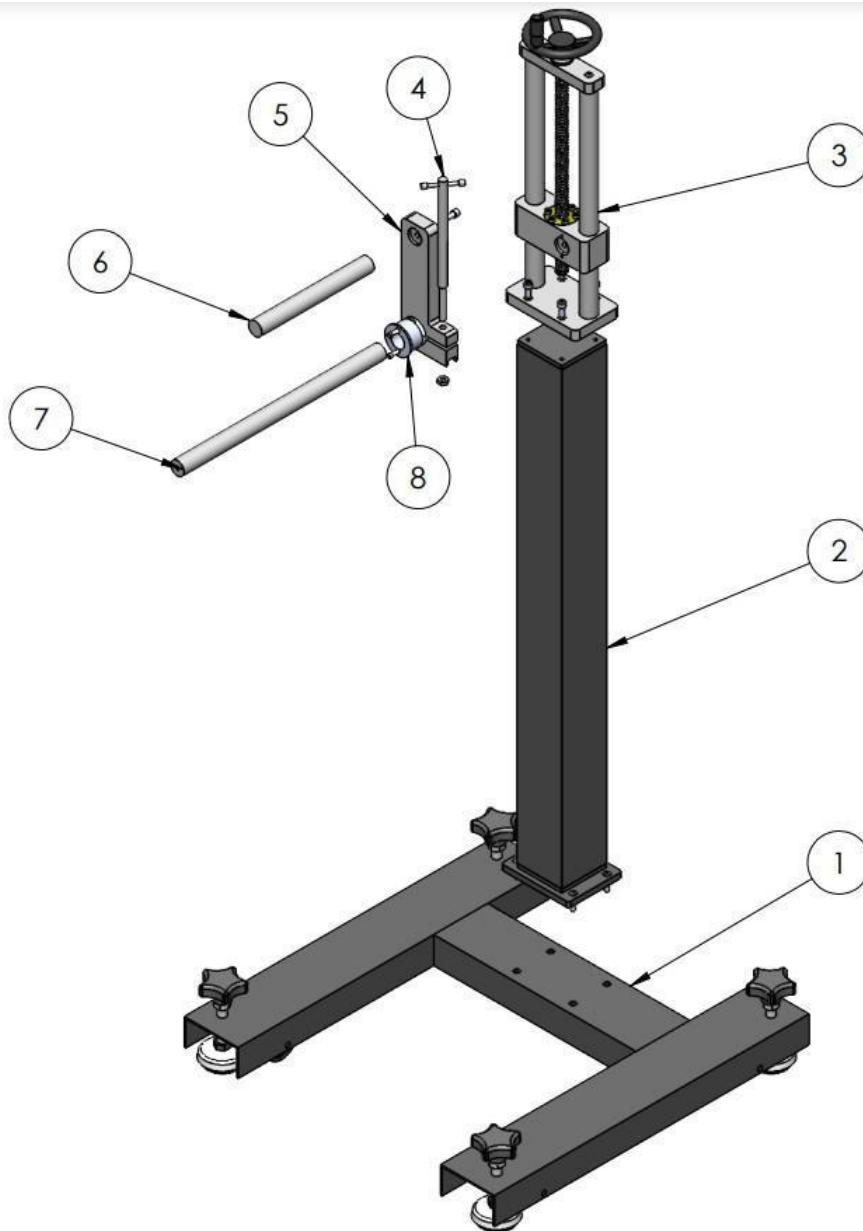4.7 CONSTRUCTION EXPLODED PARTS



PART NU.	PART CODE	ENG	QUA.
1	-	Profile Sub-Assembly	1
2	-	Vertical Profil	1
3	-	Vertical Movement Mechanism	1
4	T-1089	Fixing Shaft	1
5	T-1087	Labelling Rotation Plate	1
6	T-1068	Body Connection Shaft-2	1
7	T-1067	Body Connection Shaft-2	3
8	T-1088	Ring	1

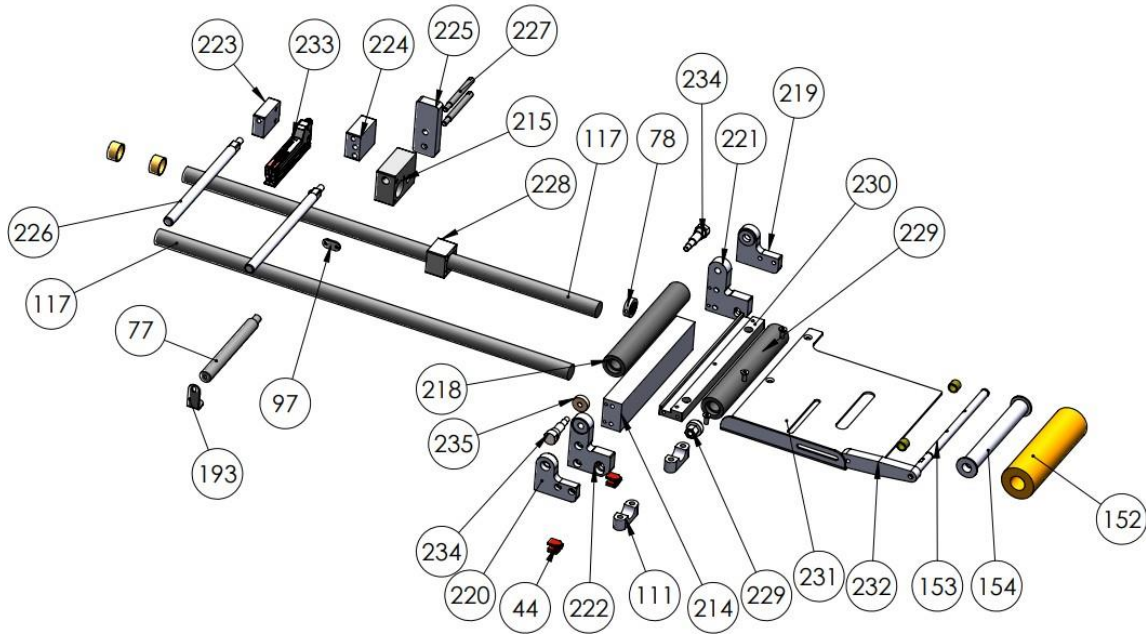4.8 SCRAPER EXPLODED PARTS



PART NU.	PART CODE	ENG	QUA.
44	H-1011	Label Guide	2
77	T-1061	Sensor Shaft	1
78	T-1065	Trapezoidal Bush	1
97	S-1010	Linear Motion Pin Sheet	1
111	T-1077	Shaft Clamping Part	3
117	T-1063	Label Bracket Shaft	2
152	H-1025	Print Roll	1
153	T-1110	Güç Kaynağı UHP-500	1
154	T-1120	Label Pasting Roll	1
193	S-1046/S-1045	Break Adjust Part	1
214	T-1171	Bracket Middle Connection	1
215	T-1060	Sensor Fixing Part	1
218	T-1165	Bracket Roller	2
219	T-1166	Bracket Lifting Part Right	1
220	T-1167	Bracket Lifting Part Left	1
221	T-1168	Bracket Side Connection Right	1
222	T-1169	Bracket Side Connection Left	1

PART NU.	PART CODE	ENG.	QUA.
223	T-1172	Sensor Support Plate	1
224	T-1173	Transparent Sensor Fixing Part	1
225	T-1174	Sensor Support Joining Part	1
226	T-1175	Steering Shaft	2
227	T-1176	Sensor Support Assembly Shaft	2
228	T-1177	Sensor Connection Crimping Part	1
229	B-035	Aluminum Pipe Screw	2
230	T-1170	Bracket Support Piece	1
231	S-1046/S-1045	Label Peeling Sheet	1
232	T-1164	Printing Roller Blade	1
233		3DCAD_GS63B_M8	
234	T-1185	Front Bracket Fixing Shaft	2
235	H-1035	Bearing 625	2