

SPPL

SAVEMA THERMAL TRANSFER PROGRAMMING LANGUAGE (Revision-12)



Markalama ve Kodlama Makinaları San.Tic. Ltd. Sti.

Fevzi Cakmak Mah. Ahmet Petekci Cad. No :5L/1

Karatay / KONYA / TURKIYE

Tel : +90 332 239 2339

Fax : +90 332 239 2319

Web: www.savema.com.tr

Document Version : Rev.11 © Copyright 2022 by SAVEMA TTO

Revision Notes

The following changes have been made to this document.

- 1- SPLAMQ(Append Multi Queue Datas) command is added. That command provides to add dynamic data to more than one queue.
- 2- SPLGMQ(Get Multi Queue Capacity) command is added. That command returns item count of specified queues.
- 3- SPLCMQ(Clear Multi Queue Datas) command is added. That command deletes data in specified queues.
- 4- SPMCLV (Change Logo Value) command is added. That command provides to change logo remotely.
- 5- SPLSLJ (Select&Load Job) command is added. That command provides to load job.
- 6- SPLLVJ(Load Job Values) command is added. That command provides to load to job and change variables.
 - 6- SPLKTD (send to template data to storage) command is added. That command provides to send template data printer storage but don't load. (SPLTDS can send template data to storage and load in same time)
- 7- SPLRTF{Template name} -- Receive Template File from printer memory to pc memory
- 8- SPLRDF{CSV file name} -- Receive Data File from printer memory to pc memory

Note: Controller software version must be minimum v3.18 to use above changes.

CONTENTS

1.	General Rules for SPPL	6
1.1.	Command Structure.....	6
1.2.	Command List.....	6
2.	Configuration Commands	12
2.1.	Set/Get System Date&Time and Time Offset.....	12
2.2.	Set/Get Network Configuration	13
2.3.	Set Get RS-232 Configuration.....	14
2.4.	Set/Get Print Speed(Intermittent)	15
2.5.	Set/Get Print Delay Value	16
2.6.	Set/Get Darkness(Contrast) Value.....	17
2.7.	Set/Get Print Rotation	17
2.8.	Set/Get Horizontal Position	18
2.9.	Set/Get Vertical Position	19
2.10.	Set/Get Mirroring Option.....	19
2.11.	Set/Get RibbonSave Mode.....	20
2.12.	Set/Get Internal Contact Mode(Continuous only)	21
2.13.	Set/Get Trigger Contact Mode(Continuous only)	22
2.14.	Set/Get All Settings	23
2.15.	Set/Get System Parameters	25
2.16.	Set/Get All System Parameters	26
2.17.	Set/Get One Additional Settings.....	27
2.18.	Set/Get All Additional Settings	27
2.19.	Set /Get System Language	28
2.20.	Set/Get Administrator Password.....	30
2.21.	Return to Factory Settings.....	30
2.22.	Set/Get Print Request Message	31

3. Label Designing Commands 32

3.1.	Create Template Datas and Template Structure.....	32
3.1.1.	General Template Datas	33
3.1.2.	General Object Datas.....	35
3.1.3.	Objects(Content)	35
3.1.3.1.	Date	35
3.1.3.2.	Time	38
3.1.3.3.	Text	40
3.1.3.4.	RichText	41
3.1.3.5.	Counter	42
3.1.3.6.	Logo(Image)	45
3.1.3.7.	Shape	46
3.1.3.8.	Shift Code.....	47
3.1.3.9.	Barcode	49
3.1.3.10.	2D Barcode	56
3.1.3.11.	Database.....	65
3.1.3.12.	Table.....	66
3.1.4.	Font	68
3.2.	Load Template File from Printer.....	70
3.3.	Get Active Template	70
3.4.	Get Stored Templates	70
3.5.	Create Database File	71
3.6.	Get Stored Data Files	72
3.7.	Delete Template File	72
3.8.	Delete All Templates	72
3.9.	Delete Data File	73
3.10.	Delete All Data Files	73
3.11.	Clear Data Buffer	74
3.12.	Load Font File.....	74
3.13.	Get Font Files.....	75
3.14.	Delete Font File.....	75
3.15.	Get Field Names.....	75
3.16.	Get Field Value.....	76
3.17.	Append Queue Datas	77
3.18.	Append Multi Queue Datas.....	77
3.19.	Get Queue Capacity	78
3.20.	Get Multi Queue Capacity	79
3.21.	Clear Queue Datas	79

3.22.	Clear Multi Queue Datas	80
4.	Modification Commands.....	81
4.1.	Changing Text Value	81
4.2.	Changing Barcode Value	82
4.3.	Changing 2D Barcode Value	82
4.4.	Changing Counter Value	83
4.5.	Changing Logo	83
4.6.	Changing Selected Values	84
5.	Print Commands	86
5.1.	Start Print	86
5.2.	Set/Get Print Count for Limited print	86
5.3.	Stop Print.....	87
5.4.	One Test Print.....	87
5.5.	Status of Printer	88
6.	General Commands.....	89
6.1.	Send User Message to Printer	89
6.2.	General Response Command From Printer	89
6.3.	Get Total Print Count	90
6.4.	Get Current Print Count	90
6.5.	Get Firmware Version	90
6.6.	Get Remaining Ribbon(From Cassette models)	91
6.7.	Get Serial Number of Printer.....	91
6.8.	Set Lock Interface	91
6.9.	Get Lock Interface.....	92
7.	Traverse Commands	93
7.1.	Set/Get Pack Size	93
7.2.	Set/Get Print Count	94
7.3.	Set/Get Print Position	94
7.4.	Set/Get Pack Distance.....	95
7.5.	Set/Get Printing Area.....	96
7.6.	Set/Get All Traverse Parameters	96
8.	System Parameters Explanation.....	98
8.1.	32x40I, 32x50I, 53x40I and 53x50I Parameters	98
8.2.	32x70I, 53x70I, 53x125I, 107x75I and 107x125I Parameters	100
8.3.	32C Parameters	102

8.4.	32C with Cassette, 53C and 107C Parameters Explanation	104
8.5.	32TR, 53TR and 107TR Parameters Explanation	106

9. Warnings 108

9.1.	Command Limitations	109
9.2.	Command Operating Conditions	110

1.General Rules for SPPL

SPPL is programming language for controlling Savema Thermal Transfer printer over Ethernet/RS-232 communication.

1.1 SPPL Command Structure

SPPL commands have some rules which is shown in below;

- SPPL commands starts with ~ character and ends with ^ character.(ie ~SPPSAP^)
- SPPL commands separates with | character for more than one commands. (ie ~SPPSLQ{1000}| SPPSAP^). This character only have to be used for separate commands.
- SPPL command parameters defines between { and } characters.
- (ie. ~ SPPSLQ {1000}^)
- Set and Change Commands parameters separates with > character. (ie. ~SPCSSC{115200>None>8>1}^)

Get Commands parameters separates with < characters. (ie.

~ SPGRES{ SPCGSC:115200<None<8<1}^)

Modification commands and Create Data File command parameters separates with ~gt~ text. (ie. ~SPMCSV{text1~gt~Savema}^)

- SPPL command letters are created according to some rules.
 - o SP means Savema Printer
 - o 3rd character indicates Command type. Command types with letters are;
 - C : Configuration Commands
 - L : Label Commands
 - M : Modification Commands
 - P : Print Commands
 - G : General Commands
 - o Last 3 characters are abbreviation of Command Name

Forexample; SPCSNL command letters are separating like below;

- o SP is Savema Printer
- o C is Configuration Command type
- o SNL is Set Network Configuration

1.2 Command List

SPPL commands separates according to using type. There are 5 types of command groups in SPPL.

- **Configuration Commands**
- **Label Designing Commands**
- **Modification Commands**
- **Print Commands**
- **General Commands**
- **Traverse Commands**

Note : Some commands doesn't supported by all printers. If so, printer sends FAIL message when getting incompatible command. Please see part 9.1) Command Limitations .

Note : Data transfer time changes according to communication type and speed. If data is big, transfer time increases.

All of commands are listed in below as a table format

SAVEMA PRINTER PROGRAMMING LANGUAGE COMMAND LIST			
Command	Explanation	Usage	Example
CONFIGURATION COMMANDS			
SPCSDT	Set System Date&Time and Time Offset	~SPCSDT{DD>MM>YYYY>HH>mm>SS>OO}^	~SPCSDT{25>01>2015>11>36>00>00}^
SPCGDT	Get System Date&Time and Time Offset	~SPCGDT^	~SPCGDT^
SPCSNC	Set Network Configuration	~SPCSNC{IP Address>Subnet Mask>Gateway>Port number}^	~SPCSNC{192.168.1.123>255.255.255.0>192.168.1.1>9100}^
SPCGNC	Get Network Configuration	~SPCGNC^	~SPCGNC^
SPCSSC	Set RS-232 Configuration	~SPCSSC{Baud Rate> Parity> Data Bits> Stop Bits}^	~SPCSSC{115200>None>8>1}^
SPCGSC	Get RS-232 Configuration	~SPCGSC^	~SPCGSC^
SPCSPS	Set Print Speed (Intermittent)	~SPCSPS{Print Speed}^	~SPCSPS{200}^
SPCGPS	Get Print Speed (Intermittent)	~SPCGPS^	~SPCGPS^
SPCSPD	Set Print Delay value	~SPCSPD{Print Delay}^	~SPCSPD{10}^
SPCGPD	Get Print Delay value	~SPCGPD^	~SPCGPD^
SPCSDV	Set Darkness(Contrast) Value	~SPCSDV{Contrast}^	~SPCSDV{100}^
SPCGDV	Get Darkness(Contrast) Value	~SPCGDV^	~SPCGDV^
SPCSPR	Set Print Rotation	~SPCSPR{Print Rotation}^	~SPCSPR{180}^
SPCGPR	Get Print Rotation	~SPCGPR^	~SPCGPR^
SPCSHP	Set Horizontal Position	~SPCSHP{Horizontal Position Value}^	~SPCSHP{0}^

SPCGHP	Get Horizontal Position	~SPCGHP^	~SPCGHP^
SPCSVP	Set Vertical Position	Will be used in then future	
SPCGVP	Get Vertical Position	Will be used in then future	
SPCSMO	Set Mirroring Option	~SPCSMO{Mirroring Option}^	~SPCSMO{0}^
SPCGMO	Get Mirroring Option	~SPCGMO^	~SPCGMO^
SPCSRS	Set RibbonSave Mode	~SPCSRS{Direction>Column No>Shifting length }^	~SPCSRS{0>2>4}^
SPCGRS	Get RibbonSave Mode	~SPCGRS^	~SPCGRS^
SPCSIC	Set Internal Contact Mode (Continuous only)	~SPCSIC{Internal Contact Mode State>Package length }^	~SPCSIC{1>100}^
SPCGIC	Get Internal Contact Mode (Continuous only)	~SPCGIC^	~SPCGIC^
SPCSTC	Set Trigger Contact Mode (Continuous only)	~SPCSTC{Trigger Contact Mode State>Print Count>Package length }^	~SPCSTC{1>3>100}^
SPCGTC	Get Trigger Contact Mode (Continuous only)	~SPCGTC^	~SPCGTC^
SPCSAS	Set All Settings	~SPCSAS{Print Speed>Print Delay>Darkness Value>RibbonSave Mode Direction>RibbonSave Mode Column No>RibbonSave Mode Package Length>Internal Contact Mode State>Internal Contact Mode Package Length>Trigger Contact Mode State>Trigger Contact Mode Print Count>Trigger Contact Mode Package Length}^	~SPCSAS{300>2>100>0>1>0>0>30>1>3>60}^
SPCGAS	Get All Settings	~SPCGAS^	~SPCGAS^
SPCSSP	Set System Parameter	~SPCSSP{Parameter No> Parameter value}^	~SPCSSP{1>25}^
SPCGSP	Get System Parameter	~SPCGSP{Parameter No }^	~SPCGSP{1}^
SPCSPA	Set All System Parameters	~SPCSPA{P1>P2>P3,P4>P5>P6>P7>P8>P9>P10>P11>P12>P13>P14>P15>P16>P17>P18>P19>P20}^ P means Parameter	~SPCSPA{25>27>300>200>31>77>0>24>25>0>12>65>0>5>0>23>0>4>0>0>400}^
SPCGPA	Get All System Parameters	~SPCGPA^	~SPCGPA^
SPCSSL	Set System Language	~SPCSSL{System Languge Code }^	~SPCSSL{02}^
SPCGSL	Get System Language	~SPCGSL^	~SPCGSL^
SPCSAP	Set Administrator Password	~SPCSAP{System Password}^	~SPCSAP{123456}^
SPCGAP	Get Administrator Password	~SPCGAP^	~SPCGAP^
SPCSFS	Return to Factory Settings	~SPCSFS^	~SPCSFS^
SPCSPM	Set Print Request Message	~SPCSPM{Print Request Active Passive>Print Message}^	~SPCSPM{0>OK}^
SPCGPM	Get Print Request Message	~SPCGPM^	~SPCGPM^
LABEL DESIGNING COMMANDS			

SPLTDS	Create Template Datas and Template Structure	~SPLTDS{Template Datas}^	~SPLTDS{<Template> <General> <MachineType>53x70I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>480</Height> </General> <Object> <ObjectType>Text</ObjectType> <Name>text1</Name> <X>10</X> <Y>63</Y> <W>105</W> <H>33</H> <Rotate>180</Rotate> <Content> <Data>savema Printer</Data> <Source>Internal</Source> <MagnificationRatio>100</MagnificationRatio> </Content> <Name>Arial</Name> <Size>15</Size> <Style>Bold,Italic</Style> </Object> </Template>}^
SPLKTD	Keep Template Data and Template Structure	~ SPLKTD {Template Datas}^	~ SPLKTD {<Template> <General> <MachineType>53x70I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>480</Height> </General> <Object> <ObjectType>Text</ObjectType> <Name>text1</Name> <X>10</X> <Y>63</Y> <W>105</W> <H>33</H> <Rotate>180</Rotate> <Content> <Data>savema Printer</Data> <Source>Internal</Source> <MagnificationRatio>100</MagnificationRatio> </Content> <Name>Arial</Name> <Size>15</Size> <Style>Bold,Italic</Style> </Object> </Template>}^
SPLLTF	Load Template from Printer	~SPLLTF{Template File Name}^	~SPLLTF{temp1_53.rox}^
SPLRDF	Receive CSV Data	~SPLRDF{CSV file name}^	~SPLRDF{database.csv }^
SPLRTF	Receive Template Data	~SPLRTF{Template name}^	~SPLRTF{Template name}^
SPLGAT	Get Active Template	~SPLGAT^	~SPLGAT^
SPLGST	Get Stored Templates	~SPLGST^	~SPLGST^

SPLGSD	Get Stored Data Files	~SPLGSD^	~SPLGSD^
---------------	--------------------------	-----------------	-----------------

SPLCDF	Create Data File	~SPLCDF{Data File Name~gt~File Content}^	~SPLCDF{sample.csv~gt~abc bce cde}^
SPLDTF	Delete Template	~SPLDTF{Template File Name}^	~SPLDTF{temp1_53.rox}^
SPLDTA	Delete All Template	~SPLDTA^	~SPLDTA^
SPLDDF	Delete Data File	~SPLDDF{Data File Name}^	~SPLDDF{datafile1.csv}^
SPLDDA	Delete All Data File	~SPLDDA^	~SPLDDA^
SPLCDB	Clear Data Buffer	~SPLCDB^	~SPLCDB^
SPLGFN	Get Field Names	~SPLGFN{Template File Name}^	~SPLGFN{temp1_53.rox}^
SPLGFV	Get Field Value	~SPLGFN{ Field Name}^	~SPLGFN{BatchNo}^
SPLAQD	Append Queue Datas	~SPLAQD{Field Name~gt~Datas}^	~SPLAQD{TextCSV~gt~AB001 AB002}^
SPLAMQ	Append Multi Queue Datas	~SPLAMQ{Field Name1~gt~Datas1~gt~ Field Name2~gt~Datas2~gt~ Field Name3~gt~Datas3~gt~}^	~SPLAMQ{PRDNAME~gt~PR01 PR02~ PR03~gt~BATCH NO~gt~A01B A02B A03B}^
SPLGQC	Get Queue Capacity	~SPLGQC{Field Name}^	~SPLGQC{TextCSV}^
SPLGMQ	Get Multi Queue Capacity	~SPLGMQ{Field Name1~gt~Field Name2~gt~....}^	~SPLGMQ{PRDNAME~gt~ BATCH NO}^
SPLCQD	Clear Queue Datas	~SPLCQD{Field Name}^	~SPLCQD{TextCSV}^
SPLCMQ	Clear Multi Queue Datas	~SPLCMQ{ Field Name1~gt~Field Name2~gt~....}^	~SPLCMQ{PRDNAME~gt~ BATCH NO}^
SPLSLJ	Select&Load Job	~SPLSLJ{Template Name>Count>Template Name>Count>...}^	~SPLSLJ{t1_53.rox>1>t2_53.rox>2>t3_53.r ox>3>t4_53.rox>4>t5_53.rox>5}^
SPLLVJ	Load Job Values	SPLLVJ{Template Name>Count>Variables}	~SPLLVJ{T1L_53.rox>2>AD~gt~sumak~gt~S KT~gt~19.07.2023}^

MODIFICATION COMMANDS

SPMCTV	Changing Text Value	~SPMCTV{Name of Object~gt~Text Value}^	~SPMCTV{brand_txt~gt~SAVEMA}^
SPMCBV	Changing Barcode Value	~SPMCBV{Name of Object ~gt~Barcode Value}^	~SPMCBV{barcodeno~gt~8691234567890} ^
SPMC2D	Changing 2D Barcode Value	~SPMC2D{ Name of Object ~gt~Barcode Value}^	~SPMC2D{qrcodeno~gt~savema12345}^
SPMCCV	Changing Counter Value	~SPMCCV{Name of Object ~gt~Counter Value}^	~SPMCCV{counter1~gt~000055}^
SPMCLV	Changing Logo Value	~SPMCLV{Name of Object ~gt~Base64 data}^	~SPMCLV{productlogo~gt~/9j/4....Q==}^
SPMCSV	Changing Selected Values	~SPMCSV{Name of Object~gt~Text Value~gt~Name of Object~gt~Text Value}^	~SPMCSV{ brand_txt~gt~SAVEMA~gt~ qrcodeno~gt~savema12345}^

PRINT COMMANDS

SPPSAP	Start Automatically Print	~SPPSAP^	~SPPSAP^
SPPSLQ	Set Print Count for Limited print	~SPPSLQ{Print Quantity}^	~SPPSLQ{1000}^
SPPGLQ	Get Print Count for Limited print	~SPCGLQ^	~SPPGLQ^
SPPSTP	Stop Print	~SPPSTP^	~SPPSTP^
SPPOTP	One Test Print	~SPPOTP^	~SPPOTP^
SPPSTA	Status of Printer	~SPPSTA^	~SPPSTA^

GENERAL COMMANDS

SPGSUM	Send User Message to Printer	~SPGSUM{User Message}^	~SPGSUM{Package finished. Please stop printer}^
SPGRES	General Response Command From Printer	~SPGRES{Response}^	~SPGRES{950225}^
SPGGTP	Get Total Print Count	~SPGGTP^	~SPGGTP^
SPGGFW	Get Firmware Version	~SPGGFV^	~SPGGFV^
SPGGRR	Get Remaining Ribbon(From Cassette models)	~SPGGRR^	~SPGGRR^
SPGGSN	Get Serial Number of Printer	~SPGGSN^	~SPGGSN^
SPGGCP	Get Current Print Count	~SPGGCP^	~SPGGCP^
SPGSLI	Set Lock Interface	~SPGSLI{Lock/Unlock}^	~SPGSLI{1}^
SPGGLI	Get Lock Interface	~SPGGLI^	~SPGGLI^
TRAVERSE COMMANDS			
SPTSPS	Set Pack Size	~SPTSPS{Pack Size(mm)}^	~SPTSPS{60}^
SPTGPS	Get Pack Size	~SPTGPS^	~SPTGPS^
SPTSPC	Set Print Count	~SPTSPC{Print Count}^	~SPTSPC{5}^
SPTGPC	Get Print Count	~SPTGPC^	~SPTGPC^
SPTSPP	Set Print Position	~SPTSPP{Print position(mm)}^	~SPTSPP{10}^
SPTGPP	Get Print position	~SPTGPP^	~SPTGPP^
SPTSPD	Set Pack Distance From Beginning	~SPTSPD{Pack distance(mm)}^	~SPTSPD{50}^
SPTGPD	Get Pack distance From Beginning	~SPTGPD^	~SPTGPD^
SPTSPA	Set Printing Area	~SPTSPA{Printing Area}^	~SPTSPA{400}^
SPTGPA	Get Printing Area	~SPTGPA^	~SPTGPA^
SPTSTP	Set All Traverse Parameters	~SPTSTP{Pack Size>Print Count>Print Position>Pack Distance>Printing Area}^	~SPTSTP{60>5>10>50>400}^
SPTGTP	Get All Traverse Parameters	~SPTGTP^	~SPTGTP^

Table-1) Command List

2. Configuration Commands

Configuration Commands allows to make changing on printer settings. Some settings affects printer working. So, must be carefull using this commands

2.1 Set/Get System Date&Time and Time Offset

SPCSDT :Allows to adjust system date and time and Time Offset.

Time offset is using for changing template date before or after midnight. This is changing between -12(before midnight) and 12(after midnight).

Date and time value and time offset value must be sent as a parameter with this command.

Printer sends OK message when setting date&time is succeeded or sends FAIL message when setting date&time is failed.

Using	~SPCSDT{DD>MM>YYYY>HH>mm>SS>OO}^ Parameters; DD: Day (2 digits). Day Value must be between 00-31. February has 28-29 days and some months has 30 days. So, be carefull when setting the value of the day. MM : Month (2 digits). Month Value must be between 00-12. YYYY: Year (4 digits). Year value must be between 1900-3000. HH : Hour(2 digits). Hour value is adjusted according to 24 Hours. So, hour value must be between 00-23. mm : Minute(2 digits). Minute value must be between 00-59. SS : Second(2 digits). Second value must be between 00-59. OO : Time Offset(2 digits). Time offset value must be between -12 and 12.
Example	~SPCSDT{25>07>2017>11>36>00>00}^ – with timeoffset ~SPCSDT{25>07>2017>11>36>00>02}^ – without timeoffset Return Value(On Succeeded) : ~ SPGRES{ SPCSDT:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSDT:FAIL}^

SPCGDT : Returns system date&time and time offset value from printer. If any problem happens while commands processing, printer sends FAIL message.

Using	~SPCGDT^
Example	~SPCGDT^ Return Value(On Succeeded) : ~ SPGRES{ SPCGDT :25<07<2017<11<36<00<00}^

2.2 Set/Get Network Configuration

SPCSNC : Allows to configure network parameters of printer. This parameters adjust via Ethernet communication, existing communication will be disconnected after finish adjustment and needs to connect with new parameters(IP address ...etc). If RS-232 is used for configure, there is no disconnection problem after adjust network parameters. SPCSNC commands is sending with some parameters for configuration. Printer sends OK message when setting network configuration is succeeded or sends FAIL message when setting network configuration is failed.

Using	~SPCSNC{IP Address>Subnet Mask>Gateway>Port number}^ Parameters; IP Address: Printer IP(Internet Protocol) Address must be IPv4 standart This IP address must be unique in network. Otherwise devices(have same IP address) can be conflict while working in same network. Subnet Mask : Subnet Mask must be adjust according to IP Address class. Gateway: This address is same one network and all devices(same network) uses same gateway address. Gateway address have to be same for communicate with printer. Port Number : This is 9100 in printers. So, must be use 9100 as a port number. Return Value(On Succeeded) : ~ SPGRES{ SPCSNC:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSNC:FAIL}^
Example	~SPCSNC{192.168.1.123>255.255.255.0>192.168.1.1>9100}^ ~SPCSNC{192.168.1.100>255.255.255.0>192.168.1.1>9100}^

Note : Network parameters(Subnet Mask, Gateway Address) can be learn from Command Prompt with **ipconfig** command like below image.

```

Command Prompt
Microsoft Windows [Version 6.2.9200]
(c) 2012 Microsoft Corporation. All rights reserved.

C:\Users\Tester>ipconfig

Windows IP Configuration

Ethernet adapter Ethernet:

    Connection-specific DNS Suffix  . : gateway.pace.net
    Link-local IPv6 Address . . . . . : fe80::5441:1de0:916e:54f4%12
    IPv4 Address. . . . . : 192.168.1.184
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.1.254

Tunnel adapter Teredo Tunneling Pseudo-Interface:

    Connection-specific DNS Suffix  . : 
    IPv6 Address. . . . . : 2001:0:9d38:6ab8:2478:139b:24a6:24f4
    Link-local IPv6 Address . . . . . : fe80::2478:139b:24a6:24f4%14
    Default Gateway . . . . . : ::

C:\Users\Tester>_
  
```

SPCGNC : Returns network parameters.

Using	~SPCGNC^
Example	~SPCGNC^ Return Value(On Succeeded) : ~ SPGRES{ SPCGNC:192.168.1.123<255.255.255.0<192.168.1.1<9100}^

2.3 Set/Get RS-232(Serial) Configuration

SPCSSC : Allows to set RS-232 parameters in printer. Please use 9 pins(DB9) standart **crossover** cable for communicate with printer via RS-232. RS -232 is configuring via RS-232 or Ethernet. If use RS-232 for configuration, new parameters must be apply to device which will comunicate with printer.

Printer sends OK message when setting RS-232 configuration is succeeded or sends FAIL message when setting RS-232 configuration is failed.

Using	~SPCSSC{Baud Rate>Parity>Data Bits>Stop Bits}^ Parameters; Baud Rate: Adjusts data flowing speed as bits per second. It must be happen between 1200 – 115200bps. Can be 1200-2400-4800-9600-14400-19200-28800-38400-56000-57600-115200. Printer is using 115200 bps for communication as a default but it can change. Parity : Can be None-Odd-Even-Mark-Space. Printer is using None value for
-------	---

	parity as a default but it can change. Data Bits:Can be 5-6-7-8. Printer is using 8 bits for data bits as a default but it can change. Stop Bits :Can be 1-1.5-2. Printer is using 1 bit for stop bits as a default but it can change. Return Value(On Succeeded) : ~ SPGRES{ SPCSSC:OK}^ Return Value(On Failed) : ~ SPGRES{SPCSSC:FAIL}^
Example	~SPCSSC{115200>None>8>1}^

SPCGSC:Returns RS-232(Serial) parameters of printer.

Using	~SPCGSC^
Example	~SPCGSC^ Return Value(On Succeeded) : ~ SPGRES{ SPCGSC:115200<None<8<1}^

2.4 Set/Get Print Speed(Intermittent only)

SPCSPS: Allows to set print speed(mm/sec) of printer. Printers speed is adjusting for intermittent models because continuous type printers gets print speed from encoder and encoder gets speed from media(package,label...etc) flowing speed.

Printer sends OK message when setting print speed is succeeded or sends FAIL message when setting print speed is failed.

Using	~SPCSPS{Print Speed}^ Parameters; Print Speed:Specified according to millimeter per second. Print speed value must be between 150-400. Note : If user want to print on hard meda or use resin type ribbon, print speed must be maximum 200. Please look at Service manual of related printer for more information. Return Value(On Succeeded) : ~ SPGRES{ SPCSPS:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSPS:FAIL}^
Example	~SPCSPS{200}^

SPCGPS : Returns print speed of printer..

Using	~SPCGPS^
Example	~SPCGPS^ Return Value(On Succeeded) : ~ SPGRES{ SPCGPS:200}^

2.5 Set/Get Print Delay value

SPCSPD : Allows to set print delay after print signal arrives. Specified in millimeter for continuous models and specified in milliseconds for intermittent models.

Printer sends OK message when setting print delay is succeeded or sends FAIL message when setting print delay is failed.

This value changes after printer starts to print.

Using	~SPCSPD{Print Delay}^ Parameters; Print Delay: Print Delay is start of print time after print signal arrives.Specified in millimeter(continuous) or millisecond(intermittent). Return Value(On Succeeded) : ~ SPGRES{ SPCSPD:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSPD:FAIL}^
Example	~SPCSPD{10}^

SPCGPD : Returns print delay of printer.

Using	~SPCGPD^
Example	~SPCGPD^ Return Value(On Succeeded) : ~ SPGRES{ SPCGPD:0}^

2.6 Set/Get Darkness(Contrast) Value

SPCSDV : Allows to set print darkness(contrast) of printer. Darkness can change according to media type. Can be increased when print quality is not good on media and also can increase ribbon type.

Printer sends OK message when setting darkness is succeeded or sends FAIL message when setting darkness is failed.

This value changes after printer starts to print.

Using	~SPCSDV{Contrast}^ Parameters; Contrast: Darkness(Contrast) value must be between 60-120. Return Value(On Succeeded) : ~ SPGRES{PCSDV:OK}^ Return Value(On Failed) : ~ SPGRES{PCSDV:FAIL}^
Example	~SPCSDV{100}^

SPCGDV : Returns darkness(contrast) value of printer.

Using	~SPCGDV^
Example	~SPCGDV^ Return Value(On Succeeded) : ~ SPGRES{ SPCGDV:100}^

2.7 Set/Get Print Rotation

SPCSPR : Allows to adjust print rotation of template.

Printer sends OK message when setting print rotation is succeeded or sends FAIL message when setting print rotation is failed.

Using	~SPCSPR{Print Rotation}^ Parameters; Print Rotation: Can be 0-90-180-270. 0 : Print direction is normal 90 :Print directionis 90 degrees of clockwise 180 : Print direction is reverse
-------	--

	270 : Print direction is 270 degrees clockwise or 90 degrees of anti-clockwise Note : Template height cannot be higher than printhead size while using 90 or 270 print direction or vice versa. For 32 mm models, template height must be maximum 32mm. For 53 mm models, template height must be maximum 53mm. For 107 mm models, template height must be maximum 107mm For 107x75I model, width is higher than height (107 > 75), 90 or 270 rotation doesn't supported. Return Value(On Successed) : ~SPGRES{SPCSPR:OK}^ Return Value(On Failed) : ~SPGRES{SPCSPR:FAIL}^
Example	~SPCSPR{180}^

SPCGPR: Returns print rotation value template.

Using	~SPCGPR^
Example	~SPCGPR^ Return Value(On Successed) : ~SPGRES{SPCGPR:180}^

2.8 Set/Get Horizontal Position

SPCSHP : Allows to set horizontal position of print. This command changes print location horizontally and moves print to right side. If print is moving to outside of print area, overflowing part print left side.

Printer sends OK message when setting horizontal position is succeeded or sends FAIL message when setting horizontal position is failed.

This value changes after printer starts to print.

Using	~SPCSHP{Horizontal Position Value}^ Parameters; Horizontal Position Value: Horizontal Position value must be start 0. Maximum value of position changes according to print head types. For 32 mm models, horizontal position can increase maximum 48. For 53 mm models, horizontal position can increase maximum 80. For 107 mm models, horizontal position can increase maximum 160.
-------	--

	Return Value(On Succeeded) : ~ SPGRES{ SPCSH:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSH:FAIL}^
Example	~SPCSHP{0}^

SPCGHP :Returns horizontal position value of print.

Using	~SPCGHP^
Example	~SPCGHP^ Return Value(On Succeeded) : ~ SPGRES{SPCGHP:0}^

2.9 Set/Get Vertical Position(It will be used in the future)

SPCSVP(Not Used.)

SPCGVP(Not used)

2.10 Set/Get Mirroring Option

SPCSMO : Allows to print template mirrored.

Printer sends OK message when setting mirroring option is succeeded or sends FAIL message when setting mirroring option is failed.

Using	~SPCSMO{Mirroring Option}^ Parameters; Mirroring Option: This paramter must be 0 or 1. 0: Mirroring is passive 1: Mirroring is active Return Value(On Succeeded) : ~ SPGRES{ SPCSMO:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSMO:FAIL}^
Example	~SPCSMO{0}^

SPCGMO : Returns mirroring active or passive of print.

Using	~SPCGMO^
Example	~SPCGMO^ Return Value(On Successed) : ~ SPGRES{ SPCGMO:0}^

2.11 Set/Get RibbonSave Mode

SPCSRS : Allows to print more than one columns on same vertical or horizontal position. There is two-type RibbonSave mode. These are;

Vertical :Vertical RibbonSave mode must be used when template widthsmaller than half of printhead size. Otherwise printer prints on of another print in same vertical position. Look at ribbonsave schema in below.

Horizontal : **(For only Intermittent models)**If template objects has vertical gaps, Horizontal RibbonSave mode reduces ribbon consumption.Column no and Shifting lengh should be adjust according to between objects gaps. Otherwise printer prints on of another print after gaps in same horizontal position.Look at ribbonsave schema in below.

Please look at Service manual of related printer for more information.

Printer sends OK message when setting ribbonsave mode is successed or sends FAIL message when setting ribbonsave mode is failed.


Using	~SPCSRS{Direction>Column No>Shifting length }^ Parameters; Direction: Should be 0 or 1 . 0 is Vertical RibbonSave mode, 1 is Horizontal RibbonSaveMode(This is only for intermittent printers). 0 is Default value. Column No: Provides to select print count on same vertical position. 1 is default. 1 mean only one print in same vertical position.Can increase according to print width. If it is higher than half of printhead size, it must be 1. Forexample, if printhead size is 53 mm and print width is 10mm, Can increase upto 5. Shifting length :Specifies distance between two prints for more than one columns. Specified in millimeter. Parameter must adjust according to print width. Forexample, if printhead is 53 mm and print width 8 mm, shifing length must be 3 mm. Otherwise, prirnter prints upon another print.This value starts from 0, end value can be increased upto appropriate value.
-------	---

	Return Value(On Succeeded) : ~ SPGRES{SPCSRS:OK}^ Return Value(On Failed) : ~ SPGRES{SPCSRS:FAIL}^
Example	~SPCSRS{0>1>0}^ - For 1 column- No RibbonSave ~SPCSRS{0>2>4}^ - For 2 columns and Columns distance is 4 mm

SPCGRS : Returns RibbonSave Mode parameters.

Using	~SPCGRS^
Example	~SPCGRS^ Return Value(On Succeeded) : ~ SPGRES{ SPCGRS:0<1<0}^

HORIZONTAL RIBBONSAVE

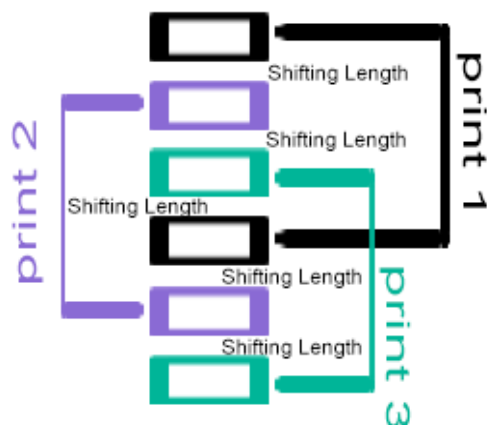

VERTICAL RIBBONSAVE

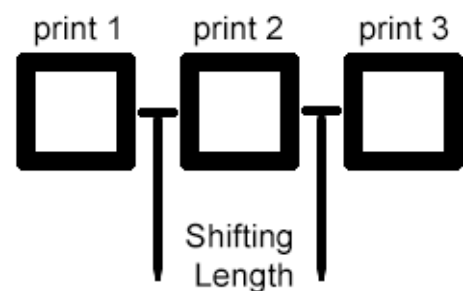


Figure : Exmaple scheme of Ribbonsave modes

2.12 Set/Get Internal Contact Mode(Continuous only)

SPCSIC : This command provides to printer prints without external print signal. This command is only using continuos printer and this type of printer prints at regular intervals without print signal (from photocell, pack machine..etc)

Printer sends OK message when setting internal contact mode is succeeded or sends FAIL message when setting internal contact mode is failed.

Using	~SPCSIC{Internal Contact Mode State> Package length }^ Parameters; Internal Contact Mode State:To enable or disable Internal contact mode. This value must be 0 or 1. 0 : Disable 1 : Enable Package length :Specifies on package length for print. Printer prints at regular intervals according to package length. Specified in millimeter. This value must be between 35-1000 Note: Internal Contact mode doesn't work with Trigger Contact mode. So, if Internal Contact will be enabled, Trigger Contact Mode must be disabled. Return Value(On Succeeded) : ~ SPGRES{ SPCSIC:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSIC:FAIL}^
Example	~SPCSIC{1<100}^ - Printer prints per 100 mm without print signal ~SPCSIC{0<100}^ - Printer prints when external print signal comes

SPCGIC : Returns Internal Contact Mode parameters.

Using	~SPCGIC^
Example	~SPCGIC^ Return Value(On Succeeded) : ~ SPGRES{SPCGIC:1<200}^

2.13 Set/Get Trigger Contact Mode(Continuous only)

SPCSTC : This command provides to printer, prints more than one in one print signal. Printer sends OK message when setting trigger contact mode is succeeded or sends FAIL message when setting trigger contact mode is failed.

Using	~SPCSTC{Trigger Contact Mode State>Print Count> Package length }^ Parameters; Trigger Contact Mode State:To enable or disable Trigger contact mode. This value must be 0 or 1. 0 : Disable 1 : Enable Print Count : Specifies how many print per contact. Package length :Specifies on package length for print. Printer prints at regular intervals according to package length. Specified in millimeter. This value must be between 35-1000 Note:Trigger Contact mode doesn't work with Internal Contact mode. So, if Trigger Contact will be enabled, Internal Contact Mode must be disabled. Because trigger contact mode Works with external print signal. Return Value(On Succeeded) : ~ SPGRES{ SPCSTC:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSTC:FAIL}^
Example	~SPCSTC{1>3>100}^ - Printer prints 3 times at 100 mm intervals after print signal comes ~SPCSTC{0>1>100}^ - Printer prints one time when external print signal comes

SPCGTC: Returns Trigger Contact Mode parameters.

Using	~SPCGTC^
Example	~SPCGTC^ Return Value(On Succeeded) : ~ SPGRES{SPCGTC:1<2<200}^

2.14 Set/Get All Settings

SPCSAS : Allows to set below settings.

- 1-** Print Speed
- 2-** Print Delay
- 3-** Darkness Value
- 4-** RibbonSave Mode Direction
- 5-** RibbonSave Mode Column No
- 6-** RibbonSave Mode Package Length
- 7-** Internal Contact Mode State

- 8- Internal Contact Mode Package Length
- 9- Trigger Contact Mode State
- 10- Trigger Contact Mode Print Count
- 11- Trigger Contact Mode Package Length

Some settings are used according to printer type. (eg: Internal and Contact Mode is usable only Continuous models, Print Speed is usable in only Intermittent models.) 0 value can be used for unused parameters, All settings must be sent in proper sequence. Otherwise printer doesn't apply this settings.

Printer sends OK message when setting all settings are succeeded or sends FAIL message when setting all settings are failed.

Using	~SPCSAS{Print Speed>Print Delay>Darkness Value>RibbonSave Mode Direction> RibbonSave Mode Column No> RibbonSave Mode Package Length>Internal Contact Mode State>Internal Contact Mode Package Length>Trigger Contact Mode State>Trigger Contact Mode Print Count >Trigger Contact Mode Package Length}^ Note: Above parameters explanation is showed with related settings command. So, please see related commands for more details. Forexample, for Print Speed look at SPCSPS(Set Print Speed) command expalanation. Return Value(On Succeeded) : ~ SPGRES{ SPCSAS:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSAS:FAIL}^
Example	~SPCSAS{300>2>100>0>1>0>0>30>1>3>60}^ - Set all system settings according to specified values.

SPCGPA : Returns all system settings value.

Using	~SPCGAS^
Example	~SPCGAS^ Return Value(On Succeeded) : ~ SPGRES{SPCGAS:300<2<100<0<1<0<0<30<1<3<60}^ -- All system parameters are returned with SPGRES command.

2.15 Set/Get System Parameter

SPCSSP :Allows to set selected system parameters. Savema Printers have 20 pieces of parameters and each parameter function is changing according to printer type.

Please look at System Parameters Explanation for more info at the end of this document.

Printer sends OK message when setting selected system parameter is succeeded or sends FAIL message when setting selected system parameter is failed.

Using	~SPCSSP{Parameter No>Parameter value}^ Parameters; Parameter No: Specifies parameter number which will be changed. Value must be between 1 -20. Parameter Value : Specifies parameter value of selected system parameter. This parameter's minimum and maximum value is changing according to parameter function and printer type. Please look at System Parameters Explanation for more info at the end of this document. Return Value(On Succeeded) : ~ SPGRES{ SPCSSP:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSSP:FAIL}^
Example	~SPCSSP{1>25}^ - Set First System Parameter to 25 ~SPCSSP{15>20}^ - Set 15th System Parameter to 20

SPCGSP : Returns selected system parameter value.

Using	~SPCGSP{Parameter No }^ Parameters; Parameter No: Specifies parameter number which will be changed. Value must be between 1 -20.
Example	~SPCGSP{1}^ Return Value(On Succeeded) : ~ SPGRES{SPCGSP:25}^ -- First system parameter is 25.

2.16 Set/Get All System Parameters

SPCSPA :Allows to set all system parameters. Savema Printers have 20 pieces of parameters and each parameter function is changing according to printer type. All parameters must be sent in proper sequence. Otherwise printer doesn't apply this parameters. Please look at System Parameters Explanation for more info at the end of this document.

Printer sends OK message when setting all system parameters is succeeded or sends FAIL message when setting all system parameters is failed.

Using	~SPCSPA{P1>P2>P3>P4>P5>P6>P7>P8>P9>P10>P11>P12>P13>P14>P15>P16>P17>P18>P19>P20}^ P means Parameter Parameters; Parameter Values :Specifies parameter values of all system parameters. Minimum and maximum value is changing according to parameter function and printer type. Please look at System Parameters Explanation for more info at the end of this document. Note:Affects printer working, so be careful while setting parameter values. Return Value(On Succeeded) : ~ SPGRES{ SPCSPA:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSPA:FAIL}^
Example	~SPCSPA{25>27>300>200>31>77>0>24>25>0>1265>0>5>0>23>0>4>0>0>400} ^ - Set all system parameters according to specified values.

SPCGPA : Returns all system parameters value.

Using	~SPCGPA^
Example	~SPCGPA^ Return Value(On Succeeded) : ~ SPGRES{SPCGPA:25<27<300<200<31<77<0<24<25<0<1265<0<5<0<23<0<4<0<0<400}^ -- All system parameters are returned with SPGRES command.

2.17 Set/Get One Additional Settings

SPCSOA : Allows to set selected additional settings . Additional settings will be used for general purposes.

Printer sends OK message when setting selected additional settings is succeeded or sends FAIL message when setting selected additional settings is failed.

Using	~SPCSOA{Parameter No>Parameter value}^ Parameters; Parameter No: Specifies parameter number which will be changed. Value must be between 1 -20. Parameter Value : Specifies parameter value of selected additional settings . This parameter's minimum and maximum value are between 0-3000. Return Value(On Succeeded) : ~ SPGRES{ SPCSOA:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSOA:FAIL}^
Example	~SPCSOA{1>25}^ - Set First additional setting to 25 ~SPCSOA{15>20}^ - Set 15th additional settings to 20

SPCGOA : Returns selected additional settings value.

Using	~SPCGOA{Parameter No }^ Parameters; Parameter No: Specifies parameter number which will be changed. Value must be between 1 -20.
Example	~SPCGOA{1}^ Return Value(On Succeeded) : ~ SPGRES{SPCGOA:25}^ -- First system parameter is 25.

2.18 Set/Get All Additional Settings

SPCSAA : Allows to set all additional settings. Additional settings have 20 pieces of parameters. All parameters must be sent in proper sequence. Otherwise printer doesn't apply this parameters.

Printer sends OK message when setting all additional settings is succeeded or sends FAIL message when setting all additional settings are failed.

Using	~SPCSAA{P1>P2>P3>P4>P5>P6>P7>P8>P9>P10>P11>P12>P13>P14>P15>P16>P17>P18>P19>P20}^ P means Parameter Parameters; Parameter Values :Specifies parameter values of all additional settings Minimum and maximum value are between 0-3000. Please look at System Note:Affects printer working, so be carefull while setting parameter values. Return Value(On Succeeded) : ~ SPGRES{ SPCSAA:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSAA:FAIL}^
Example	~SPCSAA{10>20>30>40>50>60>150>300>685>1150>1265>24>890>0>23>100>4>54>32>400}^ - Set all additional settings according to specified values.

SPCGAA : Returns all additional settings value.

Using	~SPCGAA^
Example	~SPCGAA^ Return Value(On Succeeded) : ~ SPGRES{SPCGAA:10<20<30<40<50<60<150<300<685<1150<1265<24<890<0<23<100<4<54<32<400}^ -- All additional settings are returned with SPGRES command.

2.19 Set /Get System Language

SPCSSL : Allows to change System Interface Language.

Printer sends OK message when setting system language is succeeded or sends FAIL message when setting system language is failed. Not

Using	~SPCSSL{System Language Code }^ Parameters; System Language Code:Specifies system interface language. Not used codes, can be used later. Now, if language code bigger than 18, printer
-------	--

	turns system language to English as a default. Codes are shown in below; 01 : Turkish 02 : English 03 : Arabic 04 : German 05 : Russian 06 : French 07 : Spanish 08 : Italian 09 :Czech 10 :Dutch 11 : Chinese 12 : Korean 13 : Portuguese 14 : Sinhala 15 : Hebrew 16 :Polish 17 : Greek 18 : Persian 19 : Lithuanian 20 : Finnish 21 : Not used . . . 50 : Not used Return Value(On Successed) : ~ SPGRES{ SPCSSL:OK}^ Return Value(On Failed) : ~ SPGRES{ SPCSSL:FAIL}^
Example	~SPCSSL{01}^ -- Set system language to Turkish ~SPCSSL{02}^ --Set system language to English

SPCGSL :Returns system Interface code. This codes are shown in above in SPCSSL command explanation.

Using	~SPCGSL^
Example	~SPCGSL^ Return Value(On Successed) : ~ SPGRES{ SPCGSL:02}^ -- System Language is English

2.20 Set/Get Administrator Password

SPCSAP : Allows to set system administrator password. Administrator password provides to be restricted some settings on printer. This password must be numerical. Otherwise printer doesn't allow to change system password. Printer sends OK message when setting administrator password is succeeded or sends FAIL message when setting password is failed.

Using	~SPCSAP{System Password }^ Parameters; System Password: Specifies system password. This password must be numerical. Return Value(On Succeeded) : ~ SPGRES{SPCSAP :OK}^ Return Value(On Failed) : ~ SPGRES{SPCSAP :FAIL}^
Example	~SPCSAP{123456}^ - System Password is 123456

SPCGAP: Returns system administrator password.

Using	~SPCGAP^
Example	~SPCGAP^ Return Value(On Succeeded) : ~ SPGRES{SPCGAP:123456}^ -- Administrator password is 123456

2.21 Return to Factory Settings

SPCSFS : Returns all parameters to factory setting. Stored templates and data files doesn't delete when return to factory settings. Please be careful while using this command because all parameters deletes and load factory settings. Printer sends OK message when printer is returned to factory settings or sends FAIL message when return to factory settings is failed.

Using	~SPCSFS^ Return Value(On Succeeded) : ~ SPGRES{SPCSFS:OK}^ Return Value(On Failed) : ~ SPGRES{SPCSFS:FAIL}^
Example	~SPCSFS^ - System returns to factory settings

2.22 Set/Get Print Request Message

SPCSPM : This command provides printer to send message per print after print finished. Printer doesn't send message per print as a default but if you activate this function with this command, printer sends message which is identified by you end of each print..

Using	~SPCSPM{Print Request Active Passive>Print Message}^ Parameters; Print Request Active Passive:Specifies print request is active or passive. It can be 0 or 1. 0: Printer doesn't send print message. This is default value. 1: Printer sends message end of each print to connected device. Print Message :Specifies print message which be send to connected device. Print reques Message is OK as a default. It can be READY or another message. The message length should not exceed 10 characters. Return Value(On Successed) : ~ SPGRES{SPCSPM:OK}^ Return Value(On Failed) : ~ SPGRES{SPCSPM:FAIL}^
Example	~SPCSPM{0>OK}^ - Printer doesn't send message. ~SPCSPM{1>OK}^ - Printer sends ~ SPGRES{OK}^ message end of each print. ~SPCSPM{1>READY }^ - Printer sends ~ SPGRES{READY}^ message end of each print.

SPCGPM: Returns print request situation and print message.

Using	~SPCGPM^
Example	~SPCGPM^ Return Value(On Successed) : ~ SPGRES{SPCGPM:0<OK}^ --Print Request message is disabled.

3. Label Designing Commands

3.1 CreateTemplate Datas and Template Structure

SPLTDS : This command creates template on printer side. This command parameter contains whole template data, so this command's parameter can be very long. When this command is send, printer save this template to its memory.

Template data structure is created in xml format and this structure occurs two parts. First part contains general template datas. This datas specifies template general properties(Name, Printer Type, Width, Height).

Second part contains object datas. This datas specifies object type, object name, X,Y position, rotation, font and specific object datas.

Templates data structure is defined in below. Please look at in there.

Printer sends OK message when creating template operation is succeeded or sends FAIL message when setting creating template operation is failed.

Note : Template data transfer time changes according to communication type and speed. If template data is big, transfer time increases.

Note : SPLKTD send template to printer storage but don't load , SPLTDS send template data to printer storage and load

Using	~SPLTDS{Template Data}^ Parameters; Template Datas:Creates whole template content. And this is created in XML format. This can be very long. Note: Template data must be created according to template data structure rules. Otherwise it doesn't created Return Value(On Succeeded) : ~ SPGRES{SPLTDS:OK}^ Return Value(On Failed) : ~ SPGRES{SPLTDS:FAIL}^
Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53x70I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> </pre>

	<pre> <DataSourcesInfo/> </General> <DataSources/> <Object> <ObjectType>Text</ObjectType> <Name>text1</Name> <NameID>Text01</NameID> <X>10</X> <Y>63</Y> <W>105</W> <H>33</H> <ZIndex>0</ZIndex> <Rotate>180</Rotate> <Hidden>False</Hidden> <Content> <Data>savema Printer</Data> <Source>Internal</Source> <PromptMessage></PromptMessage> <AllowedCharacters>Any</AllowedCharacters> <MagnificationRatio>100</MagnificationRatio> <Inverted>False</Inverted> <Mirror>False</Mirror> </Content> <Name>Arial</Name> <Size>36</Size> <OriginalSize>12</OriginalSize> <Style>Bold,Italic</Style> </Object> <Dates/> </Template>}^ --- This template has only one text </pre>
--	---

3.1.1 General Template Datas

This settings does not affect objects and only related with template general settings. Our machine Print Head's resolution is **300 Dpi**. So measurements are determining according to **300 Dpi**. Template settings are shown in below ;

MachineType : Specifies type of machine. Machine types affects width and maximum height of template. Machine types are;

- 1- **SVM 32 C** (32mm Continuous): 125mm (4.92inch)
- 2- **SVM 32 CK** (32mm Continuous): 125mm (4.92inch)
- 3- **SVM 32C XL** (32mm Continuous): 125mm (4.92inch)
- 4- **SVM 32*250 C** (32mm Continuous): 250mm (9.84inch)
- 5- **SVM 32*500 C**(32mm Continuous): 500mm (19.68inch)
- 6- **SVM 53 C** (53mm Continuous): 125mm (4.92inch)
- 7- **SVM 53 C XL** (53mm Continuous): 125mm (4.92inch)
- 8- **SVM 53*250 C** (53mm Continuous): 250mm (9.84inch)
- 9- **SVM 53*500 C** (53mm Continuous): 500mm (19.68inch)
- 10-**SVM 107 C** (107mm Continuous): 125mm (4.92inch)
- 11-**SVM 107 C XL** (107mm Continuous): 125mm (4.92inch)
- 12-**SVM 107*250 C** (107mm Continuous): 250mm (9.84inch)
- 13-**SVM 128 C** (128mm Continuous): 200mm (7.87inch)
- 14-**SVM 32*70 I** (32mm Intermittent): 76mm (2.95 inch)
- 15-**SVM 32*50 I** (32mm Intermittent): 50 mm (1.97 inch)
- 16-**SVM 32*40 I** (32mm Intermittent): 40 mm (1.57 inch)
- 17-**SVM 32*70 I XL** (32mm Intermittent): 76mm (2.95 inch)
- 18-**SVM 53*50 I** (53mm Intermittent):50 mm (1.97 inch)
- 19-**SVM 53*40 I** (53mm Intermittent):40 mm (1.57 inch)
- 20-**SVM 53*70 I** (53mm Intermittent):75mm (2.95 inch)
- 21-**SVM 53*70 I XL** (53mm Intermittent):75mm (2.95 inch)
- 22-**SVM 53*125 I** (53mm Intermittent):125mm (4.92 inch) 23-
- SVM 107*75 I** (107mm Intermittent): 75mm (2.95 inch) 24-
- SVM 107*125 I** (107mm Intermittent): 125mm (4.92 inch) 25-
- SVM 107*75 I XL** (107mm Intermittent): 75mm (2.95 inch)
- 26-**SVM 128*125 I** (128mm Intermittent): 125mm (4.92inch)
- 27-**SVM TR32*250** (32mm): 250mm (9.84inch)
- 28-**SVM TR53*250** (53mm):250mm (9.84inch)
- 29-**SVM TR107*250** (107mm): 250mm (9.84inch)
- 30-**SVM TR32** (32mm): 1000mm

31-**SVM TR53** (53mm): 1000mm

32-**SVM TR107** (107mm): 1000mm

33- Name : Specifies name of template file. This name format is name_**53**[**32,107**].**rox**.

For example **temp1_53.rox**, **temp1** is name, **_53** shows machine printhead width and it can be **32** and **107**, **.rox** is an extension of file name.

34- Width : Specifies width of template. This is pixel value and 1 mm = 12 pixels(300 dpi). It can be 384(32mm), 640(53mm), 1280(107mm).

35- Height : Specifies height of template. This is pixel value and 1 mm = 12 pixels(300 dpi). It changes minimum 12 pixel and maximum 1500 pixels. But maximum height is changing according to machine type. (For machine type, look at MachineType property.)

3.1.2 General Object Datas

Some properties are using for all objects.

1- **ObjectType** : Specifies type of object. These are shown in below;

- a- **Date**
- b- **Time**
- c- **Text**
- d- **Counter**
- e- **Logo**
- f- **Shape**
- g- **Barcode**
- h- **2Dbarcode**

2- **Name** : Specifies name of object. Each object name must be different from the others. This names must be increased sequentially. For example date1,date2,..text1,text2..etc.

3- **NameId**: Generate automatic from system (Text1 , Text2 ...)

4- **X** : Specifies X(horizontal) position of object. This is pixel value and 1 mm=12 pixels (300 dpi).

5- **Y**: Specifies Y(vertical) position of object. This is pixel value and 1 mm= 12 pixels(300 dpi).

- 6- **W** : Specifies width of object. This is pixel value and 1 mm= 12 pixels(300 dpi).
- 7- **H** : Specifies height of object. This is pixel value and 1 mm= 12 pixels(300 dpi).
- 8- **Rotate** : Specifies rotation of object. Default it is 0. There are ;
 - a- **0** : Default rotation of object.
 - b- **90** : It turns object to clockwise.
 - c- **180** : It turns object to reverse.
 - d- **270** : It turns object to anticlockwise.
- 9- **Hidden** : Specifies visibility of object. Values can be True or False. Default value is False.
 - a. True : Object will be shown in printer controller but will be not printed.
 - b. False : Object will be shown in printer controller and on print.

3.1.3 Objects(Content)

3.1.3.1 Date

Date object have various properties which is shown in below,

- 1- **Data** : This item stores date value. For example 21.01.2017
- 2- **Format**: This item stores format of date. Date object support many of different format. Generally it combines around these format type. For example for 21.01.2017 , format items value is shown in ().
 - a- **dd** : Short day value. (21)
 - b- **ddd** : Tree letter day value. (Sat)
 - c- **dddd** : Long day value. (Saturday)
 - d- **MM** : Short month value.(01)
 - e- **MMM** : Tree letter month value. (Jan)
 - f- **MMMM** : Long month value. (January)
 - g- **yy** : Short year value. (17)
 - h- **yyyy** : Long year value. (2017)
 - i- **jjj** : Julian Date, Day of year . (021)
 - j- **yjjj**: Last digit of year and Julian date(7021)
 - k- **jjjy** : Julian date and last digit of year(0217)
 - l- **DoW** :Day sequence in a week. (6)
 - m- **WWW** : Week sequence in a year. (4)

For example if you use dd-MM-yyyy format, date appears 21.01.2017

- 3- **Separator** : Stores separator which seperates date values.You can see it below;
For example for 21.01.2017 ,

- a- **Space ()** : 21 01 2017
- b- **Slash (/)** : 21/01/2017
- c- **Back Slash (\)** : 21\01\2017
- d- **Dot (.)** : 21.01.2017
- e- **Comma (,)** : 21,01,2017
- f- **Hypen (-)** : 21-01-2017
- g- **Colon (:)** : 21:01:2017
- h- **None ()** : 21012017

- 4- **CountryCode** : This item stores language country code for date. It is using date presentation.

This code is changing according to country. Default language country is English(USA) and CountryCode is 1033 . You can find more info from this link:

<https://msdn.microsoft.com/en-us/library/ee825488%28v=cs.20%29.aspx>.

Country codes are shown under culture code. Culture code is shown as hexadecimal format. So, it must be convert to decimal format. English- United States culture code is 0x0409 is table. Hex 0x0409 is same is 1033 in decimal format.

- 5- **DayOffset** : Specifies how many days will be add on actual date.
- 6- **MonthOffset** : Specifies how many months will be add on actual date.
- 7- **YearOffset** : Specifies how many years will be add on actual date.
- 8- **Type** : There are two type of dates.
- a- **Actual** : it changes automatically according to system date.
 - b- **Fixed** : it doesn't change according to system date. It stores only saved date data from PC.
- 9- **UpperCase** : Specifies date character as Upper or lower
- a- **True** : Date shown as 21 JAN 2017
 - b- **False** : Date shown as 21 Jan 2017
- 10- **UseSpecialMonthNames** : Provides to use special names instead of standart Month names.
- 11- **SpecialMonthNames** : Contains special month names. Month names are 12 different words or letters and moth names must be seperated with – character.

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53x70I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> </pre>
---------	--

```
<Height>912</Height>
<ZIndex>-1000</ZIndex>
<SaveImages>False</SaveImages>
<DataSourcesInfo/>
</General>
<DataSources/>
<Object>
  <ObjectType>Date</ObjectType>
  <Name>date1</Name>
  <NameID>Date01</NameID>
  <X>10</X>
  <Y>63</Y>
  <W>105</W>
  <H>33</H>
  <ZIndex>0</ZIndex>
  <Rotate>180</Rotate>
  <Hidden>False</Hidden>
  <Content>
    <Data>26/07/2022</Data>
  <Source>Internal</Source>
  <PromptMessage></PromptMessage>
  <MagnificationRatio>100</MagnificationRatio>
  <Format>dd/MM/yyyy</Format>
  <UserDefinedFormat></UserDefinedFormat>
  <Separator>/</Separator>
  <CalculatedDate></CalculatedDate>
  <CountryCode>1033</CountryCode>
  <MinimumOffsetUnit>Disabled</MinimumOffsetUnit>
  <MinimumOffset>0</MinimumOffset>
  <MaximumOffset>0</MaximumOffset>
  <DayOffset>0</DayOffset>
  <MonthOffset>0</MonthOffset>
  <YearOffset>0</YearOffset>
  <Type>Actual</Type>
  <UpperCase>False</UpperCase>
  <UseSpecialMonthNames>False</UseSpecialMonthNames>
  <SpecialMonthNames></SpecialMonthNames>
  <Inverted>False</Inverted>
  <Mirror>False</Mirror>
</Content>
```

	<pre> <Name>Tahoma</Name> <Size>36</Size> <OriginalSize>12</OriginalSize> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one date </pre>
--	---

3.1.3.2 Time

Time object have various properties which is shown in below,

- 1- **Data** : This item stores time value. For example 15:23
- 2- **Format**: This item stores format of time. Time object support many of different format. Generally it combines around these format type. For example for 15:23:00 , format items value is shown in ().
 - a- **HH** : Hour value according to 24 hours . (15)
 - b- **hh** : Hour value according to 24 hours . (03)
 - c- **mm** : Minute value (23)
 - d- **ss** : Second value (00)
 - e- **tt** : Time symbol(AM/PM).It changes according to some country. (03:23 PM)

For example if you use hh:mm tt format, time appears 03:23 PM

- 3- **Seperator** : This item stores seperator which seperates time values. You can see it below; For example for 15:23,
 - a- **Space ()** : 15 23
 - b- **Slash (/)** : 15/23
 - c- **Back Slash (\)** : 15\23
 - d- **Dot (.)** : 15.23
 - e- **Comma (,)** : 15,23
 - f- **Hypen (-)** : 15-23
 - g- **Colon (:)** : 15:23 - Default
 - h- **None ()** : 1523
- 4- **CountryCode** : This item stores language country code for time. It is using time presentation. Especially it is useful for time symbol. If English(USA) is selected, time symbol is AM/PM. This code is changing according to country. Default language country is English(USA) and CountryCode is 1033 . You can find more info from this link:

<https://msdn.microsoft.com/en-us/library/ee825488%28v=cs.20%29.aspx>.

Country codes are shown under culture code. Culture code is shown as hexadecimal format. So, it must be convert to decimal format. English- United States culture code is 0x0409 is table. Hex 0x0409 is same is 1033 in decimal format.

- 5- **HourOffset** : Specifies how many hours will be add on actual time.
- 6- **MinuteOffset** : Specifies how many minutes will be add on actual time.
- 7- **Type** : There are two type of dates.
 - a- **Actual** : it changes automatically according to system time.
 - b- **Fixed** : it doesn't change according to system time. It stores only saved time data from PC.

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53*70 I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> <DataSourcesInfo/> </General> <DataSources/> <Object> <ObjectType>Time</ObjectType> <NameID>Time02</NameID> <Name>time1</Name> <X>75</X> <Y>111</Y> <W>132</W> <H>63</H> <ZIndex>0</ZIndex> <Rotate>0</Rotate> <Hidden>False</Hidden> <Content> <Data>11:07</Data> <Source>Internal</Source> <MagnificationRatio>100</MagnificationRatio> <Format>HH:mm</Format> <UserDefinedFormat></UserDefinedFormat> <Separator>:</Separator> <CountryCode>1033</CountryCode> <HourOffset>0</HourOffset> </pre>
---------	---

	<pre> <MinuteOffset>0</MinuteOffset> <Type>Actual</Type> <Inverted>False</Inverted> <Mirror>False</Mirror> </Content> <Name>Tahoma</Name> <Size>36</Size> <OriginalSize>12</OriginalSize> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one text </pre>
--	---

3.1.3.3 Text

Text object have two different properties which is shown in below,

- 1- **Data** : This item stores text value which is saved by PC. It uses ~ character for separating lines for multiline text. For example if this item value is savema~printer, printer shows
savema
printer
in screen. According to this sample, *savema* is first line, printer is second line.
- 2- **Source** : This item specify text value source. it can be Internal and External.
 - a- **Internal** : This is default selection for text. Text value is identified from PC when creating a template in this mode.
 - b- **External** : Text object gets value from RS-232 or Ethernet interface.
- 3- **MagnificationRatio** : This item stores magnification ratio of width. This ratio is shown in percentage. For Normal width This value must be 100 (100%). For bigger width of text, this value must be bigger than 100 and it can change according to magnification.
- 4- **Inverted** : Text will be print inverted when adjus this item True. This item is set False as a default.

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53*70 I</MachineType> </pre>
---------	--

	<pre> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> <DataSourcesInfo/> </General> <DataSources/> <Object> <ObjectType>Text</ObjectType> <NameID>Text03</NameID> <Name>text1</Name> <X>154</X> <Y>120</Y> <W>99</W> <H>63</H> <ZIndex>0</ZIndex> <Rotate>0</Rotate> <Hidden>False</Hidden> <Content> <Data>Text</Data> <Source>Internal</Source> <PromptMessage></PromptMessage> <AllowedCharacters>Any</AllowedCharacters> <MagnificationRatio>100</MagnificationRatio> <Inverted>False</Inverted> <Mirror>False</Mirror> </Content> <Name>Tahoma</Name> <Size>36</Size> <OriginalSize>12</OriginalSize> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one text </pre>

3.1.3.4 RichText

RichText object have two different properties which is shown in below,

- 1- **HtmlData** : This item stores html value of entered richtext which is saved by PC Software.

- 2- **ImageData**: This item storages RichText image's string in Base64 standart. Images are must be convert to Base64 data for this parameter.

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53*70 I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> <DataSourcesInfo/> </General> <DataSources/> <Object> <ObjectType>RichText</ObjectType> <NameID>TextBlock04</NameID> <Name>richtext1</Name> <X>171</X> <Y>168</Y> <W>300</W> <H>240</H> <ZIndex>0</ZIndex> <Rotate>0</Rotate> <Hidden>False</Hidden> <Content> <Source>Internal</Source> <MagnificationRatio>0</MagnificationRatio> <ImageData>iVBORw0KGgoAAAANSUhEUgAAATAAAADyCAIAAA BFzg6vAAAACXBIWXMAAA7EAAAOxAGVKw4bAAAJJ0IEQVR4nO3 dMXabSACHcbxvjyKlyMsJ4AQoTaq06VApNe5SpksDpdSlideXGcAL pBH4uMtxFW9iJGRiGQULS3+vv12WjCIT5FhhG+OZwOEqANPxz7 RUA8logASEECQghSEAIQQJCCBIQQpCAEIEhBAKIIQgASEECQghSE AIQQJChoOsq6JYJkmS3FiSJEmWy6KoqvoCqwm8Dzf9X7+qq+Lnj/ V2H/Q+cZZ/v12ls+nWDHiHeoKsq+W3RWCLTVI52KSnrxXwTv3r+ G91kcZx42MEcKruNWS17NQYZ3leGnN4ZYwpyzyL4wutJvBOHGxl Zv91nJXm4GXKRpdZ6X8xAB/7CFkXP7bNP2flbjM0UDNLN7udKX MOIsDJrCDRh7vmyWpWBg/QzNLV7mCIEjhNc5S1NZjDiClwaReaq VPXVVUUS8cEgz8zDKr6ehMM6roqlq01S5LkhJWq68p6Q9+bvSy9 </pre>
---------	---

veSwpQhvVRylcT3ZOuWcZoBmzHlsnOWOISR7nCnOBwaZepbs/jS mzldGin3DWtYiXtbMdzkdZ621N3nW/2LPJz19q0KTJ8jwXd9n9IVl d7HHFWn/K0ePpuyPobNPu//n1Aky4NP+Xf8xrz3DVoUk67ZH657 HJD/EY0Z62rv/MUUO9di+v3PUHm0HGQfels3K8M3S82Gn2KpQZ AXZ/TGf/kNsvGccZ3lZms4Mg+4Eg/ZuaK9YSJFWb51/0PmgcWbPf Hheq8E2+rqwzhJN91Dc/LzWoh2vdf4IJtmqENSaGOA4bgxPDfAye RxyEdPetVu74dgivT2Gn5oPXVU7guxcJjpWqLFo14YJuJafZqtCT3u mTu+5UHf63MT8zY0bcPL1OLLtMWmPaLv/unT8KvpM+Fa4hHaQ h4MZvLqKzxPnwKjo4CBNz0t9PY4++fUduAfebMT6Bw0QB5rwrXA B3fuQs3QzMP6432/X68V8/nx/bbJbXbMPn3x/nX5p7tHb+6r3ldV 9Y/5f9n3VnPtntUZq/V3Acn2LHTD/eJV5TANbFWKcEwNm6Wbn GNVw2O+3i/n8JlKW578BHVikPR83+2JNNrJ7/BIOeckq6fH3Je602x VdZpmQ4Po+ZBRFUTRLV5t0dVtXDz9/3G33/q9H7rfr+fYuN7uAlO 4URXVdGRP9vr9/iqLHx8coivYDC4ii6Lnl7d/YtvfVJu0WZc/HbTdnnl 7/Mv44D1nZ5zpO/3roRG/T78itCi3BJ7emLPNs4BuQ3ksU10j8yLc aviDyX9VNMP3dWuioC1Lfxaj3td43nmCrQkj4XNZZmq42m93ucD gcTJk7T2i3i6XrRLKuiiS5mS/WQ0fawXX4/LWxVMdZq3V8jL9+bh2 wmwflN2+yrQohx00un6Wr1Wbnmra5/dG+mgyWyXyxnmifaRXZ XthAj/8jk25V6Djp2x6zdLVr3/Le3z00lqmLxP2srDjOsizPy7IsjTHP80 xCZrPZRdoLO2II9W2afKtCRu+gTrD0No+3ja9R7p9MFD2nUBffuo/ nKX/dprPjU5mtvmfrxZ+hnf3dQ736E97IldQ4eBBKyzm2KIRM8H1I +6DVGKVvPYAginNz2G1O3m+s2x+NY2T1cz3U45XuBU7qTFsVGq b4gnLPvefOA0GmOh65i7SnAwTcYtw/mUIW57LOtU4QxPDPj04 XkPsYc0A+/CB0lvG4NJL0U2e4zzW/fCBkdp9Z1vq0JBI8i6SJZH/aKO +vdj40/u++2hd+HDWGHt1z8ru8f+4VX7YP4mi2yadtCgH2E3C7m yehJcPZJVE8NE58ftg91y7AeO/PvOjdp3pa3edYNj84p6349v0nCnr EURVFnzK9Rgz2CMjQhsy6Sxdb7CkuryNcZdUO3O6zT3Wi//uacyu Bcw6pYXmLort9Ztyqu73XSTvt7u9ngN6y6EwP6J5b5HhDjmsc+P MnLfYMtYHLYMU9nf1nDU77LNdHUuTNvVVvxXf5B/99Y8dzwgwvl dkPaPe+hJGc4HTRwfVvge53owQvspHs7fXyIQ5Lm3Kq5qMMhgzv 1xzDQR+xlRlbtO992Dd7gjP6xCKOfeqrimxjXk7POv8Acjtn7qWeme 9ZJuwb8OCvN7vvYr9LalZSe2x1ds9VuxGMgxZx3q+KamoM6s1m 62b08+Sx4V42zvDSeX8kzuOfHceZ9Ax97hGbkbPLwr2FHL2tpDip3 4c+6VXFNnqPnn29Adp83Gscvz9UJPxR3LmzioOemXYyxL5+08zHP /WivE0lvVRyh51eaA7iGC/2yHQAHCBIQQpCAEIIehBAkIIQgASEEC QghSEAIQQJCCBIQQpCAEIIehBAkIIQgASEECQghSEAIQQJCCBIQQ pCAEIIehBAkIIQgASEECQghSEAIQQJCCBIQQpCAEIIehBAkIIQgASE ECQghSEAIQQJCCBIQQpCAEIIehBAkIIQgASEECQghSEAIQQJCCBIQ QpCAEIIehBAkIIQgASEECQghSEAIQQJCCBIQQpCAEIIehBAkIIQgAS EECQghSEAIQQJCCBIQQpCAEIIehBAkIIQgASEECQghSEAIQQJCCBI

	<pre> QQpCAEIIhBAkIIQgASEECQghSEAIQQJCCBIQQpCAEIIhBAkIIQg ASEECQghSEAIQQJCCBIQQpCAEIIhBAkIIQgASEECQghSEAIQQJC CBIQQpCAEIIhBAkIIQgASEECQghSEAIQQJCCBIQQpCAEIIhBAkII QgASEECQghSEAIQQJCCBIQQpCAEIIhBAkIIQgASEECQghSEAIQQ JCCBIQQpCAEIIhBAkIIQgASEECQghSEAIQQJCCBIQQpCAEIIhBA kIIQgASEECQghSEAIQQJCCBIQQpCAEIIhBAkIIQgASEECQghSEAI QQJCCBIQQpCAEIIhBAkIIQgASEECQghSEAIQQJCCBIQQpCAEIIh BAkIIQgASEECQghSEAIQQJCCBIQQpCAEIIhBAkIIQgASEECQghSE AIQQJCCBIQQpCAEIIhBAkIIQgASEECQghSEAIQQJCCBIQQpCAEII EhBAkIIQgASEECQghSEAIQQJCCBIQQpCAEIIhBAkIIQgASEECQgh SEAIQQJCCBIQQpCAEIIhBAkIIQgASH/AX0+iuZOHG74AAAAAEIFT kSuQmCC</ImageData> <Inverted>False</Inverted> <Mirror>False</Mirror> <Html>&lt;!DOCTYPE HTML PUBLIC "-//W3C//DTD HTML 4.0//EN" "http://www.w3.org/TR/REC-html40/strict.dtd"> &lt;html>&lt;head>&lt;meta name="richtext" content="1" />&lt;style type="text/css"> p, li { white-space: pre-wrap; } &lt;/style>&lt;/head>&lt;body style=" font-family:'Tahoma'; font-size:8pt; font-weight:400; font-style:normal;"> &lt;p style=" margin-top:0px; margin-bottom:0px; margin- left:0px; margin-right:0px; -qt-block-indent:0; text- indent:0px;">&lt;span style=" font- size:12pt;">Savema&lt;/span>&lt;/p>&lt;/body>&lt;/html></Ht ml> </Content> <Name>Arial</Name> <Size>18</Size> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one richtext </pre>

3.1.3.5 Counter

Counter object have various properties which is shown in below,

- 1- **CounterType** : This item specify type of counter. There are three counter types which is used.
 - a- **Numeric** : it uses only numbers. For example, 1,2,3...999..etc
 - b- **Alphabetic** : it uses only alpha. For example A,B,C,...ZZ...etc.
 - c- **AlphaNumeric** : it combines alpha and numbers with together. Numbers are changing firstly and after end of numbers alpha is changing .For example AA000,AA001,...,AA999,AB000,AB001.....ZZ999
- 2- **IncreasingDecreasing** : it shows counter value is increasing or decreasing. It can be Increasing or Decreasing.
 - a- **Increasing** : Counter starts small value and goes to big value. For example, 001,002...999
 - b- **Decreasing** : Counter starts big value and goes to smal value. 999,998,...002,001
- 3- **Data**: Counter value
- 4- **NumericBegin** : Numeric counter beginning value. For example 0000.
- 5- **NumericEnd** : Numeric counter ending value. For example 9999.
- 6- **NumericStep** : Numeric counter step value. Default it is 1. For 1, counter increases or decrease one by one. For example,1,2,3...999
- 7- **NumericPeriod** : Numeric counter period value. it shows counter increase or decrease after how many print. For example if this value is 3, printer prints same value 3 times. (1,1,1,2,2,2)
- 8- **NumericDigit** : Counter numeric digit. For example if it is 4, counter value show 4 digits.
- 9- **AlphaBegin** : Alphabetic counter beginning value. For example AAA
- 10- **AlphaEnd** : Alphabetic counter ending value. For example ZZZ
- 11- **AlphaStep** : Alphabetic counter step value. Default it is 1. For 1, counter increases or decrease one by one. For example,AAA,AAB.....ZZZ
- 12- **AlphaPeriod** : Alphabetic counter period value. it shows counter increase or decrease after how many print. For example if this value is 3, printer prints same value 3 times. (AAA,AAA,AAA,AAB,AAB,AAB.....ZZZ,ZZZ,ZZZ)
- 13- **AlphaDigit** : Counter alpha digit. For example if it is 3, counter value show 3 digits. (AAA)

- 14- **AlphaChar** : Padding character for alphabetic counter.it is using before counter value.
Default it is A.So, counter shows AAA instead of A.
- 15- **Restart** : It can be True or False. When counter value arrives end value, it shows this value is turn to beginning value or not. (stay last value).

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53*70 I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> <DataSourcesInfo/> </General> <DataSources/> <Object> <ObjectType>Counter</ObjectType> <NameID>Counter05</NameID> <Name>counter1</Name> <X>129</X> <Y>84</Y> <W>114</W> <H>63</H> <ZIndex>0</ZIndex> <Rotate>0</Rotate> <Hidden>False</Hidden> <Content> <Data>0000</Data> <Source>Internal</Source> <MagnificationRatio>100</MagnificationRatio> <CounterType>Numeric</CounterType> <IncreasingDecreasing>Increasing</IncreasingDecreasing> <PromptMessage></PromptMessage> <NumericBegin>0</NumericBegin> <NumericEnd>9999</NumericEnd> <NumericStep>1</NumericStep> <NumericPeriod>1</NumericPeriod> <NumericDigit>4</NumericDigit> <AlphaBegin>A</AlphaBegin> <AlphaEnd>ZZ</AlphaEnd> </pre>
---------	--

	<pre> <AlphaStep>1</AlphaStep> <AlphaPeriod>1</AlphaPeriod> <AlphaDigit>2</AlphaDigit> <AlphaChar>A</AlphaChar> <Restart>True</Restart> <Inverted>False</Inverted> <Mirror>False</Mirror> </Content> <Name>Tahoma</Name> <Size>36</Size> <OriginalSize>12</OriginalSize> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one counter </pre>
--	---

3.1.3.6 Logo(Image)

Logo object have two different properties which is shown in below,

- 1- ImageData** : This item storages image's string in Base64 standart. Images are must be convert to Base64 data fort his parameter.

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53*70 I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> <DataSourcesInfo/> </General> <DataSources/> <Object> <ObjectType>Logo</ObjectType> <NameID>Logo06</NameID> <Name>logo1</Name> <X>78</X> </pre>
---------	---

	<pre> <Y>10</Y> <W>501</W> <H>750</H> <ZIndex>0</ZIndex> <Rotate>0</Rotate> <OriginalRotate>0</OriginalRotate> <Hidden>False</Hidden> <Content> <Source>Internal</Source> <MagnificationRatio>0</MagnificationRatio> <ImageData>iVBORw0KGgoAAAANSUhEUgAAAFUAAALuCAIAAA A40xiDAAAACXBIWXMAAA7DAAAOWwHHb6hkAAAgAEIEQVR4n O3d3Zqrqqlt0NT6zvu/cp2LGjsrK1GjCAjd1q7mHJUfI9BFRPz5/f19 ABDnP1dvAABNyHeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyy XeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8 gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPId IJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyX eATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk 3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJ N8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXe ATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3 wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN 8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeA TPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3w EyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN 8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeA TPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3 wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN 8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeA TPIdIJN8B8j0/67egDn8/Pxs/PX393fxla//3mIDKn4+kOfnzhmxndq LLt9dh7b58q2FAnoztdwu33fm4/i7ZcaDE4P4qzxD1Yefn39ZdLRiD /UrRpOc7xLwsW8n5P3qO9so8XkLuqAtP2b+vbXk5Pvgaf7sngyi0X UCrrJW/2MKtyziX/3+/o7WDFub9deeL+w3VfZD9a36NGI5UVFkD 32NNnXGHPneoYz/vO2Nbt9b1xRISoFG4+aT1vN2YlrQoPnev8L9n bt1/tLOxixrFj1rY61Si6/e7czbcAbKd/Wvs3GKnro0pQ6maD5X5nt2 </pre>
--	--

	LWy6YxvtuimqLG+GakfPKjTUVjU1cqvpmu9JRT5modbaw2P+uhg nZ3FkHN2T0uDvUG2neb5nIOJQZXZlxf0/706YWosWNHhRCo1am uT77MUzQsG0VlxGd9g5I6gy3bvKllxu9jz5c0lxVMv3qcsgpiWUOV N2n2ur3XxnFqvSguJ3/tQ589StmM7m+9S7O74xFKhboPbwG7u3 hUITqEPxleT7pHvzoT0clHEd70J2YGei6c2BfLfbqtp0ceUjr00lBnzq v6dydn5rlXU1boOTFRe1kUZ34yR9aj7XKDIfNcwmrqkJlxbpp1/sgp c3T3ja2++T7F3tlrOBqkVa6vCTdd3UYFbG6Sgv6o2rTEm37WNq4xf Nwan6vY3eKWtVSWmf762tnG5Gy45Uovae5WyZwFOp1++t0gBz WMod1hjuSK193ItauznHX8X6jQ+0+K5GZrHsC6v1iNTbwfUc2G+n o9E7jr+XutoqYVMQcp/UnWHVTGavl7h//pdU+Z7FVrIRMapNpdT b6cwSl2tVVv+U+VTutFI5qK8/tgPswgrqZnmz3zu+s+DbZXlOl7Hkc5 cZ18cjwqrQF/dZKLChruV+OySpglMk+891lr7v0J9Ld0zJb343p0fuG fkTnAMTgFNKibi58j3xXZS9pCztXxsvdTf59roZV371+7wxidcVTslGp c7VPnXamxGxM9xfXUt39f+tP2CGYutrLadOYCdrN+LEwlM3PPFH OqGslH3vmbIJarUnzn6759ex1l2suMt4OZtcmX1bO1dO/fDvLvrcn bdoio96zJlYwCz9+LnyPe3XVxwt9TbgMZ2d3K7yKcu7z/dbiG+Z8zd 6ldP/USq+JKaY3zm09fj6vawzM6Bi41xIVgTlhrFk8eqb0l108/p510 Qe9Z83+N5DNheP3bGn0aGPrPCal11Hzayt8/vt9+1MVHt2sEZ+b5 XxiVWxjd+kvZc/KSbghX/P981WibI912Kl4CAo462SY9sreLrVLq3l0 3R9uX7Lmsz0Of9RQzutT9Y3Ep7rmiYauo2fuv5kQXuXNHp6fz9z7+ /v2VDDYf+NHuLWBtgmf13VZSf71NPe+eejs7cLbtDZ5Don7qXPbg D2Td1MRRMmefP4tWnMS9J8Whw90bdrG9RZ/LmMfde//3fq2fe ZRTYWAJTZZhRlXvxR5szHjZBrulB9fDYxdQ7jvOEOWPqsFZgB9WHx Q6Pv2vetzLLZDJuLqCWtrjmUfj8Jlcs72Px0oUKALUcnS6136m5JQH HTMro10MVTbtKZ+cOauQAZVqfB599vrbzdIAxnc33h4gHOK5Dcl bl94eIBziiT2bWyXcARiPfATJvy/dapxuGeoBs3VJuoPUjn7955wJJ7 qQF2FB57dwzaWsmPtzTrW6X6zLEMVD//aT4B1FBqjFPyqustXmt +s++KP7lo428z1KEkKR1xNd5rul1AxWH5PTfq9v5uF6golrPSR6tv/i n81bJ93IOANDI87GaX4fmx8zxQdTP91tdKgEa+Xxe9tqjxFij/16ZYx s08jk0P9fTCPpvp3yvSbhDdW8hvpbyn3+dJffbabi+wa1268+Lq7cF Yr21r7WQecv9tcNAf5ekYv35kf8+9/iunO6oINChv8UHRp7/wMU5 +HuOloe+pTP5flhZfRrqsNPFWgv9fVbgbIW3eHp+VL4/ju+C8fN9ov gr3pkT/Uao3pff843FPbzqG/OV66vflR2oOncodhLfJHlOk/8z1PIGr 67qvMr3Lw7VlFm33e3/ip0GrOtQy2JzaDoWOleDku/LdpbiX026Kt bnqmpQ3efMyLf/vnkbaZjvQ11R3G/PNvcf9ZtxT0l341+9u8Td++/ PWVD70+xv7wUu9zYQ/3TzjnzD+TOP0sHr6t/+WsbPKD90etG/w w4ctfPRb51deG7RNt8fR/bp17Lpfyi+cJotUGDAVV0vzPcRx2dee9l v/95zMwzFwHS+rjxzqxGbJuvPzO7391e4w7wKZklEGmh85jHAlBvj 7BBjkGcyG3+/nmRnHON0LS9pCHVvQ7025a8tyub5/pghK4U72wr OLMfJ6PP6tlh2zXB/WSx+6ZlXhWurwYjXV7sxPWZklwzWrc2qvpv
--	---

WHaCNqetVvmv/4z7Wat2wK9tsu2//Xbi382wMZy5T729R3SL42v s5Rnay7fSct142XFN8hNN/72rwhVySQuHMB3l7GBuDO38g337BJ ZPWzz/o9fLae698v3x3rxl2w+Coo2fGewbBKkb8/jG3xQe9Xj5seEjl +MzXnT7gE4tulekxIxsp6S/sha6/xOO6vDghMsrQKfLR63nHk0U7 pcX+SViYjHmh1zr627s02ZbR/zlFWDK8ZlDg32DhPvlJQ3j+HrCvbE eZMWWe2h+1NEpNCM0+eH67xvld3Rcb+On9Qz3EYr5cnO1im26 8LUUT47qM0Fz0Vw1ebj+++vivWdmTY0Q7iMU8Agmuh5FT3t6xJ +rflDw6KLrRPW53+0bBQ/QKP6cy8dkJPurvA5v3i+6VtnQdovmXP Ey7wjPlz/fVvxaPue9543QomORhTy1Tid4rA7lqfJ98G77Ul1Avo7G vHtGnWVvIB8kEObl95HDfZCCDJC6J8O6hO3snO7cQdndqgPq93yP sp318/OzZ0xGuI/p8obaiHK/gz3hs/HeuhtTZtz++8mLGMZkGlcu/C HjdOQfJ/ryl5wEDPp8vsHDfeOMgafsK6vTbfcMxtnJk3bke3crWj+T Rbd9HNn5/rjBDxzECL34Qz7n9V9V+oP237ddtbN02/eTfW+mC6lx /P6fqzfkmlDlVC6pAJPl+/al1HZ7cMbqRWuqRGfT7fDLN3imfL/q3q XLC2k6Ou+LdOHPG7+2vG3htb343vleVjzb3WfhzIVUj/6m2+dvG9 wz4i+YtlXx8V2SfUA37Lzf8CcPYsBTop1TP/pUg3HHZ75eVBHucHM TtdNLevGD5nuVVSTbftTtVxOznQz9kwC7n1EarRRvl2z/iu96/WvEJ uVU+Z9Fo1WUuwov+9qwJ39P+me+tb2webv33P9aTmdRcT7epy yj85caJ+EPaVYYe4zNvs4KKf0zrbrsmd9Kdw50RTFqv2iVb83yvddX YmAyDMwo/gkk7ao3qQ9t8f+u2t1si+lWZa8OAdN4fln4YM9axFv WhVb6fHJN5vteA+xSEO6OZsaZVj7sm+V5ITKbDvbWz1gAGpws/D g28fr5fcpvWUZMO0o1J5/2NiB/HdFWubn2onO9VBtxbG3Or4tnt XGLYIFpTMeJr5vsl69l/NeyGTUr3c5Eu/Gju2fCr5fv44T7dYXx8RmY 2iPjR3LAS1sn38cOdC922Stz2hw/rbiVSIld+nCPdhN2xeJ5+Bzhtd+D 5uVSHp5vvOch+dz96/Ht+qRPsQRjupeWmavFAqbl75+mJr8yD//v 3393eQCBi8LCel876fdceGNUhGvapbAQrzfcD9skhraUG4HyXihzV UIFUv+uR8105aEO5IRPzLlg+0RiVeMv5++b74ylTIRsYv+mGpkCO7t nTaffvh/vv4LVxDasRs9/Psw8F1zrfWpTzo81eLaRWXUwRVjN+RitS z9nb4rqj+u2Rpx7B7LQbip9At6JoWcUj/3YB7UyMf1Kdj3QJe/fyfFh +ekO+SvSIDxtWJePqYPt9ISIPCvRERz6uB5keOQ6Y0JdzHleKDDTQ/ 8t/bBqhtMqUp4d7BOXZkV/frJ99GnD/z722X5rta3ppw70bEj6Zpu HUuvmrri3WjfrdmAl9nln4o28Wxf+XEEYpJvvM/9NwvleIH8TXcny +bogjmu746wtB/pEuW5udP0m2GdzBFuD8mHX9/zLN/Z6H/OAgF caGdnfeJzNd/pzqZMo6Cjvzlna0MeeH+ODP+/mjZi//bqq+fP+IOH0 dBCdrnHZS1LEVTLdVq6lwlqBv0r5sUeVAdgWQfnIjvZqL5MEc1uQ pcHPeLG5N6aL2QcJ+FlG8tezbwlbN8nk/i3vnKDdPt96vli+nU7S3x dlfLTnPM4nyl+NMk+9SkfF03OYXNyfc/s/ycnkRDhjNXuRTI0606Ot Pk+x93Vx4i2fNI+WI3bA6T5fsj/XpIFSenM91zp83l/Iy1W5XybVvEf Pn+uMeFkQLa/K1UmZScXeJaxJT5/rjZINo27fzOat16EIMB2t2LM6 NZ8/3PbcciK1biqfcdT3Kt+u30M+6EN3Pn++NOvVfVI69aLBkyYD1
--

pveTOgD+5zAT5vmep5cjOS+vlfUiV9ASip27LqCW1jgny/fFStJ2D/l PDJ+G2r75TIDUVdV5acrqHBb3JayCT5furtS0fpK4MZYpSphEt4qv UBjJHvj/W6+jG9t+8Ws9SsnRz8xaxKLuZTJPvj83auf0r7latJypTrnK3 RvHpDs1kpnx/1FhILLVaz1WO7PFVWxsVcWqL2HCfxjJZvj+qLjQ2d c2eruA4qv+aqVO3iG33bC/z5fuf6qvQTFGzJy0sil24oN4ULWKPO7 eaWfP9T9OFaK6t31OXC9WNsCDHXImvBT1mz/c/nZf9TL1FsM9oL 2eMcJPEyCmv0r5JyPdXt10ltIBnl89o5Hi9hlq6IS3f/1h+a4NYj3Hbr FdLd8rM9z93Xr/IJo+X5Ck761XOMsn5/uaSBtB691r+m0+zZ73aW MuN8v3V7A2glNuW/p2NVvPVwKZumu9Po1X3Dm5e4qzxglE8d8 /3T5GJr5ThhuT7InmzXrEC8r3c5emv7IAN8r2tpisoAGyQ7wCZ/nP 1BgDQhHwHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHy CTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM 8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCT fATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h 0gk3wHyCTfATLJd4BM8h0gk3wHyCTf4b9+fn5+fn6u3gqoQ77D4y /TJTth5Ds8fn9/X/9X0JNBvsM/bykPs5Pv3J0xd1LJd3g8jMmQSL7D AnFPAPnOrb3muEwnzl9rSmzbTr3f39/pYvGvzu/ZbK2DqU2f79OF C4Ob8YhFRbNH4qvh8v2taT03T5MDRjNafr4ZKN8l+Oxe69LXUZ23 f1H6zG6cLH26ON+frfp5UnyHlt9in6/tvdZeS/Ax6qD2z8/PawXLq1 EMZZygvzfd+bCxuZdlWjXKthRVb50zDv49x9U9n/gID+NAJen0wX 5/tp+tofXG22bBswa+U51F6Z8v3xfvHD61ovf+V5opPoJAfy5JOX/X 5+vWWwww1qRlpbN/Chu4pLx5Ob9941x9sWv7t/Oiy8AMK/XKw oOLfTUM1la9t+/RvnG6z+13ilyvKeCWTfttuTMmHuLg8T+aabMqG dHvIX//WsD3m5UY6bt5zSSxdf02RhgaH1Srkm+7xmTKZswlz2BG M2Hx+t+wF4xFjNnAB4tU75Jvq912w8NyEh24CYaRXzN66sbibw4/ v75V5k+mv3V7IDZjXZ9RcXjWnuu7ZV8bK0P3UjwTubWswTGC04 mM70kcOhOD5lqF7lavbf98x1O5rpE7UxilXpvGxPO9uerbt2/90s1 a9gO9921+dRreyEzJHmjOpVrlq7erOY9YfCvWzDWpwHqLIANxUj/ my+L15QPTot8vNle74UIFKtiD81PvP5bOLFHC8OdzkO3FctgZqz4+ +vt6EWdNu/Lu8OcEN1LkoVD3O/ZffGer9HFycA4HF6oKak//45LP P233sWIXDBnaG4ok6ekv77s/O+uMjqRnC3GGF/OxWYZUIbU9tTt 19f6eBBsTOZVj7Es3hBdU+4n6zfEpxgo026X+s8OUp1c6Y+HB6fW ax/b4V9PtyHquIT2bjhYPuVb4yePb3NIOiwQ4bd58NuWLYzh/xW1 1f/lB3wr72zCWA0Zal49vrqmoJkt1AwQEVn579vXGLd8+Qz898Bvi obpSnJ98XB2c/5M0cHKwU6QEUV7I997L6t6fHRYZfpAHsUdOFrrh 9Z8GxV+c6Y3GLNmA4ldp35kY/d4a7NvDI8QK6xACefPm9EEvHM 7nC+Hx1gaZE4d06xO//2pjZ27Mj7vOIRSCdsCodGaU6Nz2zfs3r+br eR2xVJFpfceHx76hNvFmfT/fIcR8RRpFinFH98W4Lm7d+/+iv1KpcE wlrj11+0/XS6KhtQ5XPmbdivUwnO94q+ftHRd11o8d5G2umX7/8+ 5dwiFXXHoAGy7czMCs/XXuu27/H1LalcoEyF5/N9np0dPQMV4gD

77RyCrj9OLdwBWtsT3f858wU/Pz/PdN656Njf5bW3d4VdCwUYQc 3++55bb/TWAar4mt4Vrq8+di9IINxfOeABTdWcP/PUOdmHemzY OfMhY1Pj+/rsyYoc9amowv1Nb//SKG3IIEzn6ORpB7ajtndsnfGZxS +zJgHn1apFh26123NXdox2azDsmTO99o3OY6qosP7MU9kJ7POG 9dT2M6/9D2LUDuESzfvvZStKvmZ6izk81jzow36DYa3238sWtDq0 OvnnieHGaP7G+Z2IAe5pO6VP3d/0pjicH0tHi7+boU5+KUCw7QAs H585+qjVr1uz9icJDICgyfz38688+mIA3pTn++uVzMVHbAtogAutjr8 fmn9iaiPAJbYGvU/Of+//LLGNW1emm0tTtsFIVz7eNHq0Voy5KhI3 tzoNstv6kQWKty3v+atcK/4u1jeHnplc9wMp0Dzfq5Sfe1lhXgP2qz 7z5Pkvb/ffTH0EapjvJ0cYdn7FaPvmZHZXddvdjo0m8Hbj3pIT0rI3F mt098nbHYue5lZFq3y3iNggBsn06uMYAzb4jTXlRtqY/VpsqjWILtck 37+uCfdaA9WH875u1Z62V/ZdxV25Pt5ORc9vp9YLg7sm3zdes+aS 8SKAea3FZp3139+uTpxJ2D3nBMUfDnAfC/33QyO5ny+WvwCdLY b22fUjhTvAmJbz/dCSYc8XC3fyjDARccos53tBnRbuAEOpc321Ubiv zcPpuejN5+xAHbqb+Ly2dGaqqGmm9Fcn38/7GprnX3CGTL+h7UI vqxKNKtIgd7dtaL2FDpyL6uf7npUcPI9j2Rkm0q6iljWE8RtO6y2s+/ mvpTD1keNsvv8I9dF1wfY8im/8Kku2xbm/ZRPGjt7xV9yaqq/Qt30 /ytTZ91XArzs7/331czsuSMA4vq4/0+5E7esnFy+GtbbIfkD7J8byVc m6+b5/7ZeNbZranjZ/6Paxc5sD3MJiqtR5vvbn+gTdejczJuCM2wx M50C+r/Xrz8xWIHQAJZztvwtogDF9WX9mcRbjoryRdlCpnV1fDIAx fRmfee2Vr/XQa82EPT9px2ARwNM06xM8TsyMfr5lZ5Hm6PPqth8 H/PyT4akwi49Xfa1gr3cS6VgwpnGf7yExGUT1h4ZzUuvITGZcn6DV /PfHwV2wePft5zPpATYcjYs9R4VazxkdRLXnrz6KHqX99hbhzjjW1p 9ZHJY5WnWHzY65Oq0F2znLT6viVL7/7akznW6Bzpi+LoG3f+rwXG J+CI9Lxmfm6rMfHXstu7pbsD2Ln6xx1mV/MrXr588UrLC69jINZzJU +eTBNw9IUum38vXW+7F81G+BW1rq/C/ev7h9D+Hvl6/TzP0VbCE BN1dYn2HOnKwDdnMr35/yZ5/+6EwRgEA3nz+x/itPrW76uE7Dnq wGoP3/mTOAWPyHz80NaHA/2nJQcnQ5U9/h0n9Ompneov93S8 XpW2vRh1m/bcObt5++3av2j3mb0rjVkjji1HkDBDavF3wVXMeqYJ +yZ6avd2VpVtu5zpWEQc92OV1eL9aC+nvFMmrDXOpbvO8v1/Cp rX8/Rol/PBYG3K/bOxailFa1tHSyrjM/81eOKY8qC/ipVBpQr9vtqjQ GWXdqRzoyveb6/fc3l1ww1yz8SCuK1zfe3h9q8/ulCxc9pWnP5Lw L41GI8ZvHLxCJAOxsZXm19gqfPQRuL0gD0V+H+pj03JvxFvL48QEX bXefy/vuhiRZ/S9N8duTf/kU3H6CWU/33sjheHKB/XWR4++10Aaqg i9YIXqb+LAuXXVz/X6NhfsVr30ze24cKvXlTrucxOfRr5evNdi5s8ucp 0x8Xtuncq39c+/dCCkWXfDt00XcvsJnb2S6aL12t9H+04me+P9cm R+1dStD4Bw/pc8nDxr4vV+NBJ7efnwLaG+f7fj1hfgKm4po4T9NX7 bo1O5xeXTCm79bdKCQZ7WxbYLuISu5Ylq5I124tHV2kAX4aZmrW xWuPjs3C+/JUuNiPol+//PuvblwJatlrPRy5U/4paDm3nhQmi/w7ja 57vn0MNHTrya8ZZ+gagtR75/ngZhdw+b91zmysAe/QYn9I4oOLO

	bZLyAlfsXTig4vyZQ0Mxuw4+oh/gwwX5/jg+2n7o28X9DfW5YP71 ZuzFscfPee5IX/35mRtPVMjEPVyPeRJmfzE1mR+5c0T+Ta261WiW TvXPPDqQRX9v56bxIVj2A7ePgs8/IX3mHnebsdo73//7caef2BfceJj L2rWl1+7L85XOROnjUE07tX7k/nsd9x9gF18m9Ody4fO1yxzqiLy9 5u9/RTYDat5/f+vmVPmW7Uk47hqNOpWKERwe5qp1fXW7I99tu YLnXmiKVCTfGcFl+f769dYCBaiuX74vTi14/O/Vp0OD6eleYE1BVp9 9vvbaV25sytoCLMtaASwq64hXHn9ffMTBxns/p5otfjjAoptcGikL6p L++57Zb8/xme29X7aMQXxZjqbgenWtA/bReeVHTxw3noWysfBG 3atWrxPYk/eN7T/TvK1/tnly0aNsyXtll+il7Wfz1mPax32gmuqQ81 2L57KXetGvpNO1v6hyqK/y29YLS6+m/Rq7+DUER8nw2sx5b9eVt1 Z7W4eLoO4ah0F2QSPS/L9sd5t3z9t5tCiBWurmM2rIL/M64dbOZI 1Jfm+NjizNmPyTbsh9XajogCdnQ+0s/Mj/ywOUq91NhFHNKv0TKU zwFPI53vsueL/2L84vbWg7qfa8nxnrq9+nULz9ZpqrldADEuzvd/b /7f6e17pkgWT8aQ8sAdVJw/cjbnf//9Njjz+dfFd23b3rYbJv5V82cK VpvoZvt+i9eXffZFPh9gsDhT63VR0sUiOLR/ykrQDd43UbcprR1/P7 Q4weu/H73/lmNOJNWV5ftjx+ji48glJTivespVfs7O1zawdvv14qetv XFklmAibvJkHC0irs78yDWffaLP09XFX/XZ8DRcqLOpGESj/mvz52S ujTyu3eV0fqQSYBZNRyZqPn91Y6Ty6lj8yOvVkcFYogXOV5vWw85 Nnq+9lubbf1p75c7XQzH5Tn8drilWHn//nKKwc12wzwb2NlbTc37 Y14vAG4sGi4kA4p6mus0Wqdx///ehmxMlj3bMC2bBF436PdWAA AMjSURBVLTPr/PqdpILwlaeUwGb5Pu/jz6y/kzxYjW18n3t6+Q1UE X/Sd4N8/2x0m3f/4Anc2mAAffdvtnj/vtfNH8ds/776yz3MQF8dW 2gte2///dr9k2XfKzsDp13YC4jdFXb9t+fvt4lvv2C/bMq4QwzZzhph Fh/6tR//5+v3PfcPs0MmMVQsf50Qb7/++Ljy5ABDGXMWH+6LN// uwWlgzYAX10ecRe6Pt+f5DiMY5xkoNhA+f5G3NPTnsm7R29mhm uprwCZ/nP1BgDQhHwHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM 8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCT fATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h 0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfA TLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0g k3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATL Jd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3 wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd 4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3w HyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4B M8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHy CTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM 8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCT fATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h 0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfA
--	---

	TLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM/x/3 GNqpj38qYQAAAABJRUErkJggg==</ImageData> <OriginalImageData>iVBORw0KGgoAAAANSUHEUgAAAFUAAALu CAIAAAA40xiDAAAACXBIWXMAAA7DAAAOwwHHb6hkAAAgAEIE QVR4nO3d3ZqrqqItONT6zvu/cp2LGjsrK1GjCAjd1q7mHJUfi9BFRP z5/f19ABDnP1dvAABNyHeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8g k3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJ N8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXe ATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3 wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN 8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeA TPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3w EyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B 8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPI dIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyy XeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8g k3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJ N8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXe ATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3 wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN 8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeA TPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3w EyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B 8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPI dIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyyXeATPIdIJN8B8gk3wEyy XeATPIdIJN8B8j0/67egDn8/Pxs/PX393fxla//3mIDKn4+kOfnzmx ndqLLt9dh7b58q2FAnoztdwu33fm4/i7ZcaDE4P4qzxD1Yefn39Zd LRiD/UrRpOc7xLwsW8n5P3qO9so8XkLuqAtP2b+vbXk5Pvgaf7sng yi0XUCrrJW/2MKtyziX/3+/o7WDFub9deeL+w3VfZD9a36NGI5UV FkD32NNnXGHPneoYz/vO2Nbt9b1xRISoFG4+aT1vN2YlrQoPnev8 L9nbt1/tLOxirFj1rY61Si6/e7czbcAbKd/Wvs3GKnro0pQ6maD5X5 nt2LWy6YxvtuimqLG+GakfPKjTUVjU1cqvpmu9JRT5modbaw2P+u hgnZ3FkHN2T0uDVUG2neb5nIOJQZXZlxf0/706YWosWNHhRCO1 amuT77MUzQsG0VlxGd9g5I6gy3bvKllxu9jz5c0lxVMv3qcsgpiWU OVN2n2ur3XxnFqvSguJ3/tQ589StmM7m+9S7O74xFKhboPbwG7 u3hUITqEPxleT7pHvzoT0clHEd70J2YGei6c2BfLfvbqtp0ceUjr00IBn zqv6dydn5rlXU1boOTFRe1kUZ34yR9aj7XKDIIfNcwmrqkJlxbpp1/s gpc3T3ja2++T7F3tlrOBqkVa6vCTdd3UYFbG6Sgv6o2rTEm37WNq 4xfNwan6vY3eKWtVSWmf762tnG5Gy45Uovae5WyZwFOp1++t0
--	--

gBzWMod1hjuSK193ItauznHX8X6jQ+0+K5GZrHsC6v1iINTbwfUc2 G+no9E7jr+XutoqYVMQcp/UnWHVTGavl7h//pdU+Z7FVrIRMapN pdTb6cwSI2tVVv+U+VTutFI5qK8/tgPswgrqZnmz3zu+s+DbZXlOl7 Hkc5cZ18cjwqrQF/dZKLChruV+OySpglMk+891lr7v0J9Ld0zJb343p OfuGfkTnAMTgFNKibi58j3xXZS9pCztXxsVdTf59roZV371+7wxidcV TslGpc7VPnXamxGxM9xfXUt39f+tP2CGYutrLadOYCdrN+LEwlm3 PPFHOqGslH3vmbIJarUnzn6759ex1I2suMt4OZtcmX1bO1dO/fDv Lvrcnbdoio96zJIYwCz9+LnyPe3XVxwt9TbgMZ2d3K7yKcu7z/dbiG +Z8zd6ldP/USq+JKaY3zm09fj6vawzM6Bi41xIVgTlhrFk8eqb0l1O8 /p510Qe9Z83+N5DNheP3bGn0aGPrPCal11Hzayt8/vt9+1MVHt2s EZ+b5XxiVWxjd+kvZc/KSbghX/P981WibI912KI4CAo462SY9sreLrV Lq3lO3R9uX7Lmsz0Of9RQzutT9Y3Ep7rmiYauo2fuv5kQXuXNHp6f z9z7+/v2VDDYf+NHuLWBtgmf13VZSf71NPe+eejs7cLbtDZ5Don7q XPbgD2Td1MRRMmefP4tWnMS9J8Whw90bdrG9RZ/LmMfde//3 fq2feZRTYWAJTZZhRIXvxR5szHjZBrulB9fDYxdQ7jvOEOWPqsFZgB 9WHxQ6Pv2vetzLLZDJuLqCWtrjmUfj8Jlcs72Px0oUKALUcnS6136 m5JQHHTMro10MVTbtKZ+cOauQAZVqfB599vrbzdIAxnc33h4gH OK5DclbI94eIBziiT2bWyXcARiPfATJVy/dapxuGeoBs3VJuoPUjn79 55wJJ7qQF2FB57dwzaWsmPtzTrW6X6zLEMVD//aT4B1FBqjFPyq ustXmt+s++KP7lo428z1KEkKR1xNd5rul1AxWH5PTfq9v5uF6golrP SR6tv/in81bJ93IOANDI87GaX4fmx8zxQdTP91tdKgEa+Xxe9tqjxFij /16ZYxs08jk0P9fTCPpvp3yvSbhDdW8hvpbyn3+dJffbabi+wa1268 +Lq7cFYr21r7WQecv9tcNAf5ekYv35kf8+9/iunO6oINChv8UHRp7 /wMU5+HuOloe+pTP5flhZfRrqsPFWgV9fVbgbIW3eHp+VL4/ju+ C8fN9ovgr3pkT/Uao3pff843FPbzqG/OV66vflR2oOncodhLfJHIok/ 8z1PIGr67qvMr3Lw7VlFM33e3/ip0GrOtQy2JzaDoWoleDku/Ldpb iX026KtbnqmpQ3efMyLf/vnkbaZjvQ11R3G/PNvcf9ZtxTOI341+9u 8Td++/PWVD7O+xv7wUu9zYQ/3TzjnzD+TOP0sHr6t/+WsbPKD90 etG/ww4ctfPRb51deG7RNT8fR/bp17Lpfyi+cJotUGDAVV0vzPcRx2 dee9lv/95zMwzFwHS+rjxzqxGbJuvPzO7391e4w7wKZklEGmh85j HAlBvj7BBjkGcyG3+/nmRnHON0LS9pCHVvQ7025a8tyub5/pghK4 U72wrOLMfJ6PP6tlh2zXB/WSx+6ZlXhWurwYjXV7sxPWZklwzWrc 2qvpvWHaCNqetVvmv/4z7Wat2wK9tsu2//Xbi382wMZy5T729R3 SL42vs5Rnay7fSct142XFN8hNN/72rwhVySQuHMB3l7GBuDO38g 337BJZPWzz/o9fLae698v3x3rxl2w+Coo2fGewbBKkb8/jG3xQe9Xj 5seEjl+MzXnT7gE4tulekxlxsxP6S/sha6/xOO6vDghMsrQKfLR63nH kOU7pcX+SViYjHmh1zr627s02ZbR/zlFWDK8ZIDg32DhPvlJQ3j+Hr CvbEeZMWWWe2h+1NEpNCM0+eH67xvld3Rcb+On9Qz3EYr5cnO1 im268LUUT47qM0Fz0Vw1ebj+++vivWdmTYOQ7iMU8Agmuh5FT 3t6xJ+rflDw6KLrRPW53+0bBQ/QKP6cy8dkJPurvA5v3i+6VtnQdov

mXPEy7wjlPlz/fVvxaPue9543QomORhTy1Tid4rA7lqfJ98G77U1A vo7GvHtGnWViB8kEObl95HDfZCCDJC6J806hO3snO7cQdndqgPq 93yPsp318/OzZ0xGul/p8obaiHK/gz3hs/HeuhtTZtz++8mLGMZkGI cu/CHjdOQfJ/ryl5wEDPp8vsHDfeOMgafsK6vTbfCMxtnJk3bke3cr Wj+TRbd9HNN5/rjBDxzECL34Qz7n9V9V+oP237ddtbN02/eTfW+ mC6lx/P6fqzfkmlDlVC6pAJPl+/al1HZ7cMbqRWuqRGfT7fDLN3im fL/q3qXLC2k6Ou+LdOHPG7+2vG3htb343vleVjzb3WfhzIVUj/6m2 +dvG9wz4i+YtlXx8V2SfUA37Lzf8CcPYsBTop1TP/pUg3HHZ75eVB HucHMTtdNLevGD5nuVVSTbfTtVxOznQz9kwC7n1EarRRvl2z/iu9 6/WvEJuVU+Z9Fo1WUuwov+9qwj39P+me+tb2webv33P9aTmdR cT7epyyj85caJ+EPaVYYe4zNvs4KKf0zrbrsmd9Kdw50RTFqv2iVb8 3yvddXYmAYDMwo/gkk7ao3qQ9t8f+u2t1si+lwZa8OAdN4fln4YM 9axFvWhVb6fHJN5vteA+xSEO6OZsaZVj7sm+V5ITKbDvbwz1gAGp ws/Dg28fr5fcpvWUZMO0o1J5/2NiB/HdFWubn2onO9VBtxbG3Or 4tntXGLYIFpTMeJr5vsl69l/NeyGTUr3c5Eu/Gju2fCr5fv44T7dYXx8 RmY2iPjR3LAS1sn38cOdC922Stz2hw/rbiVSld+nCPdhN2xeJ5+Bzh td+D5uVSHp5vvOch+dz96/Ht+qRPsQRjupeWMAvFAqbl75+mJr8y D//v3393eQCBi8LCel876fdceGNUhGvapbAQrzfcD9skhraUG4HyX ihzVUIFUv+uR8105aEO5IRPzILg+ORiVeMv5++b74ylTIRsYv+mGpk CO7tnTaffvh/vv4LVxDasRs9/Psw8F1zrfWpTzo81eLaRWXUwRVjN +RitSz9nb4rqj+u2Rpx7B7LQbip9At6JoWcUj/3YB7UyMf1Kdj3QJe/ fyfFh+ekO+SvSIDxtWJePqYPt9ISIPCvRERz6uB5keOQ6Y0JdzHleKD DTQ/8t/bBqhtMqUp4d7B0XZkv/fRJ99GnD/z722X5rta3ppw70bEj 6ZpuHUuvmrri3WjfrdmAl9nln4o28Wxf+XEEYpJvvM/9NwvleIH8T Xcny+bogjmu746wtB/pEuW5udP0m2GdzBFuD8mHX9/zLN/Z6H/ OAgFcaGdnfeJzNd/pzqZMo6Cjvzlna0MeeH+ODP+/mjZi//bqq+fP +IOH0dBCdrnHZS1LEVTLDVq6lwlqBv0r5sUeVAdgWQfnljvZqL5M Ec1uQpcHPeLG5N6aL2QcJ+FIG8tezbwlbN8nk/i3vnKDdPt96vli+n U7S3xdIfLTnPM4nyl+NMk+9SkfF03OYXNyfc/s/ycnkRDhjNXuRTIO 606OtPk+x93Vx4i2fNI+WI3bA6T5fsj/XpIFSenM91zp83l/Iy1W5Xy bVvEfPn+uMeFkQLa/K1UmZScXeJaxJT5/rjZINo27fzOat16ElMB2t 2LM6NZ8/3PbccIK1biqfcDT3Kt+u30M+6EN3Pn++NOvVfVl69aLBk yYD1pveTOgD+5zAT5vmep5cjOS+vlfUiV9ASip27LqCW1jgny/fFStJ 2D/IPDJ+G2r75TIDUVdV5acrqHBb3JayCT5furtS0fpK4MZYpSphEt 4qvUBjJHvj/W6+jG9t+8Ws9SsnRz8xaxKLuZTJPvj83auf0r7latJypTr nK3RvHpDs1kpnx/1FhllLVaz1WO7PFwVxsVcWqL2HCfxjJZvj+qLj Q2dc2eruA4qv+aqVO3iG33bC/z5fuf6qvQTFGzJy0sil24oN4ULWK PO7eaWfP9T9OFaK6t31OXC9WNSCDHXImvBT1mz/c/nZf9TL1Fs M9oL2eMcJPEyCmv0r5JyPdXt10ltlBnl89o5Hi9hlq6lS3f/1h+a4NYj 3HbrFdLd8rM9z93Xr/IJo+X5Ck761XOMsn5/uaSBtB691r+m0+zZ7

	3aWMuN8v3V7A2glNuW/p2NVvPVwKZumu9Po1X3Dm5e4qzxl E8d8/3T5GJr5ThhuT7InmzXrEC8r3c5emv7IAN8r2tpisoAGyQ7wC Z/nP1BgDQhHwHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk 3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJ d4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3 wHyCTfATLJd4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTfATLJd 4BM8h0gk3wHyCTfATLJd4BM8h0gk3wHyCTf4b9+fn5+fn6u3gqo Q77D4y/TJTth5Ds8fn9/X/9X0JNBvsM/bykPs5Pv3J0xd1LJd3g8jM mQSL7DAnFPAPnOrb3muEwnzl9rSmzbTr3f39/pYvGvzu/ZbK2Dq U2f79OFC4Ob8YhFRbNH4qvh8v2taT03T5MDRjNafr4ZKN8l+Oxe6 9LXUZ23f1H6zG6cLH26ON+frfp5UnyHlt9in6/tvdZeS/Ax6qD2z8/P awXLq1EMZZygyvyzfd+bCxuZdIWjXKthRVb50zDv49x9U9n/gID+N AJen0wX5/tp+tofXG22bBswa+U51F6Z8v3xfvHD61ovf+V5opPoJA fy5JOX/X5+vWWwwe1qRlpbN/Chu4pLx5Ob9941x9sWv7t/Oiy8A MK/XKwoOLfTUM1la9t+/RvnG6z+13ilyvKeCWTfttuTMmHuLg8T+ aabMqGdHvlX//WsD3m5UY6bt5zSSxdf02RhgaH1Srkm+7xmTKZs wlz2BGM2Hx+t+wf4xJNnAB4tU75Jvq912w8NyEh24CYaRxn66s bibw4/v75V5k+mv3V7IDZjXZ9RcXjWnuu7ZV8bKOP3UjwTubWs wTGC04mM70kcOhOD5lqF7lavbf98x105rpE7UxilXpvGxPO9uerb t2/90s1a9gO9921+dRreyEzJHmjOpVrlq7erOY9YfCvWzDWpwHqL JANxUj/my+L15QPTot8vNle74UIFKtiD81PvP5bOLFHC8OdzkO3FC tgZqz4++vt6EWdNu/Lu8OcEN1LkoVD3O/ZffGer9HFycA4HF6oKa k//45LPP233sWIXDBnaG4ok6ekv77s/O+uMjqRn3GGF/OxWYZU lbU9tTt19f6eBBsTOZVj7Es3hBdU+4n6zfEpxgo026X+s8OUp1c6Y+ HB6fWax/b4V9PtyHquiT2bjhYPuVb4yePb3NIOiwQ4bd58NuWLY zh/xW11f/lB3wr72zCWA0Zal49vrqmoJkt1AwQEVn579vXGLd8+Q z898BviobpSnJ98XB2c/5M0cHKwU6QEUUV7l997L6t6fHRYZfpAHs UdOFrrh9Z8GxV+c6Y3GLNmA4ldp35kY/d4a7NvDI8QK6xACefPm 9EEvHM7nC+Hx1gaZE4d06xO//2pjZ27Mj7vOIRSCdsCodGaU6Nz2 zfs3r+breR2xVJFpfceHx76hNvFmfT/flcR8RRpFinFH98W4Lm7d+/+ iv1KpcEwlrj11+0/XS6KhtQ5XPmbdivUwnO94q+ftHRd11o8d5G2u mX7/8+5dwiFXXHoAGy7czMCs/XXuu27/H1LalcoEyF5/N9np0dPQ MV4gD77RyCrj9OLdwBWtsT3f858wU/Pz/PdN656Njf5bW3d4Vd CwUYQc3++55bb/TWAar4mt4Vrq8+di9lINxfOeABTdWcP/PUOd mHemzY0fMhY1Pj+/rsyYoc9amowv1Nb//SKG3lIEzn6ORpB7ajtnd snfGZxS+zJgHn1apFh26123NXdox2azDsmTO99o3OY6qosP7MU9 kJ7POG9dT2M6/9D2LUDuESzfvvZStKvmZ6izk81jzow36DYa3238s WtDq0OvnnieHGaP7G+Z2IAe5pO6VP3d/0pjicH0tHi7+boU5+KUC w7QAsH585+qjVr1uz9icJdICgyfz38688+mIA3pTn++uVzMVHbAto gAutjr8fmn9iaiPAJbYGvU/Of+//LLGNW1emm0tTtsFIVz7eNHq0V
--	--

oy5Khl3tzoNstv6kQWKty3v+atcK/4u1jeHnplc9wMp0Dzfq5Sfe1lh XgP2qz7z5Pkvb/ffTH0EapjvJ0cYdn7FaPVmZHZXddvdjo0m8Hbj3p IT0rl3Fmt098nbHYue5lZFq3y3iNggBsn06uMYAzb4jTXlrtqY/Vpsqj WILtck37+uCfdaA9WH875u1Z62V/ZdxV25Pt5ORc9vp9YLg7sm3z des+aS8SKAea3FZp3139+uTpxJ2D3nBMUfDnAfC/33QyO5ny+Wv wCdLYb22fUjhTvAmJbz/dCSYc8XC3fyjDArCcos53tBnRbuAEOpc3 21UbivzcPpuejN5+xAHbqb+Ly2dGaqqGmm9Fcn38/7GprnX3CGT L+h7UIvqxKNKtlgd7dtaL2FDpyL6uf7npUcPI9j2Rkm0q6iljWE8RtO 6y2s+/mvpTD1keNsvv8l9dF1wfY8im/8Kku2xbm/ZRPGjt7xV9yaq q/Qt30/ytTZ91XArzs7/331czsuSMA4vq4/0+5E7esnFy+GtbbIfkD7 J8byVcm6+b5/7ZeNbZranjZ/6Paxc5sD3MJiqtR5vvbn+gTdejczJuC M2wxM50C+r/Xrz8xWIHQAJZztvwtogDF9WX9mcRbjoryRdlCpnV 1fDIAxfRmfee2Vr/XQa82EPT9px2ARwNMo6xM8TsyMfr5lz5Hm6 PPqth8H/PyT4akwi49Xfa1gr3cS6VgwpnGf7yExGUT1h4ZzUuvITG Zcn6DV/PfHwV2wePft5zPpATYcjYs9R4VazxkdRLXnrz6KHqX99hb hzjjW1p9ZHJY5WnWHzY65Oq0F2znLT6viVL7/7akznW6Bzpi+LoG 3f+rwXGJ+CI9Lxmfm6rMfHXstu7pbsD2Ln6xx1mV/MrXr588UrLC 69jINZzJU+eTBNw9lUm38vXW+7F81G+BW1rq/C/ev7h9D+Hvl6/T zP0VbCEBN1dYn2HOnKwDdnMr35/yZ5/+6EwRgEA3nz+x/itPrW7 6uE7DnqwGoP3/mTOAWPyHz80NaHA/2nJQcnQ5U9/h0n9Ompn eov93S8XpW2vRh1m/bcObt5++3av2j3mb0rjVkj1HkDBDavF3w VXMeqYJ+yZ6avd2VpVtu5zpWEQc92OV1eL9aC+nvFMmrDXOpb vO8v1/CprX8/Rol/PBYG3K/bOxailFa1tHSyrjM/81eOKY8qC/ipVBp Qr9vtqjQGWXdqRzoyveb6/fc3l1ww1yz8SCuK1zfe3h9q8/ulCxc9p WnP5LwL41Gl8ZvHLxCJA0xsZXm19gqfPQRuL0gD0V+H+pj03JvxF vL48QEXbXefy/vuhiRZ/S9N8duTf/kU3H6CWU/33sjheHKB/XWR4 ++1OAqgi9YIXqb+LAuXXVz/X6NhfsVr30ze24cKvXITrucxOfRr5evN di5s8ucp0x8Xtuncq39c+/dCCkWXfDt00XcvsJnb2S6aL12t9H+04m e+P9cmR+1dStD4Bw/pc8nDxr4vV+NBj7efnwLaG+f7fj1hfgKm4po 4T9NX7bo1O5xeXTCm79bdKCQZ7WxbYLuISu5Ylq5I124tHV2kAX 4aZmrWxWuPjs3C+/JUuNiPol+//PuvblwJatlrPRy5U/4paDm3nhQ mi/w7ja57vn0MNHTrya8ZZ+gagtR75/ngZhdw+b91zmysAe/QYn9 l4oOLObZLyAlfsXTig4vyZQ0Mxuw4+oh/gwwX5/jg+2n7o28X9Df W5YP71ZuzFscfPee5lX/35mRtPVMjEPVyPeRJmfzE1mR+5c0T+Ta 261WiWTvXPPDqQRX9v56bxlVj2A7ePgs8/lX3mHnebsdo73//7ca ef2BfceJjL2rWl1+7L85XOROnjUE07tX7k/nsd9x9gF18m9Ody4fO1 yxzqiLy95u9/RTYDat5/f+vmVPmW7Uk47hqnOpWKERwe5qp1fX W7I99tuYLnxiKVCTfGcFl+f769dYCBaiuX74vTi14/O/Vp0OD6ele YE1BVp99vvbaV25sytoCLMtaASwq64hXHn9ffMTBxns/p5otfjjAop tcGikL6pL++57Zb8/xme29X7aMQXxZjqbgenWtA/bReeVHTxw3n
--


```

oWysfBG3atWrxbyPYk/eN7T/TvK1/tNly0aNsyXtll+il7Wfz1mPax32
gmuqQ812L57KXetGvpNO1v6hyqK/y29YLS6+m/Rq7+DUER8nw2
sx5b9eVt1Z7W4eLoO4ah0F2QSPS/L9sd5t3z9t5tCiBWurmM2rIL/
M64dbOZl1Jfm+NjizNmPyTbsh9XajogCdnQ+0s/Mj/ywOUq91Nhf
HNKv0TKUzwFPI53vsueL/2L84vbWg7qfa8nxnrq9+nULz9Zpqrldd
ADEuzvd/b/7f6e17pkgWT8aQ8sAdVJw/cjbfN//9Njjz+dfFd23b3rY
bJv5V82cKVpvoZvt+i9eXffZFP9gsDhT63VR0sUiOLR/ykrQDd43U
bcprN1/P7Q4weu/H73/ImNOJNWV5ftjx+ji48glJTivespVfs7O1za
wdvv14qetvXFklmAibvJkHC0irs78yDWffaLP09XFX/XZ8DRCqlOpG
ESj/mvz52SujTyu3eV0fqQSYBZNRyZqPn91Y6Ty6lj8yOvVkcYfOgX
OV5vWw85Nnq+9lubb1p75c7XQzH5Tn8drilWHn//nKKwc12wz
wb2NlbTc37Y14vAG4sGi4kA4p6mus0Wqdx///ehmxMlj3bMC2bB
F436PdwAAAMjSURBVLTPr/PqdplLwlaeUwGb5Pu/jz6y/kzxYjW1
8n3t6+Q1UEX/Sd4N8/2x0m3f/4Anc2mAAffdvTnj/vtFNH8ds/776
yz3MQF8dW2gte2///dr9k2XfKzsDp13YC4jdFXb9t+fvt4lvv2C/bM
q4QwzZzhphFh/6tR//5+v3PfcPs0MmMVQsf50Qb7/++Ljy5ABDG
XMWH+6LN//uwWlgzYAX10ecRe6Pt+f5DiMY5xkoNhA+f5G3NPT
nsm7R29mhmuprwCZ/nP1BgDQhHwHyCTfATLjd4BM8h0gk3wH
yCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4B
M8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHy
CTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM
8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCT
fATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h
0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfA
TLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0g
k3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATL
Jd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3
wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd
4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3w
HyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4B
M8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHy
CTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM
8h0gk3wHyCTfATLjd4BM8h0gk3wHyCTfATLjd4BM8h0gk3wHyCT
fATLjd4BM/x/3GNqpj38qYQAAAABJRu5ErkJggg==</OriginalIma
geData>
<Inverted>False</Inverted>
<IsFiltered>False</IsFiltered>
<Mirror>False</Mirror>
</Content>
<Font>

```

	<pre> <Name>Arial</Name> <Size>18</Size> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one logo </pre>

3.1.3.7 Shape

Shape object have two different properties which is shown in below,

- 1- **ShapeType**: This item specifies shape type. This can be Rectangle, Ellipse, FilledRectangle and FilledEllipse.
- 2- **LineThickness** : This item adjust thickness of line. It is measured in pixel.Forexample; 12 pixels = 1mm.Line thickness cannot be bigger than widht and height value.

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53*70 I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> <DataSourcesInfo/> </General> <DataSources/> <Object> <ObjectType>Shape</ObjectType> <NameID>Draw07</NameID> <Name>shape1</Name> <X>172</X> <Y>192</Y> <W>150</W> <H>6</H> <ZIndex>0</ZIndex> <Rotate>0</Rotate> <Hidden>False</Hidden> <Content> </pre>
---------	--

	<pre> <Source>Internal</Source> <ShapeType>Line</ShapeType> <LineThickness>5</LineThickness> </Content> <Name>Arial</Name> <Size>18</Size> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one shape </pre>

3.1.3.8 Barcode

Barcode object have various properties which is shown in below,

- 1- **Source:** This item specify barcode value source. it can be Internal and External.
 - a- **Internal** : This is default selection for barcode. Barcode value is identified from PC when creating a template in this mode.
 - b- **External** : Barcode object gets value from RS-232 or Ethernet interface.
 - c- **Counter** : Barcode object value is increasing one by one. Barcode values must be numeric in this type.
 - d- **Database** : Barcode object value is changing one by one with data file(.csv file) content. Csv file must be stored in controller.

- 2- **BarcodeType** : It stores barcode type. We support many barcodes. These are;
 - **Codabar**
 - **Code 11**
 - **Code 128**
 - **Code 32**
 - **Code 39**
 - **Code 93**
 - **Deutsche Post Identcode**
 - **Deutsche Post Leitcode**
 - **EAN-13**
 - **EAN-8**

- EAN-99
- EAN-Velocity
- FedEx Ground 96
- Industrial 2 of 5
- Interleaved 2 of 5
- ISBN
- ISMN
- ISSN
- ITF-14
- JAN-13
- JAN-8
- MSI
- OPC
- PharmaCode
- PLANET
- POSTNET
- PZN
- SCC-14
- SCC-18
- Telepen
- UCC/EAN-128
- GS1-128
- UPC-A
- UPC-E
- GS1-Databar Omnidirectional
- GS1-Databar Omnidirectional Stacked
- GS1-Databar Truncated
- GS1-Databar Limited
- GS1-Databar Stacked
- GS1-Databar Expanded
- GS1-Databar Expanded Stacked

3- **BarcodeValue:** It stores barcode value. Barcode value must be suitable for barcode type. For example 8691234567890 value is suitable for EAN-13 but 8691234567891 is not suitable.

4- **AddChecksum :** Specifies whether checksum must be generated and attached to the value to encode. This property is used for some barcodes. (Code 128, Code 39...etc) . It can be True or False.

- a- **True :** Adding checksum value to barcode
- b- **False :** Do not add checksum value to barcode

- 5- **BarHeight** : Specifies the bar's height of the barcode. Its values are changing between 0.1-5.0 values. It's measured in inches. **Please see note at the end of barcode object. It shows inch calculating.**

- 6- **BarRatio** : Specifies the wide bar's width compared to the narrow bar's width. In barcode terminology this is N value. It is changing between 1-20.

- 7- **BarWidth** : Specifies the narrow bar's width of the barcode. In barcode terminology this is X value. It's measured in inches. **Please see note at the end of barcode object. It shows inch calculating.**

- 8- **BearerBarStyle** : Specifies the bearer bar's type that must be drawn with the barcode image. Bearer bar is only available for 2 of 5, Code 128 and UCC/EAN-128 barcodes. It can be None, Frame and Horizontal Rules. These are;
 - a- **None** : it doesn't add any line around the barcode
 - b- **Frame** : it adds frame to around the barcode
 - c- **Horizontal Rules** : it adds lines top and bottom of barcode lines.

- 9- **BearerBarWidth** : Specifies the bearer bar's width. It's measured in inches. **Please see note at the end of barcode object. It shows inch calculating.**

- 10- **BorderWidth** : Specifies the barcode image border's width. Border property is drawing frame around barcode. Default it is 0. If it is 0, cannot see any frame around barcode.

- 11- **CodabarStartChar** : Specifies the start character for Codabar symbology. Possible values are: A, B, C or D.

- 12- **CodabarStopChar** : Specifies the stop character for Codabar symbology. Possible values are: A, B, C or D.

- 13- **Code128Charset** : Specifies the characters set to use in the Code 128 symbology. Possible values are: Auto, A, B or C.

- 14- **CodeAlignment** : Specifies location of code according to barcode. It can be Below Left, Below Center, Below Right, Above Left, Above Center, Above Right.

- 15- **DisplayCode** : Specifies whether the value to encode must be displayed in the barcode image. It can be True or False.
 - a- **True** : Barcode value appears with barcode value.
 - b- **False** : Barcode value code doesn't appear.

- 16- DisplayChecksum** : Specifies whether checksum is printed or not. It can be True or False.
- c- **True** : Checksum appears with barcode value.
 - d- **False** : Checksum value code doesn't appear. This value is default.
- 17- DisplayLightMarginIndicator** : Specifies whether light margin indicators must be displayed in the barcode image. Only available for EAN/UPC Symbologies. It can be True or False.
- a- **True** : Indicator appears with barcode..
 - b- **False** : Indicator code doesn't appear.
- 18- DisplayStartStopChar** : Specifies whether start and stop characters must be displayed in the barcode image. It is used with some barcodes (Codabar, Code39..etc). It can be True or False.
- a- **True** : Start Stop Char appears with barcode value.
 - b- **False** : Start Stop Char doesn't appear.
- 19- EanUpcSupplementType** : Specifies whether use EAN or UPC with supplement barcode or use single type barcode. It is used with EAN and UPC barcodes (EAN13, EAN8, UPC-A, UPC-E). It can be None, Digits2 (Addon 2) or Digits5 (Addon 5). Addon barcode values doesn't read by barcode scanner.
- a- **None** : Only single barcode appears
 - b- **Digits2** : Barcode appears with two digits addon barcode
 - c- **Digits5** : Barcode appears with five digits addon barcode
- 20- EanUpcSupplementCode** : Specifies value of supplement barcode. If supplement type is Digits2, this value must be 2 digits. If supplement type is Digits5, value must be 5 digits. Code value must be numerical.
- 21- EanUpcSupplementSeparator** : Specifies distance between main barcode bars and addon (supplement) barcode bars. It's measured in inches. **Please see note at the end of barcode object. It shows inch calculating.**
- 22- EanUpcSupplementMargin** : Specifies distance between top of addon barcode bars and addon value. It's measured in inches. **Please see note at the end of barcode object. It shows inch calculating.**
- 23- SegmentCount** : Specifies segment count of GS1-Databar Expanded and GS1-Databar Expanded Stacked. This is numerical value and default it is 6. It can be 2,4,6,8,10,12,14,16,18 and 20.

- 24- QuietZoneWidth** : Specifies the right and left side gap of the barcode. It values are changing between 0.01 - 5.0 values. It's measured in inches. **Please see note at the end of barcode object. It shows inch calculating.**
- 25- PharmaCodeBarSpacing**: Specifies gaps between bars of PharmaCode barcode. It's measured in inches. **Please see note at the end of barcode object. It shows inch calculating.**
- 26- PharmaCodeThickBarWidth**: Specifies the thick bar width of the PharmaCode barcode. It values are changing between 0.01 - 5.0 values. It's measured in inches. **Please see note at the end of barcode object. It shows inch calculating.**
- 27- PharmaCodeThinBarWidth**: Specifies the thin bar width of the PharmaCode barcode. It values are changing between 0.01 - 5.0 values. It's measured in inches. **Please see note at the end of barcode object. It shows inch calculating.**
- 28- ShortBarHeight**: Specifies the short bar height of the PLANET and POSTNET barcode. It values are changing between 0.01 - 5.0 values. It's measured in inches. **Please see note at the end of barcode object. It shows inch calculating.**
- 29- TallBarHeight**: Specifies the tall bar height of the PLANET and POSTNET barcode. It values are changing between 0.01 - 5.0 values. It's measured in inches. **Please see note at the end of barcode object. It shows inch calculating.**
- 30- TelepenEncoding**: Specifies encoding type of telepen barcode. It can be Ascii or Numeric.
- a. **Ascii** : Allows to use ascii(numeric+alphabetic) characters.
 - b. **Numeric** : Allows to use only numeric characters.
- 31- UpceSystem** : Specifies the number system to use for UPC-E symbology. It can be System0 and System1.
- a- **System0**
 - b- **System1**
- 32- Text** : Specifies text for barcode. Text doesn't encode into barcode. It is using only explanation.
- 33- Inverted** : If you can print with white ribbon you must select White Ribbon option. The barcode's color inverted automatic. This property is useful when the user prints dark colored pack

- 34- CounterBegin :** Specifies counter start value for barcode. This item is only used when Source item adjust as Counter.
- 35- CounterEnd:** Specifies counter end value for barcode. This item is only used when Source item adjust as Counter.
- 36- CounterStep:** Specifies counters step value. Deafult value is 1. For 1, counter increases one by one. This item is only used when Source item adjust as Counter.
- 37- CounterPeriod:** Specifies counter value increase after how many print. Deafult it is 1. This item is only used when Source item adjust as Counter.
- 38- CounterDigit:** Specifies digit of counter for counter variable barcode. This item is only used when Source item is Counter.
- 39- FileName :** This item stores file name(if possible with path) which keeps data. File must be csv file. If file name will adjust in printer controller,it can be default.csv.This item is only used when Source item adjust as database.
- 40- ColumnNo :** Specifies column of datas in csv file. It is default 0.This item is only used when Source item adjust as database.

Note : Barcode component inch standart is 96 dpi but we are using 300 dpi(Print Head's resolution). So, you must be use this formula for calculating original size for savema printer :

Original Size = Value*(300/96 dpi) and 1 inch=25,4 mm

For example : For 0.5 value equals $0.5 / (300/96 \text{ dpi}) = 0.16 \text{ inch} = 4 \text{ mm}$

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53*70 I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> <DataSourcesInfo/> </General> <DataSources/> <Object> <ObjectType>Barcode</ObjectType> </pre>
---------	---

```

<NameID>Barcode08</NameID>
<Name>barcode1</Name>
<X>162</X>
<Y>141</Y>
<W>228</W>
<H>93</H>
<ZIndex>0</ZIndex>
<Rotate>0</Rotate>
<Hidden>False</Hidden>
<Content>
  <Data>869123456789</Data>
  <Mirror>False</Mirror>
  <PromptMessage></PromptMessage>
  <Source>Internal</Source>
  <MergeFieldFormula></MergeFieldFormula>
  <MergeFieldItems></MergeFieldItems>
  <BarcodeType>EAN-13</BarcodeType>
  <BarcodeValue>869123456789</BarcodeValue>
  <AddChecksum>True</AddChecksum>
  <BarHeight>0.7</BarHeight>
  <BarRatio>2</BarRatio>
  <BarWidth>0.02</BarWidth>
  <BearerBarStyle>None</BearerBarStyle>
  <BearerBarWidth>0.02</BearerBarWidth>
  <BorderWidth>0</BorderWidth>
  <CodabarStartChar>A</CodabarStartChar>
  <CodabarStopChar>A</CodabarStopChar>
  <Code128Charset>Auto</Code128Charset>
  <CodeAlignment>BelowCenter</CodeAlignment>
  <DisplayChecksum>False</DisplayChecksum>
  <DisplayCode>True</DisplayCode>

<DisplayLightMarginIndicator>False</DisplayLightMarginIndicator>
or>
  <DisplayStartStopChar>False</DisplayStartStopChar>
  <EanUpcSupplementType>None</EanUpcSupplementType>
  <EanUpcSupplementCode>0</EanUpcSupplementCode>

<EanUpcSupplementSeparation>0.2</EanUpcSupplementSeparation>
tion>

```

	<pre> <EanUpcSupplementMargin>0.2</EanUpcSupplementMargin> <DrawGuardBar>True</DrawGuardBar> <PharmaCodeBarSpacing>0.1</PharmaCodeBarSpacing> <PharmaCodeThickBarWidth>0.1</PharmaCodeThickBarWidth> <PharmaCodeThinBarWidth>0.1</PharmaCodeThinBarWidth> <ShortBarHeight>0.1</ShortBarHeight> <TallBarHeight>0.1</TallBarHeight> <QuietZoneWidth>0.2</QuietZoneWidth> <TelepenEncoding>Ascii</TelepenEncoding> <UpceSystem>System0</UpceSystem> <Text></Text> <Inverted>False</Inverted> <SegmentCount>6</SegmentCount> <CounterBegin>1</CounterBegin> <CounterEnd>999</CounterEnd> <CounterStep>1</CounterStep> <CounterPeriod>1</CounterPeriod> <CounterDigit>3</CounterDigit> <FileName>default.csv</FileName> <ColumnNo>0</ColumnNo> </Content> <Name>Arial</Name> <Size>15</Size> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one barcode </pre>
--	---

3.1.3.9 2D Barcode

2D Barcode object have various properties which is shown in below,

- 1- **Source:** This item specify barcode value source. it can be Internal and External.
 - a- **Internal :** This is default selection for barcode. 2DBarcode value is identified from PC when creating a template in this mode.
 - b- **External :** Multitext object gets value from RS-232 or Ethernet interface.
 - c- **Counter :** 2D Barcode object value is increasing one by one. 2D Barcode values must be numeric in this type.

- d- **Database** : 2D Barcode object value is changing one by one according to data file(.csv file) content. Csv file must be stored in controller.

2- **TwoDBarcodeType** : It stores barcode type.

3- We support many barcodes. These are;

1. **Code16k**
2. **DataMatrix**
3. **GS1-Datamatrix**
4. **QRCode**
5. **Semacode**
6. **AztecCode**
7. **Pdf417**
8. **CompactPdf417**
9. **MacroPdf417**
10. **MicroPDF417**

4- **TwoDBarcodeValue**: It stores barcode value. 2D Barcode value must be suitable for barcode type.

5- **ErrorCorrection**

- **AztecCodeErrorCorrection**: Specifies Error Correction Percentage to apply for Aztec Code symbology. Default is 23.
- **Pdf417ErrorCorrectionLevel** : Specifies the Error Correction Level to apply for PDF417 symbology.
 - a) **Level0**
 - b) **Level1**
 - c) **Level2** : This is default selection.
 - d) **Level3**
 - e) **Level4**
 - f) **Level5**
 - g) **Level6**
 - h) **Level7**
 - i) **Level 8**
- **QRCodeErrorCorrectionLevel**: Specifies the Error Correction Level to apply for QR Code symbology. There are 4 type of Error Correction.
 - a) **L** : Approx. 7% of codewords can be restored. Error correction level L is appropriate for high symbol quality and/or the need for the smallest possible symbol.

- b) **M** : Approx. 15% of codewords can be restored. Level M is described as Standard level and offers a good compromise between small size and increased reliability. We are using this encoding type as a default.
- c) **Q** : Approx. 25% of codewords can be restored. Level Q is a High reliability level and suitable for more critical or poor print quality applications.
- d) **H** : Approx. 30% of codewords can be restored. Level H offers the maximum achievable reliability.

6- CodeFormat :

- **AztecCodeFormat**: Specifies the Aztec Code Format to use on that symbology. This property have alot of format. Auto is using as a default. Formats are ;
 - **Auto**
 - **C15X15Compact**
 - **C19X19**
 - **C19X19Compact**
 - **C23X23**
 - **C23X23Compact**
 - **C27X27**
 - **C27X27Compact**
 - **C31X31**
 - **C37X37**
 - **C41X41**
 - **C45X45**
 - **C49X49**
 - **C53X53**
 - **C57X57**
 - **C61X61**
 - **C67X67**
 - **C71X71**
 - **C75X75**
 - **C79X79**
 - **C83X83**
 - **C87X87**
 - **C91X91**
 - **C95X95**
 - **C101X101**
 - **C105X105**
 - **C109X109**

- C113X113
- C117X117
- C121X121
- C125X125
- C131X131
- C135X135
- C139X139
- C143X143
- C147X147
- C151X151

- **DataMatrixFormat** : Specifies the DataMatrix Format to use on that symbology.

- **Auto** : This is default selection.
- C10X10
- C12X12
- C14X14
- C16CX16
- C18X18
- C20X20
- C22X22
- C24X24
- C26X26
- C32X32
- C36X36
- C40X40
- C44X44
- C48X48
- C52X52
- C64X64
- C72X72
- C80X80
- C88X88
- C96X96
- C104X104
- C120X120
- C132X132
- C144X144
- C8X18
- C8X32
- C12X26

- C12X36
- C16X36
- C16X48

7- ModuleSize :

- **AztecCodeModuleSize:** Specifies the module size of Aztec Code. It's measured in inches. It is changing between 0.01 and 0.3. **Please see note at the end of 2D barcode object. It shows inch calculating.**
- **DataMatrixModuleSize :** Specifies DataMatrix module size. It's measured in inches. It is changing between 0.01 and 0.3. **Please see note at the end of 2D barcode object. It shows inch calculating.**
- **QRCodeModuleSize :** Specifies the module size. It's measured in inches. **Please see note at the end of 2D barcode object. It shows inch calculating.**
- **GS1-DatamatrixModuleSize :** Specifies GS1-DataMatrix module size. It's measured in inches. It is changing between 0.01 and 0.3. **Please see note at the end of 2D barcode object. It shows inch calculating.**

8- Version :

- **MicroPDF417Version:** Specifies the MicroPDF417 version (a predefined combinations of numbers of columns and rows) to be generated.
 - **Auto :** This is default selection.
 - V1X11
 - V1X17
 - V1X20
 - V1X24
 - V1X28
 - V2X8
 - V2X11
 - V2X14
 - V2X17
 - V2X20
 - V2X23
 - V2X26
 - V3X6
 - V3X8
 - V3X10
 - V3X12
 - V3X15
 - V3X20
 - V3X26
 - V3X32
 - V3X38

- V3X44
- V4X4
- V4X6
- V4X8
- V4X10
- V4X12
- V4X15
- V4X20
- V4X26
- V4X32
- V4X38
- V4X44

- **QRCodeVersion** : Specifies the QR Code Version to use on that symbology.
Version 1 (21 x 21 modules) to Version 40 (177 x 177 modules) increasing in steps of four modules per side.

- **Auto** :
- V01
- V02
- V03
- V04
- V05
- V06
- V07
- V08
- V09
- V10
- V11
- V12
- V13
- V14
- V15
- V16
- V17
- V18
- V19
- V20
- V21
- V22
- V23
- V24

- V25
- V26
- V27
- V28
- V29
- V30
- V31
- V32
- V33
- V34
- V35
- V36
- V37
- V38
- V39
- V40

9- Encoding :

- **DataMatrixEncoding** : Specifies the DataMatrix Encoding to use on that symbology.
 - a- **Auto** : This is default selection.
 - b- **Ascii** : Used to encode data that mainly contains ASCII characters (0-127).
 - c- **C40** : Used to encode data that mainly contains numeric and upper case characters.
 - d- **Text** : Used to encode data that mainly contains numeric and lower case characters.
 - e- **Base256** : Used to encode 8 bit values
- **QRCodeEncoding** : Specifies the QR Code Encoding to use on that symbology.
 - a- **Auto** : This is default selection.
 - b- **Numeric** : Used to encode data that mainly contains numeric characters.
 - c- **AlphaNumeric** : Used to encode data that mainly contains alphanumeric characters.
 - d- **Kanji** : Used to encode data that mainly contains Kanji characters.
 - e- **Byte** : Used to encode 8 bit values.

10- AztecCodeRune: Specifies the Aztec Code Rune value. It must be a value from 0 to 255 and is available for Aztec Code Compact Format only.

11- BarHeight : Specifies the bar's height of the barcode. It's measured in inches. It is changing between 0.1 and 3. Only using with Code16k. **Please see note at the end of 2D barcode object. It shows inch calculating.**

- 12- BarRatio** : Specifies the wide bar's width compared to the narrow bar's width. In barcode terminology this is N value. It is changing between 1 and 30. **Please see note at the end of 2D barcode object. It shows inch calculating.**
- 13- BarWidth** : Specifies the narrow bar's width of the barcode. In barcode terminology this is X value. It's measured in inches. **Please see note at the end of 2D barcode object. It shows inch calculating.**
- 14- BorderWidth** : Specifies the barcode image border's width. Border property is drawing frame around barcode. Default it is 0. If it is 0, cannot see any frame around barcode.
- 15- Code16kMode** : Specifies the mode to use for Code16k symbology. It can be Mode0, Mode1 and Mode2.
- a- **Mode0** : This will use the Code 128 Char Set A which only supports ASCII values from 0 to 95. It is using as a **default**.
 - b- **Mode1** : This will use the Code 128 Char Set B which only supports ASCII values from 32 to 127
 - c- **Mode2** : This will use the Code 128 Char Set C which only supports pairs of digits
- 16- Pdf417AspectRatio** : Specifies the ratio of the height to the overall width of the PDF417 symbol. Its value must be 0 (zero) up to 1 (one). **Default** it is 0.
- 17- Pdf417Columns** : Specifies the number of columns to use for PDF417 symbology.
- 18- Pdf417CompactionType** : Specifies the Compaction Type to apply for PDF417 symbology.
- a- **Auto** : It switches between Text, Binary and Numeric modes in order to minimize the number of codewords to be encoded.
 - b- **Binary** : It allows encoding all 256 possible 8-bit byte values. This includes all ASCII characters value from 0 to 127 inclusive and provides for international character set support. It is using as a **Default**.
 - c- **Text** : It allows encoding all printable ASCII characters, i.e. values from 32 to 126 inclusive in accordance with ISO/IEC 646, as well as selected control characters such as TAB (horizontal tab ASCII 9), LF (NL line feed, new line ASCII 10) and CR (carriage return ASCII 13).
 - d- **Numeric** : It allows encoding numeric data strings.

- 19- Pdf417Rows** : Specifies the number of rows to use for PDF417 symbology.
- 20- Inverted** : If you can print with white ribbon you must select White Ribbon option.
The barcode's color inverted automatic. This property is useful when the user prints dark colored pack
- 21- CounterBegin** : Specifies counter start value for 2D barcode. This item is only used when Source item adjust as Counter.
- 22- CounterEnd**: Specifies counter end value for 2D barcode. This item is only used when Source item adjust as Counter.
- 23- CounterStep**: Specifies counters step value. Deafult it is 1. For 1, counter increases one by one. This item is only used when Source item adjust as Counter.
- 24- CounterPeriod**: Specifies counter value increase after how many print. Deafult it is 1. This item is only used when Source item adjust as Counter.
- 25- CounterDigit**: Specifies digit of counter for counter variable 2D barcode. This item is only used when Source item is Counter.
- 26- FileName** : This item stores file name(if possible with path) which keeps data. File must be csv file. If file name will adjust in printer controller, it can be default.csv.This item is only used when Source item is database.
- 27- ColumnNo** : Specifies column of datas in csv file. It is default 0.This item is only used when Source item is database.

Note : 2D Barcode component inch standart is 96 dpi but we are using 300 dpi(Print Head's resolution). So, you must be use this formula for calculating original size for savema printer

Original Size = Value*(300/96 dpi) and 1 inch=25,4 mm

For example : For 0.5 value equals $0.5 / (300/96 \text{ dpi}) = 0.16 \text{ inch} = 4 \text{ mm}$

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53*70 I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> </pre>
---------	--

```

<DataSourcesInfo/>
</General>
<DataSources/>
<Object>
  <ObjectType>2DBarcode</ObjectType>
  <NameID>Barcode09</NameID>
  <Name>2dbarcode1</Name>
  <X>250</X>
  <Y>115</Y>
  <W>48</W>
  <H>48</H>
  <ZIndex>0</ZIndex>
  <Rotate>0</Rotate>
  <Hidden>False</Hidden>
  <Content>
    <Data>123456789</Data>
    <Mirror>False</Mirror>
    <PromptMessage></PromptMessage>
    <Source>Internal</Source>
    <MergeFieldFormula></MergeFieldFormula>
    <MergeFieldItems></MergeFieldItems>
    <TwoDBarcodeType>DataMatrix</TwoDBarcodeType>
    <TwoDBarcodeValue>123456789</TwoDBarcodeValue>
    <ErrorCorrection>M</ErrorCorrection>
    <CodeFormat>Auto</CodeFormat>
    <ModuleSize>0.04</ModuleSize>
    <Version>Auto</Version>
    <Encoding>Auto</Encoding>
    <AztecCodeRune>1</AztecCodeRune>
    <BarHeight>0.4</BarHeight>
    <BarRatio>3</BarRatio>
    <BarWidth>0.02</BarWidth>
    <BorderWidth>0</BorderWidth>
    <Code16kMode>Mode0</Code16kMode>
    <Pdf417AspectRatio>0</Pdf417AspectRatio>
    <Pdf417Columns>5</Pdf417Columns>
    <Pdf417CompactionType>Binary</Pdf417CompactionType>
    <Pdf417Rows>0</Pdf417Rows>
    <Inverted>False</Inverted>
    <CounterBegin>1</CounterBegin>

```

	<pre> <CounterEnd>999</CounterEnd> <CounterStep>1</CounterStep> <CounterPeriod>1</CounterPeriod> <CounterDigit>3</CounterDigit> <FileName>default.csv</FileName> <ColumnNo>0</ColumnNo> </Content> <Name></Name> <Size>12</Size> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one 2d barcode </pre>

3.1.3.10 Database

Database object is used for printing random data in each print. It gets data from data file(.csv) for print. Database object have four different properties which is shown in below,

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53*70 I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> <DataSourcesInfo/> </General> <DataSources/> <Object> <ObjectType>Text</ObjectType> <NameID>Text013</NameID> <Name>text1</Name> <X>196</X> <Y>40</Y> </pre>
---------	---

	<pre> <W>33</W> <H>63</H> <ZIndex>0</ZIndex> <Rotate>0</Rotate> <Hidden>False</Hidden> <Content> <Data>1</Data> <Source>VariableData</Source> <PromptMessage></PromptMessage> <AllowedCharacters>Any</AllowedCharacters> <DataSourceName>Text013</DataSourceName> <DataSourceColumn>Text013</DataSourceColumn> <ColumnDatas>1</ColumnDatas> <CSVFileFullName>C:/Users/SakirC/Desktop/New Microsoft Excel Çalışma Sayfası.csv</CSVFileFullName> <CSVFileName>New Microsoft Excel Çalışma Sayfası.csv</CSVFileName> <CSVFileColumnSeparator>,</CSVFileColumnSeparator> <CSVFileColumnSeparatorIndex>1</CSVFileColumnSeparatorIndex> > <CSVFileColumnNo>0</CSVFileColumnNo> <MagnificationRatio>100</MagnificationRatio> <Inverted>False</Inverted> <Mirror>False</Mirror> </Content> <Name>Tahoma</Name> <Size>36</Size> <OriginalSize>12</OriginalSize> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one richtext </pre>

3.1.3.11 Table

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53*70 l</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> <DataSourcesInfo/> </General> <DataSources/> <Object> <ObjectType>Table</ObjectType> <NameID>Table010</NameID> <Name>table1</Name> <X>153</X> <Y>90</Y> <W>183</W> <H>243</H> <ZIndex>0</ZIndex> <Rotate>0</Rotate> <Hidden>False</Hidden> <Content> <Source>Internal</Source> <MagnificationRatio>100</MagnificationRatio> <ImageData>iVBORw0KGgoAAAANSUhEUgAAALcAAADzCAIAA ABLxRCyAAAACXBIWXMAAA7EAAAOxAGVKw4bAAADZkIEQVR 4nO3dwW2rWgBFUfKVAugg6YRW0oFLuLg0V5IW0oHfgAhl8rT 9Bv4Eaa0JNqMjtAXDO03wd2OM+/3+uv85ds2Drtfr/tvm5/m5 +dvWyyksy7JtXpbl6C2POuPmveatjf/+rzo5MZXQVEJTCU0INJX QVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQV EJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJ TCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJ72S7 7mbe/3O1223/b/Dz75jHGuq6HbuHXu1wuTp3mla/b5XRvwsn mZ9o3z/P8fWs7y/4U9qe8LMvRWx51xs1jj9t+OLQVEJTCU0INJ XQVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQ VEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJ TCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJTce 1lu5zuNOTJ5mfaN48x1nU9dAu/3uVyceo0D3ndLqd7E042P9O </pre>
---------	--

	<pre> +eZ7n71vbWfansD/lZVmO3vKoM24eY/xswxeHphKaSmgqoam EphKaSmgqoamEphKaSmgqoamEphKaSmgqoamEphKaSmgqo amEphKaSmgqoamEphKaSmgqoamEphKaSmgqoamEphKaSmg qoamEphKaSmgqoamEphKaSmgqoamEphKaSmgqoamEphKaS mgqoamEphKaSmgv2+V0pyFPNj/TvnmMsa7roVv49S6Xi1Onec jrdjndm3Cy+Zn2zfM8f9/azrl/hf0pL8ty9JZHnXHzGONnG744NJ XQVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQ VEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJ TCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJTCU0INJXQVEJTCU 0INJXQVEJ7nabper0ePeNR+2nlt9ttXddDtzzqJtPIATH206dPnoF v9jb29vn5+f9fn/Zzyo/i6+vr2ma5nk+esg/OOPmaZo+Pj7e39+na XrxPiH9Aa7Ag2zhe9XSAAAAAEIFTkSuQmCC</ImageData> <Inverted>False</Inverted> <Mirror>False</Mirror> <TableResult>0;0#ns~qwerty~0;1#ns~qwerty~0;2#ns~qwerty ~1;0#ns~qwerty~1;1#ns~qwerty~1;2#ns~qwerty~2;0#ns~qwe rty~2;1#ns~qwerty~2;2#ns~qwerty~3;0#ns~qwerty~3;1#ns~q werty~3;2#ns</TableResult> <ColumnCount>3</ColumnCount> <RowCount>4</RowCount> <ListColumnWidth>20,20,20</ListColumnWidth> <ListRowHeight>20,20,20,20</ListRowHeight> <LineWidth>1</LineWidth> </Content> <Name>Arial</Name> <Size>18</Size> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one richtext </pre>

3.1.3.12 Merge Fields

Merge field is merged as the required type in a text or barcode field. Merge field can combined time, date and counter into a single field.

Merge field can be using for building barcodes or texts from different elements or database or from variable length user entered fields.

Example	<pre> ~SPLTDS{<Template> <General> <MachineType>53*70 I</MachineType> <Name>temp1_53.rox</Name> <Width>640</Width> <Height>912</Height> <ZIndex>-1000</ZIndex> <SaveImages>False</SaveImages> <DataSourcesInfo/> </General> <DataSources/> <Object> <ObjectType>Text</ObjectType> <NameID>Text013</NameID> <Name>text1</Name> <X>196</X> <Y>40</Y> <W>33</W> <H>63</H> <ZIndex>0</ZIndex> <Rotate>0</Rotate> <Hidden>False</Hidden> <Content> <Data>1</Data> <Source>VariableData</Source> <PromptMessage></PromptMessage> <AllowedCharacters>Any</AllowedCharacters> <DataSourceName>Text013</DataSourceName> <DataSourceColumn>Text013</DataSourceColumn> <ColumnDatas>1</ColumnDatas> <CSVFileFullName>C:/Users/SakirC/Desktop/New Microsoft Excel Çalışma Sayfası.csv</CSVFileFullName> <CSVFileName>New Microsoft Excel Çalışma Sayfası.csv</CSVFileName> <CSVFileColumnSeparator>,</CSVFileColumnSeparator> </pre>
---------	--

```

<CSVFileColumnSeparatorIndex>1</CSVFileColumnSeparatorIndex>
  <CSVFileColumnNo>0</CSVFileColumnNo>
  <MagnificationRatio>100</MagnificationRatio>
  <Inverted>False</Inverted>
  <Mirror>False</Mirror>
</Content>
<Font>
  <Name>Tahoma</Name>
  <Size>36</Size>
  <OriginalSize>12</OriginalSize>
  <Style>Regular</Style>
</Font>
</Object>
<Object>
  <ObjectType>Text</ObjectType>
  <NameID>Text015</NameID>
  <Name>text2</Name>
  <X>85</X>
  <Y>127</Y>
  <W>126</W>
  <H>63</H>
  <ZIndex>0</ZIndex>
  <Rotate>0</Rotate>
  <Hidden>False</Hidden>
  <Content>
    <Data>1Text</Data>
    <Source>MergeField</Source>
    <PromptMessage></PromptMessage>
    <AllowedCharacters>Any</AllowedCharacters>

    <MergeFieldFormula>{Text013}&{Text014}</MergeFieldFormula>
    <MergeFieldItems>Text013~Text014</MergeFieldItems>
    <MagnificationRatio>100</MagnificationRatio>
    <Inverted>False</Inverted>
    <Mirror>False</Mirror>
  </Content>
  <Font>
    <Name>Tahoma</Name>

```

	<pre> <Size>36</Size> <OriginalSize>12</OriginalSize> <Style>Regular</Style> </Object> <Object> <ObjectType>Text</ObjectType> <NameID>Text014</NameID> <Name>text3</Name> <X>82</X> <Y>36</Y> <W>99</W> <H>63</H> <ZIndex>0</ZIndex> <Rotate>0</Rotate> <Hidden>False</Hidden> <Content> <Data>Text</Data> <Source>Internal</Source> <PromptMessage></PromptMessage> <AllowedCharacters>Any</AllowedCharacters> <MagnificationRatio>100</MagnificationRatio> <Inverted>False</Inverted> <Mirror>False</Mirror> </Content> <Name>Tahoma</Name> <Size>36</Size> <OriginalSize>12</OriginalSize> <Style>Regular</Style> </Object> <Dates/> </Template>}^ --- This template has only one richtext </pre>

3.1.4 Font

This property is used for adjusting object view and size. A lot of objects are using this property. These are;

- a- Date
- b- Time
- c- Text
- d- Counter
- e- Barcode
- f- 2D Barcode
- g- Table
- h- RichText(Font information come from Rtf Data)

Some objects do not use this property. These are;

- a- Logo
- b- Shape

Font property have three different items. These are ;

1- Name : Specifies name of font. The supported fonts are shown below: it can be add.

- a- Arial
- b- Courier New
- c- Gulim (for Korean language characters)
- d- Impact
- e- Simsun (For Chinese characters)
- f- SimHei (For Chinese characters)
- g- Tahoma
- h- Times New Roman
- i- Trebuchet MS
- j- Verdana
- k- Arabicfont (For Arabic characters)
- l- AMS_Arunalu (For Sinhalese characters)
- m- Sinhala – Kumudu (For Sinhalese characters)
- n- Radhika-PC (For Sinhalese characters)
- o- Sandaya (For Sinhalese characters)
- p- Sinhala InetFont (For Sinhalese characters)
- q- BNazanin (for Persian characters)

2- Size : Specifies font size of object. Font size unit is point. Default 20pt.

3- Style : Specifies style of text. It can be Regular, Bold, Italic or Bold,Italic.

- a- **Regular** : This is default font style and it is normal text.
- b- **Bold** : Text is shown as a bold.
- c- **Italic** : Text is shown as an italic.
- d- **Bold,Italic** : Text is shown bold and italic at the same time.

3.2 Load Template File from Printer

SPLLTF: Allows to load selected template file which is stored in printer. Template must be stored in printer otherwise printer doesn't load this template.

Printer sends OK message when loading template operation is succeeded or sends FAIL message when setting loading template operation is failed.

Using	~SPLLTF{Template File Name}^ Parameters; Template File Name : Specifies template file name which will be loaded. Note: Savema template's extension name is rox. Second numerical extension(before .rox) is specified according to printer type. Can be _32 (for 32mm printers), _53 (for 53mm printers) and _107 . Return Value(On Succeeded) : ~ SPGRES{SPLLTF:OK}^ Return Value(On Failed) : ~ SPGRES{SPLLTF:FAIL}^
Example	~SPLLTF{temp1_53.rox}^ -- temp1_53.rox file loads in printer.(if printer has this template)

3.3 Get Active Template

SPLGAT : Returns active working template name from printer. This command doesn't have parameter.

Using	~SPLGAT^
Example	~SPLGAT^ Return Value(On Succeeded) : ~ SPGRES{SPLGAT:temp1_53.rox}^ -- Printer sends active template name which name is temp1_53.rox Note: Savema template's extension name is rox. Second numerical extension(before .rox) is specified according to printer type. Can be _32

	(for 32mm printers), _53 (for 53mm printers) and _107 (107 mm printers).
--	--

3.4 Get Stored Templates

SPLGST : Returns all stored template file names from printer. This command doesn't have parameter.

Using	~SPLGST^
Example	~SPLGST^ Return Value(On Successed) : ~ SPGRES{SPLGST:temp1_53.rox<abc_53.rox<temp2_53.rox}^ -- Printer sends all template names from 53mm printers in SPGRES command parameter. ~ SPGRES{ SPLGST:temp1_32.rox<abc_32.rox<temp2_32.rox}^ -- Printer sends all template names from 32mm printers in SPGRES command parameter. Note: Savema template's extension name is rox. Second numerical extension(before .rox) is specified according to printer type. Can be _32 (for 32mm printers), _53 aand _107 (107 mm printers).

3.5 Create Data File

SPLCDF: Allows to create data file(.csv file) in printer . Needs two parameters.

Printer sends OK message when creating data(.csv) file operation is succeeded or sends FAIL message when creating data(.csv) operation is failed.

Using	~SPLCDF{Data File Name~gt~File Content}^ Parameters; Data File Name : Specifies data file name which will be stored in printer. File Content : This parameter must be arranged according to csv file rules. Datas must be ordered per row and if use more than one column per row, columns must be seperated with ~sc~ text. Return Value(On Successed) : ~ SPGRES{SPLCDF:OK}^ Return Value(On Failed) : ~ SPGRES{SPLCDF:FAIL}^
Example	sample.csv is created with 3 rows and 1 column in below; ~SPLCDF{sample.csv~gt~abc1 bce1

	cde1}^ sample.csv is created with 3 rows and 3 columns in below; ~SPLCDF{sample.csv~gt~abc1~sc~abc2~sc~abc3 bce1~sc~bce2~sc~bce3 cde1~sc~cde2~sc~cde3}^
--	--

3.6 Get Stored Data Files

SPLGSD: Returns all stored data file names from printer. This command doesn't have parameter.

Using	~SPLGSD^
Example	~SPLGSD^ Return Value(On Succeeded) : ~ SPGRES{SPLGSD:abc.csv<datafile1.csv}^ -- Printer sends all data file names from printer in SPGRES command parameter.

3.7 Delete Template File

SPLDTF : This command deletes selected template file from printer. This command uses template file name as a parameter.

Printer sends OK message when deleting template file operation is succeeded or sends FAIL message when deleting templatefileoperation is failed.

Using	~SPLDTF{Template File Name}^ Parameters; Template File Name : Specifiestemplate file name which will be deleted. Note: Savema template's extension name is rox. Second numerical extension(before .rox) is specified according to printer type. Can be _32 (for 32mm printers), _53 (for 53mm printers) and _107 (107 mm printers). Return Value(On Succeeded) : ~ SPGRES{SPLDTF:OK}^ Return Value(On Failed) : ~ SPGRES{SPLDTF:FAIL}^
Example	~SPLDTF{temp1_53.rox}^ -- temp1_53.rox file is deleted from printer.

3.8 Delete All Templates

SPLDTA : This command deletes all stored template file from printer. User must be careful before use this command. Because printer deletes all template file after get this command. This command doesn't have parameter.

Printer sends OK message when deleting all template files operation is succeeded or sends FAIL message when deleting template files operation is failed.

Using	~SPLDTA^ Return Value(On Succeeded) : ~ SPGRES{SPLDTA:OK}^ Return Value(On Failed) : ~ SPGRES{SPLDTA:FAIL}^
Example	~SPLDTA^ -- if printer has template file(s), all of them are deleted.

3.9 Delete Data File

SPLDDF : This command deletes selected data file from printer. This command uses data file name as a parameter.

Printer sends OK message when deleting data file operation is succeeded or sends FAIL message when deleting data file operation is failed.

Using	~SPLDDF{Data File Name}^ Parameters; Data File Name : Specifies data file name which will be deleted. Return Value(On Succeeded) : ~ SPGRES{SPLDDF:OK}^ Return Value(On Failed) : ~ SPGRES{SPLDDF:FAIL}^
Example	~SPLDDF{datafile1.csv}^ -- datafile1.csv file is deleted from printer.

3.10 Delete All Data Files

SPLDDA : This command deletes all stored data file from printer. User must be careful before use this command. Because printer deletes all data file after get this command. This command doesn't have parameter.

Printer sends OK message when deleting all data files operation is succeeded or sends FAIL message when deleting all data files operation is failed.

Using	~SPLDDA^ Return Value(On Succeeded) : ~ SPGRES{SPLDDA:OK}^ Return Value(On Failed) : ~ SPGRES{SPLDDA:FAIL}^
-------	--

3.11 Clear Data Buffer

SPLCDB : This command clears buffer which stored database datas as temporarily.

When load template which have CSV database field, CSV datas and index of data(for start print) are loaded to data buffer. When delete CSV file, buffer should be cleared.

This command doesn't have parameter.

Printer sends OK message when send this command to printer.

Using	~SPLCDB^ Return Value: ~ SPGRES{SPLCDB:OK}^
-------	--

3.12 Load Font File

SPLLFF: Allows to load font file(.ttf file) into printer . Needs two parameters.

Printer sends OK message when loading font file operation is succeeded or sends FAIL message when loading font file operation is failed.

Using	~SPLLFF{Font File Name>File Content}^ Parameters; Font File Name : Specifies font file name which will be sent to printer. File Content : This parameters data must be read in binary format (as a byte array) after that converted to base64 format. Return Value(On Succeeded) : ~ SPGRES{SPLLFF:OK}^ Return Value(On Failed) : ~ SPGRES{SPLLFF:FAIL}^
Example	~SPLLFF{CENTURY.TTF>AAEAAAATAQAABAAwRFNJR/iDHXwAAmsAAAAgEx UU0i7RI/wAAAMiAAAAqJPUy8ydN5tGgAAAbgAAABWVkrNWAgrm1vUAAA8s AAAXbmNtYXDa6Gk6AABlpAAABlJjdnQgrT+zvwAArAAAAUcZnBnbe485joAA Gv4AAAEgWdhc3AAGQAJAAJq8AAAAABbnHlmSH/pt ***** Multiple Lines deleted *****

	pABD8btUIIP05gL/LxanIb8AEOpWhuC4MnD4alsNWb04K1ZrSwmOK9TC6Z2+1+Wm82BPll5EipYMq/BTYIoL44U/tlak8PNztIEpeK/+IRNJLhuG2Lh3Me4RdPKOd8ZR7VujwwWfif/tKMvTkN3qa5jAsBMKtg3ZLOkBGqGWBVc9tBMyCSjtG3HVE5dXRHPcfIDwP3hPp1xuGzjFIE+m6wmtOzvs/0v67QzxE14IGXtbAGFtAoz9dWQFFReySQLbfl+oz+QoEaB0rASm17wwncAA=}^
--	---

3.13 Get Font Files

SPLGFF: Returns all loaded font file names from printer. This command doesn't have parameter.

Using	~SPLGFF^
Example	~SPLGFF^ Return Value(On Successed) : ~ SPGRES{SPLGFF:arial.ttf<tahoma.ttf<verdana.ttf}^ -- Printer sends all font file names from printer in SPGRES command parameter.

3.14 Delete Font File

SPLDFF : This command deletes selected font file from printer. This command uses font file name as a parameter.

Printer sends OK message when deleting font file operation is succeeded or sends FAIL message when deleting font file operation is failed.

Using	~SPLDFF{Font File Name}^ Parameters; Font File Name : Specifies font file name which will be deleted.If printer doesn't have specified font file, command returns FAIL message. Note: Printer must be restart after delete any fonts. Return Value(On Successed) : ~ SPGRES{ SPLDFF:OK}^ Return Value(On Failed) : ~ SPGRES{ SPLDFF:FAIL}^
Example	~SPLDFF{arial.ttf}^ -- arial.ttf file is deleted from printer.

3.15 Get Field Names

SPLGFN : This command returns field names of selected template file which is stored in printer. This command uses template file name as a parameter.

Printer sends field names with template name when get this command. .If printer doesn't have specified template file, command returns FAIL message.

Using	~SPLGFN{Template File Name}^ Parameters; Template File Name : Specifies template file name which is stored in printer. Return Value(On Successed) : ~ SPGRES{SPLGFN:template name<field name 1<field name 2<...}^ Return Value(On Failed) : ~ SPGRES{SPLGFN:FAIL}^
Example	~SPLGFN{temp1_53.rox}^ -- Returns fields name of temp1_53.rox template. ~ SPGRES{SPLGFN: temp1_53.rox <Prod. Name<Prod. Dat<Exp.Date}^

3.16 Get Field Value

SPLGFV : This command returns value of specified field in active template. This command uses field name as a parameter.

Printer sends value of field with field name when get this command. .If printer doesn't have specified field, command returns "<Field Name> not found" message.

Using	~SPLGFV{Field Name}^ Parameters; Field Name : Specifies field name which is in active template. Return Value(On Successed) : ~ SPGRES{SPLGFV:Field name<Field value}^ Return Value(On Failed) :
-------	---

	~ SPGRES{SPLGFV:<Field Name> not found}^
Example	~SPLGFV{BatchNo}^ -- Returns value of BatchNo field. ~ SPGRES{SPLGFV: BatchNo<AB00251 }^

3.17 Append Queue Datas

SPLAQD: Allows to add dynamic data to specified queue. Printer creates queue automatically for each CSV field in template. Printer loading first datas to queue from related CSV file. (If Csv file datas will not use, queue content must be cleared with SPLCQD firstly and then use SPLAQD for new datas) Needs two parameters. Printer sends OK message when insert data to queue successfully or sends FAIL message when not insert.

Note1: Queue system must be enabled in Authorization settings to get data from queue

Note2: Queue works based on FIFO (First In First Out). In each print, the data is removed from the queue after it is read. Then arrives item count to 0, unless load new data to queue. If queue is empty (no item) or queue items finish, printer will stop automatically.

Using	~SPLAQD{Field Name~gt~ Datas}^ Parameters; Field Name : Specifies field name in template which will be matched with queue. Each queue is created according to field name. If field name doesn't existing, printer sends "<Field Name> not found message". Datas : This parameter must be arranged according to csv file rules. Datas must be ordered per row. Return Value (On Successed) : ~ SPGRES{SPLAQD:OK}^ Return Value (On Failed) : ~ SPGRES{SPLAQD:FAIL}^
Example	3 rows is added into TextCSV field in below; ~SPLAQD{TextCSV~gt~abc1 bce1 cde1}^

3.18 Append Multi Queue Datas

SPLAMQ: Allows to add dynamic data to more than one queues. This command is almost similar with SPLAQD command but provides to work with more than one queue as an extra. Needs minimum two parameters. It can be 4,6,8..etc parameters.

Printer sends OK message when insert data to queues successfully or sends FAIL message when not insert.

Using	~SPLAMQ{Field Name1~gt~ Datas1~gt~ Field Name2~gt~ Datas2~gt~ ...}^ Parameters; Field Name : Specifies field name in template which will be matched with queue. Each queue is created according to field name. If field name doesn't existing, printer sends "<Field Name> not found message". Datas : This parameter must be arranged according to csv file rules. Datas must be ordered per row. Return Value(On Successed) : ~ SPGRES{SPLAMQ:OK}^ Return Value(On Failed) : ~ SPGRES{SPLAMQ:FAIL}^
Example	3 rows is added into PRDNAME and BATCH NO field in below; ~SPLAMQ{PRDNAME~gt~PR01 PR02 PR03~gt~BATCH NO~gt~A01B A02B A03B}^

3.19 Get Queue Capacity

SPLGQC: Returns item count in specified queue. Needs one parameter.

Printer sends item count of specified queue or sends FAIL message when field not created or any error while processing that command.

Note: Queue system must be enabled in Authorization settings to get data from queue

Using	~SPLGQC{Field Name}^ Parameters; Field Name : Specifies field name in template which will be matched with queue. If field name doesn't existing, printer sends "<Field Name> not found message".
-------	--

	Return Value(On Successed) : ~ SPGRES{SPLGQC:Item Count}^ Return Value(On Failed) : ~ SPGRES{SPLGQC:FAIL}^ Return Value(when TextCSV named field not existing) : ~ SPGRES{SPLGQC:< TextCSV > not found}^
Example	~SPLGQC{TextCSV}^ Printer Sends: (When queue have 60 items) ~ SPGRES{SPLGQC:60}^

3.20 Get Multi Queue Capacity

SPLGMQ: Returns item count in specified queues. Needs minimum one parameter. It can be 2,3,4...etc parameters.

Printer sends item count of specified queues or sends FAIL message when field not created or any error while processing that command. This command is almost similar with SPLGQC command but provides to return more than one queue capacity as an extra.

Using	~SPLGMQ{Field Name1~gt~Field Name2~gt~Field Name3~gt~...}^ Parameters; Field Name : Specifies field name in template which will be matched with queue. If field name doesn't existing, printer sends "<Field Name> not found message". Return Value(On Successed) : ~ SPGRES{SPLGQC:Field Name1=Item Count< Field Name2=Item Count}^ Return Value(On Failed) : ~ SPGRES{SPLGQC:FAIL}^ Return Value(when PRDNAME named field not existing) : ~ SPGRES{SPLGQC:< PRDNAME > not found}^
Example	~SPLGQC{PRDNAME~gt~BATCH NO}^ Printer Sends: (When specified queues have 60 items) ~ SPGRES{SPLGQC:PRDNAME=60<BATCH NO=60}^

3.21 Clear Queue Datas

SPLCQD: Allows to delete all items in specified queue. Needs one parameter.

Printer sends OK message when deleted all items in queue or sends FAIL message when field not created or any error while processing that command.

Note: Queue system must be enabled in Authorization settings to get data from queue

Using	~SPLCQD{Field Name}^ Parameters; Field Name : Specifies field name in template which will be matched with queue. If field name doesn't existing, printer sends "<Field Name> not found message". Return Value(On Succeeded) : ~ SPGRES{SPLCQD:OK}^ Return Value(On Failed) : ~ SPGRES{SPLCQD:FAIL}^ Return Value(when TextCSV named field not existing) : ~ SPGRES{SPLCQD:< TextCSV > not found}^
Example	~SPLCQD{TextCSV}^

3.22 Clear Multi Queue Datas

SPLCMQ: Allows to delete all items in specified queues. Needs minimum one parameter. It can be 2,3,4...etc parameters.

Printer sends OK message when deleted all items in queue or sends FAIL message when field not created or any error while processing that command. This command is almost similar with SPLCQD command but provides to return more than one queue capacity as an extra.

Using	~SPLCMQ{Field Name1~gt~Field Name2~gt~Field Name3~gt~...}^ Parameters; Field Name : Specifies field name in template which will be matched with queue. If field name doesn't existing, printer sends "<Field Name> not found message". Return Value(On Succeeded) : ~ SPGRES{SPLCMQ:OK}^ Return Value(On Failed) : ~ SPGRES{SPLCMQ:FAIL}^ Return Value(when PRDNAME named field not existing) : ~ SPGRES{SPLCMQ:< PRDNAME > not found}^
-------	--

Example	~SPLCMQ{PRDNAME~gt~BATCH NO}^

4. Modification Commands

Modification commands allows to chnage Text, Barcode and 2D barcode in a template. This commands are generally used to change one or more objects value at the same time in template over Ethernet communication. This commands can use one by one or with together.

Source option of changable object(Text, Barcode and 2D barcode) must be **External** for modification.

For external objects, data value must be carefully checked.

In template rotation 0 or 180 degrees, topmost or bottommost external object's height and width carefully controlled. If control's width/height exceeds template width/height, some clipping may occur.

In template rotation 90 or 270 degrees, leftmost or rightmost external object's height and width carefully controlled. If control's width/height exceeds template width/height, some clipping may occur.

Note : In order to these commands operating as intended and working properly, commands must be sendd either machine is stop position or alternatively machine is print position and package is stop position.

4.1 Changing Text Value Commands

SPMCTV: This command changes selected Text object value in template. Related text object must be in template. Otherwise commands doesn't change any text. Printer sends OK message when changing text value operation is succeeded or sends FAIL message when changing tex valueoperation is failed. If field name doesn't existing, printer sends "<Field Name> not found message".

Using	~SPMCTV{Name of object~gt~Text Value}^ Parameters; Name of object: Please enter name of text object which is defined in PC software. Text Value :New value of selected text. Return Value(On Succeeded) : ~ SPGRES{SPMCTV:OK}^ Return Value(On Failed) : ~ SPGRES{SPMCTV:FAIL}^ Return Value(when TField1 named field not existing) : ~ SPGRES{SPMCTV:<TField1> not found}^
Example	~SPMCTV{brand_txt~gt~SAVEMA}^ -- Set brand_txt value to "SAVEMA" ~SPMCTV{type_txt~gt~PRINTER}^ -- Set type_txt value to "PRINTER"

4.2 Changing Barcode Value Commands

SPMCBV : This command changes selected Barcode(1D) object value in template. Related barcode object must be in template. Otherwise commands doesn't change any barcode.

Printer sends OK message when changing barcode value operation is succeeded or sends FAIL message when changing barcode value operation is failed. If field name doesn't existing, printer sends "<Field Name> not found message".

Using	~SPMCBV{Name of object~gt~Barcode Value}^ Parameters; Name of object: Please enter name of barcode object which is defined in PC software. Barcode Value : New value of selected barcode. Barcode value must be compatible with barcode type. Foreexample EAN-13 barcode type accept only numerical characters and this value must be compatible with EAN-13 rules. Barcode value characters count must be compatible with barcode type. Foreexample, EAN-13 barcode accepts 12 or 13 numerical characters. Return Value(On Succeeded) : ~ SPGRES{SPMCBV:OK}^ Return Value(On Failed) : ~ SPGRES{SPMCBV:FAIL}^ Return Value(when BarF1 named field not existing) : ~ SPGRES{SPMCBV:< BarF1> not found}^
Example	~SPMCBV{bar1~gt~8691234567890}^ -- Set bar1 value to 8691234567890

4.3 Changing 2D Barcode Value Commands

SPMC2D : This command changes selected 2D Barcode object value in template. Related 2D barcode object must be in template. Otherwise commands doesn't change any 2D barcode.

Printer sends OK message when changing 2D barcode value operation is succeeded or sends FAIL message when changing 2D barcode value operation is failed. If field name doesn't existing, printer sends "<Field Name> not found message".

Using	~SPMC2D{Name of object~gt~Barcode Value}^
-------	--

	Parameters; Name of object: Please enter name of 2D barcode object which is defined in PC software. Barcode Value : New value of selected 2D barcode. Barcode value must be compatible with barcode type. Foreexample Datamatrix barcode accepts only standart ASCII characters but cannot accepts extra character without tandart ascii character. Foreexample Datamatrix barcode type doesn't accepts Ç,ü,ş,ö characters or arabic letters or chinese letters. Standart ASCII characters; ! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 ; : < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y z { } ~ Return Value(On Succesed) : ~ SPGRES{SPMC2D:OK}^ Return Value(On Failed) : ~ SPGRES{SPMC2D:FAIL}^ Return Value(when ProductQRCode named field not existing) : ~ SPGRES{SPMC2D:< ProductQRCode> not found}^
Example	~SPMC2D{b2bar1~gt~savema12345}^ -- Set b2bar1 value to savema12345

4.4 Changing Counter Value Commands

SPMCCV : This command changes selected Counter object value in template.

Related counter object must be in template. Otherwise commands doesn't change any counter.

Printer sends OK message when changing counter value operation is succeded or sends FAIL message when changing counter value operation is failed. If field name doesn't existing, printer sends "<Field Name> not found message".

Using	~SPMCCV{Name of object~gt~Counter Value}^ Parameters; Name of object: Please entere name of counter object which is defined in PC software. Counter Value : New value of selected counter. Counter value must be numeric. Return Value(On Succesed) : ~ SPGRES{SPMCCV:OK}^
-------	--

	Return Value(On Failed) : ~SPGRES{SPMCCV:FAIL}^ Return Value(when batchcounter named field not existing) : ~SPGRES{SPMCCV:< batchcounter > not found}^
Example	~SPMCCV{counter1~gt~000055}^ -- Set counter1 value to 000055

4.5 Changing Logo Command

SPMCLV : This command changes selected Logo object image in template.

Related logo object must be in template. Otherwise commands doesn't change any counter.

Printer sends OK message when changing counter value operation is succeeded or sends FAIL message when changing counter value operation is failed. If field name doesn't existing, printer sends "<Field Name> not found message".

Using	~SPMCLV{Name of object~gt~Base64 Data}^ Parameters; Name of object: Please enter name of logo object which is defined in PC software. Base64 Data : This is base64 string of logo image. Sended logo must be converted to base64 string and then use as parameter in this command. This parameter character count increases according to image size. Return Value(On Succeeded) : ~SPGRES{SPMCLV:OK}^ Return Value(On Failed) : ~SPGRES{SPMCLV:FAIL}^ Return Value(when productlogo named field not existing) : ~SPGRES{SPMCLV:< productlogo > not found}^
Example	~SPMCCV{productlogo ~gt~/9j/4....Q== }^ -- shows remaining base64 data

4.6 Changing Selected Values Command

SPMCSV: This command changes selected Text, barcode and 2d barcode object's value in template. Related object must be in template. Otherwise commands doesn't change any object. You can modificate one or more objects value.

Printer sends OK message when changing text value operation is succeeded or sends FAIL message when changing text value operation is failed. If field name doesn't existing, printer sends "<Field Name> not found message". If parameter

of that command have more than one unused field name, printer sends first unused field name in parameter.

Using	~SPMCSV{Name of object~gt~Value~gt~Name of object~gt~Value}^ Parameters; Name of object: Please enter name of text object which is defined in PC software. Text Value : New value of selected text. Return Value(On Succeeded) : ~ SPGRES{SPMCSV:OK}^ Return Value(On Failed) : ~ SPGRES{SPMCSV:FAIL}^ Return Value(when fieldProName named field not existing) : ~ SPGRES{SPMCSV:< fieldProName > not found}^
Example	~SPMCTV{brand_txt~gt~SAVEMA~gt~barcodeno~gt~123456789125}^ -- Set brand_txt value to "SAVEMA" and barcode value as 123456789125

5. Print Commands

5.1 Start Print

SPPSAP : This command starts printing automatically. Printer must be ready before send this command. Otherwise printer cannot start automatic printing. This command doesn't have parameter.

Printer sends OK message when starting print operation is succeeded or sends FAIL message when starting printoperation is failed.

Using	~SPPSAP^ Return Value(On Succeeded) : ~ SPGRES{SPPSAP:OK}^ Return Value(On Failed) : ~ SPGRES{SPPSAP:FAIL}^
Example	~SPPSAP^ -- if printer isready, printer starts printing automatically.

5.2 Set/Get Print Count for Limited print

SPPSLQ : This commad specifies print quantity for limited prints. SPPSAP command must be send end of this command for start printing. Otherwise printer doesn't start to print. Printer will stop after print quantity arrive to 0. This value is automatically decreasing one by one. This command have one parameter.

Printer sends OK message when setting print quantity operation is succeeded or sends FAIL message when setting print quantityoperation is failed.

Using	~SPPSLQ{Limited Print Quantity}^ Parameters; Limited Print Quantity: Provides controlled printing. Printer works until print quantity is 0. Return Value(On Succeeded) : ~ SPGRES{SPPSLQ:OK}^ Return Value(On Failed) : ~ SPGRES{SPPSLQ:FAIL}^
Example	~SPPSLQ{1000}^ -- Limited Print Quantity is specified as 1000. Printer doesn't start printing. ~SPPSLQ{1000} SPPSAP^-- Printer prints 1000 prints and stop.

SPPGLQ : This command returns actual print quantity value. This command doesn't have parameter.

Using	~SPCGLQ^
Example	~SPCGLQ^ Return Value(On Succeeded) : ~ SPGRES{SPCGLQ:500}^ -- Print quantity is 500.

5.3 Stop Print

SPPSTP : This command stops printing . Printer must be working before send this command. Otherwise printer cannot stop printing. This command doesn't have parameter.

Printer sends OK message when stop print operation is succeeded or sends FAIL message when stop print operation is failed.

Using	~SPPSTP^ Return Value(On Succeeded) : ~ SPGRES{SPPSTP:OK}^ Return Value(On Failed) : ~ SPGRES{SPPSTP:FAIL}^
Example	~SPPSTP^ -- if printer is working , this command stops printing.

5.4 One Test Print

SPPOTP : Provides to print one time . This command doesn't have parameter.

Printer sends OK message when print is succeeded or sends FAIL message when print is failed.

Using	~SPPOTP^ Return Value(On Succeeded) : ~ SPGRES{SPPOTP:OK}^ Return Value(On Failed) : ~ SPGRES{SPPOTP:FAIL}^
Example	~SPPOTP^ -- Printer prints one time.

5.5 Status of Printer

SPPSTA : This command returns status of printer. There is 4 different response. These are INIT, WAITING, RUNNING and ERROR.

- 1- INIT** : Printer sends when controller software is loading in startup.(Before loaded template automatically). When template loaded automatically, WAITING message is sent by printer.
- 2- WAITING** : Printer sends when printer in **stop** mode.(Stop button pressed)
- 3- RUNNING** : Printer sends when printer in **printing** mode.(Print button pressed)
- 4- ERROR**: Printer sends when any error happens in printer. Printer sends error type in response message.

This command doesn't have parameter.

Note: Printer sends FAIL message for all commands(except SPPSTA) when operator doesn't in main window. SPPSTA command sends BLOCKED message with printer status.

Using	~SPPSTA^ Return Value(in startup- before loaded template) : ~ SPGRES{SPPSTA:INIT<}^ Return Value(in stop mode) : ~ SPGRES{SPPSTA:WAITING<}^ Return Value(in running mode) : ~ SPGRES{SPPSTA:RUNNING<}^ Return Value(when error happens) : ~ SPGRES{SPPSTA:ERROR<Error Content}^ When operator doesn't in main window; Return Value(in startup- before loaded template) : ~ SPGRES{SPPSTA:INIT<BLOCKED}^ Return Value(in stop mode) : ~ SPGRES{SPPSTA:WAITING<BLOCKED}^ Return Value(in running mode) : ~ SPGRES{SPPSTA:RUNNING<BLOCKED}^ Return Value(when error happens) : ~ SPGRES{SPPSTA:ERROR<BLOCKED Error Content}^
Example	~SPPSTA^ Return in error mode; ~ SPGRES{SPPSTA:ERROR< Ribbon not found.Please insert ribbon}^ When operator doesn't in main window; ~ SPGRES{SPPSTA:ERROR<BLOCKED Ribbon not found.Please insert ribbon}^

6. General Commands

6.1 Send User Message to Printer

SPGSUM : This command provides to show coming message to the printer display. Message can be received from PC, PLC or another device which sends this command. This command has one parameter.

Using	~SPGSUM{User Message}^ Parameters; User Message :Sent from connected device with printer and showed on printer display. This command is used for warning purposes. So, it doesn't affect printer.
Example	~SPGSUM{Package finished. Please stop printer}^ -- Printer has received " <i>Package finished. Please stop printer</i> " message from pack machine.

6.2 General Response From Printer

SPGRES :Returns all response from printer when request command is processed. So, this command cannot be used directly, only printer gives sends this command to connected device. This command have one parameter and this parameter content changes according to request command.

Using	~SPGRES{Response}^ Parameters; Response : This parameters content changes according to request command.
Example	~SPGRES{SPGDTP:950225}^ -- Returns total print count ~SPGRES{SPCGPA:25<27<300<200<31<77<0<24<25<0<1265<0<5<0<23<0<4<0<0<400}^ --Retuns all sistem parameter..

6.3 Get Total Print Count

SPGGTP : Returns total print count of printer. This command doesn't have parameter.

Using	~SPGGTP^
Example	~SPGGTP^ Return Value(On Succeeded) : ~ SPGRES{SPGGTP:458200}^ -- Printer printed 458200 prints since it started working first.

6.4 Get Current Print Count

SPGGCP : Returns current print count of printer. This counter resets when load any template. This count is shown in main window. This command doesn't have parameter.

Using	~SPGGCP^
Example	~SPGGCP^ Return Value(On Succeeded) : ~ SPGRES{SPGGCP:1250}^ -- Printer printed 1250 prints since load template.

6.5 Get Firmware Version

SPGGFV : Returns firmware version of printer. This command doesn't have parameter.

Using	~SPGGFV^ Note:
Example	~SPGGFV^ Return Value(On Succeeded) : ~ SPGRES{SPGGFV:6.3.001.600.R}^ -- Printer firmware version is 6.3.001.600.R

6.6 Get Remaining Ribbon(for printers models with Cassette)

SPGGRR : Returns remaining ribbon percentage. This command is used with printer models with cassette. This command doesn't have parameter.

Using	~SPGGRR^ Note:
Example	~SPGGRR^ Return Value(On Succeeded) : ~ SPGRES{SPGGRR:80}^ -- Remaining ribbon amount is 80%.

6.7 Get Serial Number of Printer

SPGGSN : Returns serial number of printer. This command doesn't have parameter.

Using	~SPGGSN^
Example	~SPGGSN^ Return Value(On Succeeded) : ~ SPGRES{SPGGSN:17013012}^ -- Printer serial number is 17013012.

6.8 Set Lock Interface

SPGSLI : Allows to lock/unlock print, stop and edit buttons in printer interface. In this way, operator access is restricted. This command has one parameter.

Using	~SPGSLI{Lock/Unlock}^ Parameters; Lock/Unlock: 0 or 1 values are used as parameter. 0: Unlock print, stop and edit buttons 1: Lock print, stop and edit buttons. Return Value(On Succeeded) : ~ SPGRES{SPGSLI:OK}^. Return Value(On Failed) : ~ SPGRES{SPGSLI:FAIL}^.
Example	~SPGSLI{1}^


6.9 Get Lock Interface

SPGGLI : Returns locking system is enabled or disabled. This command doesn't have parameter.

Using	~SPGGLI^ Return Value(Print, stop and Edit buttons Locked) : ~ SPGRES{SPGGLI:1}^ Return Value(Print, stop and Edit buttons Unlocked) : ~ SPGRES{SPGGLI:0}^
Example	~SPGGLI^

7.TraverseCommands

Traverse Commands are using only in traverse printers (TR53 and TR107). Traverse printers allow to print on multi-packages with one print signal. Traverse printer have some parameters and they are specified in below scheme.

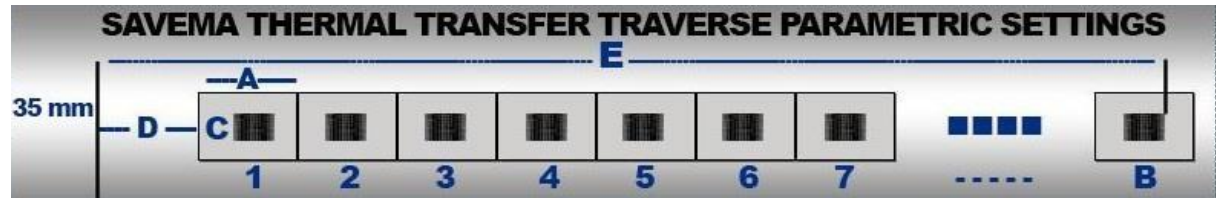

A- Pack Size(mm)

B- Print Count(mm)

C- Print Position in one package(mm)

D- Package Distance from beginning of package

E- Printing area

7.1 Set/Get Pack Size(A)

SPTSPS: Allows to set one package size in multi-package. This value is measured with millimeter.

Using	~SPTSPS{Pack size}^ Parameters; Pack size: Specifies one partial package size in millimeter. Value must be between 1-3000. Return Value(On Successed) : ~ SPGRES{ SPTSPS:OK}^ Return Value(On Failed) : ~ SPGRES{ SPTSPS:FAIL}^
Example	~SPTSPS{60}^

SPTGPS : Returns one package width in multi-package.

Using	~SPTGPS^
Example	~SPTGPS^ Return Value(On Successed) : ~ SPGRES{ SPTGPS:60}^

7.2 Set/Get Print Count(B)

SPTSPC: Allows to set print count in one print signal. Print count must be specified according to package count in multi-package.

Using	~SPTSPC{Print Count}^ Parameters; Print Count: Specifies print count in one print signal Value must be between 1-3000. Return Value(On Succeeded) : ~ SPGRES{ SPTSPC:OK}^ Return Value(On Failed) : ~ SPGRES{ SPTSPC:FAIL}^
Example	~SPTSPC{5}^

SPTGPC : Returns print count.

Using	~SPTGPC^
Example	~SPTGPC^ Return Value(On Succeeded) : ~ SPGRES{ SPTGPC:5}^

7.3 Set/Get Print Position(C)

SPTSPP: Allows to set print position of template from beginning of one package .This value is measured with millimeter.

Using	~SPTSPP{Print Position}^ Parameters; Print Position: Specifies print position of template. Value must be between 1-3000. Return Value(On Succeeded) : ~ SPGRES{ SPTSPP:OK}^ Return Value(On Failed) : ~ SPGRES{ SPTSPP:FAIL}^
Example	~SPTSPP{10}^

SPTGPP: Returns print position of template in one package.

Using	~SPTGPP^
Example	~SPTGPP^ Return Value(On Succeeded) : ~ SPGRES{ SPTGPP:10}^

7.4 Set/Get Package Distance(D)

SPTSPD: Allows to set package distance from beginnig of printer printing area. This value is mesaured with millimeter.

Using	~SPTSPD{Pack Distance}^ Parameters; Pack Distance: Specifies package distance from beginning of printing area. Value must be between 0-3000. Return Value(On Succeeded) : ~ SPGRES{ SPTSPD:OK}^ Return Value(On Failed) : ~ SPGRES{ SPTSPD:FAIL}^
Example	~SPTSPD{50}^

SPTGPD: Returns package distance from beginning of printing area.

Using	~SPTGPD^
Example	~SPTGPD^ Return Value(On Succeeded) : ~ SPGRES{ SPTGPD:50}^

7.5 Set/Get Printing Area(E)

SPTSPA: Allows to set total printing area of traverse printer. This value must be specified according to traverse printer characteristics(max. printing area). This value is measured with millimeter.

Using	~SPTSPA{Printing Area}^ Parameters; Printing Area: Specifies printing area of traverse printer. Value must be between 0-3000. Return Value(On Successed) : ~ SPGRES{ SPTSPA:OK}^ Return Value(On Failed) : ~ SPGRES{ SPTSPA:FAIL}^
Example	~SPTSPA{400}^

SPTGPA: Returns printing area of traverse printer.

Using	~SPTGPA^
Example	~SPTGPA^ Return Value(On Successed) : ~ SPGRES{ SPTGPA:400}^

7.6 Set/Get All Traverse Parameters

SPTSTP: Allows to set all traverse parameters for traverse printer.

Using	~SPTSTP{Pack Size>Print Count>Print Position>Pack Distance>Printing Area}^ Parameters; Pack size: Specifies one partial package size in millimeter. Value must be between 1-3000. Print Count: Specifies print count in one print signal. Value must be between 1-3000. Print Position: Specifies print position of template. Value must be between 1-3000. Pack Distance: Specifies package distance from beginning of printing
-------	---

	area. Value must be between 0-3000. Printing Area: Specifies printing area of traverse printer. Value must be between 0-3000. Return Value(On Succeeded) : ~ SPGRES{SPTSTP:OK}^ Return Value(On Failed) : ~ SPGRES{SPTSTP:FAIL}^
Example	~SPTSTP{60>5>10>50>400}^

SPTGTP: Returns all traverse parameters.

Using	~ SPTGTP ^
Example	~SPTGTP^ Return Value(On Succeeded) : ~ SPGRES{ SPTGTP:60<5<10<50<400}^

8.System Parameters Explanation

Parameter No	32x40/50 I & 53x40/50 I	Min.- Max. Value
P1	Motor ramp starting value (0-150)	0-150
P2	TPH down time (0-150)	0-150
P3	Ribbon and termal mechanic rewind speed (100-500)	100-500
P4	Ribbon space (0-1000) [Ribbon space decrease < 200] [Ribbon space increase > 200]	0-1000
P5	Before the suspension point of the diameter of the surface of the ribbon hanging (10-60) [This value is constant for our ribbon winding system on printer] [Effect : Writing speed calculate system] [Factory Setting]	10-60
P6	After the suspension point of the diameter of the surface of the ribbon hanging (0-100) [This value is constant for our ribbon winding system on printer] [Effect : Writing speed calculate system] [Factory Setting]	0-100
P7	Vertical printing wait. when machine set up vetical, horizontal motor moment of inertia waiting (0-3000)	0-3000
P8	Pre-Heating system control temperature as celsius (24-40) [This value determine minimum TPH temperature]	24-40
P9	Before the suspension point of the diameter of the surface of the pulley (10-60) [Effect : Writing speed calculate system] [Factory Setting]	10-60
P10	After the suspension point of the diameter of the surface of the pulley (0-100) [Effect : Writing speed calculate system] [Factory Setting]	0-100
P11	TPH resistance value. (600-2000)	600-2000

P12	Change with 20. Parametric . Difficult material print. (0-2) [0: Easy mod. Max. Speed must be up to 500 (20. Parametric and on setting menu-> print speed] [1: Pre-difficult mod. Max. print Speed must be up to 300 (20. Parametric and on setting menu-> print speed] [2: Difficult mod. Max.print Speed must be up to 200 (20. Parametric and on setting menu-> print speed]	0-2
P13	Contact signal waiting value. (0-1000)	0-1000
P14	Ribbon break active or inactive (0-1) [0: Ribbon break passive] [1: Ribbon break active]	0-1
P15	Print head printing stop position. (0-400) [If the last out of the template does not transfered, value is increased.]	0-400
P16	Pre-heating system active or inactive selection (0-1) [0: Pre-heating system active] [1: Pre-heating system inactive]	0-1
P17	Ribbon break limitation (0-1000)	0-1000
P18	Printer fuse error warning active or inactive setting (0-3) [0: Main board fuse warning ACTIVE, Motor driver fuse warning ACTIVE] [1: Main board fuse warning INACTIVE, Motor driver fuse warning ACTIVE] [2: Main board fuse warning ACTIVE, Motor driver fuse warning INACTIVE] [3: Main board fuse warning INACTIVE, Motor driver fuse warning INACTIVE]	0-3
P19	Fault output mode (0-1) [0: Machine gives alarms ERROR times and inactive times] [1: Machine gives alarm ERROR times]	0-1
P20	Max Print speed (150-500)	150-500

Table-2) 32x40/50I and 53x40/50 I Parameters Explanation

Parameter No	32x70 I & 53x70/125 I &107x75/125 I	Min.- Max. Value
P1	Motor ramp starting value (0-150)	0-150
P2	TPH down time (0-150)	0-150
P3	Ribbon and termal mechanic rewind speed (100-500)	100-500
P4	Ribbon space (0-1000) [Ribbon space decrease < 200] [Ribbon space increase > 200]	0-1000
P5	Before the suspension point of the diameter of the surface of the ribbon hanging (10-60) [This value is constant for our ribbon winding system on printer] [Effect : Writing speed calculate system] [Factory Setting]	10-60
P6	After the suspension point of the diameter of the surface of the ribbon hanging (0-100) [This value is constant for our ribbon winding system on printer] [Effect : Writing speed calculate system] [Factory Setting]	0-100
P7	Vertical printing wait. when machine set up vertical, horizontal motor moment of inertia waiting (0-3000)	0-3000
P8	Pre-Heating system control temperature as celsius (24-40) [This value determine minimum TPH temperature]	24-40
P9	Before the suspension point of the diameter of the surface of the pulley (10-60) [Effect : Writing speed calculate system] [Factory Setting]	10-60
P10	After the suspension point of the diameter of the surface of the pulley (0-100) [Effect : Writing speed calculate system] [Factory Setting]	0-100
P11	TPH resistance value. (600-2000)	600-2000
P12	Change with 20. Parametric . Difficult material print. (0-2) [0: Easy mod. Max. Speed must be up to 500 (20. Parametic and on setting menu-> print speed)] [1: Pre-difficult mod. Max. print Speed must be up to 300 (20. Parametic and on setting menu-> print speed)] [2: Difficult mod. Max.print Speed must be up to 200 (20. Parametic and on setting menu-> print speed)]	0-2
P13	Contact signal waiting value. (0-1000)	0-1000

P14	Ribbon break and Ribbon not found active or passive (0-3) [0: Ribbon break active,Ribbon not found active] [1: Ribbon break passive,Ribbon not found active] [2: Ribbon break passive,Ribbon not found passive] [3: Ribbon break and Ribbon not found are in switch mode]	0-3
P15	Print head printing stop position. (0-400) [If the last out of the template does not transfered, value is increased.]	0-400
P16	Pre-heating system active or inactive selection (0-1) [0: pre-heating system active] [1:pre-heating system inactive]	0-1
P17	Ribbon break limitation (0-1000)	0-1000
P18	Printer fuse error warning active or inactive setting (0-3) [0: Main board fuse warning ACTIVE, Motor driver fuse warning ACTIVE] [1: Main board fuse warning INACTIVE, Motor driver fuse warning ACTIVE] [2: Main board fuse warning ACTIVE, Motor driver fuse warning INACTIVE] [3: Main board fuse warning INACTIVE, Motor driver fuse warning INACTIVE]	0-3
P19	Fault output mode (0-1) [0: Machine gives alarms ERROR times and inactive times] [1: Machine gives alarm ERROR times]	0-1
P20	Max Print speed (150-500)	150-500

Table-3) 32x70I and 53x70/125I and 107x75/125 I Parameters Explanation

Parameter No	32C	Min.- Max. Value
P1	Measuring the diameter of the encoder as milimeter (10-70) [Effect : Substrate speed detection system] [Factory setting]	10-70
P2	Pulse number of the encoder (800-1500) [Factory setting]	80-1500
P3	Diameter of red roller (20-60) [This value is constant for our ribbon winding system on printer] [Effect : Writing speed calculate system] [Factory setting]	20-60
P4	Diameter of red roller decimal portion value (0-100) [This value is constant for our ribbon winding system on printer] [effect : writing speed calculate system] [Factory setting]	0-100
P5	Reserved (0) [Factory setting]	0
P6	TPH Hold(pressed) encoder pulse number (0-600)	0-600
P7	Motor ramp distance as milimeter (0-70) [Factory setting]	0-70
P8	TPH mechanism down time as milisecond (0-50) [Factory setting]	0-50
P9	Ribbon space decrease (0-1000) [This value decrease the gap of two printout on ribbon.] [Effect: Each 10 motor pulse effect 1mm]	0-1000
P10	Ribbon space increase (0-1000) [This value increase the gap of two printout on ribbon.] [effect:each 10 motor pulse effect 1mm]	0-1000
P11	TPH resistance value (600-2000)	600-2000
P12	Ribbon Settings [0 : Wax-resin + Easy package, Speed to 600] [1 : Wax-resin + Difficult package or Resin + Easy Package, Speed to 550] [2 : Wax-resin + Very difficult package or Resin + Difficult package, Speed to 400]	0-2

P13	Continous prints modes (0-5) [0 : Working speed 30-300 mm/sc, min. pack size=50mm+ Template Size] [1 : Working speed 30-350 mm/sc, min. pack size=50mm+ Template Size] [2: Working speed 30-400 mm/sc, min. pack size=55mm+ Template Size] [3: Working speed 30-450 mm/sc, min. pack size=60mm+ Template Size] [4: Working speed 30-550 mm/sc, min. pack size=65mm+ Template Size] [5: Working speed 30-600 mm/sc, min. pack size=70mm+ Template Size]	0-5
P14	Conservation value of the minimum speed as mm/sc. (0-1000) [This value is cancel limit when band speed less than this value, while printer printing]	0-1000
P15	Pre-Heating system control temperature as celsius (24-40) [This value determine minimum TPH temperature]	24-40
P16	Pre-heating system active or inactive selection (0-1) [0: Pre-heating system active] [1: Pre-heating system inactive]	0-1
P17	Reserved (0) [Factory setting]	0
P18	Printer fuse error warning active or inactive setting (0-3) [0: Main board fuse warning ACTIVE, Motor driver fuse warning ACTIVE] [1: Main board fuse warning INACTIVE, Motor driver fuse warning ACTIVE] [2: Main board fuse warning ACTIVE, Motor driver fuse warning INACTIVE] [3: Main board fuse warning INACTIVE, Motor driver fuse warning INACTIVE]	0-3
P19	Fault output mode (0-1) [0: Machine gives alarms ERROR times and inactive times] [1: Machine gives alarm ERROR times]	0-1
P20	Determine the direction of ENCODER (0-1) [0: anti-clock wise rotation] [1: clock wise rotation]	0-1

Table-4) 32C Parameters Explanation

Parameter No	32 CC & 53 C & 107 C	Min.- Max. Value
P1	Measuring the diameter of the encoder as milimeter (10-70) [Effect : Substrate speed detection system] [Factory setting]	10-70
P2	Pulse number of the encoder (80-1500) [Factory setting]	80-1500
P3	Diameter of red roller (20-60) [This value is constant for our ribbon winding system on printer] [Effect : Writing speed calculate system] [Factory setting]	20-60
P4	Diameter of red roller decimal portion value (0-100) [This value is constant for our ribbon winding system on printer] [Effect : Writing speed calculate system] [Factory setting]	0-100
P5	Reserved (0) [Factory setting]	0
P6	TPH Hold(pressed) encoder pulse number (0-600)	0-600
P7	Ribbon break and Ribbon not found active or passive (0-3) [0: Ribbon break active,Ribbon not found active] [1: Ribbon break passive,Ribbon not found active] [2: Ribbon break passive,Ribbon not found passive] [3: Ribbon break and Ribbon not found are in switch mode]	0-3
P8	TPH mechanism down time as milisecond (0-50) [Factory setting]	0-50
P9	Ribbon space decrease (0-1000) [This value decrease the gap of two printout on ribbon.] [Effect: Each 10 motor pulse effect 1mm]	0-1000
P10	Ribbon space increase (0-1000) [This value increase the gap of two printout on ribbon.] [Effect: Each 10 motor pulse effect 1mm]	0-1000
P11	TPH resistance value. (600-2000)	600-2000
P12	Ribbon Settings [0 : Wax-resin + Easy package, Speed to 800(32CC,53C), 600(107C)] [1 : Wax-resin + Difficult package or Resin + Easy Package, Speed to 550] [2 : Wax-resin + Very difficult package or Resin + Difficult package, Speed to 400]	0-2

P13	Continuous prints modes (0-5) [0 : Working speed 30-400 mm/sc, min. pack size=50mm+ Template Size] [1 : Working speed 30-450 mm/sc, min. pack size=50mm+ Template Size] [2: Working speed 30-500 mm/sc, min. pack size=55mm+ Template Size] [3: Working speed 30-650 mm/sc, min. pack size=60mm+ Template Size] [4: Working speed 30-750 mm/sc, min. pack size=65mm+ Template Size] [5: Working speed 30-800 mm/sc, min. pack size=75mm+ Template Size]	0-5
P14	Conservation value of the minimum speed as mm/sc. (0-1000) [This value is cancel limit when band speed less than this value, while printer printing]	0-1000
P15	Pre-Heating system control temperature as celsius (24-40) [This value determine minimum TPH temperature]	24-40
P16	Pre-heating system active or inactive selection (0-1) [0: Pre-heating system active] [1: Pre-heating system inactive]	0-1
P17	Ribbon break limitation (0-1000)	0-1000
P18	Printer fuse error warning active or inactive setting (0-3) [0: Main board fuse warning ACTIVE, Motor driver fuse warning ACTIVE] [1: Main board fuse warning INACTIVE, Motor driver fuse warning ACTIVE] [2: Main board fuse warning ACTIVE, Motor driver fuse warning INACTIVE] [3: Main board fuse warning INACTIVE, Motor driver fuse warning INACTIVE]	0-3
P19	Fault output mode (0-1) [0: Machine gives alarms ERROR times and inactive times] [1: Machine gives alarm ERROR times]	0-1
P20	Determine the direction of ENCODER (0-1) [0: Anti-clock wise rotation] [1: Clock wise rotation]	0-1

Table-5) 32C with Cassette and 53C and 107C I Parameters Explanation

Parameter No	32TR & 53TR & 107TR	Min.- Max. Value
P1	Motor ramp starting value (0-30)	0-30
P2	TPH down time (0-30)	0-30
P3	Ribbon and thermal mechanic rewind speed (150-700)	150-700
P4	Ribbon space (50-1000) [Ribbon space decrease < 200] [Ribbon space increase > 200]	50-1000
P5	Before the suspension point of the diameter of the surface of the ribbon hanging (10-60) [This value is constant for our ribbon winding system on printer] [Factory Setting]	10-60
P6	After the suspension point of the diameter of the surface of the ribbon hanging (0-99) [This value is constant for our ribbon winding system on printer] [Factory Setting]	0-99
P7	Ribbon reduction mode value (0-600)	0-600
P8	Pre-Heating system control temperature as celsius (24-45) [This value determine minimum TPH temperature]	24-45
P9	TPH Pressed minimum value for less than 300 mm/sec.(0-50)	0-50
P10	TPH Pressed minimum value for more than 300 mm/sc. (0-50)	0-50
P11	Printing point constant(0-30)	0-30
P12	Change with 20. Parametric . Difficult material print. (0-2) [0: Easy mod. Max. Speed must be up to 500 (20. Parametic and on setting menu-> print speed] [1: Pre-difficult mod. Max. print Speed must be up to 500 (20. Parametic and on setting menu-> print speed] [2: Difficult mod. Max.print Speed must be up to 450 (20. Parametic and on setting menu-> print speed]	0-2
P13	[Factory Setting] (0-30)	0-30

P14	Ribbon break active or inactive (0-1) [0: Ribbon break passive] [1: Ribbon break active]	0-1
P15	Print head printing stop position. (0-400) [If the last out of the template does not transferred, value is increased.]	0-500
P16	Pre-heating system active or inactive selection (0-1) [0: Pre-heating system active] [1: Pre-heating system inactive]	0-1
P17	Print head pressed distance before printing (0-50)	0-50
P18	Printer fuse error warning active or inactive setting (0-3) [0: Main board fuse warning ACTIVE, Motor driver fuse warning ACTIVE] [1: Main board fuse warning INACTIVE, Motor driver fuse warning ACTIVE] [2: Main board fuse warning ACTIVE, Motor driver fuse warning INACTIVE] [3: Main board fuse warning INACTIVE, Motor driver fuse warning INACTIVE]	0-3
P19	Fault output mode (0-1) [0: Machine gives alarms ERROR times and inactive times] [1: Machine gives alarm ERROR times]	0-1
P20	Max Print speed (150-700)	150-700

Table-6) 32x40/50I and 53x40/50 I Parameters Explanation

9. Warnings

Savema printer have two types of communication. These are Ethernet(TCP/IP) and RS-232. RS-232 allow max. 115200 bps for communication but Ethernet is faster than RS-232. So, long commands with parameters, can transfer lately in RS-232.

Some commands are need time in printer side.(Load template, Chnage system paramaters ...etc). So, connected device must wait until finish processing of this command.

Modification commands allows to change selected object while printer printing. So, large amount of objects can update lately. For prevent this issue, variable object size adjust according to print per minute. Each variable things needs time to update. So, all variable objects must be measured according top rint per minute

Variable objects are;

- Date(Change according to sytem date)
- Time(Change accoding to system time)
- Counter (Changes according to each print)
- Shift Code(Changes according to shifting time)
- Variable Text (Change according to external data)
- Variable Barcode (Change according to each print or external data)
- Variable 2D Barcode (Change according to each print or external data)

Because of the character limitations of the label and command format, following characters must not be used. Use the equivalent form of the character instead.

Character	Equivalent	Converted Form	Example Form
"	"	abc"def	abc"def
'	'	abc'def	abc'def
<	<	abc<def	abc<def
>	>	abc>def	abc>def
&	&	abc&def	abc&def

Table-7) Character limitations

9.1 Command Limitations

Some Commands are limited to use according to below table.

Command	Explanation	Supported By (Printer Types)
SPCSPS	Set Print Speed	All Intermittent and All Traverse Printers 32x40I, 32x50I, 32x70I, 53x40I, 53x50I, 53x70I, 107x75I, 107x125I, TR32, TR53, TR107
SPCGPS	Get Print Speed	All Intermittent and All Traverse Printers 32x40I, 32x50I, 32x70I, 53x40I, 53x50I, 53x70I, 107x75I, 107x125I, TR32, TR53, TR107
SPCSIC	Set Internal Contact Mode	All Continuous Printers 32C, 32C with Cassette, 32X250C, 53C, 53x250C, 107C
SPCGIC	Get Internal Contact Mode	All Continuous Printers 32C, 32C with Cassette, 32X250C, 53C, 53x250C, 107C
SPCSTC	Set Trigger Contact Mode	All Continuous Printers 32C, 32C with Cassette, 32X250C, 53C, 53x250C, 107C
SPCGTC	Get Trigger Contact Mode	All Continuous Printers 32C, 32C with Cassette, 32X250C, 53C, 53x250C, 107C
SPPOTP	One Test Print	All Intermittent and All Traverse Printers 32x40I, 32x50I, 32x70I, 53x40I, 53x50I, 53x70I, 107x75I, 107x125I, TR32, TR53, TR107
SPGGRR	Get Remaining Ribbon	All with cassette models 32x70I, 32C with Cassette, 53C, 53X250C, 53x70I, 53x125I, 107x75I, 107x125I, 107C
SPTSPS	Set Pack Size	All Traverse Printers TR32, TR53, TR107
SPTGPS	Get Pack Size	All Traverse Printers TR32, TR53, TR107
SPTSPC	Set Print Count	All Traverse Printers TR32, TR53, TR107
SPTGPC	Get Print Count	All Traverse Printers TR32, TR53, TR107
SPTSPP	Set Print Position	All Traverse Printers TR32, TR53, TR107
SPTGPP	Get Print position	All Traverse Printers TR32, TR53, TR107
SPTSPD	Set Pack Distance From Beginning	All Traverse Printers TR32, TR53, TR107
SPTGPD	Get Pack Distance From Beginning	All Traverse Printers TR32, TR53, TR107
SPTSPA	Set Printing Area	All Traverse Printers TR32, TR53, TR107

SPTGPA	Get Printing Area	All Traverse Printers TR32, TR53, TR107
SPTSTP	Set All Traverse Parameters	All Traverse Printers TR32, TR53, TR107
SPTGTP	Get All Traverse Parameters	All Traverse Printers TR32, TR53, TR107

Table-8) Command Limitations

9.2 Command Operating Conditions

COMMAND LIST		
Command	Explanation	Operating Condition
CONFIGURATION COMMANDS		
SPCSDT	Set System Date&Time and Time Offset	Stop Position
SPCGDT	Get System Date&Time and Time Offset	Both (Print and Stop position)
SPCSNC	Set Network Configuration	Stop Position
SPCGNC	Get Network Configuration	Both
SPCSSC	Set RS-232 Configuration	Stop Position
SPCGSC	Get RS-232 Configuration	Both
SPCSPS	Set Print Speed	Stop Position
SPCGPS	Get Print Speed	Both
SPCSPD	Set Print Delay value	Both
SPCGPD	Get Print Delay value	Both
SPCSDV	Set Darkness(Contrast) Value	Both
SPCGDV	Get Darkness(Contrast) Value	Both
SPCSPR	Set Print Rotation	Stop Position
SPCGPR	Get Print Rotation	Both
SPCSHP	Set Horizontal Position	Both
SPCGHP	Get Horizontal Position	Both
SPCSMO	Set Mirroring Option	Stop Position
SPCGMO	Get Mirroring Option	Both
SPCSRS	Set RibbonSave Mode	Stop Position
SPCGRS	Get RibbonSave Mode	Both
SPCSIC	Set Internal Contact Mode	Stop Position
SPCGIC	Get Internal Contact Mode	Both
SPCSTC	Set Trigger Contact Mode	Stop Position
SPCGTC	Get Trigger Contact Mode	Both
SPCSAS	Set All Settings	Both
SPCGAS	Get All Settings	Both
SPCSSP	Set System Parameter	Stop Position
SPCGSP	Get System Parameter	Both
SPCSPA	Set All System Parameters	Stop Position
SPCGPA	Get All System Parameters	Both
SPCSSL	Set System Language	Both

SPCGSL	Get System Language	Both
SPCSAP	Set Administrator Password	Both
SPCGAP	Get Administrator Password	Both
SPCSFS	Return to Factory Settings	Both
SPCSMP	Set Print Request Message	Both
SPCGPM	Get Print Request Message	Both
LABEL DESIGNING COMMANDS		
SPLTDS	Create Template Datas and Template Structure	Stop Position
SPLLTF	Load Template from Printer	Stop Position
SPLGAT	Get Active Template	Both
SPLGST	Get Stored Templates	Both
SPLCDF	Create Data File	Both
SPLGSD	Get Stored Data Files	Both
SPLDTF	Delete Template	Both
SPLDTA	Delete All Template	Both
SPLDDF	Delete Data File	Both
SPLDDA	Delete All Data File	Both
SPLCDB	Clear Data Buffer	Both
SPLGFN	Get Field Names	Both
SPLGFV	Get Field Value	Both
SPLAQD	Append Queue Datas	Both
SPLAMQ	Append Multi Queue Datas	Both
SPLGQC	Get Queue Capacity	Both
SPLGMQ	Get Multi Queue Capacity	Both
SPLCQD	Clear Queue Datas	Both
SPLCMQ	Clear Multi Queue Datas	Both
SPLSLJ	Select&Load Job	Stop Position
SPLLJV	Load Job Values	Stop Position
MODIFICATION COMMANDS		
SPMCTV	Changing Text Value	Both (Look at the Note at Modification Commands)
SPMCBV	Changing Barcode Value	Both (Look at the Note at Modification Commands)
SPMC2D	Changing 2D Barcode Value	Both (Look at the Note at Modification Commands)
SPMCCV	Changing Counter Value	Both (Look at the Note at Modification Commands)
SPMCLV	Changing Logo Value	Both (Look at the Note at Modification Commands)
SPMCSV	Changing Selected Values	Both (Look at the Note at Modification Commands)
PRINT COMMANDS		
SPPSAP	Start Automatically Print	Stop Position
SPPSLQ	Set Print Count for Limited print	Both
SPPGLQ	Get Print Count for Limited print	Both
SPPSTP	Stop Print	Print Position
SPPOTP	One Test Print	Print Position(without Cassette- Intermittent models) Stop Position(with Cassette- Intermittent models)
SPPSTA	Status of Printer	Both
GENERAL COMMANDS		
SPGSUM	Send User Message to Printer	Both
SPGGTP	Get Total Print Count	Both

SPGGCP	Get Current Print Count	Both
SPGGFW	Get Firmware Version	Both
SPGGRR	Get Remaining Ribbon	Both
SPGGSN	Get Serial Number of Printer	Both
TRAVERSE COMMANDS		
SPTSPS	Set Pack Size	Stop Position
SPTGPS	Get Pack Size	Both
SPTSPC	Set Print Count	Stop Position
SPTGPC	Get Print Count	Both
SPTSPP	Set Print Position	Stop Position
SPTGPP	Get Print position	Both
SPTSPD	Set Pack Distance From Beginning	Stop Position
SPTGPD	Get Pack Distance From Beginning	Both
SPTSPA	Set Printing Area	Stop Position
SPTGPA	Get Printing Area	Both
SPTSTP	Set All Traverse Parameters	Stop Position
SPTGTP	Get All Traverse Parameters	Both