

Pre-Requisite Setup for Vehicle Renewal

Before performing Vehicle Renewal, ensure that the Dealer and Login are created in the system.

Dealer Creation

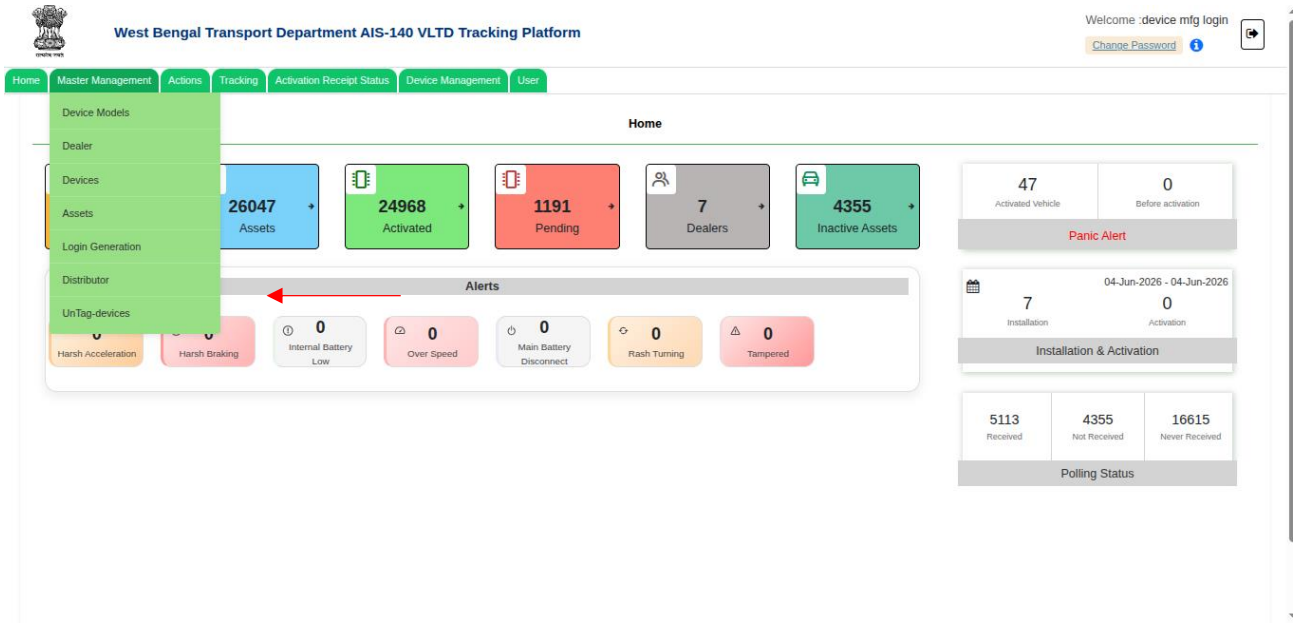

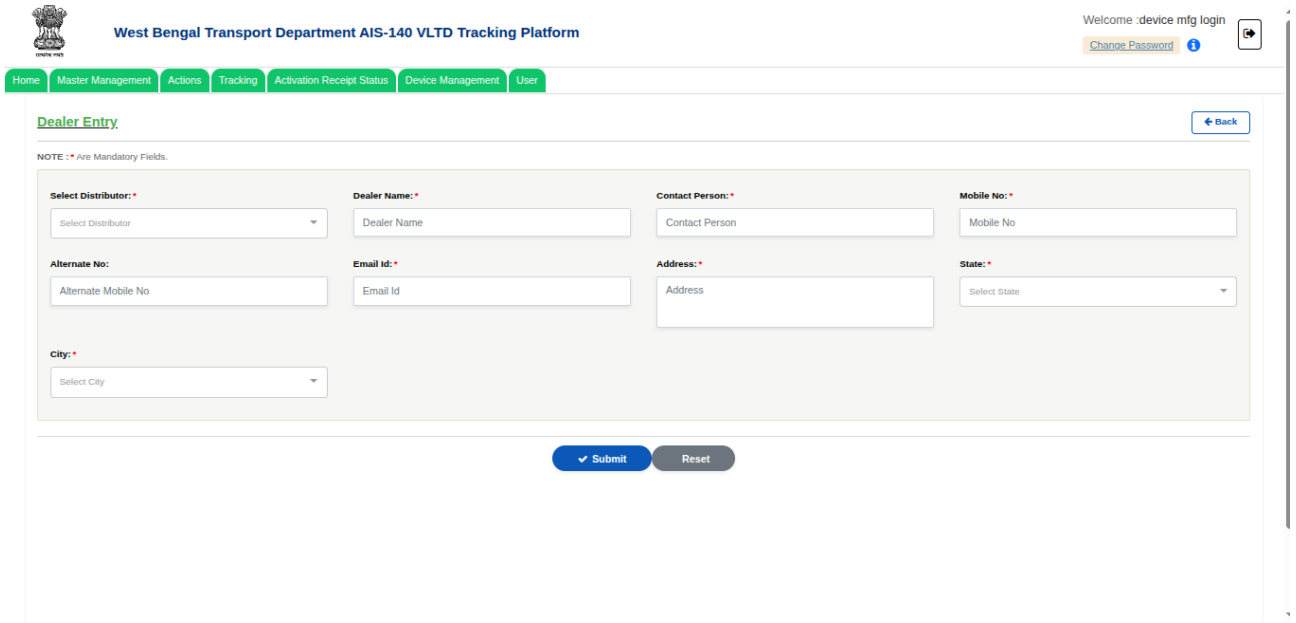

Master Management → Dealer

Steps

1. Login using Device Manufacturer credentials.
2. Navigate to Master Management → Dealer.
3. Open the Dealer Entry page.
4. Fill the mandatory fields:

Required Fields

- Select Distributor
- Dealer Name
- Contact Person
- Mobile No.
- Email ID
- Address
- State
- City


Actions


1. Verify all dealer details carefully.
2. Ensure Mobile Number and Email ID are valid.
3. Select the correct State and City.
4. Click Submit.

Result

- Dealer will be created successfully.
- Dealer details will be available for Login Creation.

Login Creation

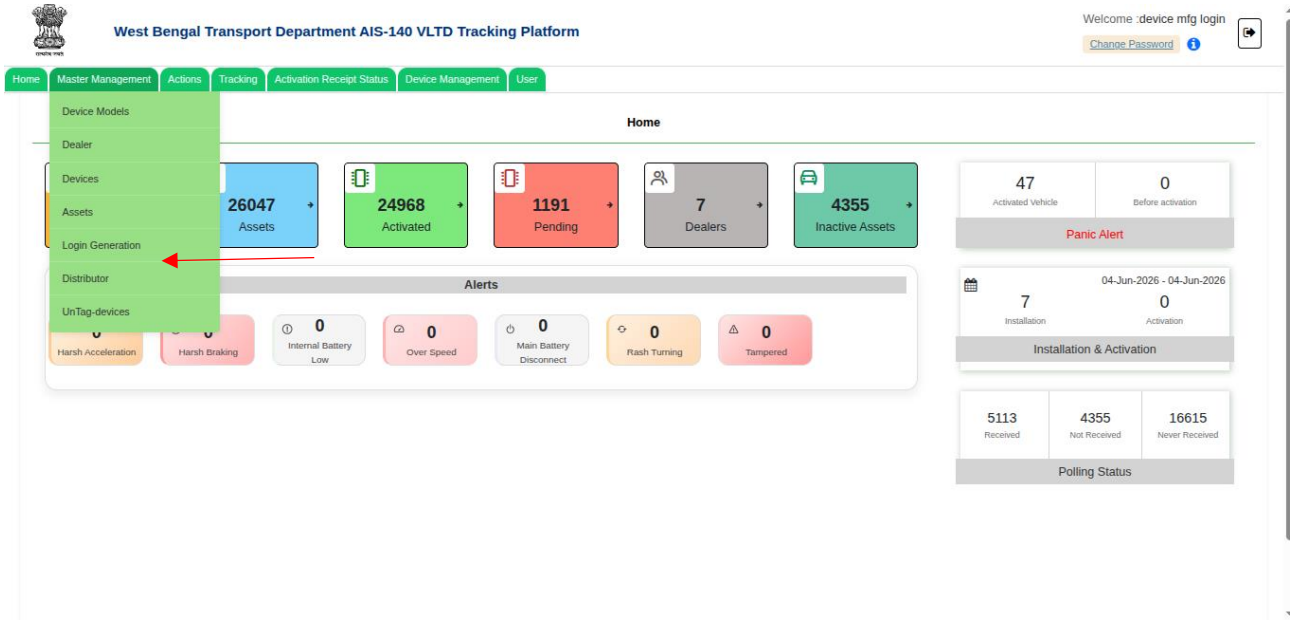

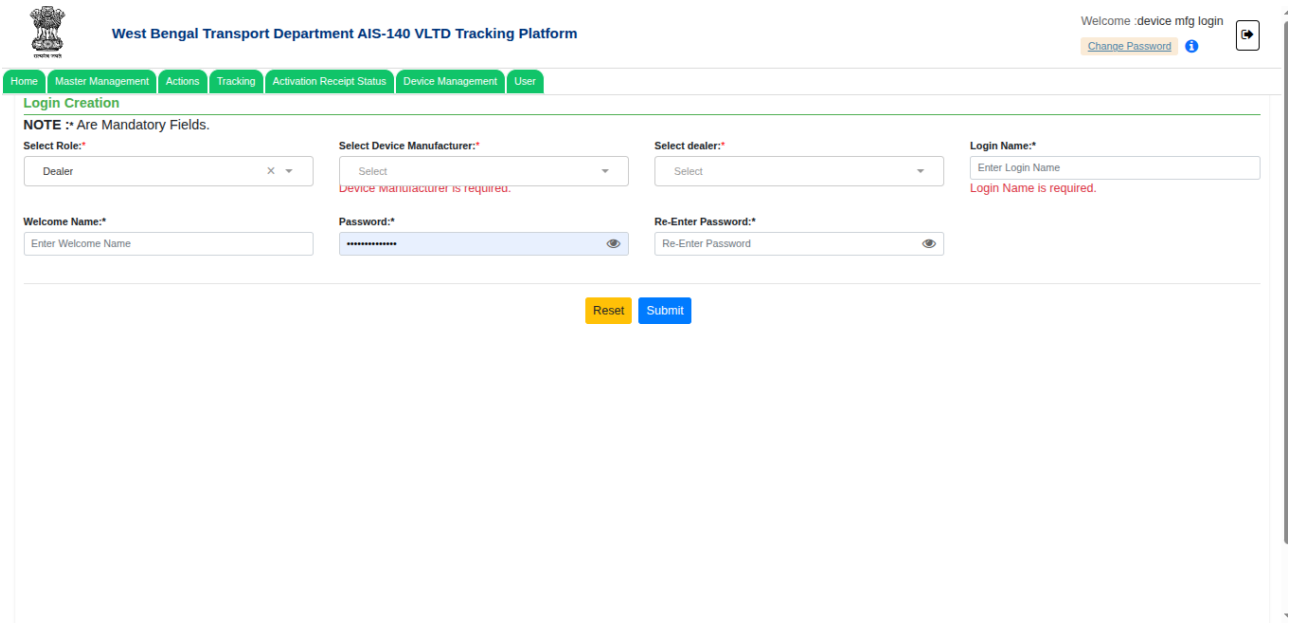

Master Management → Login Generation

Steps

1. Navigate to Master Management → Login Generation.
2. Select Role = Dealer.
3. Select Device Manufacturer.
4. Select Dealer.
5. Enter Login Details.

Required Fields

- Role
- Device Manufacturer
- Dealer
- Login Name
- Welcome Name
- Password
- Re-Enter Password

Actions

1. Select the correct Device Manufacturer.
2. Select the created Dealer.
3. Enter a unique Login Name.
4. Enter Password and Re-Enter Password.
5. Click Submit.

Important Checks


- Login Name should be unique.
- Password and Re-Enter Password must match.
- Dealer must be created before Login Creation.
- Device Manufacturer should be selected correctly.


Result

- Dealer Login will be generated successfully.
- Dealer can now access the system for Vehicle Activation and Renewal activities.

Vehicle Renewal

The AIS-140 / BIS 16833 Vehicle Renewal process is completed in the following steps.

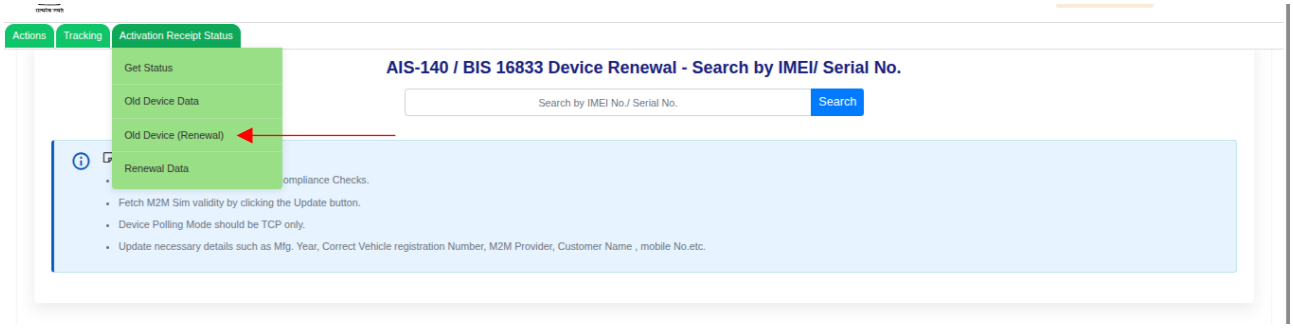

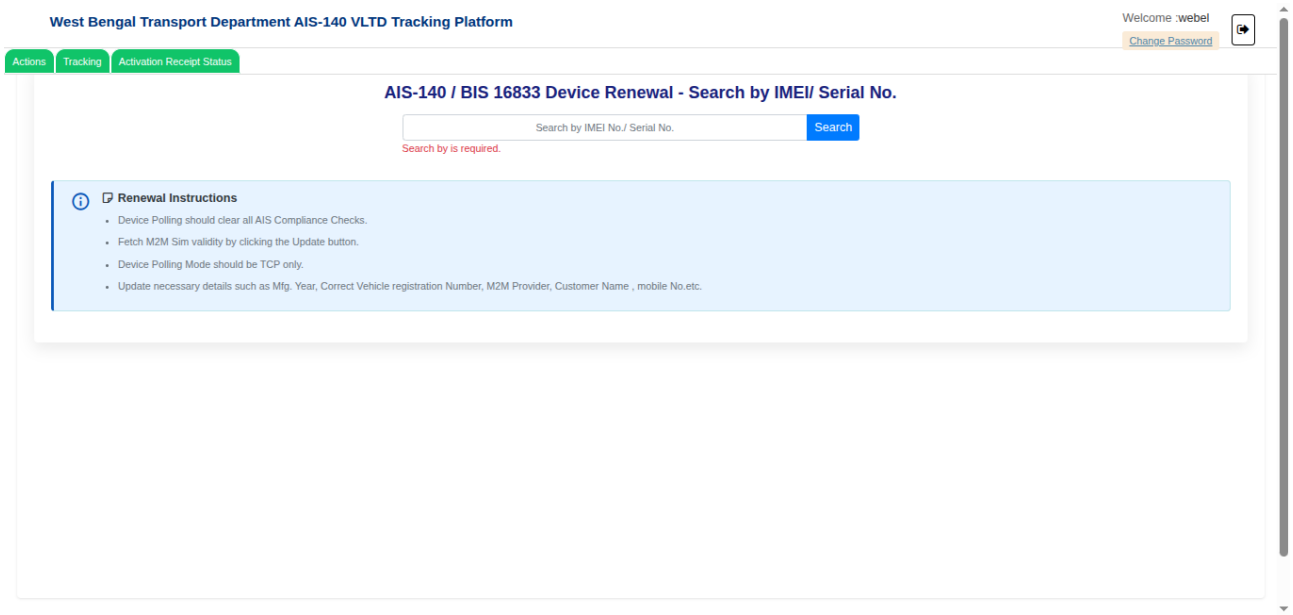

Step 1 – Search Vehicle by IMEI / Serial Number

1. Open the **AIS-140 / BIS 16833 Device Renewal** page.
2. Enter:
    - IMEI Number
3. Click on the **Search** button.
4. System will fetch existing vehicle and device details.

Step 2 – Update Vehicle Information

Required Fields

- Vehicle No.
- Chassis No.
- Engine No.
- Customer Name
- Mobile No.
- Vehicle Type
- Manufacturing Year
- Vehicle Make
- Vehicle Model
- Vehicle Class
- RTO List

Actions

1. Update missing or incorrect details.
2. Select dropdown values properly.
3. Verify all vehicle information carefully.
4. Click on **Save** button.

Step 3 – Update Device & Connectivity Details

Required Fields

- Esim Provider
- ICCID No.
- Network 1
- Mobile No. 1
- Network 2
- Mobile No. 2

Actions

1. Select correct Esim Provider.
2. Enter valid ICCID number.
3. Select SIM network providers.
4. Enter active mobile numbers for both SIMs.
5. Click on **Save** button.

Important Checks

- ICCID number must match installed SIM.

- Mobile numbers should be active.
- Network providers should be correct.
- SIM details should match device records.

Step 4 – Verify Connectivity & AIS Compliance

Verify Vehicle Details

- Vehicle No.
- Chassis No.
- Engine No.
- Vehicle Make & Model
- Vehicle Class
- Customer Name
- RTO
- Manufacturing Year

Verify Device Details

- Activation No.
- Activation Date
- Serial No.
- IMEI No.
- Esim Provider
- ICCID No.
- Model Name
- Network 1 & 2
- SIM 1 & SIM 2 Numbers

Step 5 – Send OTP for Renewal

OTP Verification

1. Enter the received OTP in the OTP field.
2. Click on **Verify OTP** button.
3. System will validate the OTP.