

KAESER CONNECT

If a SIGMA CONTROL 2 controller is connect to a PC via Ethernet interface or modem, you can use the KAESER CONNECT visualisation program to display a multitude of information from the SIGMA CONTROL 2.

This visualisation application can be used with any conventional browser (e.g., Internet Explorer, Firefox, etc.). The KAESER CONNECT is **not capable** for remote control of the compressor or for changing any parameters.

Hints for Internet explorer 10 under Windows 8:

KAESER Connect principle works in metro mode and desktop mode. Due to the better graphics capabilities, and higher speed we recommend the desktop mode.

KAESER CONNECT dial up

Upon calling up the IP address of the SIGMA CONTROL 2 from a PC, the first window requests a password. At your first use of KAESER CONNECT, log on with an [RFID EQUIPMENT CARD](#) or an [RFID IDENTITY KEY](#) to generate a user name and a password.

Hold your [RFID EQUIPMENT CARD](#) or an [RFID IDENTITY KEY](#) to the SIGMA CONTROL 2 and press the "Right arrow" in the log-on window. More information is provided in the page [SC2 Password](#).

A screenshot of a web browser window titled "Login". It contains two input fields: "User name:" and "Password:". Below the fields is a "Login" button.

KAESER CONNECT basic view




1. Customer's compressor number and system type
2. Switch from "read => write". You can only modify within KAESER CONNECT, if you have earlier switched from read-only to write access. For this purpose, enter again the user name and the password.
KAESER CONNECT log off.
Clicking "Contact Service" displays the address and contact information of KAESER KOMPRESSOREN to the end user.
3. Selection of a display language for KAESER CONNECT. Any change made here does not affect the display language of the SIGMA CONTROL 2.
4. **System status:** Mapping of the local menu
5. **Graphs**
 1. Graphic representation of the mains pressure and airtend discharge temperature along the time axis.
 2. Graphic representation of the compressor status (off, idle, load) and RPM (in SFC only) along the time axis.
6. **Messages:** Current messages and message history
7. **User administration**
 1. Creating and activating new user accounts.
 2. Deactivating existing user accounts.
 3. Changing passwords.
8. **Settings:** Display formats for units, date and time.
9. **Data backup:** Writing data to your own PC.
10. Serial data of compressor, SIGMA CONTROL 2 and software version

KAESER CONNECT system status

The System status menu displays the current view of the SIGMA CONTROL 2 controller. Display content and status displays of the LEDs are displayed identically to the real controller.



In addition, you can display the entire controller menu including the setting parameters. For this purpose, click directly in the controller display.

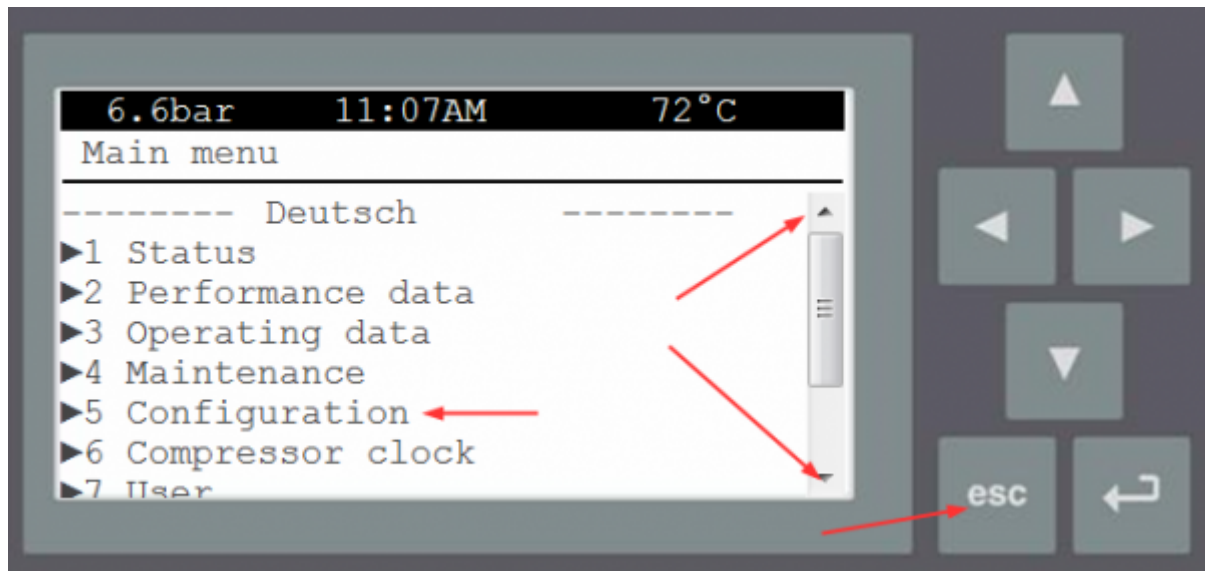

By clicking each menu (e.g., configuration), you open the corresponding submenu. Use the scroll bars to the right side of the display to scroll up or down through the menu. Use the ESC button to return from a submenu to the superordinate main menu.




The display or message view depends on the system type and the software (for dry-running compressors for instance) and may differ from the sample screenshots.


KAESER CONNECT Graphen

When starting this menu, the recorded data from the last 60 minutes are loaded. The last 20 minutes are displayed in a graph. The system cyclically updates the graph whilst the current time is displayed. Moving the mouse pointer across the graph calls up a ruler. The time selected with the ruler and the associated values are displayed in the legend above the graph. When the ruler is hidden, the time and associated values are displayed at the right edge of the graph. The following graphs can be displayed:

- Mains pressure, or p5 in dry-running compressors
- Airend discharge temperature or T4 (outlet, second stage) in dry-running compressors
- T5 (system outlet temperature) in dry-running compressors
- P14 (primary water pressure) in dry-running compressors
- T10 (primary water inlet in air cooler, after HRS heat exchanger) in dry-running compressors
- T14 (primary water outlet, complete) in dry-running compressors
- Machine status:
 - OFF
 - IDLE
 - LOAD
- Speed (applies only to SFC compressors)

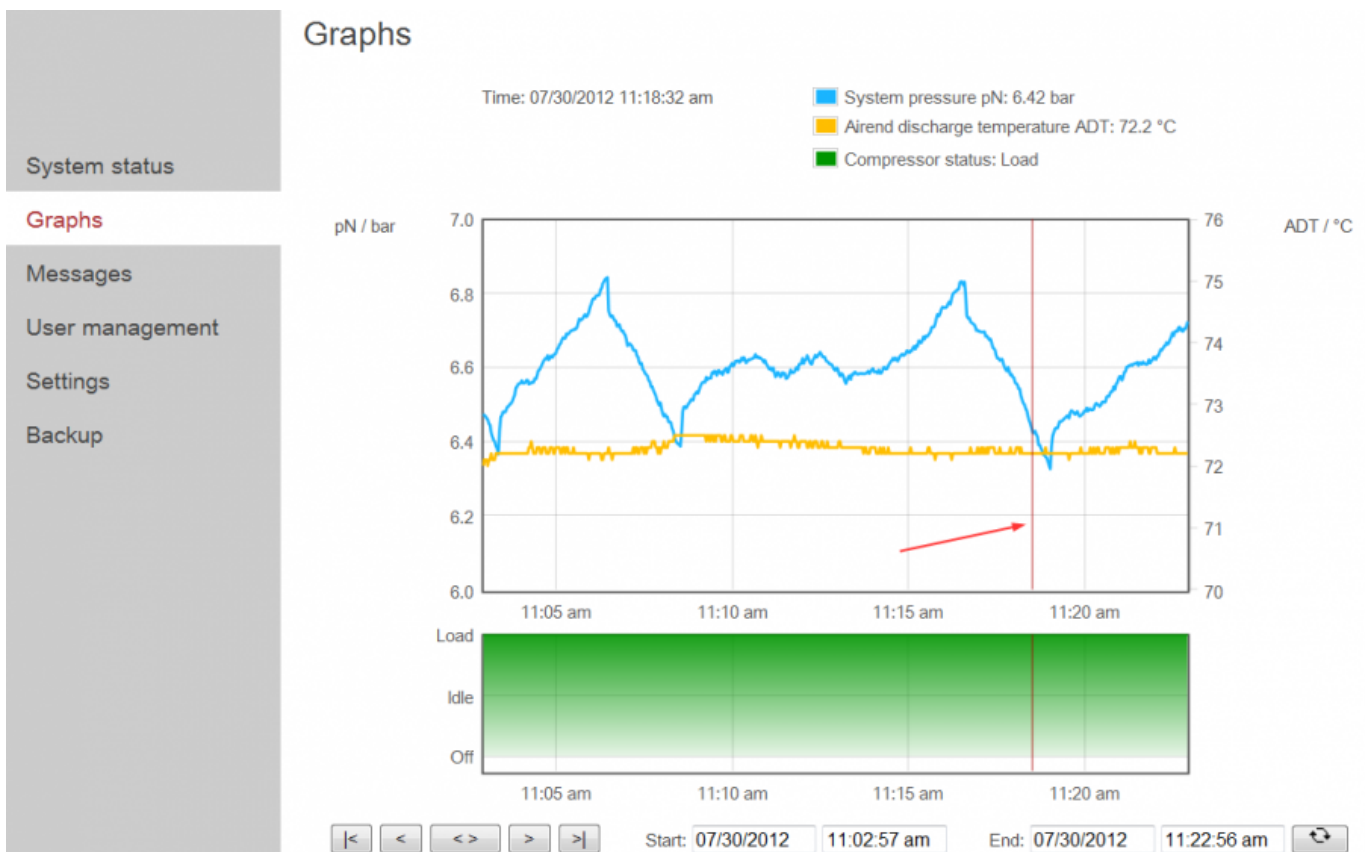


Screenshot, oil-injected rotary screw compressor

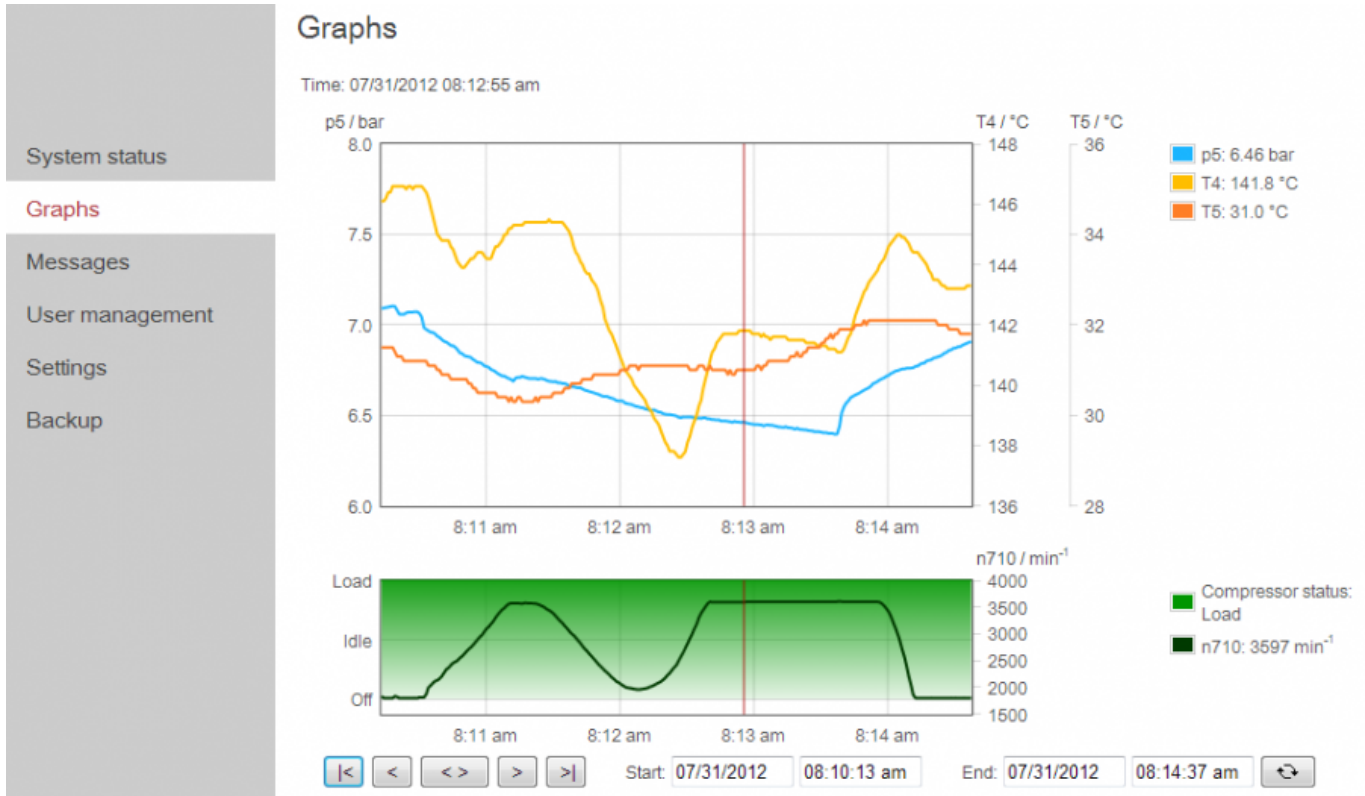

Screenshot, dry-running rotary screw compressor

Use the Zoom-in function to enlarge significant curve developments. Highlight a specific area within the graph by drawing a rectangle with the mouse pointer pressed. The selected area will be enlarged as soon as the mouse pointer is released.

Arrow key function

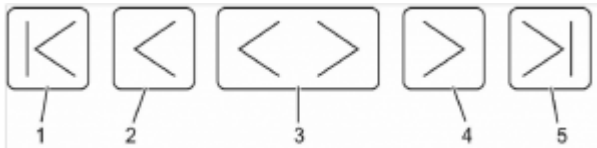

1. "Start" display of oldest data
2. Move the display area to the left by 1/3 approximately
3. "Zoom Out" time area is enlarged
4. Move the display area to the right by 1/3 approximately
5. "End" display of newest data

KAESER CONNECT Messages

The following messages are displayed:

- Current messages
Currently active fault and warning messages.
- Compressor messages
Fault and warning messages relative to the compressor (e.g., airend discharge temperature, oil filter maintenance message, etc.).
- System messages
Fault and warning messages relative to the SIGMA CONTROL 2 hardware and software.

- Diagnostic messages
Fault and warning messages relative to the compressor's electronics, e.g., wire-break or short-circuit messages to analog signals.

The screenshot shows the 'Messages' section of the KAESER CONNECT interface. The sidebar on the left contains links for 'System status', 'Graphs', 'Messages' (highlighted in red), 'User management', 'Settings', and 'Backup'. The main area is titled 'Messages' and has tabs for 'Current', 'Compressor' (highlighted in red), 'System', and 'Diagnosis'. Below the tabs is the 'Compressor messages history list' table.

Date/Time	State	Message	Message type	ID
AM		Machine report	message	33
07/21/12 09:50:04 AM	g	Machine report	Operational message	33
07/21/12 09:50:02 AM	c	Machine report	Operational message	33
07/20/12 11:31:39 AM	g	Voltage restored	Operational message	30
07/20/12 11:31:37 AM	c	Voltage restored	Operational message	30
07/20/12 09:50:04 AM	g	Machine report	Operational message	33
07/20/12 09:50:02 AM	c	Machine report	Operational message	33

Red arrows and numbers 1 through 5 point to specific elements in the table:

- 1: Points to the 'Settings' link in the sidebar.
- 2: Points to the 'State' column header.
- 3: Points to the 'Message' column header.
- 4: Points to the 'Message type' column header.
- 5: Points to the 'ID' column header.

1. Time stamp
2. Message status
 - k = incoming
 - g = outgoing
 - q = acknowledged
3. Message text
4. Type of message
 - Operational message
 - Maintenance/warning message
 - Fault message
5. Message (event) number

KAESER CONNECT IO display

This screen is a quick overview about the current status of all input's and output's.

IO display

First IOM **1**

Type: IOM1

Digital IOs

DI 2

DI 1.00	1
DI 1.01	1
DI 1.02	1
DI 1.03	1
DI 1.04	0
DI 1.05	0
DI 1.06	0
DI 1.07	0
DI 1.08	0
DI 1.08	0
DI 1.10	0
DI 1.11	0
DI 1.12	0
DI 1.13	0
DI 1.14	0
DI 1.15	1

DOR 3

DOR 1.00	0
DOR 1.01	0
DOR 1.02	0
DOR 1.03	0
DOR 1.04	0
DOR 1.05	1
DOR 1.06	0
DOR 1.07	0

DOT 4

DOT 1.00	0
DOT 1.01	0
DOT 1.02	0
DOT 1.03	

Analogue IOs

AI 5

AI 1.00	10.46	mA
AI 1.01	0.00	mA
AI 1.02	0.01	mA
AI 1.03		mA

AIR 6

AIR 1.00	120.36	Ω	52.5	°C
AIR 1.01	0.00	Ω		°C
AIR 1.02	0.00	Ω		°C
AIR 1.03	0.00	Ω		°C
AIR 1.04		Ω		°C
AIR 1.05		Ω		°C
AIR 1.06		Ω		°C
AIR 1.07		Ω		°C
AIR 1.08		Ω		°C
AIR 1.09		Ω		°C
AIR 1.10		Ω		°C

AOI 7

AOI 1.00		mA
----------	--	----

1. Each IO-module does have his own register card. With a click on the register you can swap between the IO-modules.
2. Status of all digital input channels
3. Status of all digital relay output's
4. Status of all digital transistor output's
5. Current value of all analog current input's
6. Current resistance value and temperature of all analog temperature input's
7. Current value of the analog current output.

KAESER CONNECT user administration

Use the "User administration" menu to create additional user accounts for other employees. In order to be able to create user accounts, you must activate the write mode. The system will prompt you to enter and confirm your user name and your password. Subsequently, the write mode is activated. The write mode is granted only to one person at a time. If a second user attempts to log on in write mode, he will be refused by the system.

The system returns an error message. String length for personally created user names and passwords:

- User name: 6 to 16 characters, the second character must not be a number.
- Password: 6 to 16 characters

**SIGMA CONTROL 2 2-ASD32**

[read => write](#)[Logout](#)[Contact/Service](#)

System status
Graphs
Messages
User management
Settings
Backup

User management

User list

Dressel
E00010871
E00010872
JensHartmann
Mobilair

☐ Show inactive users

User account

User name:

Password:

Repeat password:

Access level:

User type

State:

Add

Update user

Creating a new user

1. Switch from read to write access.
2. Enter a user name and password.
3. Enter the new user in the "User name" input field in User account.
4. Enter the password for the new user in the "Password" input field in User account.
5. Confirm the previously entered password by re-entering it in the "Repeat password" input field.
6. Enter the access level for the user in the "Access level" input field (For example, Level 2 for customer).
7. Click "Add" to activate the new user.

Changing the user password

1. Switch from read to write access.
2. Enter a user name and password.
3. In the user list, click the user for whom you want to change the password. The name will be displayed in the "User name" input field in User account.
4. Enter the new password in the "Password" input field in User account.
5. Confirm the previously entered password by re-entering it in the "Repeat password" input field.
6. Click "Add" to activate the new password.


Deactivating a user account

1. Switch from read to write access.
2. Enter a user name and password.
3. In the user list, click the user for whom you want to deactivate the user account. The name will be displayed in the "User name" input field in User account.
4. Select the "Deactivated" function in the "Status" input field of User account.
5. Click "Update" to deactivate the user account.

KAESER CONNECT settings

The settings via KAESER CONNECT apply only to your PC and your browser.
The following settings can be changed:

- Units
- Date format
- Time format

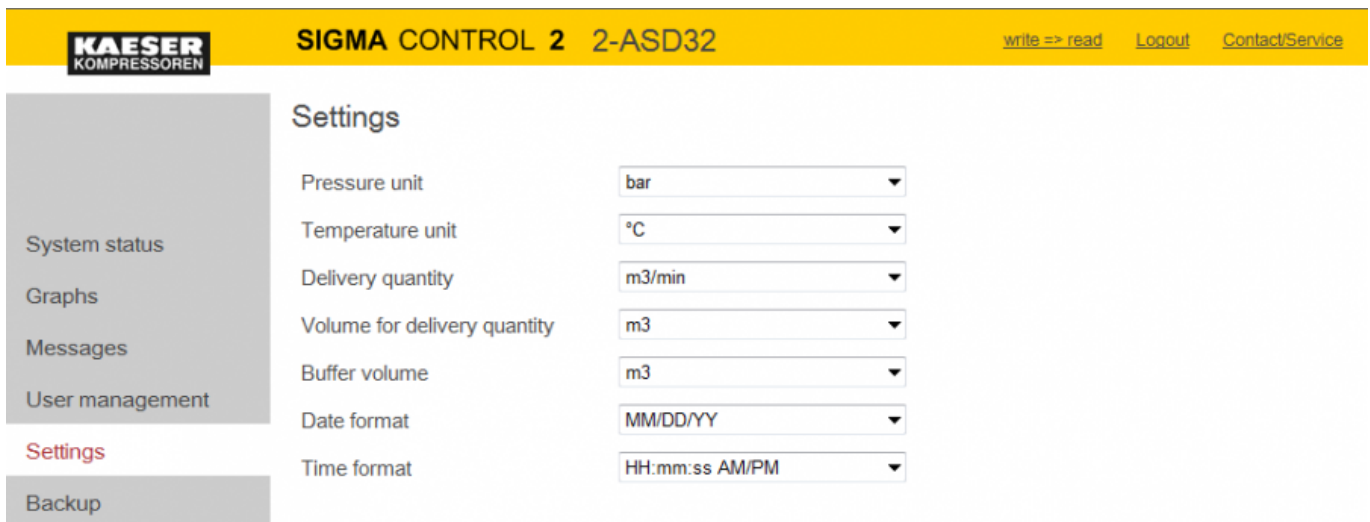

KAESER KOMPRESSOREN **SIGMA CONTROL 2 2-ASD32** [write => read](#) [Logout](#) [Contact/Service](#)

Settings

Pressure unit	bar
Temperature unit	°C
Delivery quantity	m3/min
Volume for delivery quantity	m3
Buffer volume	m3
Date format	MM/DD/YY
Time format	HH:mm:ss AM/PM

Example: Changing the temperature unit from °C to K.

1. Switch from read to write access.
2. Enter a user name and password.
3. Click the drop-down menu behind the temperature unit and select "K" for Kelvin.

KAESER CONNECT data backup


When using KAESER CONNECT to load data from SIGMA CONTROL 2 to your PC, use the <Data backup> menu.

You may perform a complete backup or select individual files for backup:

- Complete
All files for history, settings and user information will be backed up.
- Log files

The history of the compressor and the SIGMA CONTROL 2 are backed up.

- Settings
Settings information, such as IP addresses, etc., are backed up.
- User information
User names and/or equipment card and previously logged-in RFID numbers are backed up.

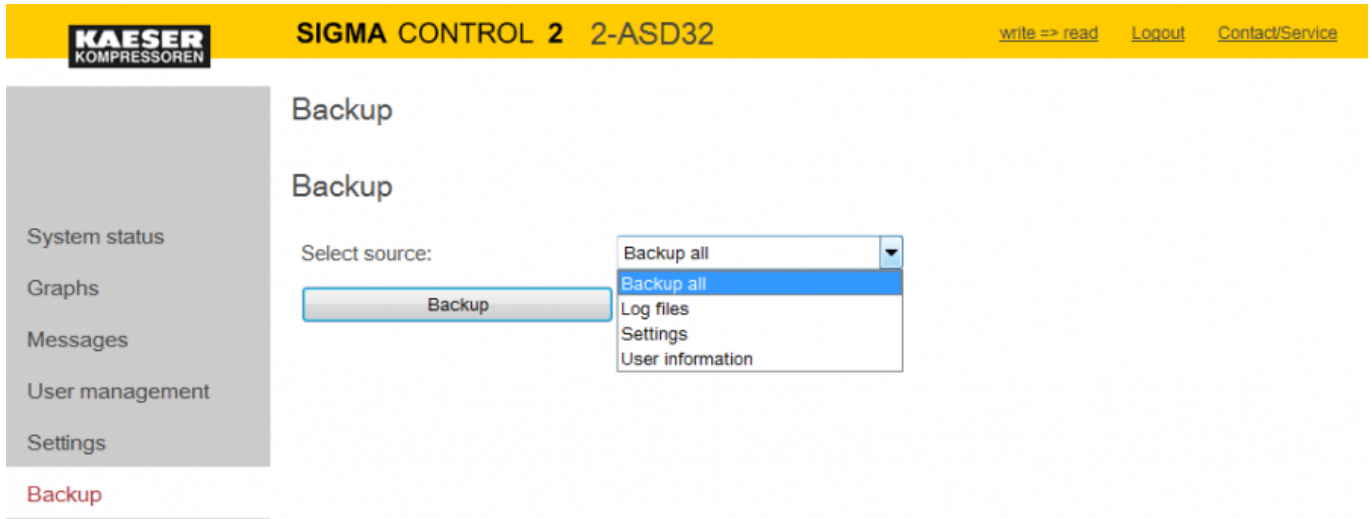

For an analysis of potential causes and trouble-shooting, using also the SIGMA Control 2 “Data recorder”, we recommend to always select the “Complete” option.

Clicking “Save data” opens a selection window. Here, you define the destination for the download. The file is zipped directory structure containing several individual files. These files are mostly text documents which can be opened with any standard text editor or Excel. In order to reduce the data volume for the download, the log files (fault history) are transferred without text information. Use the [SC2 MESSAGE CONVERTER](#) to “decode” these log files.

SIGMA CONTROL 2 automatically assigns a name to the directory structure.

BF_ASD.1C_1785_2012-07-30T14.57.34+02.00

The folder name of the directory structure is combined from the following information.

- Material number of the compressor
- Serial number of the compressor
- Date of backup
- Time of backup
- Time difference to UTC

[<= Back](#)



This Page in the Kaeser Service Support Wiki:

http://coservsuppwiki/en/kaeserglobal/funktionsbeschreibung_kaeser_connect