

SOFTWARE UART FOR SHARP PC-1500(A) by Alex F4VTS


SERIN and SEROUT routines

This software creates a 'Software UART' in the PC-1500(A) pocket computer without a dedicated interface (such as the CE-158) and without any hardware modification*.

**However, a simple, optional modification is described that lets you use the PC-1500(A) docked in the CE-150 printer/cassette interface at the same time; it removes the pin conflict.*

Features

1. A BASIC installer is provided that installs the sending and receiving routines, SEROUT and SERIN, in the RAM of the PC-1500(A). The routines are written in machine language and occupy only about 200 bytes. In addition, two 255-byte buffers (TX and RX) are set up to hold the data to be transmitted or received. The routines work in "bit-banging" mode: the signals are generated and read bit by bit, at a low level, by the software itself rather than by a dedicated hardware circuit.
2. The following baud rates can be selected: **1200, 2400, 4800 or 9600 bps**. The default is 4800 bps, a universal and reliable standard. 9600 bps, the highest rate the PC-1500(A) can handle, lets it work with many popular UART devices, while the slower 1200 and 2400 bps modes provide compatibility with vintage equipment.
3. This UART uses the common **8N1** format (8 data bits, no parity, 1 stop bit). RTS and CTS lines are not available. The signal levels are TTL/CMOS compatible. This is NOT a RS-232 with voltages of up to ± 15 V: connecting the PC-1500(A) to an RS-232 connector will destroy its electronics. You can, however, use it with many +3.3 V/+5 V devices. UART operation has been confirmed with USB-UART cables (FTDI), various Sharp, Casio and NEC pocket computers, various sensors and modules, Arduino boards (5 V TTL levels) and also with an ESP32 (3.3 V CMOS levels) **without a level converter** in the ESP32 → PC-1500 direction: the PC-1500 accepts about 2.4 V or more as a high level, so the 3.3 V output of the ESP32 is enough. In the opposite direction (PC-1500 → ESP32) the voltage must be reduced so as not to damage the ESP32, whose inputs tolerate at most about 3.6 V. You can use, for example, a resistor divider (47 k Ω in series and 100 k Ω to GND give about 3.3 V; see diagram 'Connection 3' below).
4. The PC-1500(A) has to be connected through its 60-pin side connector: **PC7** (pin 10) is always used for transmitting (PC-1500 output) and **PB2** (pin 27) for receiving (PC-1500 input). Connect these pins to the corresponding pins of the other device, i.e. the PC-1500(A) input to the output of the other device and the PC-1500(A) output to the input of the other device, through resistors of a few k Ω (I used 1 to 10 k Ω successfully) as shown on the *Connection 2* diagram. Since both devices have high-impedance inputs, only an extremely small current flows, so the resistor value is not critical and the resistor causes practically no voltage drop. To connect well to the Sharp's socket you can use a common 1.27 mm dual row pin header (2x30 pins).
Use any of pins 52 to 55 to establish a ground connection between the two devices.

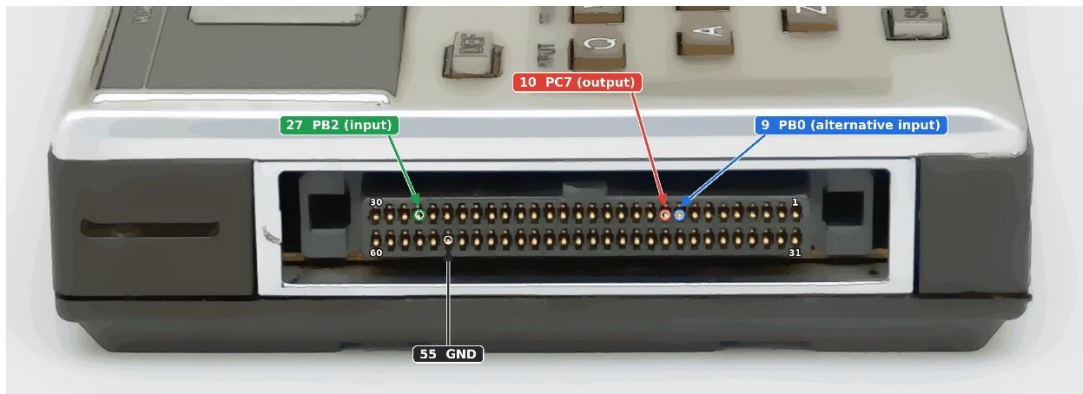

1.27 mm dual row pin header

NOTA BENE: *PB2 is used as the cassette input (CMT IN), so it cannot be used while the PC-1500(A) is docked in the printer/cassette interface CE-150. To make it possible to use this UART with the PC-1500(A) docked in the CE-150, the installer lets you choose the unused pin PB0 (pin 9) as the input instead of PB2. Using PB0 requires a simple modification inside the PC-1500(A), though (some units already have this connection). The serial lines also have to be brought out of the CE-150 interface. These changes are not difficult for anyone with basic electronics workshop skills, and the modification is described in the file [Modification_for_use_with_CE-150.pdf](#).*


5. After installation, the SEROUT and SERIN routines are called with CALL commands, with an optional parameter. Transmission or reception starts immediately: there is no need to open, select or close a port as is the case with the CE-158 interface or other computers with a hardware-implemented UART interface. The **send and receive commands are all you need** to handle UART communication.
6. This software UART is driven entirely by the PC-1500's CPU and not by a dedicated UART chip with its own buffers and handshake lines (such as the CE-158 interface). Communication is therefore packet-based, not continuous. This suits sensors, microcontrollers and request/response protocols that send data in bursts with pauses, but not continuous serial streams such as a terminal session.
7. The installer does not fit in a **PC-1500** without a RAM extension (a CE-155 or another RAM module is needed), but it runs well on a bare **PC-1500A**. More information about RAM, the NEW commands and the addresses is given in the file [HELP_NEW_memory.md](#).

How to use

1. Switch off the PC-1500A and insert it into the CE-150 dock.
Connect the sound source (the audio output of a computer or player) to the EAR jack of the CE-150 with an audio cable.
2. Switch on the PC-1500A and select PRO mode. Type:
NEW0 [ENTER]
NEW&4400 [ENTER] (or a different NEW&... value for a PC-1500(A) with a RAM module, see the file HELP_NEW_memory.md)
CLOAD [ENTER]
3. Start playing the file SERINOUT.WAV and wait until the installer has finished loading.
4. **If your PC-1500 and CE-150 are not modified**, switch off the PC-1500A and remove it from the CE-150.
5. Connect the PC-1500(A) to the other UART device. If you have no modification, connect the marked pins of the PC-1500A's 60-pin connector through 1–10 kΩ resistors (1 kΩ in the figures below) to the other UART device, which must use TTL or CMOS voltage levels. For a 3.3 V device such as the ESP32, use a resistor divider in the PC-1500 → device direction (Connection 3). Some possible connections:

Connection 1: USB-UART cable (FTDI) ↔ PC-1500A

3 of the 4 cable wires are used; TX and RX go through 1 kΩ resistors

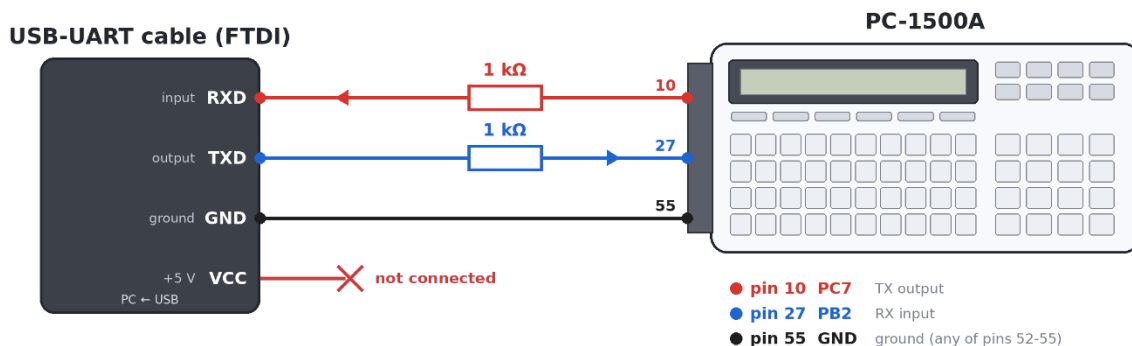


60-pin connector seen from the left side of the PC-1500 (outside view)



- Terminal: same baud rate, 8N1
- Installer: RX PORT = PB2, INVERSION = NO
- Wire colours differ: check your cable's labels
- The connector is on the left end of the PC-1500

Connection 2: PC-1500A ↔ PC-1500A

60-pin connector to 60-pin connector: crossed TX/RX through 1 kΩ, GND to GND

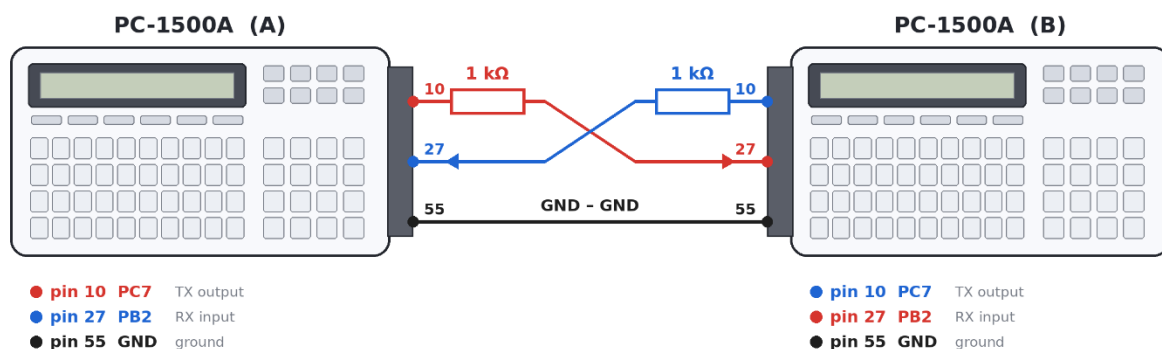


60-pin connector seen from the left side of the PC-1500 (outside view)



- Both computers: same baud rate and polarity
- RX PORT = PB2 (default in installer v6.2)
- Program: pc1500_uart_link (1=DEMO, 2=TX, 3=RX)
- Real connector: left end (A drawn right for clarity)

Connection 3: ESP32 ↔ PC-1500A

PC-1500 → ESP32 through a 47 kΩ / 100 kΩ divider (4.8 V → 3.3 V); ESP32 → PC-1500 through 1 kΩ

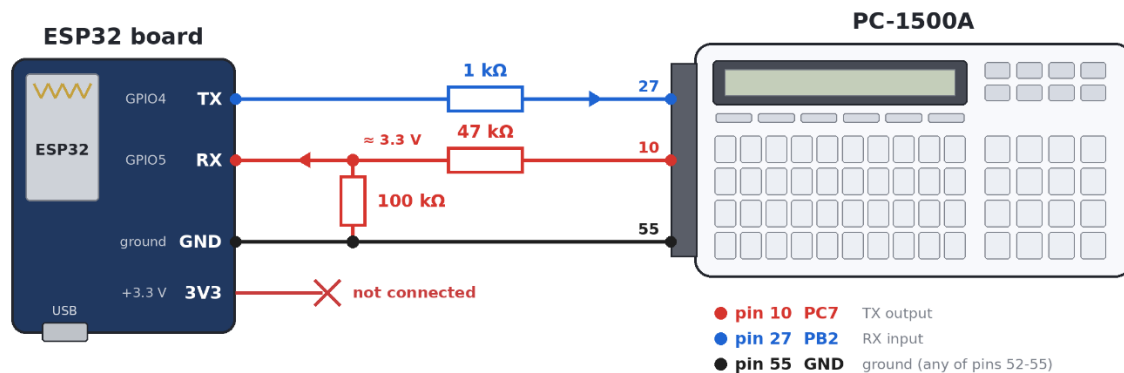

60-pin connector seen from the left side of the PC-1500 (outside view)



- ESP32 sketch: Serial1, 4800 bps, 8N1 (GPIO4 TX, GPIO5 RX)
- Installer: RX PORT = PB2, INVERSION = NO
- Divider: $4.8 \text{ V} \times 100 \text{ k} / (47 \text{ k} + 100 \text{ k}) \approx 3.3 \text{ V}$
- The connector is on the left end of the PC-1500

- If the PC-1500 and CE-150 units have been modified, there is no need to use the wire connections as shown in *Connection 1..3* diagrams; instead, connect the UART device to the UART connector added to the CE-150 cassette/printer unit.
- Switch on the PC-1500A, select RUN mode and type RUN [ENTER] to start the installer, which installs the SEROUT and SERIN routines. It also contains useful sections that test TX and RX operation.
- The installer asks a few questions, to select baud rate press: **1** => 1200bps, **2** => 2400bps, **4** => 4800bps, **9** => 9600bps. ENTER alone selects the default: baud rate (4800 bps), RX port (PB2) and inversion (no). Without any modification of the PC-1500 and CE-150, the Software UART cannot be used while the PC-1500 is docked in the CE-150, and you must select the PB2 input (the default). If you have the modification, select the PBO input by pressing 0. Once the setup process is complete, the installer offers a TX test and an RX test. If the other UART device is not connected yet, press 0 to skip them; the RX test can be started later with RUN 530.

9. The PC-1500 is now ready to work through the Software UART! You can use the SEROUT and SERIN routines by calling them with CALL commands. The commands for receiving and transmitting are simple and intuitive (note that they are different from the commands of the original Sharp CE-158):

To send a string (packet) of data, use: CALL&nnnn,m (CALL&40C5 on a PC-1500A without a RAM extension), where **nnnn** is the address of the SEROUT routine, shown by the installer; it depends on the RAM configuration of the computer*, and **m** is the length of the data packet to be sent (1–255). If the parameter **m** is not given, only the first byte of the TX buffer is sent. Before the call, put the data to be sent into the TX buffer with POKE commands; the buffer starts at an address that depends on the memory configuration* (&4300 on a PC-1500A without a RAM extension).

To receive a string (packet) of data, use: CALL&nnnn,m (CALL&4130 on a PC-1500A without a RAM extension), where **nnnn** is the address of the SERIN routine, shown by the installer; it depends on the RAM configuration, and **m** is the maximum length of the data packet to be received. If the parameter **m** is not given, a packet of any length is received into the RX buffer, up to 255 bytes. The actual length of the packet is stored in a dedicated byte (usually &41FF) and, if **m** was given, also returned as its new value. The SERIN routine listens for incoming bytes, decodes them and places them in the RX buffer. If no new character arrives within about 0.5 s, the routine stops listening, stores the packet length in the dedicated memory cell and returns to BASIC. The first character must arrive within about 30 s. The received data can then be read with PEEK commands from the RX buffer, which starts at an address that depends on the memory configuration* (&4200 on a PC-1500A without a RAM extension).

10. The default baud rate is 4800 bps, a universal and reliable standard. To change the baud rate, run the installer again. If the other device uses inverted signal levels, one can select the INVERSION option during the installation.
11. If you no longer need the BASIC installer/tester, type **NEW** [ENTER] in PRO mode. This deletes the installer, but the routines stay in memory and the whole remaining memory is free for your BASIC program.

**Check the addresses in the file `HELP_NEW_memory.md`, because they depend on the memory configuration of your PC-1500(A).*

Comments, bug reports, ideas and inquiries: alex.f4vts@gmail.com (I may not be able to respond immediately).

*I have created the SERIN/SEROUT UART software by myself, with help from Claude Code.
It is based on the idea of the SAVER/LOADER program published in the Japanese magazine I/O (1983).*