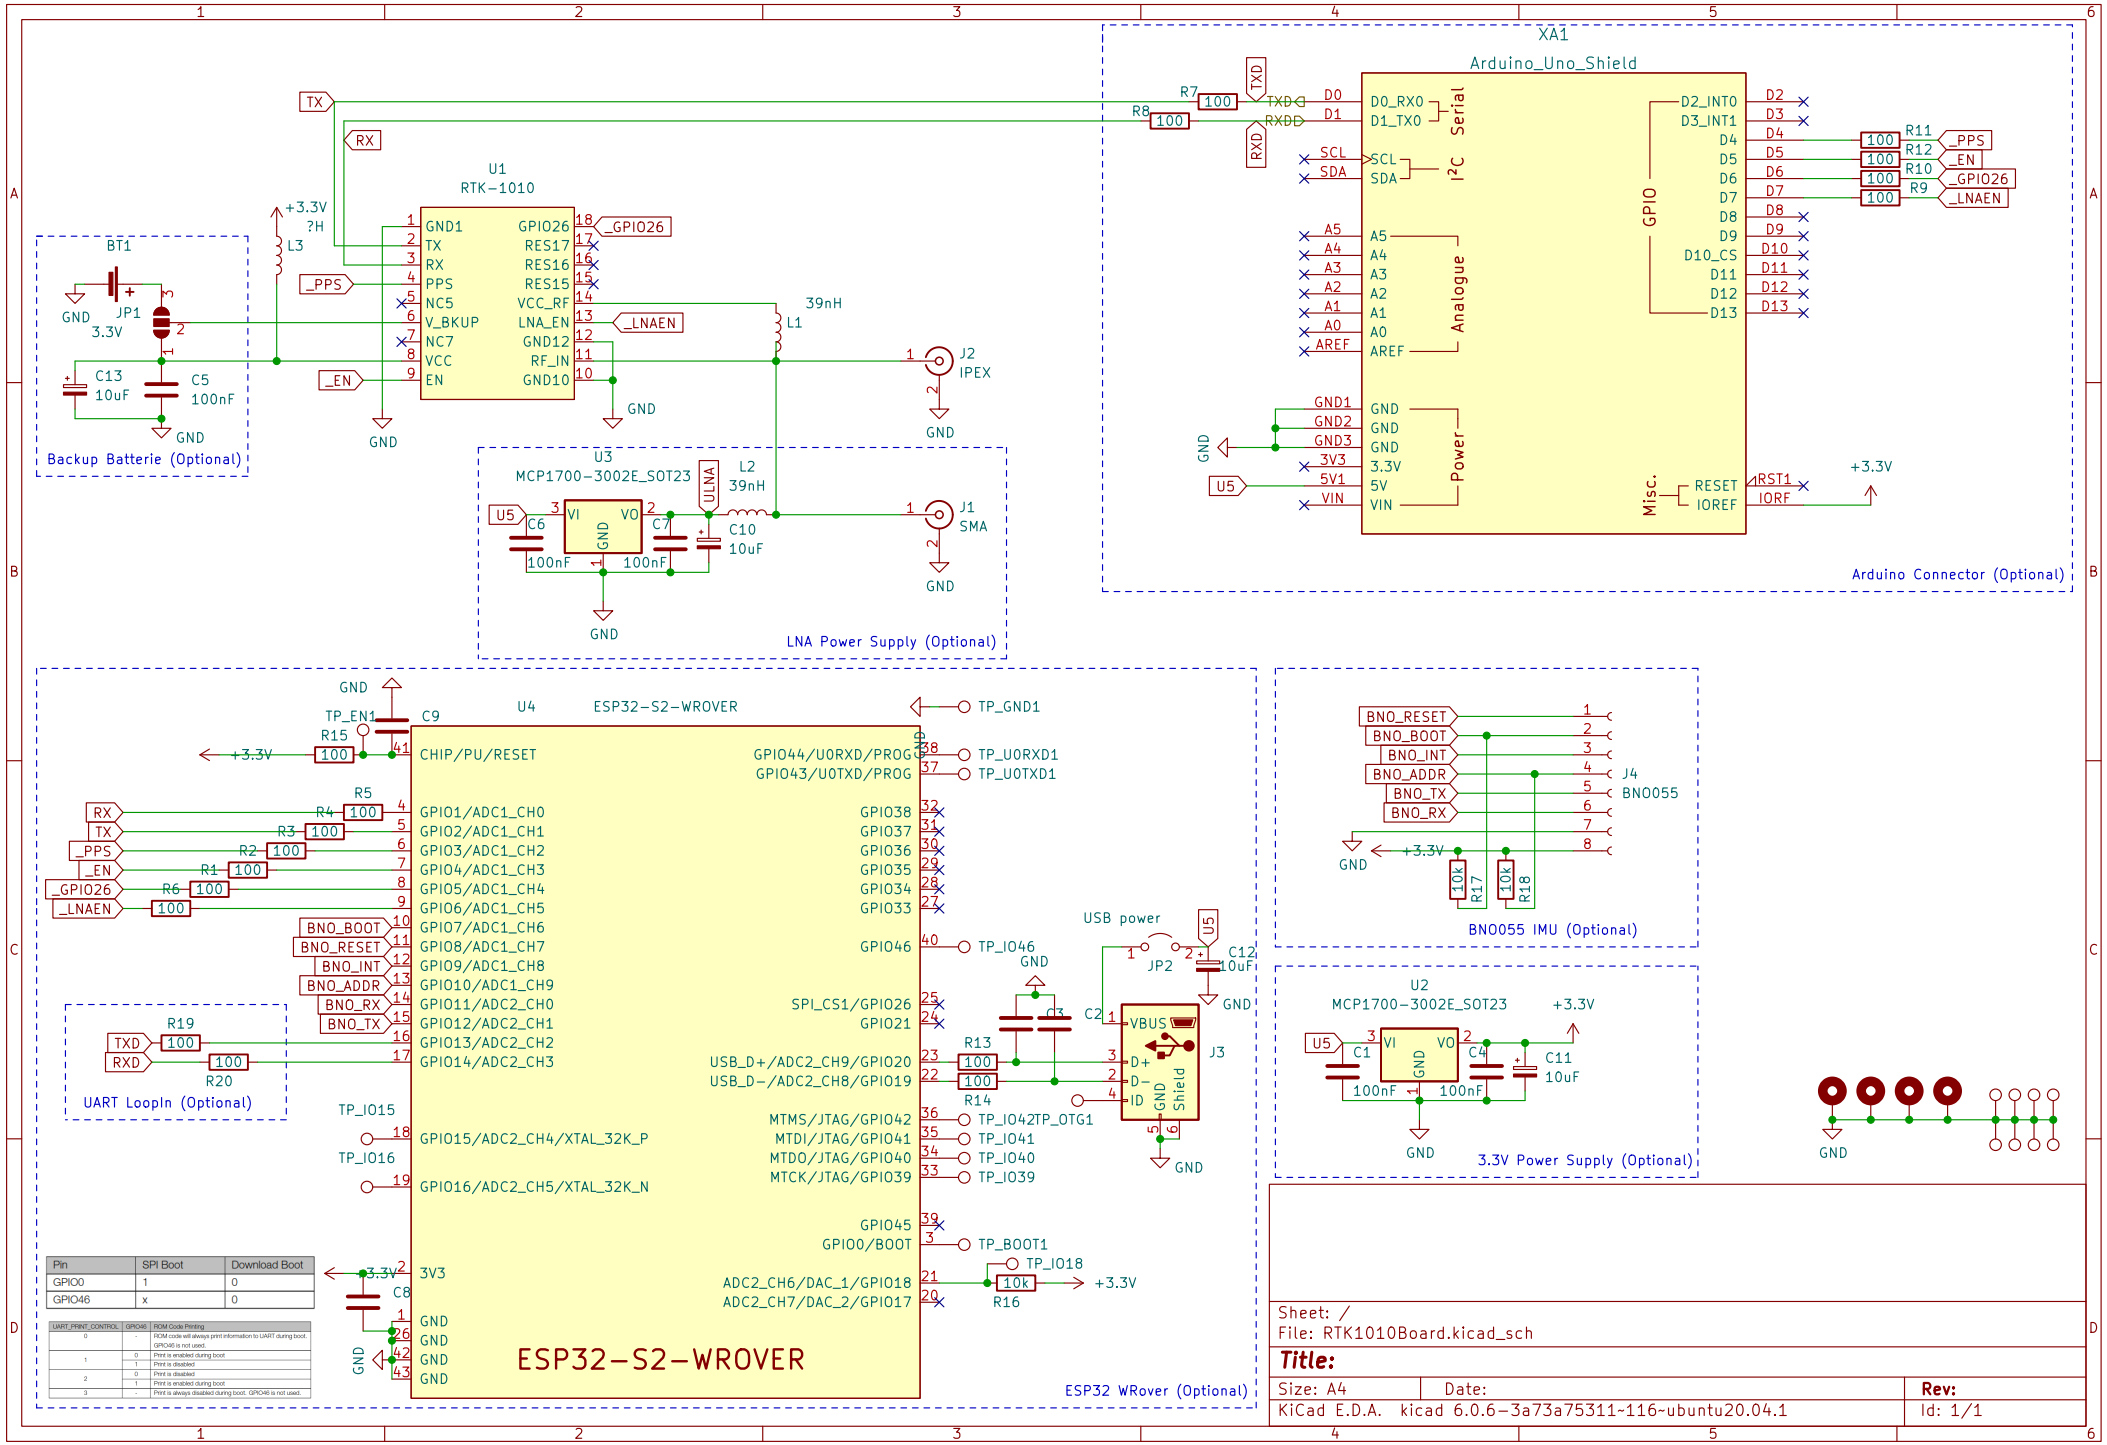

Pin	SPI Boot	Download Boot
GPIO0	1	0
GPIO46	x	0

UART_PRINT_CONTROL	GPIO46	ROM Code Printing
0	-	ROM code will always print information to UART during boot. GPIO46 is not used.
1	0	Print is enabled during boot
	1	Print is disabled
2	0	Print is disabled
	1	Print is enabled during boot
3	-	Print is always disabled during boot. GPIO46 is not used.

Sheet: /
File: RTK1010Board.kicad_sch

Title:

Size: A4	Date:	Rev:
KiCad E.D.A. kicad 6.0.6-3a73a75311~116~ubuntu20.04.1		Id: 1/1