Schweizerische Eidgenossenschaft
Confédération suisse
Confederazione Svizzera
Confederaziun svizra

Federal Department of
Environment, Transport, Energy and Communications DETEC

Federal Roads Office FEDRO

National Roads

Roads No.

1st / 2nd class

N02 / N04 / N08 / N14


-

GE X

Superordinate systems

UeLS-zentras

On-call system

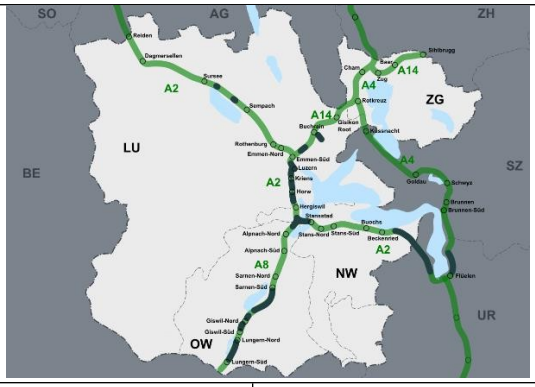

Document author:

Sopra Steria AG
Steinackerstrasse 47
8902 Urdorf

Project author:

Nay Engineering AG
under Sagi 10
6362 Stansstad

Dossier number (zentras)	**900568**		
Inventory object number	03.02.32.892.03		
Document No.			
Created by: Nina Borkowski	Date: January 16, 2026	Reviewed by:	
Filename: 6.3 picket system	Addendum B:	Checked:	
Format: A4			

Project management:

Federal Roads Office
Zofingen branch
Brühlstrasse 3, 4800 Zofingen

Received:	
Reviewed/Review:	
Approval:	

List of changes

Module	Doc. name and change	Doc. no.	Number of pages	Created	Reviewed	Approved	Index / Change
6.3	Document 6.3 On-call system initially created		68	11/28/2025			0.1
6.3	Document 6.3 On-call system updated after workshop		67	Jan. 16, 2026			0.2

Imprint

Project number: MP-200046
File: 6.3 On-call system
Created: January 16, 2026 / Nina Borkowski
Reviewed: Date / Abbreviation
Approved: Date / Initials
Status: Draft
Version/Date of change: 0.2 / January 16, 2026
Dossier no.: 900568

Project author: Nay Engineering AG
Doc. no. Author: Sopra Steria AG

Number of pages: 67
Print date: January 16, 2026, 8:19 a.m.

Table of contents

1 Introduction 5

1.1 Purpose of the document 5
1.2 Structure 5
1.3 Delimitation 5
1.4 SMS and pager message transmission 6

2 Application architecture 7

2.1 User roles 7
2.2 Object model 7
2.2.1 Alarm medium 8
2.2.2 LDAP user 8
2.2.3 On-call participants 9
2.2.4 Absence planning 9
2.2.5 On-call region 9
2.2.6 On-call period 9
2.2.7 Switch-on/switch-off times 9
2.2.8 On-call basic plan 9
2.2.9 Holidays 9
2.2.10 Escalation policy 9
2.2.11 Alarm delay 10

3 Operating principles 11

3.1 Principles 11
3.2 Image layout 11
3.2.1 Meta area 12
3.2.2 Navigation area 12
3.2.3 Process frame 12
3.2.4 Alarm frame 12

4 Navigation 13

4.1 Meta area 13
4.1.1 Quick access icons 14
4.1.2 Navigation browser 15
4.1.3 Login and logout 15
4.1.4 Settings 16
4.1.5 Print 17
4.1.6 Help 17
4.1.7 System information 18
4.2 Navigation area 18
4.2.1 Views Selection 18
4.2.2 Tab selection 19

5 Planning view 21

5.1 Basic planning 21
5.1.1 Adjust handover time for all periods 24
5.1.2 Extend/shorten basic plan 24
5.1.3 Copy floor plan 25
5.1.4 Delete basic plan 26
5.2 Period planning 26
5.2.1 Merge period 31
5.2.2 Split period 32
5.2.3 Adjust transfer date 32

6 Configuration view 34

6.1 On-call region 34
6.2 Pause 35
6.3 Auto pause 35
6.4 Alarm delay 36
6.5 Shipping delay 37
6.6 Assignment Groups -> Regions 39
6.7 Asset activation 40
6.8 On-call participants 41
6.9 Alarm media 42

7 Appointment view 44

7.1 Planning an absence 44
7.2 Configuring holidays 45

8 Notification view 47

8.1 On-call alarms 47
8.2 Delayed alarms 48
8.3 SMS/Pager 49
8.4 Shipping list 51
8.5 Internal alarms 53
8.6 Measurements 54
8.7 Suppressed DP 56
8.8 Test message 56

9 Evaluation view 58

9.1 Overall planning 58
9.2 On-call region 59
9.3 On-call participants 61
9.4 Color selection for region 62

10 System configuration view 63

11 Document view 64

12 Appendix 65

12.1 List of figures 65
12.2 List of tables 66

1 Introduction

1.1 Purpose of this document

This documentation of the new on-call system with a graphical user interface according to the SA-CH standard describes the functionality of the system.

Important use cases for end users are illustrated with useful graphical examples.

1.2 Structure

The following table provides a brief overview of the subsequent chapters and their content.

Chapter	Description
Application architecture	Provides an overview of the components in the on-call system and how the application is structured. This is intended in particular to help show end users what possibilities the system offers and where its limitations lie.
Operating principles	Shows the basic color scheme, operating principles, and animation principles.
Navigation	Explains the functions of the meta area of the application and the principles of navigation.
Planning view	Explains how to create a standby schedule from scratch.
Configuration view	Explains the configuration options for mobile phones, forwarding, delays, etc.
Appointment view	Explains the options for absences and vacations.
Message view	Explains the message lists and their meaning.
Evaluation view	Discusses on-call-specific evaluations and explains how to access them.
System configuration	Focuses on the administration screens.
Document view	Explains how to access documents in the on-call system.

Table 1-1: Structure of the document

1.3 Delimitation

This documentation refers only to the functionality specific to the on-call system. Most of the functionality, such as architecture, operating principles, alarms, etc., is implemented identically to the UeLS-zentras application.

The functionality described is described without taking authorization settings into account. This means that this document may describe functions that a logged-in user does not have access to due to their specific authorizations.

1.4 SMS and pager message sending

The new on-call system continues to send SMS and pager messages via the eCall interface from F24 Schweiz AG. The contract with F24 Schweiz AG and the costs for using the interface remain unchanged by the new development.

An SMS or pager message is sent when an alarm occurs. Structure

of the message:

UeLS-Z <Alarm log and message text>

2 Application architecture

The on-call system is an independent, additional application to UeLS-zentras, which communicates with UeLS-zentras via dedicated interfaces. The application runs within an active-passive cluster with failover.

The on-call system is implemented as a web application on a separate virtual machine alongside the UeLS-zentras application. Unlike the UeLS-zentras application, it is necessary to run the on-call application only once at any given time to prevent alarms from being sent multiple times. For this reason, a cluster with failover is defined for both on-call system instances (in Stans and Senti). This means that messages can only be sent twice in the event of a communication interruption between the two locations. However, this error is considered unlikely and can be easily remedied manually by deactivating all regions at one location.

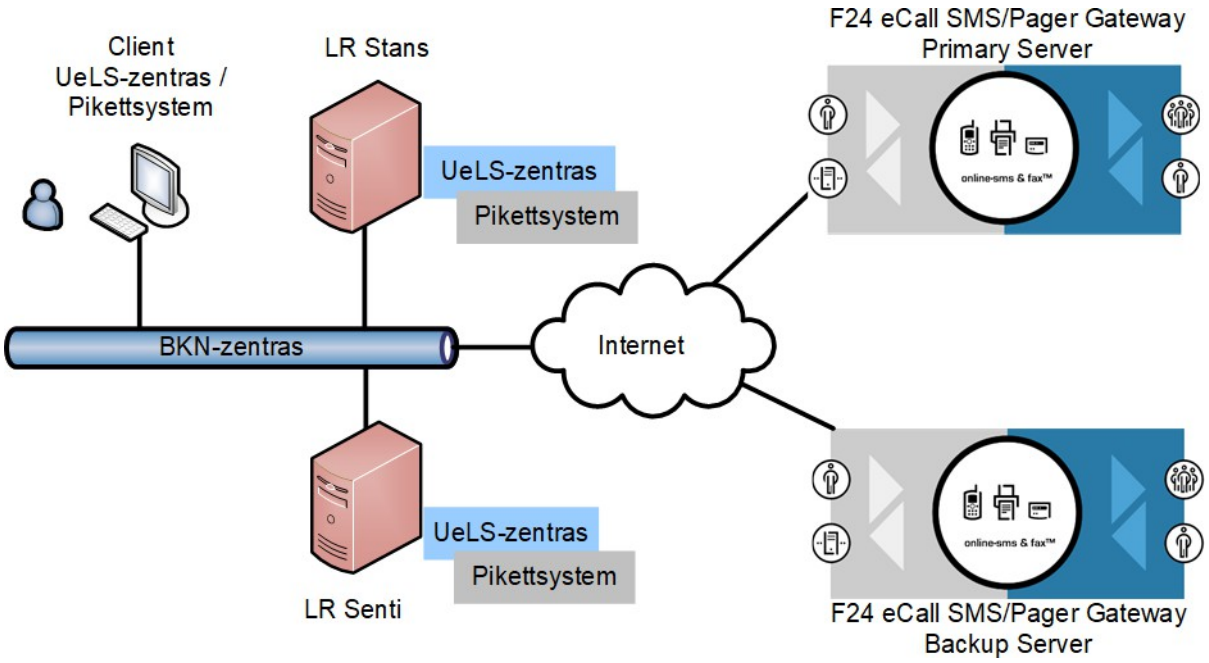


Figure 2-1: Overview of the on-call system and UeLS centers

Alarms that occur in the UeLS are forwarded by the on-call system via eCall by SMS and/or pager to the on-call duty officer. The data point list of the plant control system defines which alarms are forwarded to the on-call system for distribution.

The on-call participants and the corresponding on-call schedule can be stored in the on-call system itself. According to the duty roster, the on-call system forwards the alarms received from the UeLS to the currently active SMS and/or pager numbers.

2.1 User roles

The on-call system works closely with the UeLS-zentras application and uses the rights specified there. These are implemented in the new UeLS-zentras application in the same way as in the old one.

2.2 Object model

Figure 2-2 shows the technical object types from the on-call system domain that are relevant for alerting. The relationships between them and the properties of each object type are shown.

The names of the object types are reserved keywords and are used consistently in this document and all project documents.

Object properties can be managed accordingly (see the following chapter).

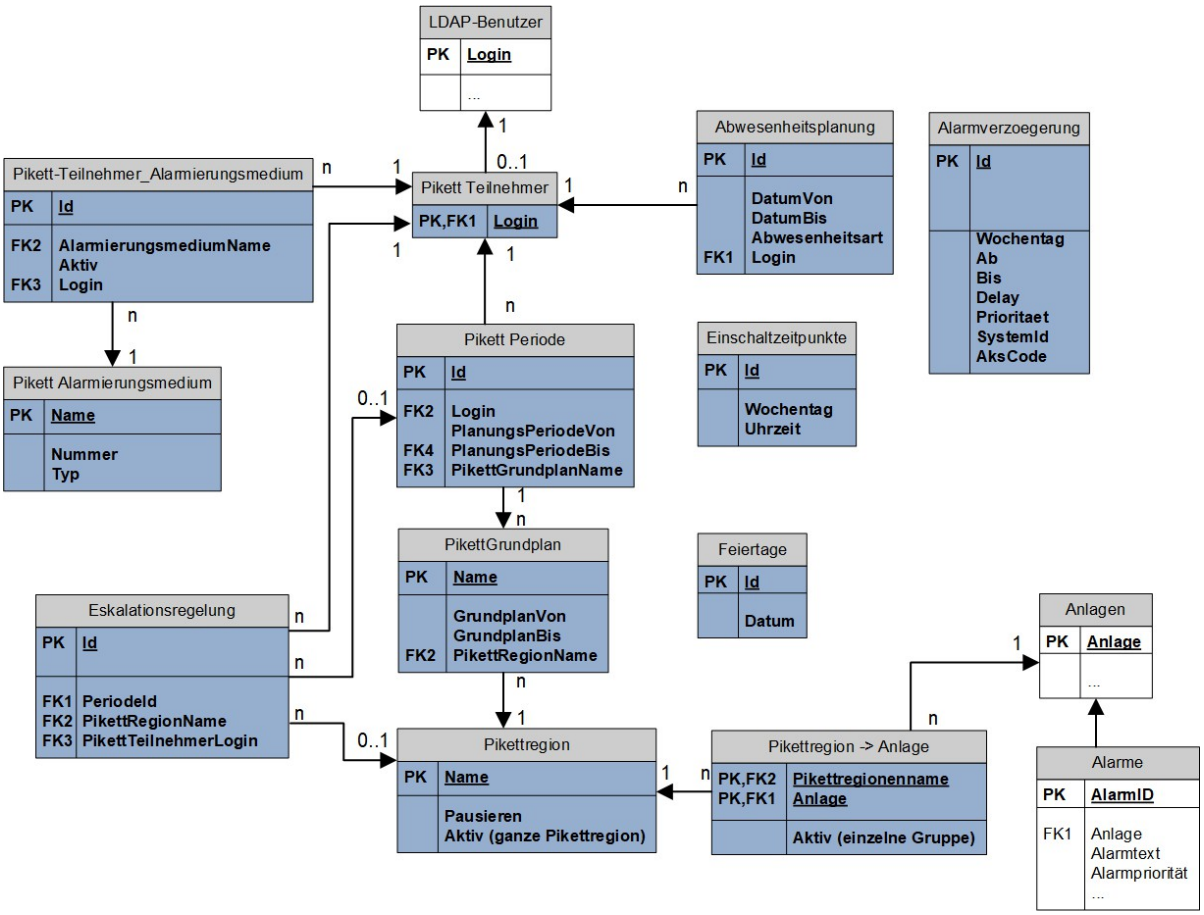


Figure 2-2: Object model for the on-call system

The entities marked in blue are objects specific to the on-call system, while those marked in white are objects specific to UeLS-zentras. The arrows indicate how the objects are related to each other. For example, any number of alerting media can be assigned to an on-call participant. Similarly, an LDAP user can be assigned to none or one on-call participant.

2.2.1 Alarm medium

A cell phone or pager that is alerted via the corresponding number or address. See also section 6.9.

2.2.2 LDAP user

A user who can be logged into the on-call system application directly or via the SSO service from the UeLS application.

2.2.3 On-call participant

An on-call participant is an LDAP user who has been assigned at least one alerting medium. Each on-call participant can be assigned one or more alerting media (mobile phone or pager). See also section 6.8.

Each on-call participant has an absence schedule, which may also be empty.

2.2.4 Absence planning

Holidays or other absences can be entered in the on-call system for each on-call participant. See Chapter 7 for more information.

2.2.5 On-call region

An on-call region consists of one or more facilities. By defining regions, different area responsibilities for the on-call service can be implemented (see Chapter 6.1). An on-call region can be structured more finely or more broadly than the areas of responsibility defined in UeLS-zentras. On-call regions can also overlap, i.e., a facility can belong to several on-call regions.

Each on-call region can be assigned an on-call participant who is alerted in the event of an escalation.

2.2.6 On-call period

Normally, an on-call assignment or on-call period lasts one week. However, any period duration can be specified. See Chapter 5.2 for more information.

A period is a fixed part of an on-call basic plan. The basic plan applies to an on-call region.

When planning on-call duty, the on-call participant responsible is defined for each on-call period. In addition, another on-call participant can be named who will be notified in the event of an escalation.

2.2.7 Switch-on/switch-off times

Different switch-on and switch-off times can be defined for each day of the week. Paused on-call regions (not plant groups!) are automatically reactivated or deactivated when the next switch-on/switch-off time occurs. See chapter 6.3 for more information.

2.2.8 On-call basic plan

The on-call basic plan defines the on-call service for a specific time interval (e.g., annual planning) and a specific on-call region. See chapter 5.1.

2.2.9 Public holidays

Public holidays are recorded so that they can be taken into account when planning on-call duty. When planning an on-call period that includes at least one public holiday, the application explicitly alerts the user with warning messages. See section 7.2 for more information.

2.2.10 Escalation rules

Each on-call period and region can be assigned an additional on-call participant independently and optionally. This participant is alerted if the regularly designated on-call service cannot be reached and therefore cannot be alerted. The reason why the on-call message could not be delivered can be found in the eCall response status (see section 8.3).

The notification chain proceeds in the following order:

- Regular on-call participant
- On-call participant defined for the escalation of the period
- on-call participant defined for the escalation of the region

2.2.11 Alarm delay

Chapter 6.4 describes the configuration of the various alarm delays in detail. The user can specify the following attributes for each configuration:

- **Weekday:** Specifies the day of the week to which this rule applies.
- **From/To:** Specifies the times between which this rule applies.
- **Delay:** Specifies the delay (in minutes) until the message is sent.
- **Priority:** All messages with this priority are delayed. This parameter is optional.
- System**ID**: All messages from a system with the specified ID are delayed. This parameter is optional.
- **AKS code:** All messages with this AKS code are delayed. This parameter is optional.

The individual parameters are linked with an AND, i.e. if, for example, a priority and a system ID are specified, only those messages that have this priority and were generated with the corresponding system ID are delayed.

If an alarm fails, the on-call system is notified by UeLS-zentras. If a delayed alarm (identified by priority, system ID, and AKS code) has not yet been sent at this point, this message is discarded, i.e., no on-call notification is sent.

3 Operating principles

The following chapters explain the general operating principles and the screen layout of the new SA-CH-compliant on-call application.

3.1 Principles

The on-call application is operated via a web browser. Accordingly, the operating philosophy and look and feel are based on a web application and not on a locally installed Windows application.

There are a few important principles that have been defined uniformly in accordance with SA-CH. These principles cover topics such as:

- Color coding of alarm states
- Display of current alarms, measured values, etc.
- Left and right mouse clicks
- Operation, feedback, management, plausibility checks, etc. of statuses and definitions
- Structure of an image display

These concepts were consistently taken into account in order to ensure quick and easy operation for the end user and to standardize the on-call and UeLS applications.

3.2 Screen layout

In accordance with SA-CH specifications, the on-call application is divided into different areas, each of which is intended for specific, consistent functions. The areas are explained in more detail in the following chapters.

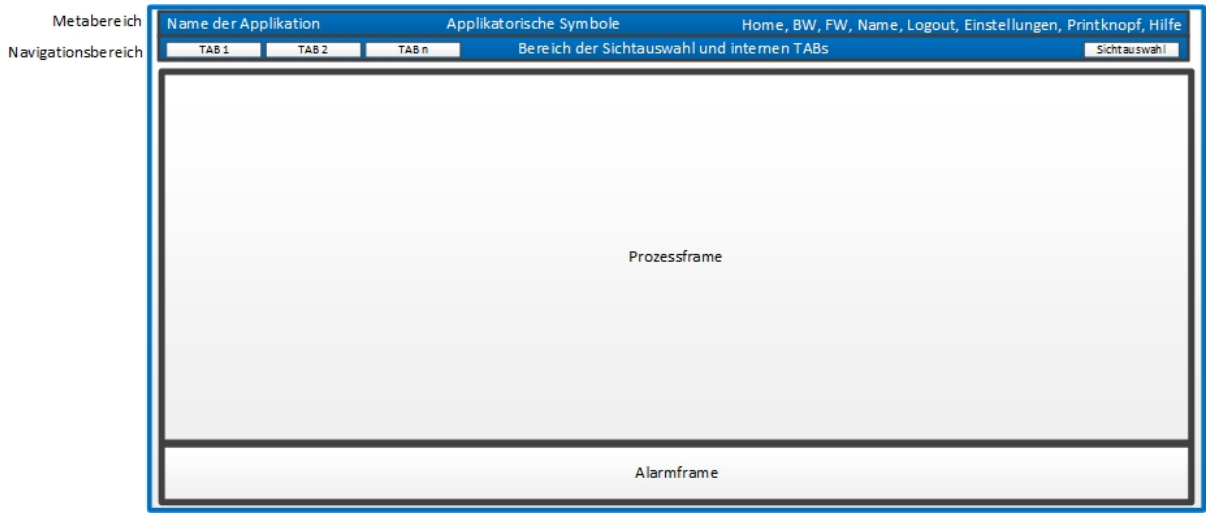


Figure 3-1: Screen layout

3.2.1 Meta area

In addition to the name of the current view, the following information is visible in the meta area:

- Application icons for immediate access to
  - Alarms
  - Suppressed data points
  - Current on-call schedule
  - Detach
  - Dispatcher
- Navigation buttons for
  - Start screen
  - Back to the previously displayed screen
  - Forward to the screen that was displayed before the previous one
- Currently logged-in user
- Logout function
- Settings for the current user
  - Embedding of external applications
  - Start screen
  - Current user group
  - Default user group
- Printing the current display
- Help for displaying this document
- System information ("?")

All of the elements mentioned are explained in section 4.1.

3.2.2 Navigation area

In the navigation area, the different views (top right) and the individual images can be selected via tab tabs (top left). The selection of the view defines the possible masks. See chapter 4.2 for more information.

3.2.3 Process frame

The selected masks are displayed in the process frame.

3.2.4 Alarm frame

The alarm frame displays the currently pending internal alarms (priority 1) and faults (priority 2). Clicking on the border bar expands or collapses the alarm frame.

4 Navigation

4.1 Meta area

The functions described below refer to the icons in the meta area of the screen. Figure 4-1 and Figure 4-2 show the navigation buttons in the existing and new on-call system:



Figure 4-1: Meta frame (existing) Figure 4-2:



Meta area

Icon	Function	Access to date	Future access
	Start screen	Via icon in the meta frame (left)	Via icon in the meta area (top)
	Back	Via icon in the meta frame (left)	Via icon in meta area (top)
	Forward	Via icon in meta frame (left)	Via icon in meta area (top)
	Log out	Via icon in the meta frame (left)	By left-clicking on *Logout* in the meta area (top)
	Print	Via icon in the meta frame (left)	Via icon in the meta area (top)
	Help	Via icon in the meta frame (left)	By left-clicking on *Help* in the meta area (top)
	System information	-	Via icon in the meta area (top)
	Detach	Via icon in meta frame (left)	Via icon in meta area (top)
	Communication screen	Via icon in meta frame (left)	Via the view selection: Under System Configuration in the Communication tab
	Dispatcher dialog	Via icon in meta frame (left)	Via icon in the meta area (top)
Icon	**Function**	**Access to date**	**Future access**

	Paused on-call regions	Via icon in the meta frame (left)	Via view selection: Under Configuration view in the On-call region tab
	On-call facilities Forwarding	Via icon in the meta frame (left)	About the view selection: Under Configuration view in the Plant activation tab
	Operating Mode	Via icon in the meta frame (left)	-
	Pending alarms	Via icon in the meta frame (left)	Via icon in the meta area (top)
	Suppressed data points	Via icon in the meta frame (left)	Via icon in meta area (top)

Table 4-1: Instant access icons

4.1.1 Quick access icons

4.1.1.1 Pending alarms

The icon ( ) displays all pending alarms. Left-clicking on the icon opens the list of alarms. Right-clicking on an alarm opens the corresponding context menu.

4.1.1.2 Suppressed data points

The icon ( ) shows how many suppressed data points are present on the current system. Left-clicking on the icon opens the list of suppressed data points in the message view in the process frame. Individual data points or all data points can be reactivated by simply selecting them. Search fields can be used to search for specific entries. The 'x' symbol indicates the number of suppressed data points in UeLS-zentras.

4.1.1.3 Current on-call planning

The icon ( ) displays a dialog box with the currently defined on-call duty for each region.

4.1.1.4 Dispatcher dialog

Pressing the Dispatcher function ( ) opens the Dispatcher dialog, which allows you to pause the desired on-call regions. By selecting a location such as "Lucerne" for the dispatcher, the on-call alarms are paused for all other regions, i.e., "Sarnen,"
"Sprengi," "Stans," and "Zug." Selecting the "Pager" option reactivates all regions.

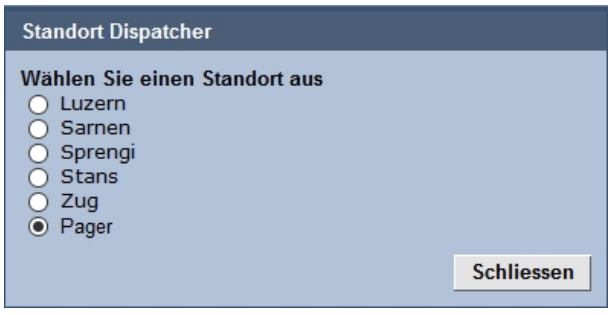


Figure 4-3: Dispatcher dialog (existing)

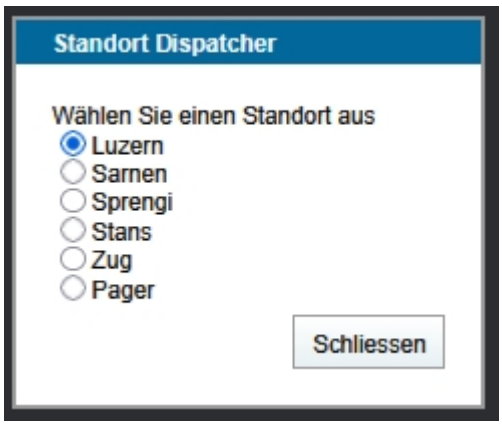


Figure 4-4: Dispatcher dialog

4.1.1.5 Detach

The Detach function ( ) detaches the process frame and displays it in a separate browser.

This browser image remains open until it is closed by the user or the user logs out of the application.

The replaced browser images of the process frame behave identically to those in the main window of the application.

There is no limit to the number of browser images that can be triggered simultaneously.

4.1.2 Navigation browser

The three icons can be used to navigate within the application by left-clicking on them:



- The icon ( ) takes you to the start screen. This can be configured globally for the on-call system. In addition, the start screen can be customized by each user in the settings (see chapter 4.1.4).
- The symbol ( ) branches to the last displayed image. Navigation is only possible for images and not for dialog boxes. It is only possible to navigate back within the same user session. The display of the previous screen may no longer be identical if the information displayed has changed in the meantime. The buffer size is limited to a maximum of 10 screens.
- The symbol ( ) can be used to navigate forward again after navigating backward.

Please note: The browser's own navigation buttons cannot be used for navigation.

4.1.3 Logging in and out

The on-call system receives all relevant UeLS-zentras users from LDAP. The UeLS-zentras users are therefore known to the on-call system and can log in to the on-call system automatically without having to be configured beforehand.

If the user logs in directly to the on-call system application, they identify themselves with their username and password.



Figure 4-5: Logging in (existing)

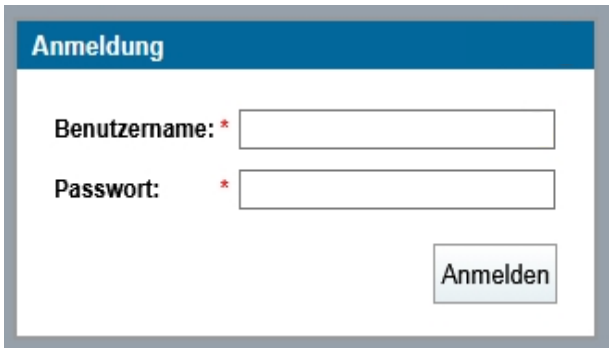


Figure 4-6: Logging in

The on-call system application can also be launched directly from the UeLS-zentras application, in which case the user is automatically logged into the on-call system application via SSO.

By clicking on *Logout*, the user logs out of the application and a new login dialog box is immediately displayed.

If the user is inactive for a long period of time, the session expires and the user must log in again.

Note

It is possible for Sopra Steria to define local on-call system users in the on-call system who only exist in the on-call system application. Local on-call system users are used to log in to the on-call system application without the on-call system having to be integrated into UeLS-zentras. These are purely technical users.

4.1.4 Settings

The user settings can be changed as follows using the " | Einstellungen | " button:

- **Embed external URLs:** This means that external applications are embedded in the current browser when called up. If this option is not selected, a new browser window is opened each time. The new window is launched either in a new tab of the browser or in a new separate window. This depends on the browser settings.
- **Current user group:** If the user belongs to multiple user groups, they can change the current user group without logging in again.
- **Default user group:** If the user belongs to multiple user groups, they can specify the user group with which they normally want to log in to the application.

- **Startup image:** The startup image can be set after logging in by selecting the startup image in the Metaframe area.

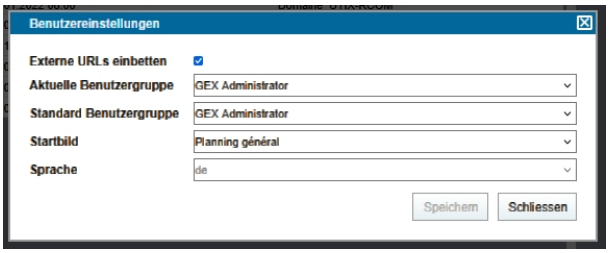


Figure 4-7: Settings

4.1.5 Print

Left-clicking on the icon ( ) prints the browser window 'WYSIWYG'. This means that whatever is currently visible is printed. The image is printed directly to the default printer. This function is not suitable for printing lists, as only the visible area of the list is printed. Special export functions are available for this purpose (see Chapter 9).

4.1.6 Help

Left-clicking on *Help* opens the document view of the on-call system.

In this view, you can search for topic-oriented documents. These include user manuals, training materials, MMI specifications, and others.

4.1.7 System

The icon (?) displays system information about the version.

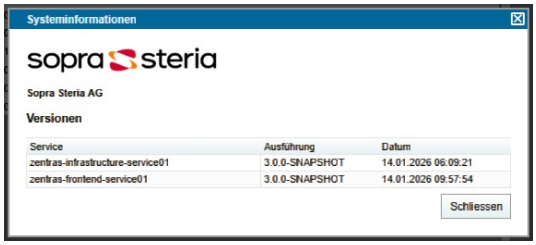


Figure 4-8: System information

4.2 Navigation area

4.2.1 View selection

The main navigation option is to select different views.



Figure 4-9: Navigation structure (existing)

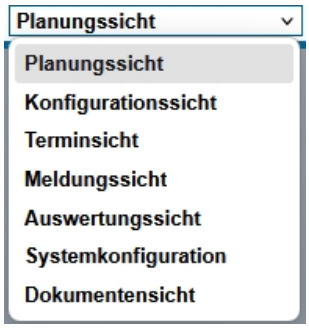


Figure 4-10: View selection

These different views can be selected at the top right:

- Planning view
- Configuration view
- Schedule view
- Notification view
- Evaluation view
- System configuration
- Document view

4.2.2 Tab selection

Within a view, the respective area can be accessed via tabs.



Figure 4-11: Tab selection in the planning view

Navigation is structured according to the following scheme:

Navigation node	Tab	Description
Planning view	Basic plan Period planning	This view shows the different screens for on-call planning. See Chapter 5.
Configuration view	On-call region Pause Auto Pause Alarm Delay Shipping Delay Groups -> Regions System Activation On-Call Participant Recipient media	This view shows the different masks for configuring on-call duty, such as delays, system activation, etc. See also Chapter 6.
Appointment view	Absences Holidays	This view shows the masks for entering absences and vacations. See also Chapter 7.
Notification view	On-call alarms Delayed alarms SMS/pager dispatch list Internal alarms Measurements Suppressed DP Test message	This view shows the lists of different current values. These are the on-call alarms, SMS/pager, dispatch list, alarm list, data point values, and list of suppressed data points. See also Chapter 8.
Evaluation view	Overall planning On-call region On-call participants	This view is used to create on-call reports. See also Chapter 9.
System configuration	Objects Plant computers Plants Data point groups Data points Communication	This view is used to configure the on-call system at runtime. New or updated data point lists can be imported, and alarms can also be changed. See also Chapter 10.

Navigation nodes	Tab	Description
Document view	Documents	This view displays the documents stored in *Help*.

Table 4-2: Navigation tree

5 Planning view

The planning view contains all the functions required to create basic and period planning for on-call duty.

In general, an on-call schedule usually covers a longer period of time, which is divided into regular on-call sections, hereafter referred to as on-call periods.

The on-call system helps users to easily create such on-call schedules.

In general, each on-call participant can be assigned multiple alerting media. An alerting medium corresponds to a pager or a cell phone.

Figure 5-1 shows a schematic representation of the basic on-call plan.

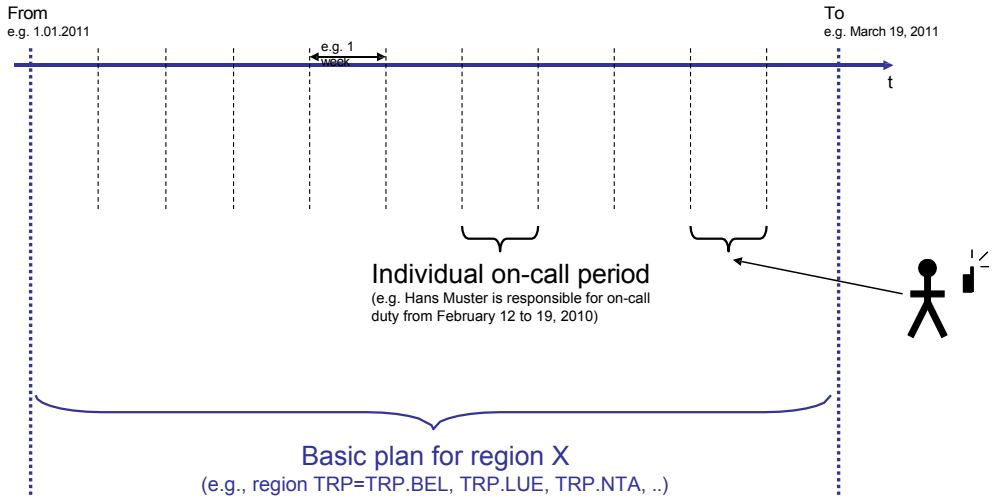


Figure 5-1: Schematic representation of a basic on-call plan

When the on-call system receives an alarm from the UeLS center, it first checks which region the alarm applies to. This is done on the basis of the system identification.

The on-call basic plan and thus the responsible on-call participant for the current period is then determined for all affected regions.

The UeLS-zentras alarm is then sent to all active alarm media of the responsible on-call participants.

The following section explains step by step the configuration required to set up the alarm for the basic plan created above.

5.1 Basic plan

A basic on-call plan always refers to exactly one on-call region. A separate on-call plan must therefore be created for each region.

A basic on-call plan typically defines the plan for one year (365 days). It applies to a specific on-call region and has a start and end time. The on-call region, in turn, defines for which systems the alarms that occur are forwarded (see chapter 6.1).

By default, the basic plan is divided into equal periods with a fixed handover time (e.g., in periods of 7 days and a handover at 11:00 a.m.) which fill the basic plan.

When creating a new standby duty roster, the following properties must be set:

Property	Description
Name	Unique name for the basic plan. By default, this is Year_Region_Name, but any unique name can be used.
Property	**Description**

	. The name may only be edited when it is first entered.
Region	The region for which this basic plan is created. The region may only be edited when it is first entered.
From	Start time of the basic plan. A basic plan may cover a maximum of 10 years.
To	End date of the basic plan. A basic plan may cover a maximum of 10 years.
Period duration	Number of days in an on-call period, i.e., the period for which an on-call participant is responsible. The duration of the period must be a valid number less than 365 days.
Handover time	The handover time defines when an on-call period ends and the next on-call period begins. The specified time must be entered in HH:mm format and have a value between 00:00 and 23:59.

Table 5-1 On-call basic plan properties

If the user then saves the new on-call basic plan, the system automatically creates all on-call periods with the selected duration and the set handover time (see chapter 5.2).

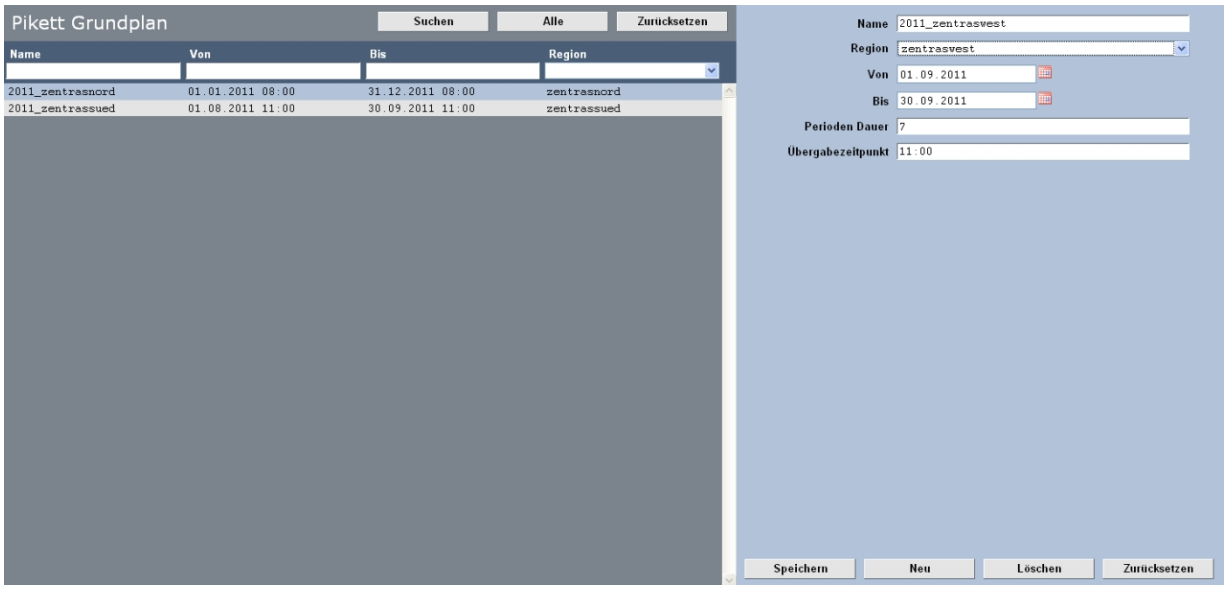


Figure 5-2: Create basic plan (existing)

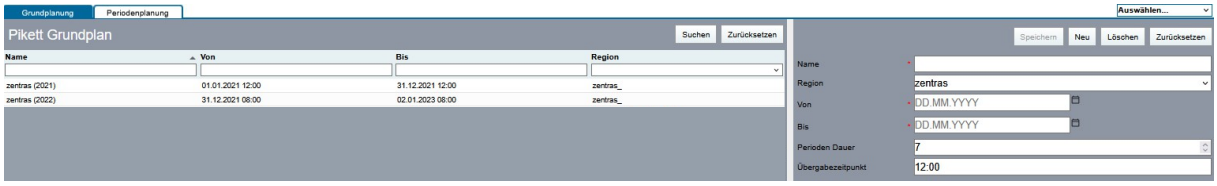


Figure 5-3: Create basic plan

An existing basic plan can be edited after it has been created. The user has the following options:

Function	Description
Adjust transfer time for all periods	Changes the handover time for all on-call periods in the basic plan to the newly specified time.
Shorten/extend basic plan	The start and end dates of the basic plan can be adjusted.
Copy basic plan	The option to copy the basic plan, including all its planned periods, and save it under a new name for a new region is no longer available in the new on-call system.

Table 5-2 Functions for editing the basic plan

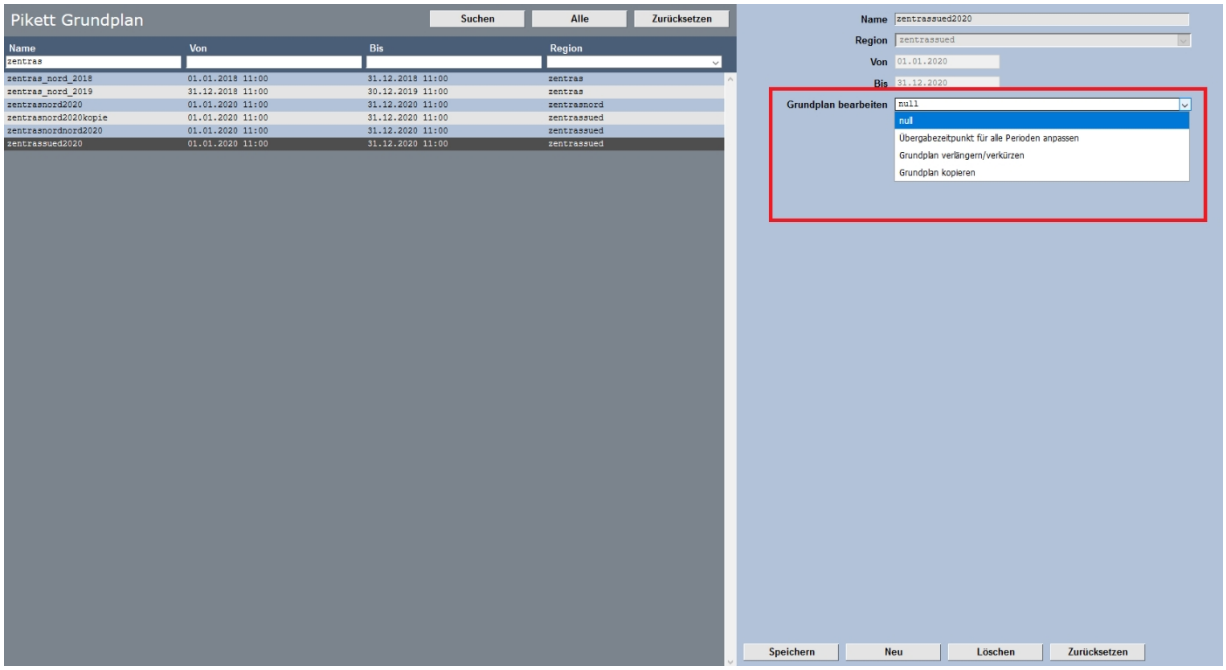


Figure 5-4: Editing the basic plan (existing)

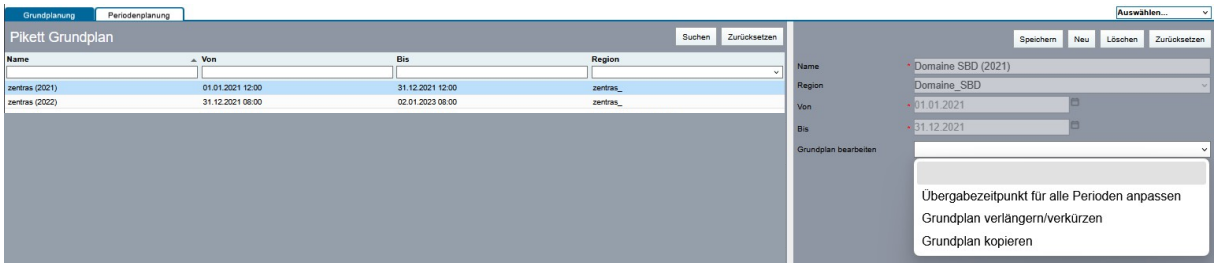


Figure 5-5: Editing the basic plan

5.1.1 Adjust handover time for all periods

If the *Adjust handover time for all periods* function is selected, a selection field appears for entering the new handover time.

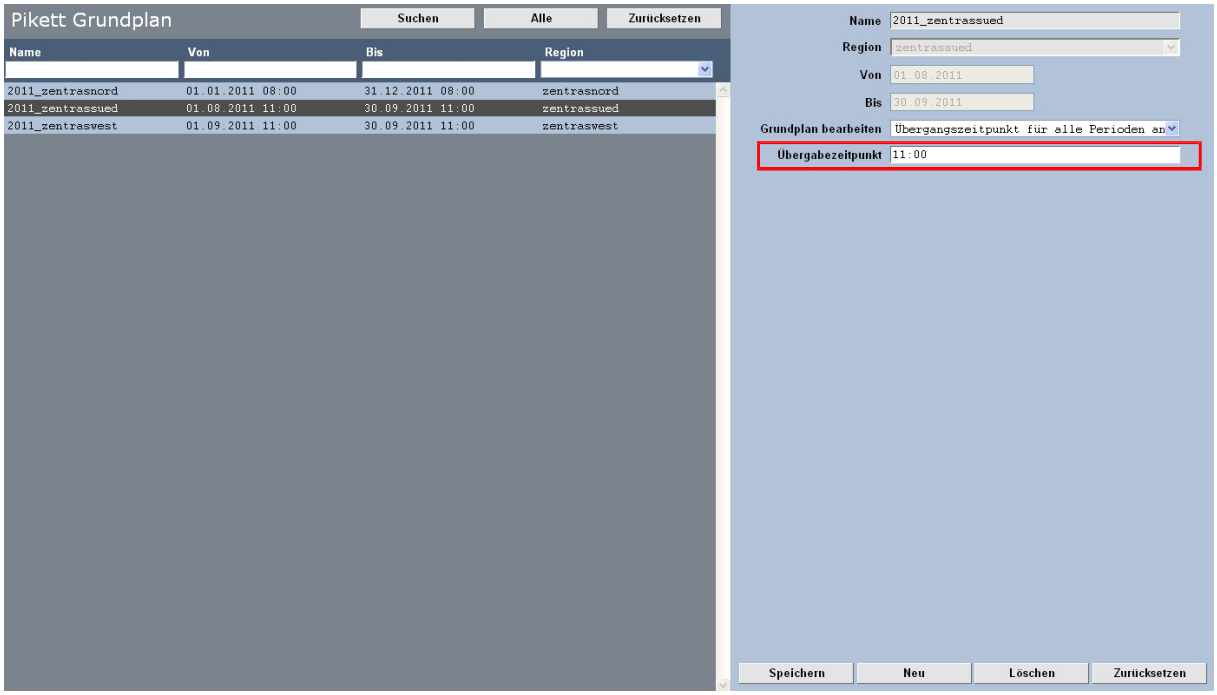


Figure 5-6: Adjust transfer time (existing)

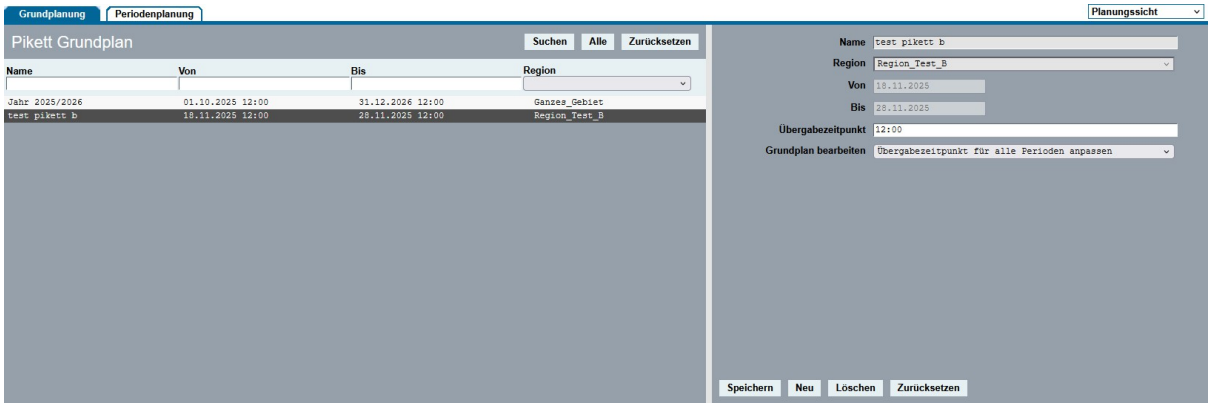


Figure 5-7: Adjusting the handover time

When the user saves the entry, the on-call system automatically adjusts all on-call periods to the newly set handover time.

5.1.2 Extend/shorten basic plan

The time range of an existing basic plan (i.e., the from and to dates) can be adjusted as desired.

If the user selects this function, the From and To date fields are enabled for input. In addition, two new input fields appear for specifying the new handover time and the period duration for new periods to be created.

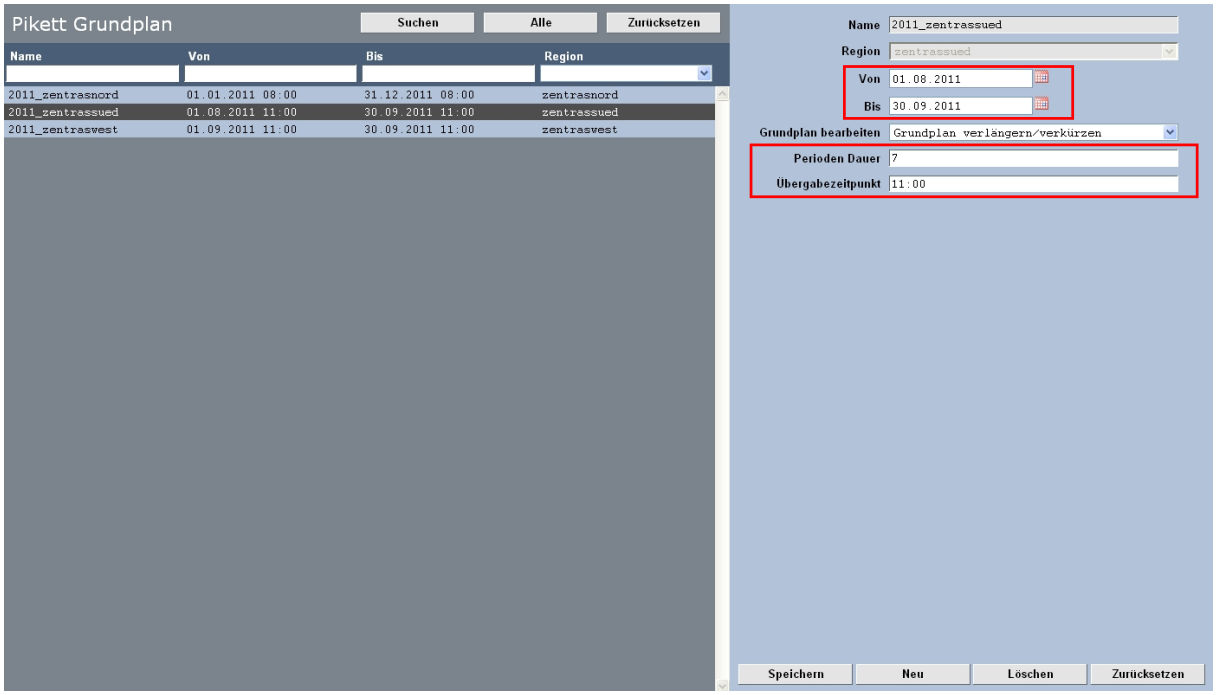


Figure 5-8: Extend/shorten basic plan (existing)

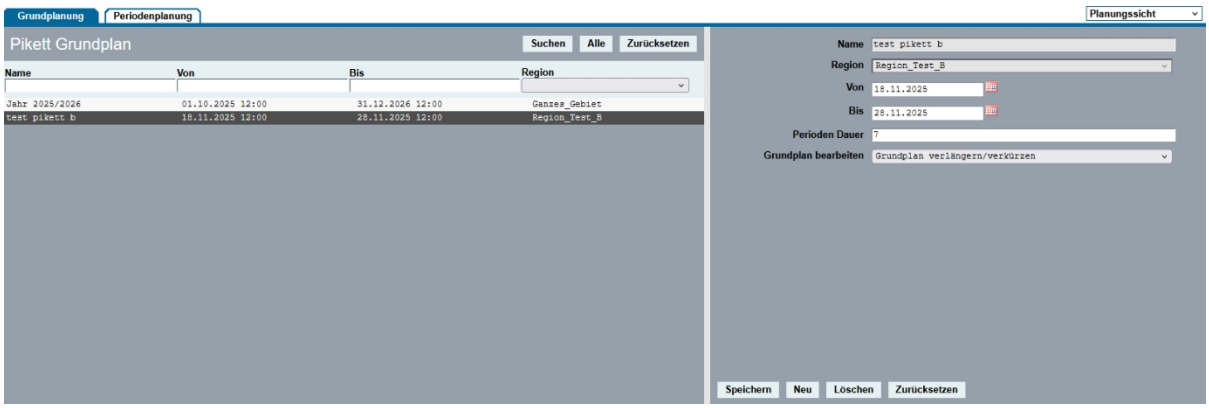


Figure 5-9: Extend/shorten basic plan

Please note the following:

- Existing on-call periods are deleted or shortened, but never extended.
- The specified period duration is taken into account for newly created periods, but has no effect on the period duration of existing periods.
- The handover time is set to the newly selected handover time for all periods.
- The specified period duration only applies to new on-call periods to be created.

5.1.3 Copy basic plan

The basic plan, including all its planned periods, can be copied and assigned to a new region.

If the user selects this function, two additional fields are displayed:

- Name of the new base plan
- Region of the copied base plan

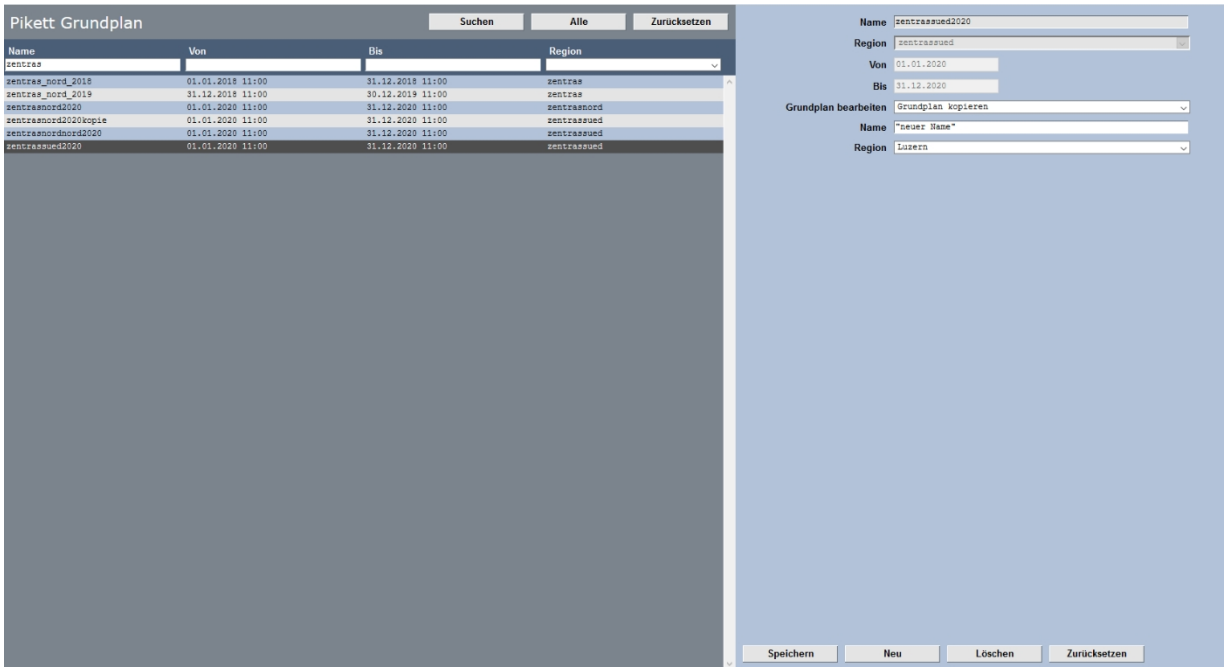


Figure 5-10: Copy floor plan (existing)

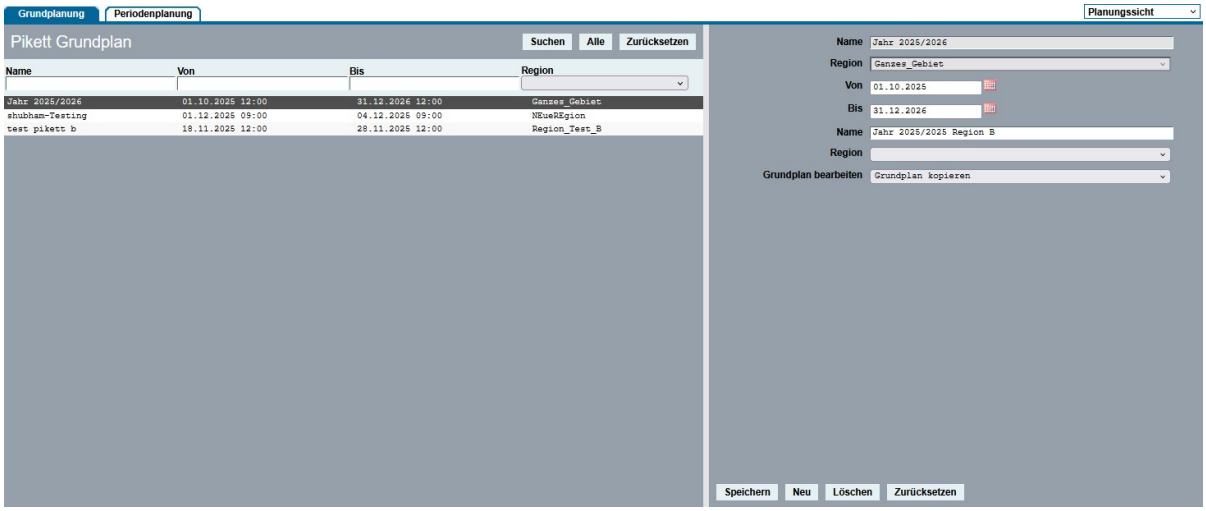


Figure 5-11: Copying a floor plan

Please note the following:

- The name must be unique

5.1.4 Delete on-call basic plan

If an existing basic plan is deleted, all of its on-call periods are also automatically deleted.

5.2 Period planning

For each period, an on-call participant is now scheduled in the Period planning tab, who then has on-call responsibility for this time span (or period).

To view the on-call periods of an on-call master plan, select the corresponding master plan in *the Master Plan* selection field (see Figure 5-12). Click on the *Search* button to display all periods of the selected master plan.

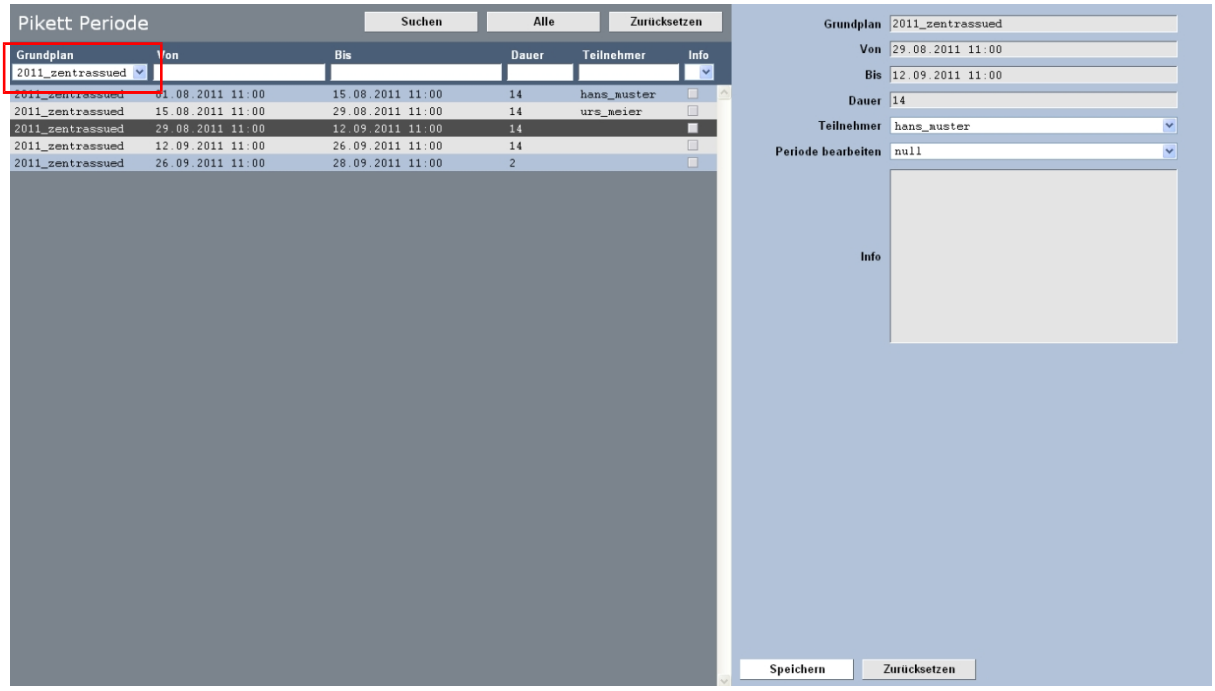


Figure 5-12: On-call periods (existing)

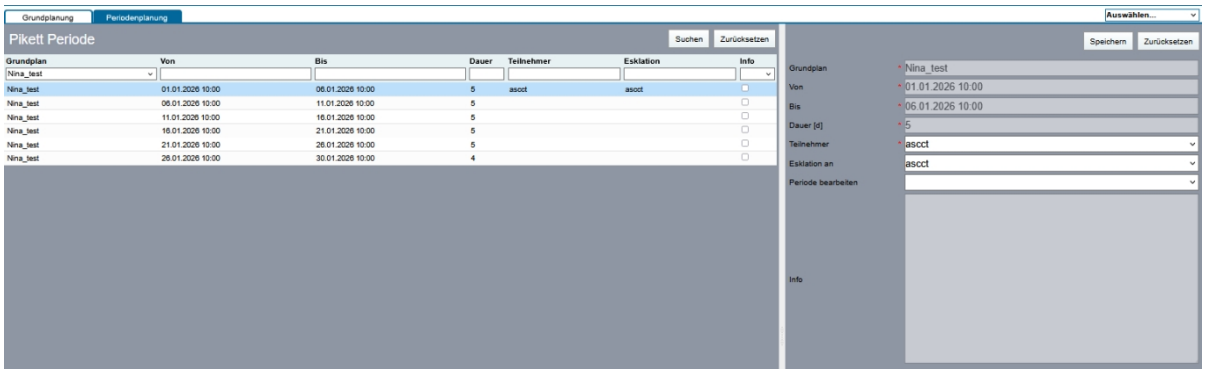


Figure 5-13: On-call periods

An on-call period has the following properties:

Property	Description
Basic plan	Specification of the basic plan to which the period belongs. Displayed as information and cannot be edited.
From	From Time of the period. Displayed as information and cannot be edited.
To	End date of the period. Displayed as information and cannot be edited.
Duration	Period duration. Displayed as information and cannot be edited.
Participant	The on-call participant responsible who is assigned to this period.
Escalation on	If necessary, an escalation can be selected, which will be notified if the participant cannot be reached.
Edit period	Functions for editing the period. See subsections 5.2.1, 5.2.2, and 5.2.3 below.

Property	Description
Info	Information message (see description below).

Table 5-3 On-call periods Properties

When a participant is registered, the following plausibility checks are performed:

- Did the participant already have on-call duty in the previous period?
- Is the participant already scheduled in the following period?
- Has the participant already signed up for another on-call duty?
- Is the participant absent during the planned period?

These messages are displayed when saving and then in the info box. However, this is for information purposes only and does not result in any restrictions. A comment is displayed in the Info column of the list of periods with a "mark."

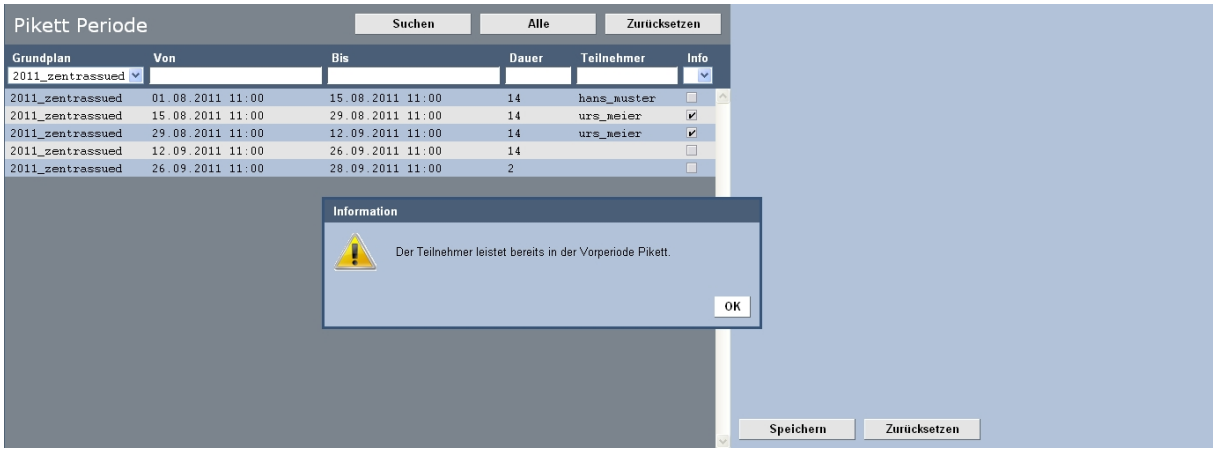


Figure 5-14: Info box (existing)

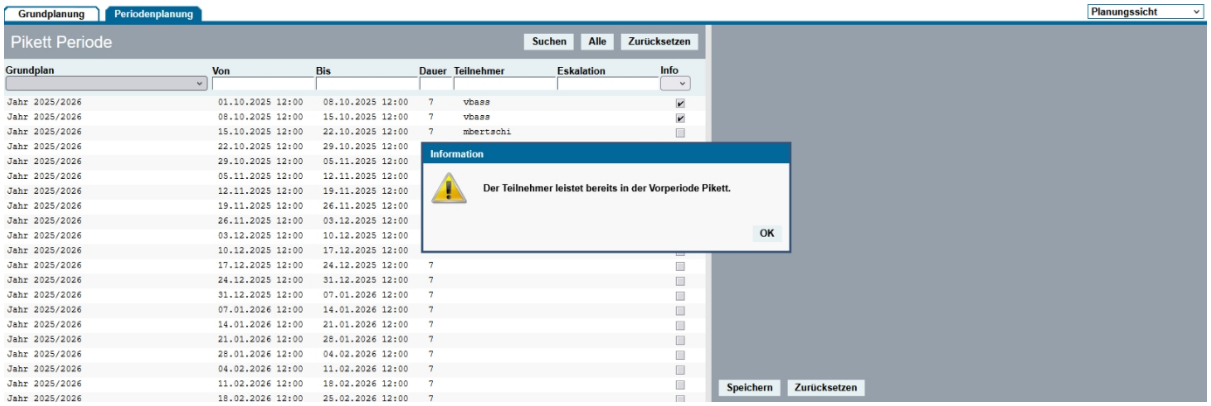


Figure 5-15: Info box

On-call periods for which the above checks are positive have the information flag activated in the overview table, and when the period is selected, the result of the check is displayed in the *Info* text field, see Figure 5-16.

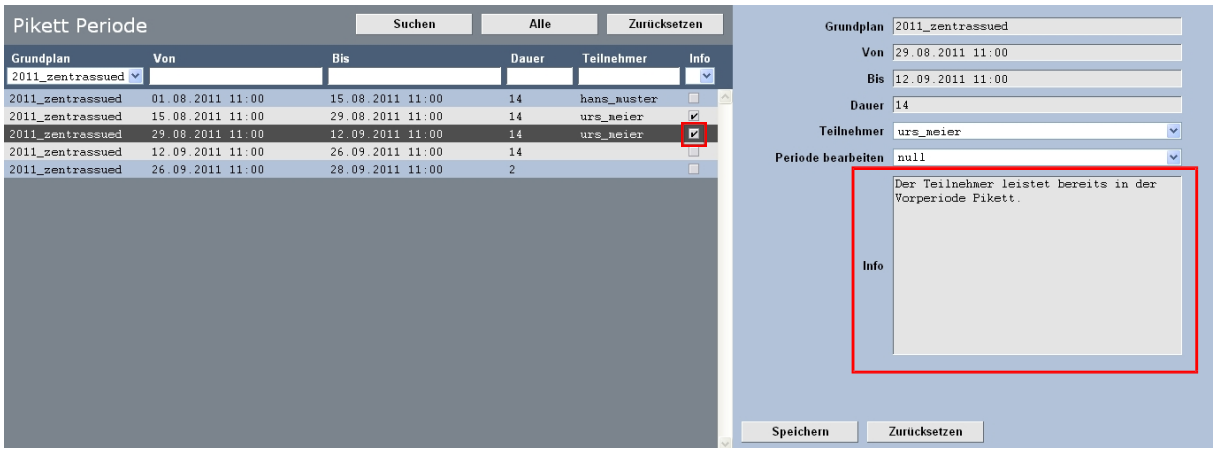


Figure 5-16: Info field (existing)

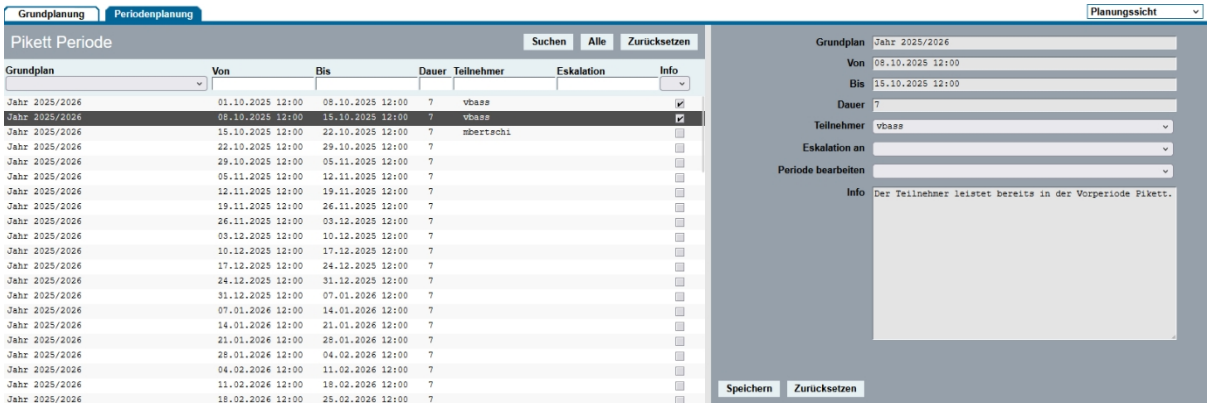


Figure 5-17: Info field

Existing on-call periods can be edited. The user has the following options available:

Function	Description
Merge period	Merges the selected period with the preceding or following period.
Split period	Splits the selected period into two periods.
Adjust transfer date	Adjusts the transfer date to of the selected period and the transfer date from of the successor period.

Table 5-4 Functions for editing a period

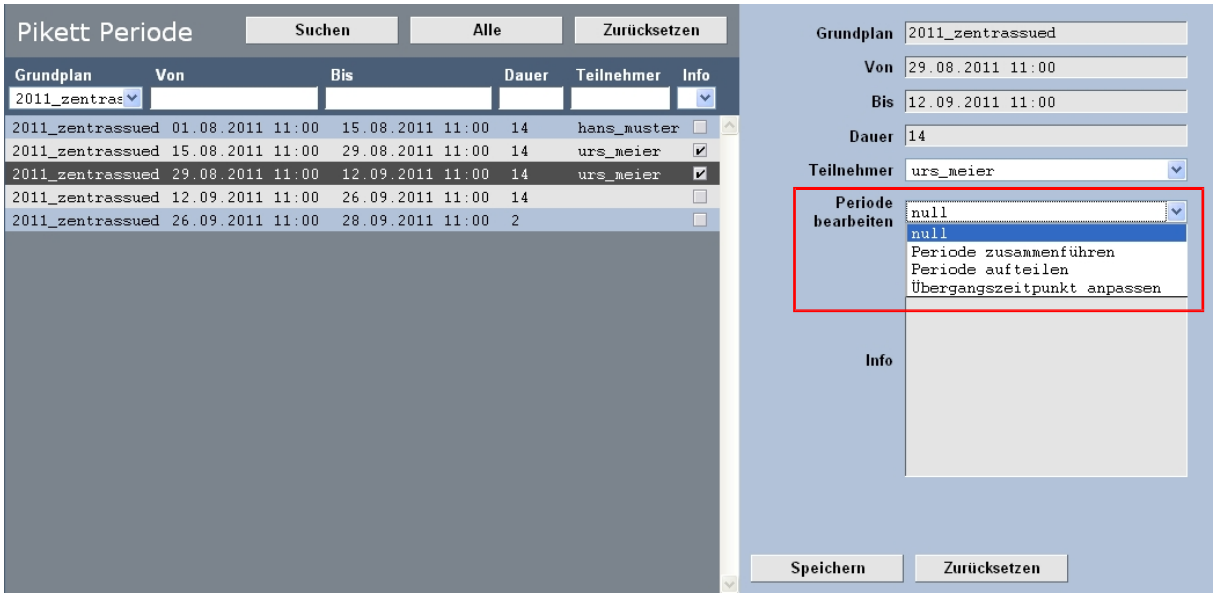


Figure 5-18: Editing periods (existing)

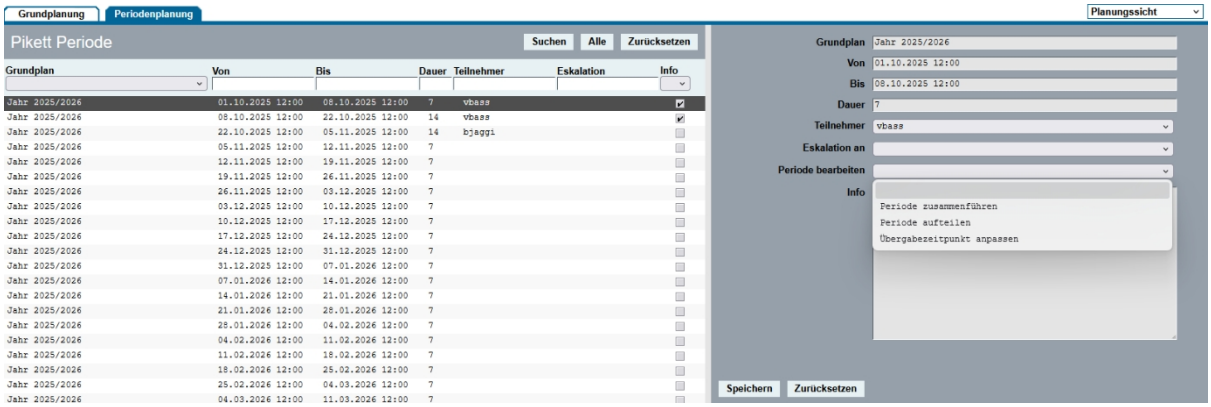


Figure 5-19: Editing periods

If no on-call duty is planned, an alarm message should be sent to the UeLS center so that maintenance can be informed.

5.2.1 Merge period

If the *Merge Period* function is selected, a selection field appears for selecting the previous or subsequent period.

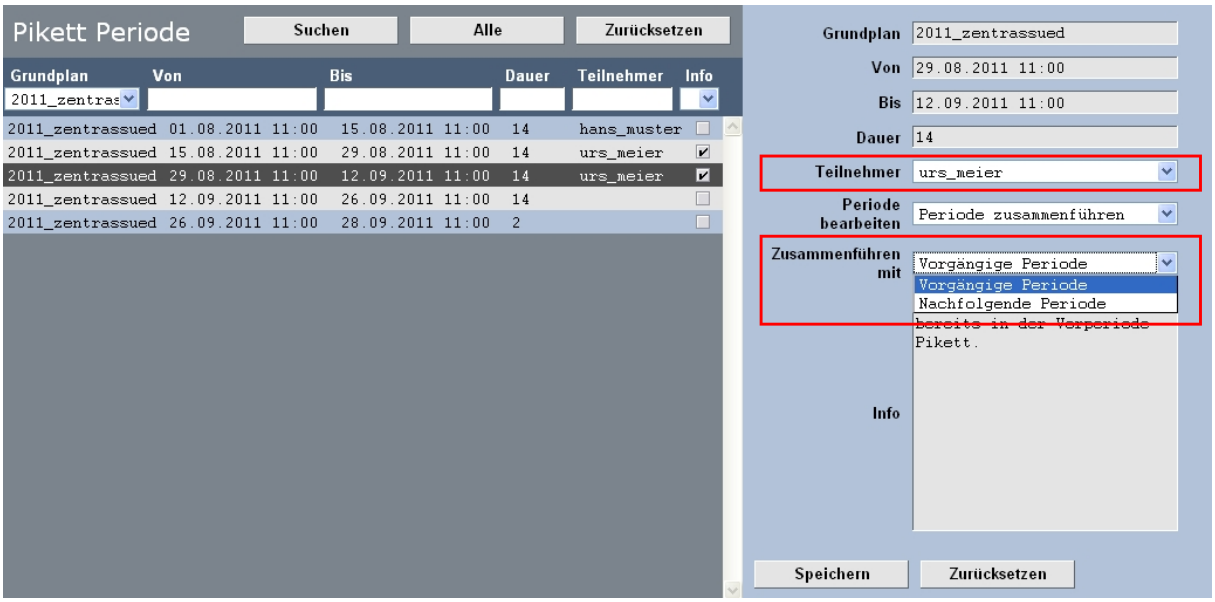


Figure 5-20: Merge period (existing)

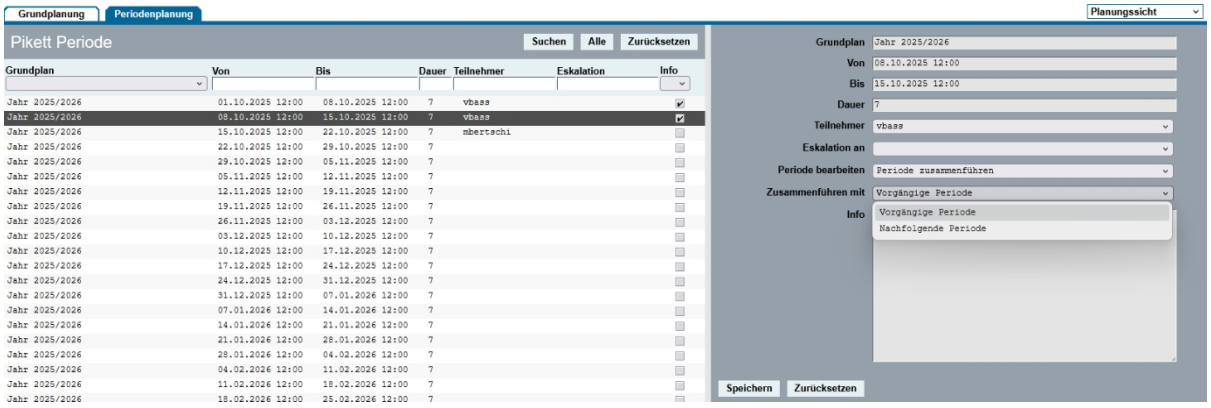


Figure 5-21: Merge period

You can also select the on-call participant who will be responsible for the newly created on-call period. If the on-call participant does not match the planned on-call participant for the originally selected period, a warning will be displayed when you save.

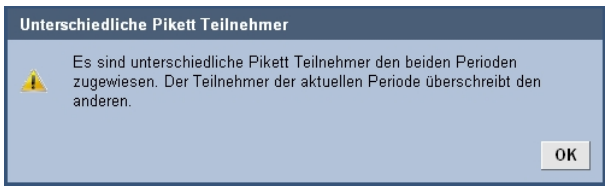


Figure 5-22: Warning message for different on-call participants (existing)



Figure 5-23: Warning message for different on-call participants

5.2.2 Split period

If the Split period function is selected, an input field appears for specifying the number of days for the first part of the new period to be created. You can also select the on-call participant who will be responsible for the two newly created on-call periods.

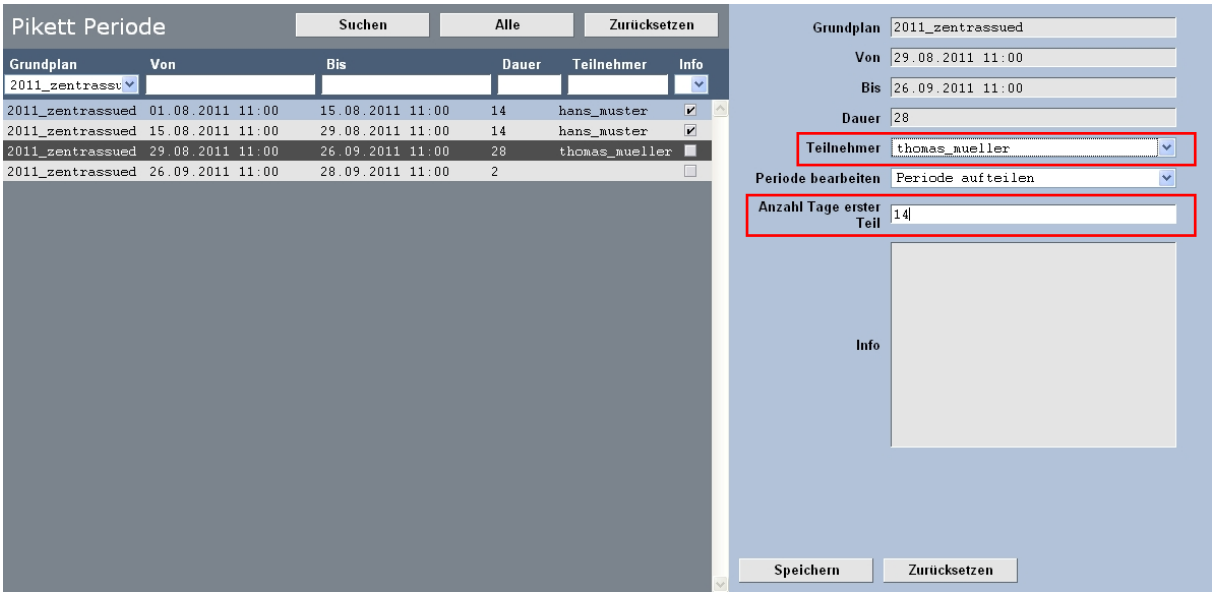


Figure 5-24: Split period (existing)

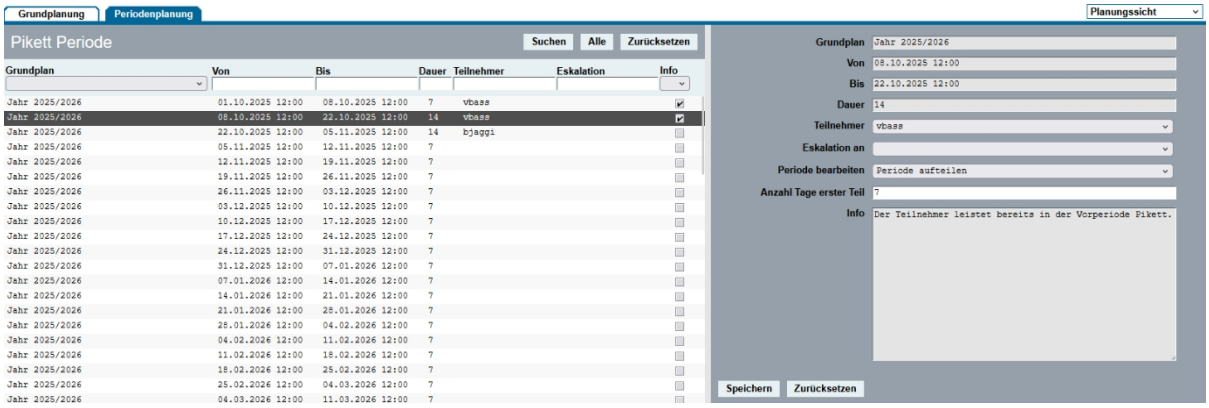


Figure 5-25: Split period

5.2.3 Adjust transfer date

If the Adjust handover time function is selected, an input field appears for specifying the new handover time. The end handover time of the selected period and the start handover time of the following period are adjusted.

In addition, the on-call participant who will be responsible for the two new on-call periods can be selected.

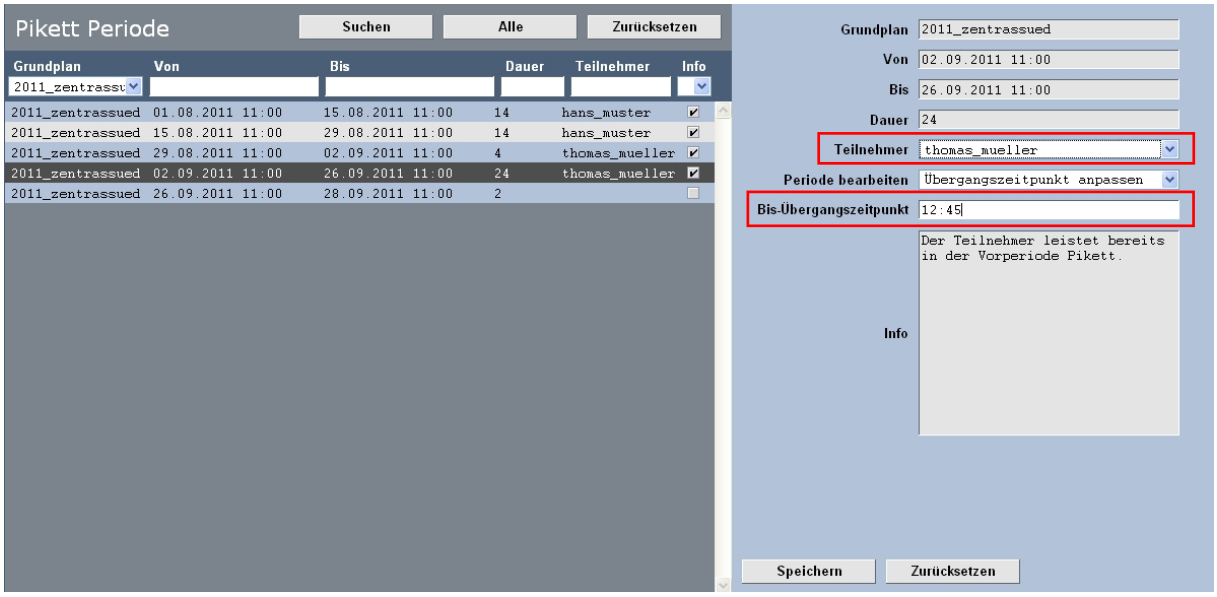


Figure 5-26: Adjust handover time (existing)

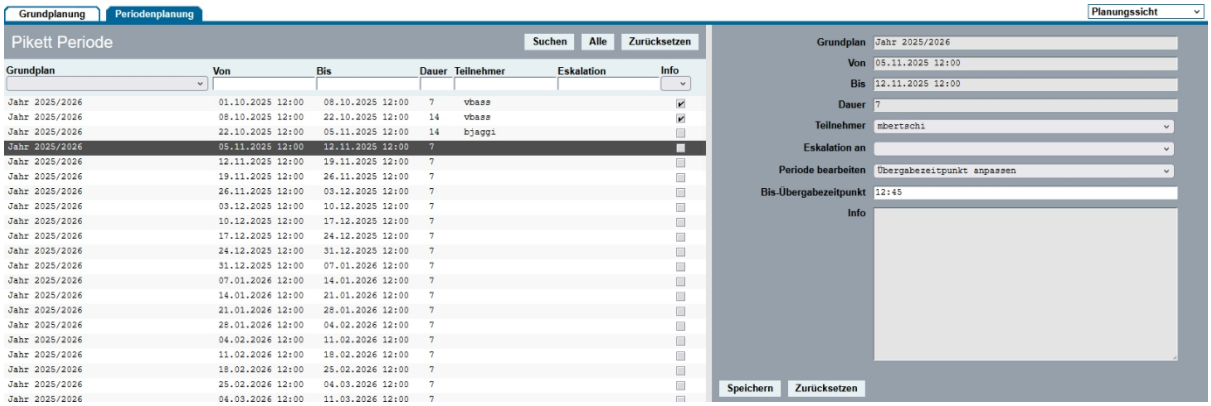


Figure 5-27: Adjust handover time

6 Configuration view

6.1 On-call region

Every alarm that occurs in UeLS-zentras is assigned to the system where the alarm (or data point change) occurred.

A Pikett region is a grouping of UeLS-zentras systems and is essentially nothing more than a UeLS-zentras system filter for alarm messages. UeLS-zentras offers the option of combining entire systems or individual data points from a system into a group. These groups defined in UeLS-zentras can be assigned to regions in the Pikett system (see section 6.6).

The region defines the groups, systems, and data points for which it is responsible. A concise name helps to avoid misunderstandings.

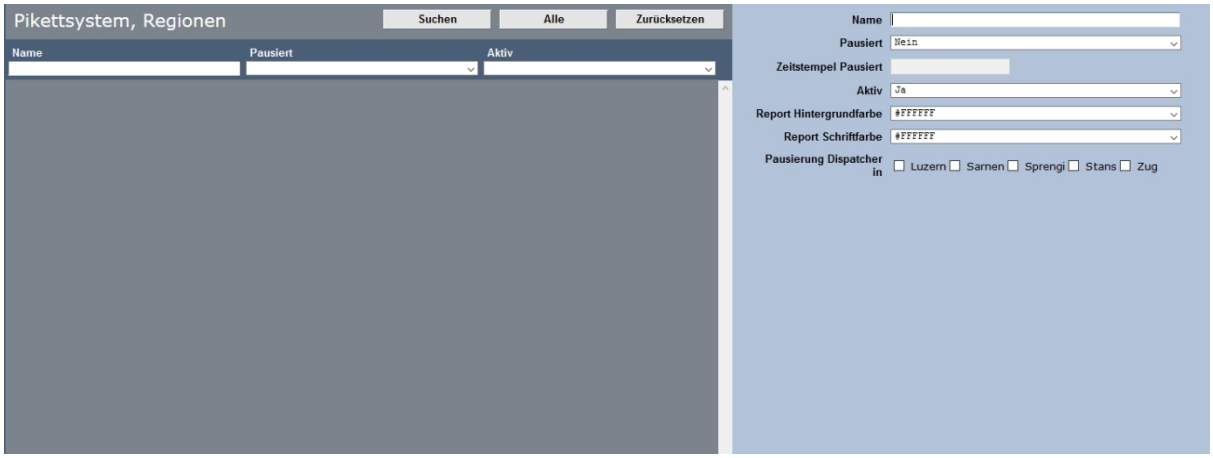


Figure 6-1: On-call region (existing)

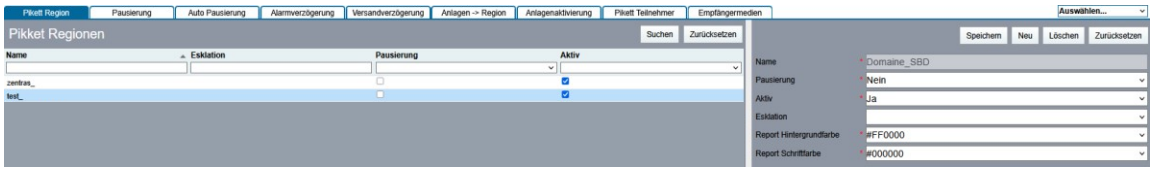


Figure 6-2: On-call region

A region has the following properties:

Property	Description
Name	Unique, concise name that identifies the region. The name can only be edited when it is first entered and may not contain more than 20 alphanumeric characters.
Paused	Defines whether a region is currently paused. Paused means that the region is active, but no SMS/pager messages are being sent at the moment according to the definition in the "Auto-Pause" mask (Chapter 6.3). The user can pause a region by setting the *Pause* flag to *Yes* and saving the region. Pausing a region is either turned off manually (set *the Pause flag* to *No*) or automatically when the next switch-on time arrives (see also Chapter 6.3).
Active	A region can be permanently set to inactive. Alarms for inactive regions are not forwarded.
Property	**Description**

	The user can manually activate and deactivate a region by setting the *Activated* flag to *Yes* or *No* accordingly.
Escalation	A second escalation can be defined here if the escalation in the period planning is also not achievable (see chapter 5.2).
Report background color	You can choose from 16 background colors to display the cells of the corresponding region in the evaluations (see Chapter 6.1). Attention: Ensure contrast with font color.
Report font color	The font color used to display the region name in the evaluations – either black or white (see section 6.1).

Table 6-1 Region properties

These fields must be entered for each picket region.

6.2 Pause

The pause menu is a simple menu for setting the regions to pause or turning the pause off again, i.e., forwarding is active. This can be done using the on/off buttons. These turn forwarding on or off. Below the on button, an animated bar shows whether messages for the region are currently being forwarded.



Figure 6-3: Pause

If you try to send a text message, this will not happen if the region is paused by the selected location. That is why there is the note *Pager activated?* in the Test message tab under the configuration view (see chapter 8.8). If you try anyway, no entry will be made for SMS/pager messages and the message will therefore not be sent.

6.3 Auto pause

If a region is paused, UeLS-zentra alarms for this region will no longer be forwarded to the on-call personnel until

- the pause is manually deactivated (see Chapter 6.1)
- or a configured activation time occurs and the pause is automatically ended.

"Auto-pause" is used to prevent SMS and pager messages from being forwarded for certain periods of time.

This is typically defined during working hours when employees are working at headquarters and do not need additional notifications.

Multiple pause and activation times can be entered for each on-call region.

It is also possible to define general rules for all on-call regions.



Figure 6-4: Switch-on times (existing)

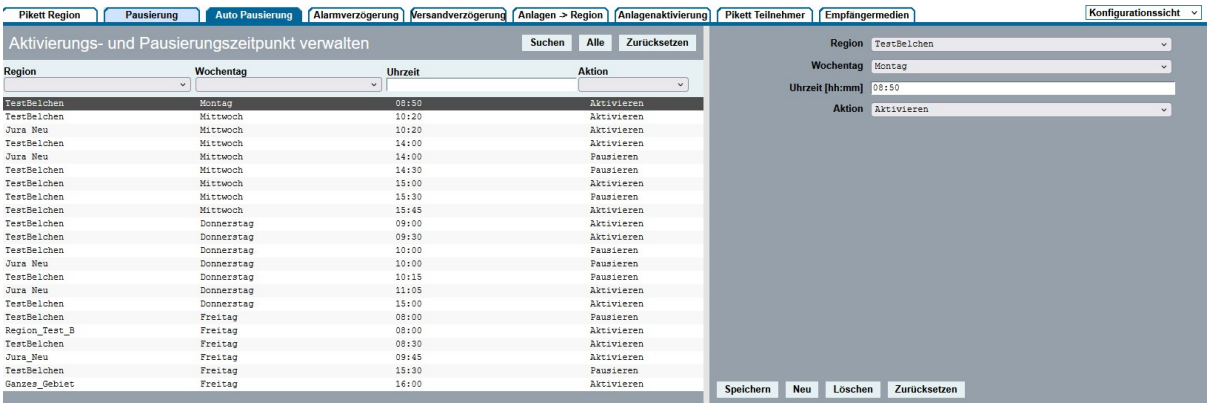


Figure 6-5: Auto pause

Switch-on times are defined for each day of the week. Any number of switch-on times can be configured for each day of the week.

A switch-on time has the following properties:

Property	Description
Region	Selection of the on-call region. It is also possible to select "All."
Weekday	Select the day of the week (Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, or Sunday).
Time	In the format hh:mm
Action	Selection: Either Activate (SMS and pager messages are sent) or Pause (no SMS and pager messages are sent).

Table 6-2 Switch-on time Properties

6.4 Alarm delay

The alarm delay is used to avoid sending an SMS or pager message if the alarms are canceled within a certain period of time. This means that if an alarm is canceled within the alarm delay period, no SMS or pager message is sent.

This is mainly used during night or weekend hours to prevent an on-duty employee from being dispatched if the alarms are canceled again within a short period of time.

The restrictions can be defined as follows:

Property	Description
Region	Selection of the on-call region. It is also possible to select 'All'.
Weekday	Select the day of the week (Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, or Sunday).
All day	Select an all-day delay
Time from	In the format hh:mm
Time to	In the format hh:mm If the time is before midnight, it is assumed that the period is defined as spanning midnight. Example: from Monday 8:00 p.m. to 7:00 a.m. This means from Monday evening to Tuesday morning.
Delay	Specified in seconds: If the alarm stops within this time, no SMS or pager message will be sent.
Priority	Selection 1–3: The priority can be restricted. Normally, only priority 1 alarms are forwarded to the on-call system (optional).
AKS	The AKS code or part string of the AKS code can be entered here.
System	Individual systems can be added from the list of all systems using the blue plus icon. The system can be removed again using the red X icon.

Table 6-3 Switch-on time Properties

All conditions (except for the systems) for the restrictions are linked with "AND", i.e., not just one, but all conditions must be met.

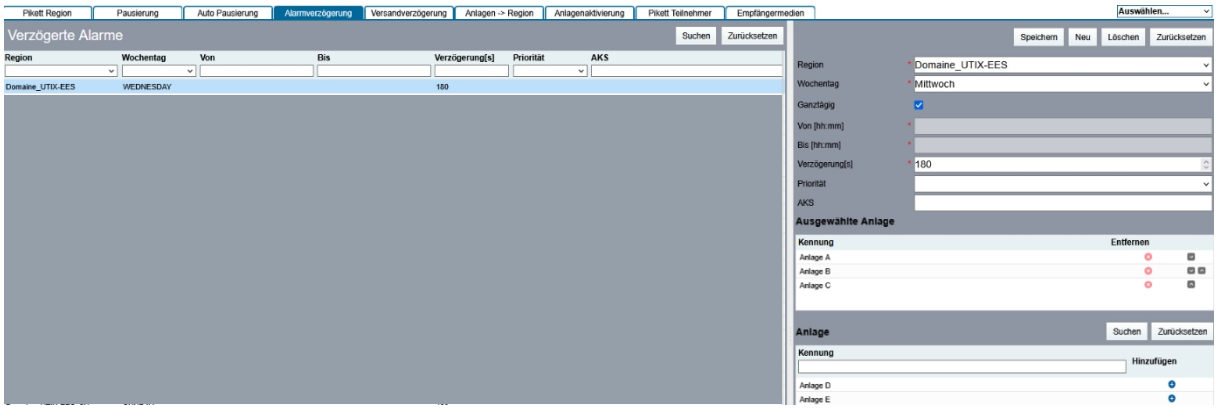


Figure 6-6: Alarm delay

6.5 Shipping delay

The shipping delay is used to collect SMS and pager messages for a few hours and send them later.

This can be used, for example, to not forward less important alarms at night, but only when work starts again.

The restrictions can be defined as follows:

Property	Description
Region	Selection of the on-call region. It is also possible to select 'All'.
Weekday	Select the day of the week (Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, or Sunday).
Time from	In the format hh:mm
Time to	In the format hh:mm If the time is before midnight, it is assumed that the period is defined as spanning midnight. Example: from Monday 8:00 p.m. to 7:00 a.m. This means from Monday evening to Tuesday morning.
Delay	Specified in seconds: If the alarm stops within this time, no SMS or pager message will be sent.
Priority	Selection 1–3: The priority can be restricted. Normally, only priority 1 alarms are forwarded to the on-call system (optional).
AKS	The AKS code or part string of the AKS code can be entered here.
System	Individual systems can be added from the list of all systems using the blue plus icon. The system can be removed again using the red X icon.

Table 6-4 Switch-on time Properties

All conditions (except for the systems) for the restrictions are linked with "AND", i.e., not just one, but all conditions must be met.

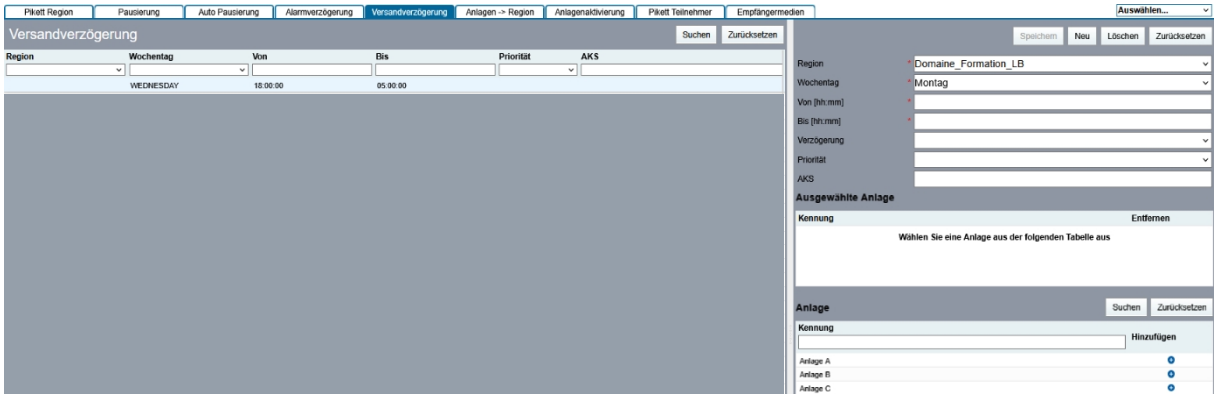


Figure 6-7: Alarm delay

6.6 Assignment of groups -> regions

The assignment of UeLS-zentras groups to individual on-call regions takes place in the administration mask Groups -> Regions. This allows you to define that each on-call region processes different messages.

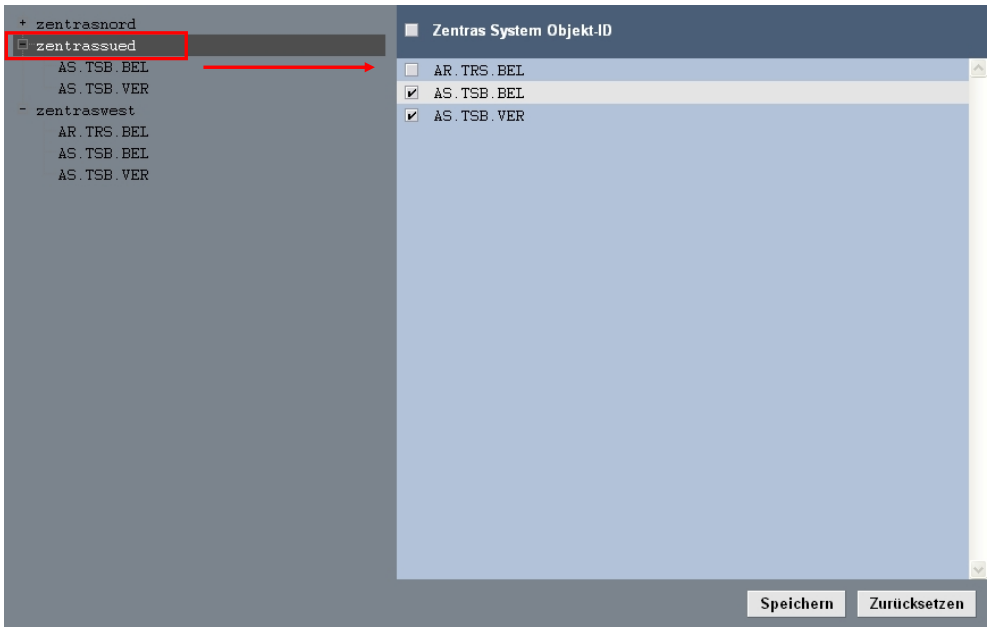


Figure 6-8: Region systems (existing)

All groups configured in UeLS-zentras are displayed on the left-hand side.

When the user selects a region, the groups assigned to that region are displayed below in a tree structure. All UeLS-zentras facilities known to the on-call system are displayed on the right-hand side for selection. See 6.1.

The user can then customize and save the assignment of groups to the selected region on the right-hand side (see Figure 6-10).

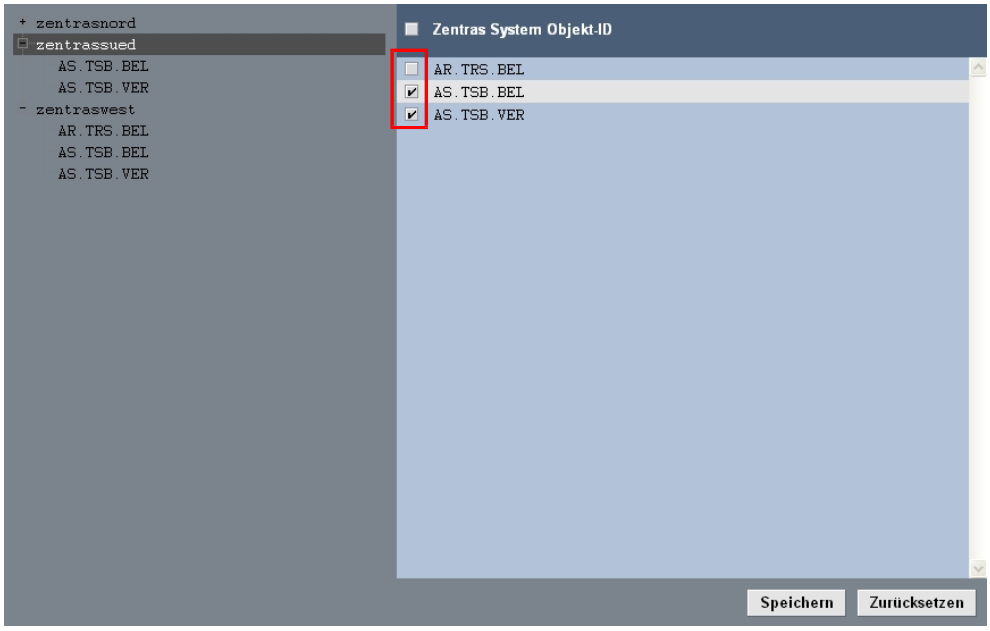


Figure 6-9: Selection of facilities for a region (existing)

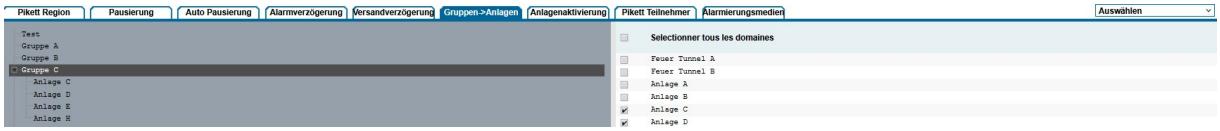


Figure 6-10: Groups -> Regions – Region selection and group selection

6.7 System activation

UeLS-zentras automatically sends all its assets to the on-call system. There, the corresponding assets are stored in the local database.

If a new system is entered in UeLS-zentras or an existing system is edited, these changes are automatically synchronized with the on-call system.

Initially, the systems are entered as inactive in the Pikettsystem administration mask *System activation*. Alarms for inactive systems are not forwarded to cell phones or pagers.

A user must therefore manually activate UeLS-zentras systems once before alarm forwarding becomes active.

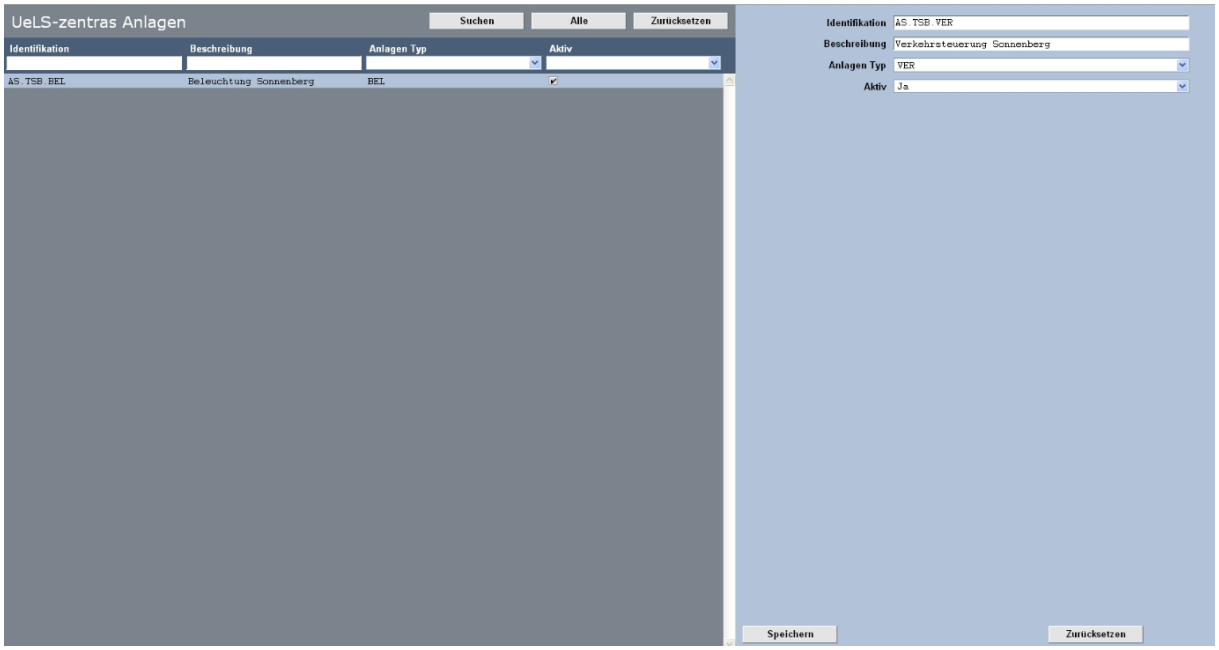


Figure 6-11: Plant forwarding (existing)

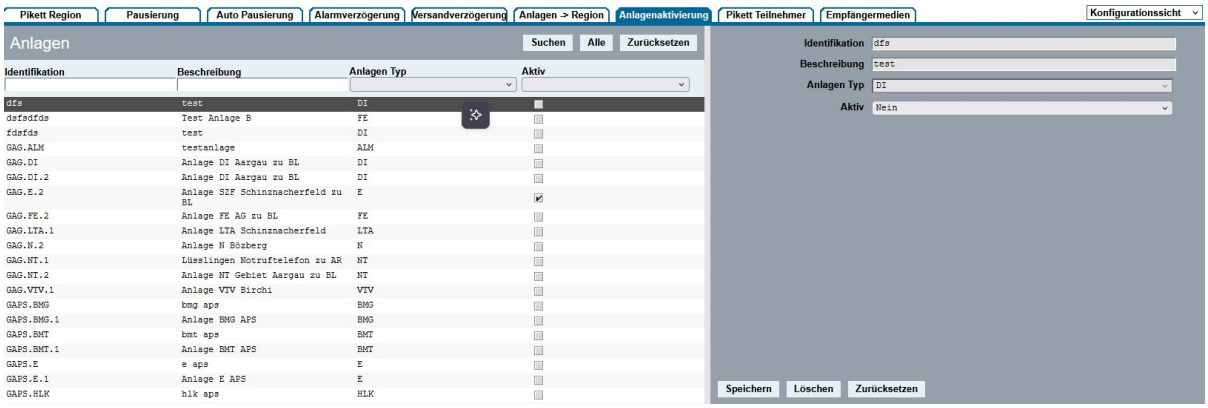


Figure 6-12: System activation

It is also possible to adjust existing configurations. A UeLS-zentras

system has the following properties:

Feature	Description
Identification	Unique identification that identifies the system. The identification can only be edited when it is first entered.
Description	Description of the asset
Asset type	Type of asset
Active	Alarms for inactive systems are not forwarded. A system can be activated or deactivated manually by setting the *Active* flag to *Yes* or *No*.

Table 6-5 System forwarding properties

6.8 On-call participants

On-call participants (or users who have a login in the application) can have one or more end devices. If the participant is on duty in an on-call region and the cell phone or pager for this participant is active, SMS and pager messages are sent to all of their end devices.

In the on-call participant configuration, users (UeLS-zentras or on-call system users) are assigned to the alerting medium.

Any number of users can be assigned to an alerting medium, whereby certain alerting media can be deactivated via a corresponding *active* flag. It is therefore possible to assign a participant to several alerting media, but not to activate all media.

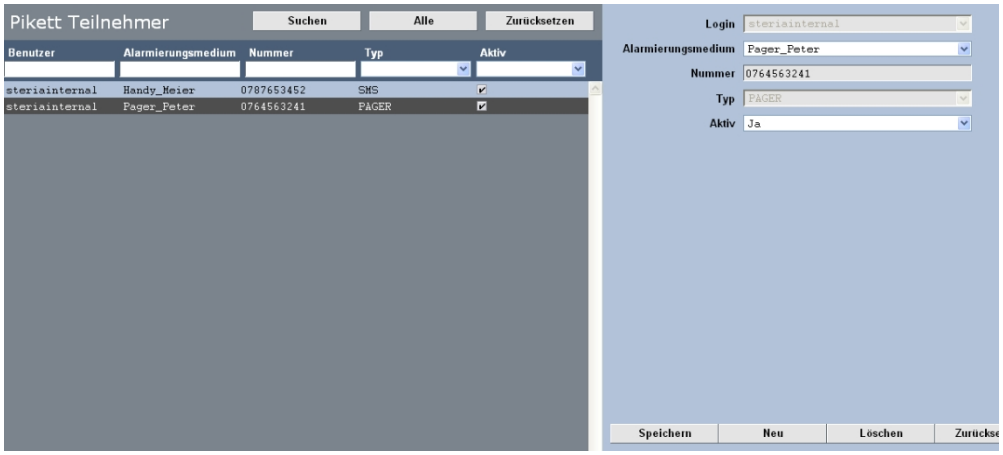


Figure 6-13: On-call participant (existing)

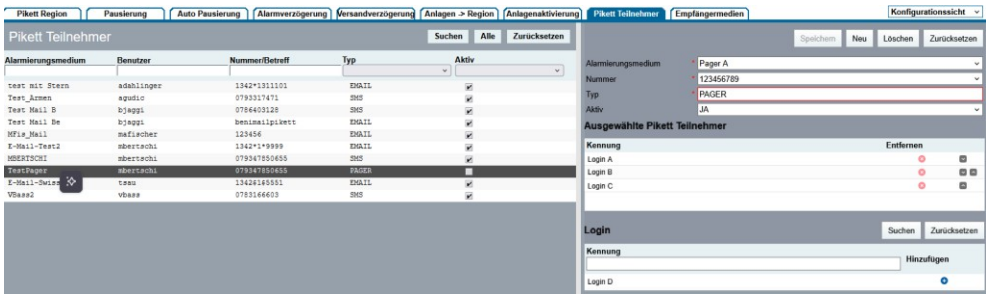


Figure 6-14: On-call participant

An on-call participant has the following properties:

Property	Description
Alarm medium	The cell phone or pager assigned to the user. It is possible for a user to be assigned to multiple alerting media. In this case, the participant must be selected for multiple media (see Figure 6-14).
Login	Login Name of the user who is to be configured as an on-call participant. This can be the login of a UeLS-zentra user (LDAP user) or a local on-call system user.
Number	The cell phone or pager number of the selected alerting medium is displayed as information but cannot be edited.
Type	The type (SMS or pager) of the selected alerting medium is displayed as information, but cannot be edited.
Active	Yes or No to define whether the selected alerting medium is actively used for the selected participants (logins). If an on-call participant configuration is deactivated, no alarms will be forwarded to the mobile phone or the corresponding pager.

Table 6-6 On-call participant properties

6.9 Alarm media

An alerting medium corresponds to either a mobile phone or a pager. It is given a descriptive name. Each alerting medium is assigned a type (SMS or pager).

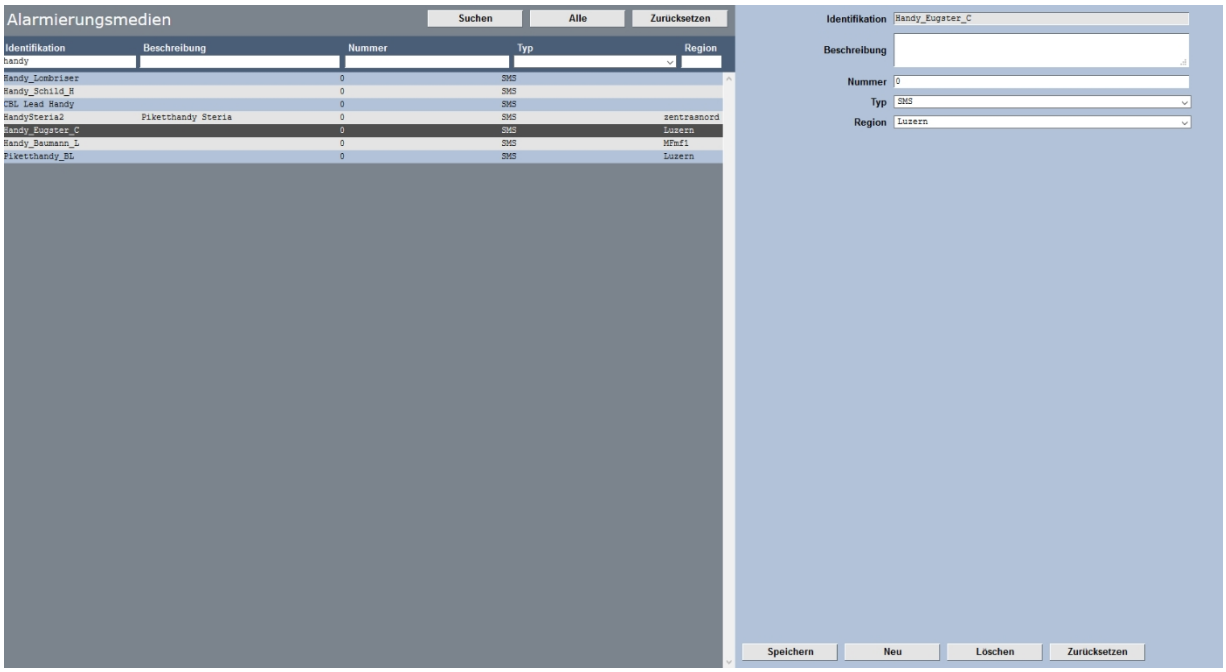


Figure 6-15: Alerting media (existing)

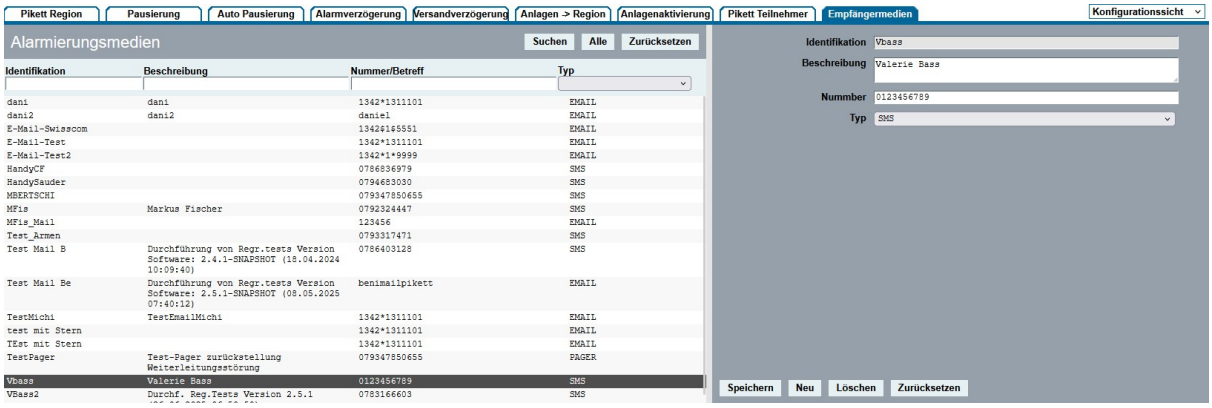


Figure 6-16: Alerting media

An alerting medium has the following properties:

Property	Description
Identification	Unique, descriptive name that identifies the alerting medium.
Description	Any detailed information about the alerting medium (optional).
Number	Either the cell phone or pager number. Only numbers are allowed as input.
Type	SMS or PAGER.

Table 6-7 Alerting medium properties

7 Appointment view

7.1 Planning an absence

User absences can be recorded under Absence. This information is used during on-call planning to indicate that any planned on-call managers are not present.

An absence does not prevent an on-call participant from being scheduled for on-call duty (see also Chapter 5.2).

Each absence is entered individually in the administration screen.

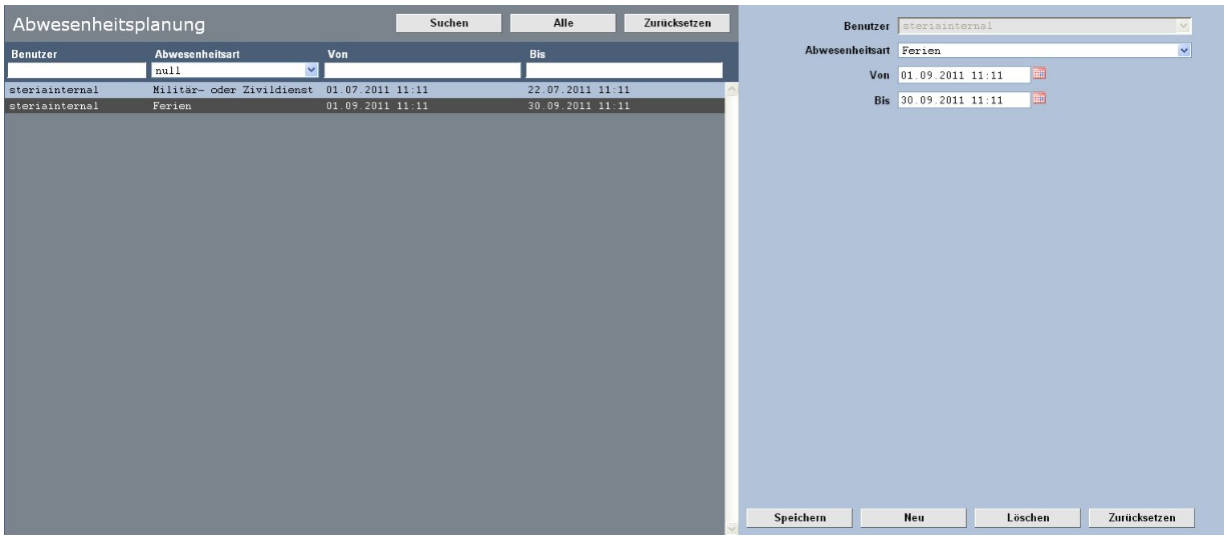


Figure 7-1: Absence planning (existing)

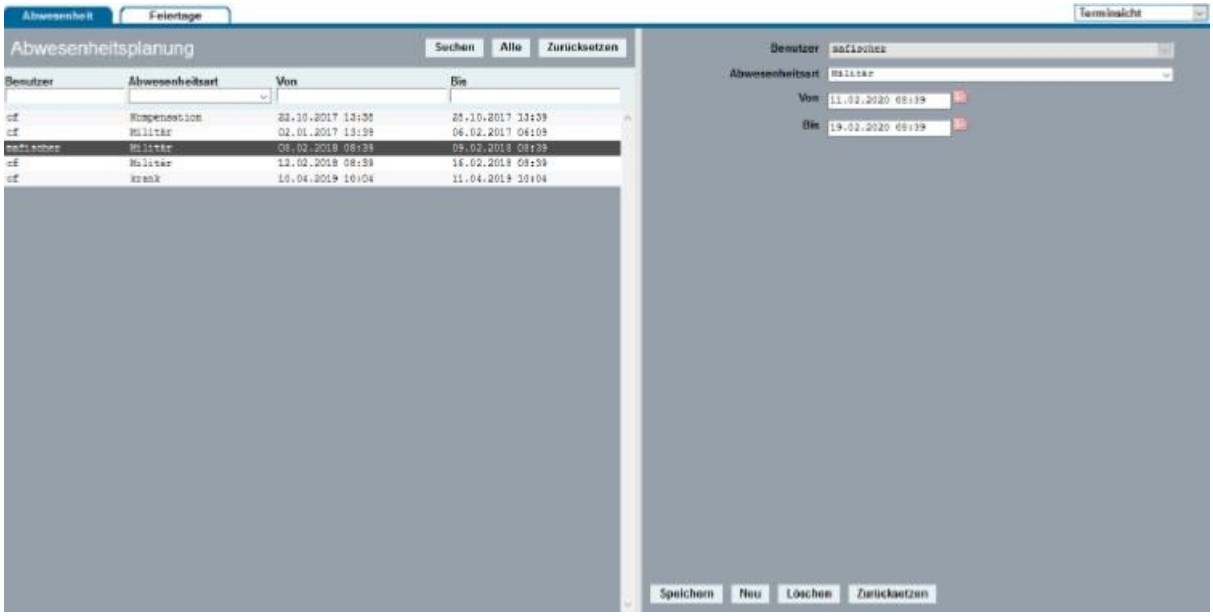


Figure 7-2: Absence planning

An absence plan has the following properties:

Feature	Description
User	Login of the user for whom the absence applies.
Absence type	Type of absence: Other, Vacation, Compensation, Sickness, Military or Civilian Service, Cleaning, Unpaid.
From	Start time of the absence
To	End time of absence

Table 7-1 Absence planning properties

7.2 Configuration of public holidays

Under Holidays, you can enter the holidays for individual or all regions. This information is used to display warning messages during on-call planning and to draw attention to holidays.

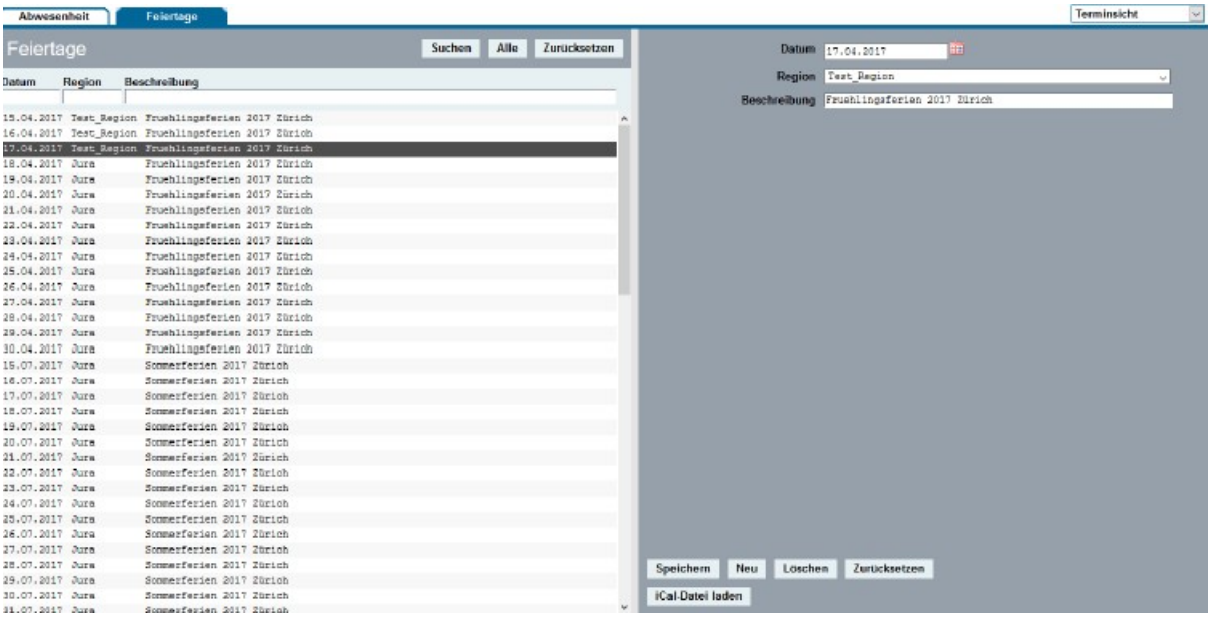


Figure 7-3: Public holidays

A public holiday has the following properties:

Property	Description
Date	Date of the holiday
Region	Region in which the holiday applies
Description	Description of the holiday

Table 7-2 Holiday properties

It is also possible to import a standardized file containing public holidays using the "Load i-Cal file" function (button).

In the dialog box shown below, the region must first be selected in the selection box before selecting the file.

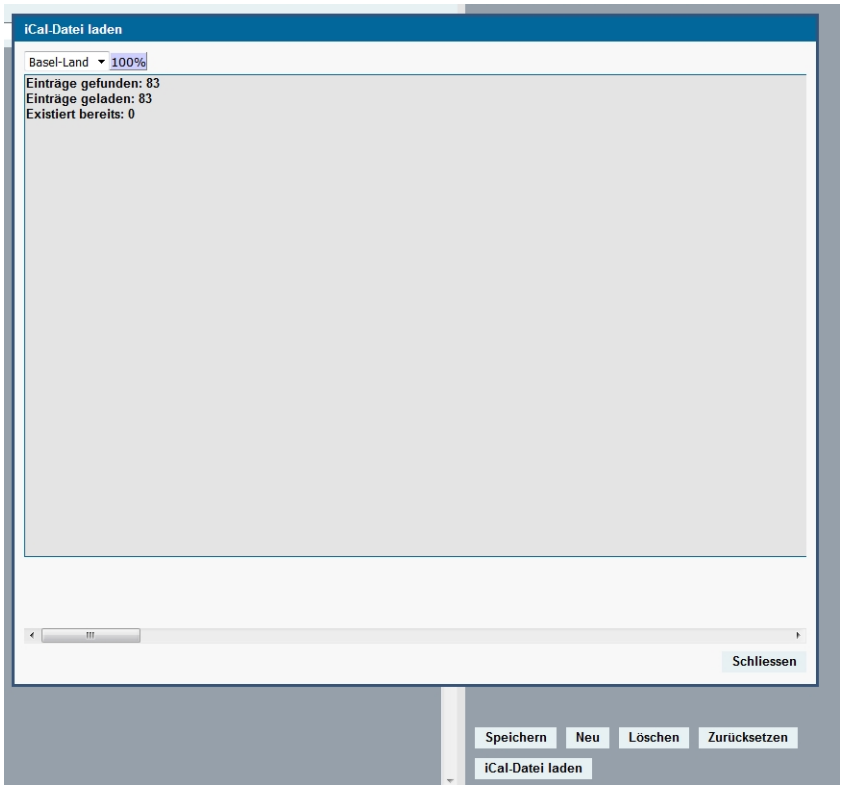


Figure 7-4: Importing holidays

The imported entries can be changed or deleted later.

8 Message view

Depending on your authorization, you can check different lists of current data in the message view. These are

- On-call alarms
- Delayed alarms
- SMS/pager
- Shipping list
- Internal alarms
- Measurements
- Suppressed DP
- Test message

The most recent entries are always displayed first. Each list can be sorted by a specific column by clicking on the column header.

8.1 On-call alarms

The list of on-call alarms lists all alarms received from UeLS-zentras. A maximum of the last 1000 alarm messages are displayed, with the messages sorted in descending order,
i.e. the most recent message always appears at the top of the list. This does not necessarily mean that these alarms have been sent, as they must be scheduled for on-call duty in order to be sent.

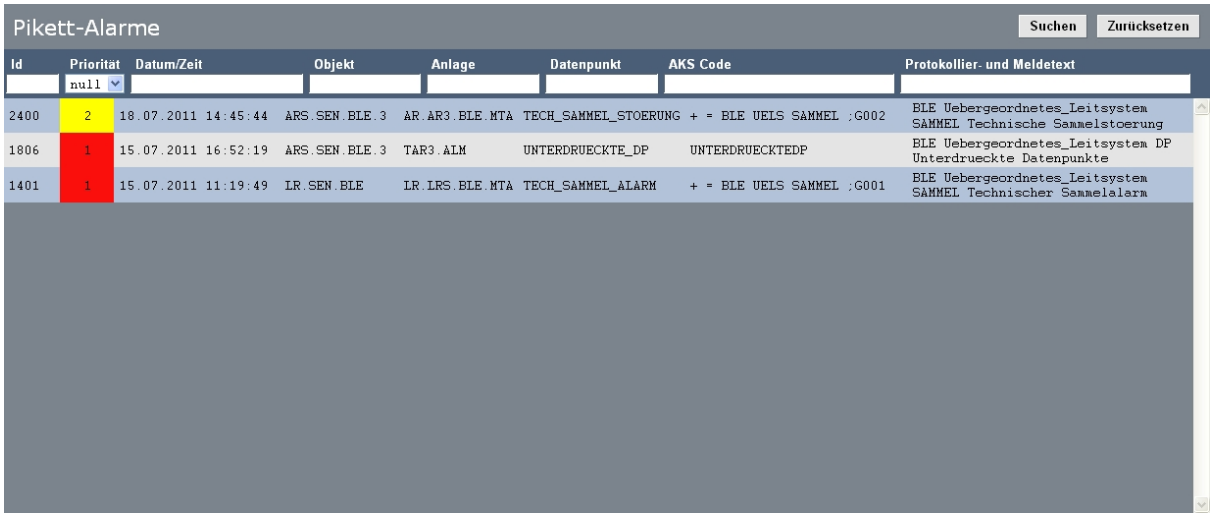


Figure 8-1: On-call alarm list (existing)

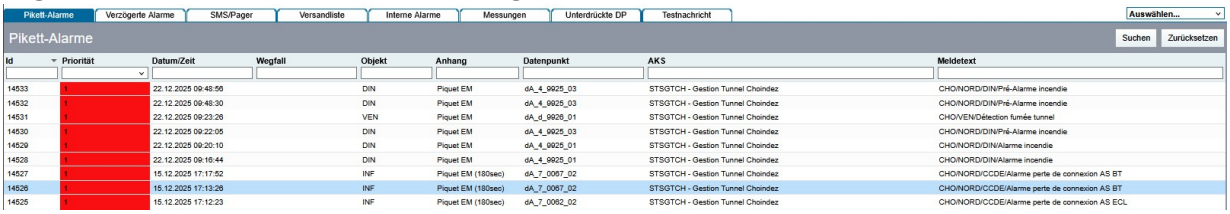


Figure 8-2: On-call alarm list

Enter filter criteria and press the *Search* button to start the search query. You can search for all properties from Table 8-1.

Right-clicking on one of the alarm messages brings up the context menu, see Figure 8-3 and Figure 8-4. This allows you to go directly to the list of SMS/pager messages (see Chapter 8.3) that were created for this on-call alarm.

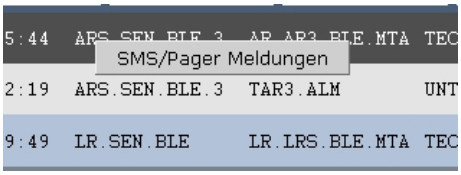


Figure 8-3: On-call alarm context menu (existing)




Figure 8-4: On-call alarm context menu

An on-call alarm has the following properties:

Feature	Description
Id	Database ID of the on-call alarm for identifying the alarm. This is required technically in the display in order to achieve a corresponding link between the list of SMS/pager messages and the on-call alarm.
Priority	Priority of maintenance for the alarm message (1, 2, or 3).
Date/time	Time at which the alarm occurred.
Object	Identification of the object.
System	Identification of the plant.
Data point	Identification of the data point.
AKS code	AKS code of the data point.
Logging and message text	Logging and reporting text for the data point.

Table 8-1 Properties of a standby alarm

8.2 Delayed alarms

The *Delayed Alarms* menu shows all current alarms that have either an alarm delay or a dispatch delay. This menu only contains runtime information, i.e., the contents are not persistent in the database. After restarting the application, this view is always empty.

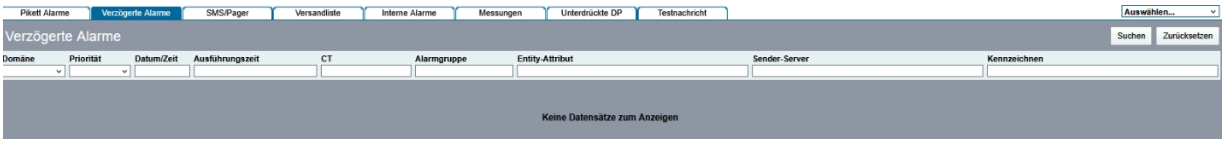


Figure 8-5: List of delayed alarms

Enter filter criteria and press the *Search* button to start the query. You can search for the following attributes.

Attribute	Description
Region	Region of the on-call alarm.
Priority	Priority of maintenance for the alarm message (1, 2, or 3).
Date/Time	Time when the alarm occurred.
Object	Identification of the object.
System	Identification of the plant.
Data point	Identification of the data point.
AKS code	AKS code of the data point.
Logging and message text	Logging and message text of the data point.

Table 8-2 Attributes of a delayed alarm

The selected alarms can be deleted via the context menu (right-click), meaning that the alarms will not be processed further.

8.3 SMS/Pager

The list of SMS/pager messages lists all SMS/pager messages created from the received on-call alarms. A maximum of the last 1000 SMS/pager messages are displayed, with the messages sorted in descending order, i.e. the most recent message always appears at the top of the list.

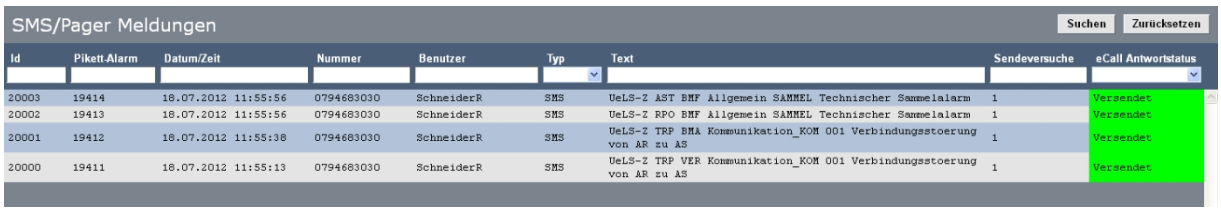


Figure 8-6: List of SMS/pager messages (existing)

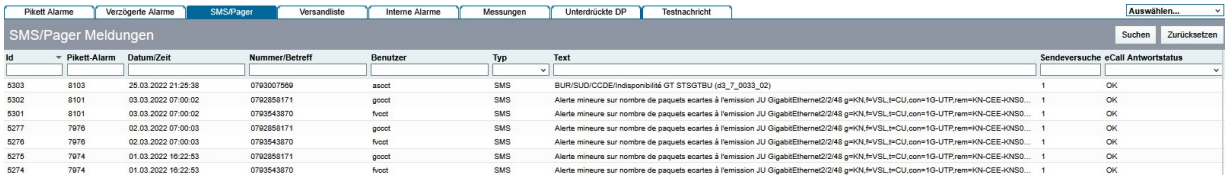


Figure 8-7: List of SMS/pager messages

Enter filter criteria and press the *Search* button to start the query. You can search for the properties listed in Table 8-4.

If one of the SMS/pager messages is selected (see Figure 8-8), right-clicking displays the context menu with the following entries:

Property	Description
On-call alarm	This allows you to go directly to the list of on-call alarms (see Chapter 8.1). The filter is set there so that the on-call alarm that caused the SMS/pager message is displayed.
Mailing list	The mailing list shows the details for sending this SMS/pager message. The same SMS/pager message can be sent multiple times.
Feature	**Description**

Send	An SMS/pager message can be sent again manually at any time.

Table 8-3 SMS/pager messages context menu



Figure 8-8: SMS/pager messages context menu (existing)



Figure 8-9: SMS/Pager Messages Context Menu

An SMS/pager message has the following properties:

Feature	Description
Id	Database ID of the SMS/pager message for identifying the alarm. This is required technically in the display in order to achieve a corresponding link between the mailing list and the SMS/pager messages.
On-call alarm ID	ID of the on-call alarm that triggered this SMS/pager message.
Date/Time	Time when the SMS/pager message was created.
Number	Mobile phone or pager number to which the SMS/pager message is sent.
User	Current user who is on call and to whom the SMS/pager message is sent.
Type	SMS or pager
Text	Text that is sent in this SMS/pager message.
Number of attempts	Number of transmission attempts if the recipient cannot be reached.
eCall response status	Combined status of all SMS or pager delivery attempts: • Pending: No message has been sent yet. • Sending: The message is being sent; other attempts to send this message have not been successful so far. • Sent: At least one message in the send list was sent successfully and a confirmation of receipt was received for SMS. • Error: There was an error sending the message. No other attempts to send this message were successful.

Table 8-4 Properties of an SMS/pager message

8.4 Sending list

The dispatch list lists all dispatch attempts for SMS/pager messages. A maximum of the last 1000 dispatch attempts are displayed, sorted in descending order, i.e. the most recent dispatch attempt always appears at the top of the list.

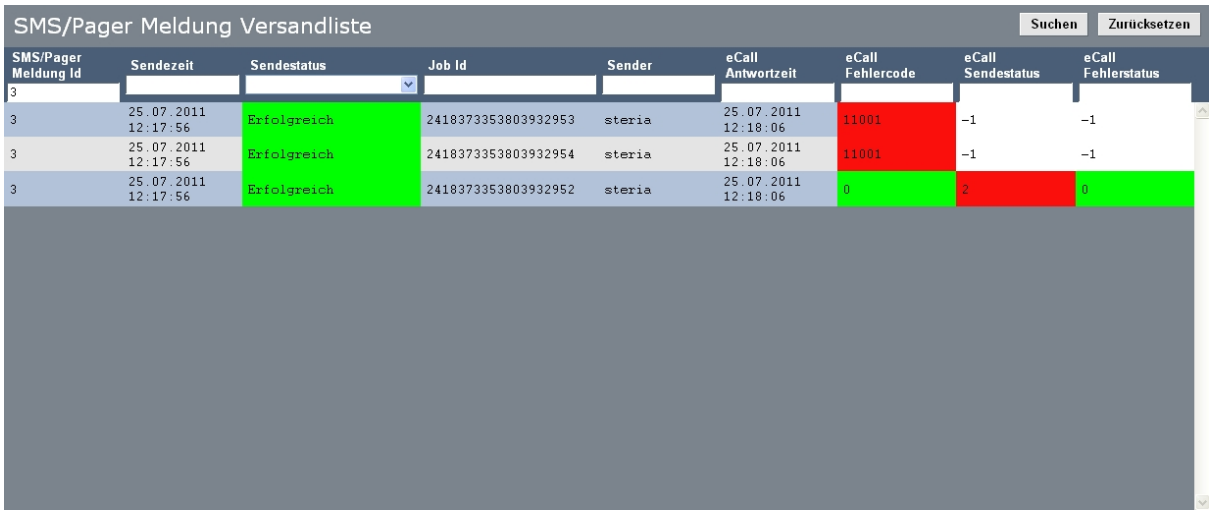


Figure 8-10: Mailing list (existing)

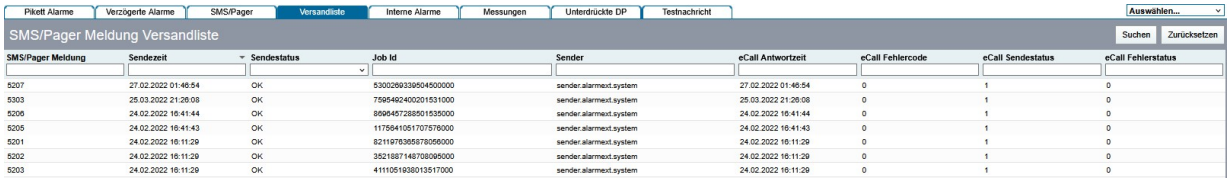


Figure 8-11: Shipping list

Enter filter criteria and press the *Search* button to start the query. You can search for the properties listed in Table 8-5.

If an entry is selected, right-clicking will bring up the context menu with the SMS/Pager Message entry, see Figure 8-12. This allows you to go directly to the list of SMS/Pager messages (see Chapter 8.3). The SMS/Pager message for which the selected distribution list applies is displayed.

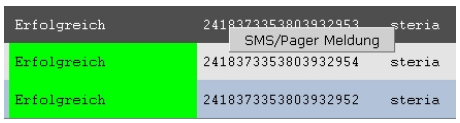


Figure 8-12: Mailing list context menu (existing)




Figure 8-13: Mailing list context menu

The distribution list has the following properties:

Feature	Description
SMS/Pager message ID	Database ID of the SMS/pager message. This is required technically in the display in order to achieve a corresponding link between the shipping list and the SMS/pager messages.
Send time	Time at which the on-call system sends the message to the F24 eCall system.
Property	**Description**

Send status	Indicates whether the message was successfully transferred to the F24 eCall interface.
Job ID	Unique ID for sending the on-call message. This is required for the F24 web service.
Sender	Sender who triggered the transmission.
eCall response time	Time at which the response from the F24 eCall system regarding the transmission status was received.
eCall error code	Error code according to F24 HTTP/HTTPS specification. Error messages relating to access to the interface and problems with the eCall subscription. See also https://ecall-messaging.com/wp-content/uploads/2025/04/F24-Schweiz_Beschreibung_HTTP-HTTPS-2.22_DE.pdf.
eCall transmission status	Transmission status according to F24 HTTP/HTTPS specification. Status of the transmitted message: 0 Sending 1 Sending OK 3 Being sent. Waiting for status response 8 Sending OK (receipt confirmed) 9 Sending OK (receipt not yet confirmed, waiting for delivery) 10 Sending OK (receipt not confirmed) See also https://ecall-messaging.com/wp-content/uploads/2025/04/F24-Switzerland_Description_HTTP-HTTPS-2.22_EN.pdf.
eCall error status	Error status according to F24 HTTP/HTTPS specification. Additional information if a message could not be sent successfully: 1000 Connection interrupted 1001 Timeout: The page could not be sent successfully. 5111 Text too long 5112 Invalid phone number 5120 Destination number is a tone number: message not allowed 5121 Destination number is numeric: Invalid character 5155 Traffic too heavy 5164 All call zones disrupted or overloaded 5502 Message from provider: Syntax error 5504 Message from provider: Operation not allowed – Maximum messages for the address exceeded 5506 Message from provider: Analog-to-digital converter invalid
Property	**Description**

	5510 Too many messages to the same recipient 5511 Too many messages to the same recipient with the same text 5512 This job ID has already been assigned by this sender. 5513 Callback, address, or parts of the message text are on the blacklist 5514 Blocked by outgoing filter rules See also https://ecall-messaging.com/wp-content/uploads/2025/04/F24-Switzerland_Description_HTTP-HTTPS-2.22_EN.pdf.

Table 8-5 Properties of a shipping list

8.5 Internal alarms

In addition to alarms (priority 1) and faults (priority 2) from the alarm list in the alarm frame (see Chapter 3.2.4), the alarm view also displays messages (priority 3). All functions are the same as in the alarm frame. In addition, you can search for various attributes.

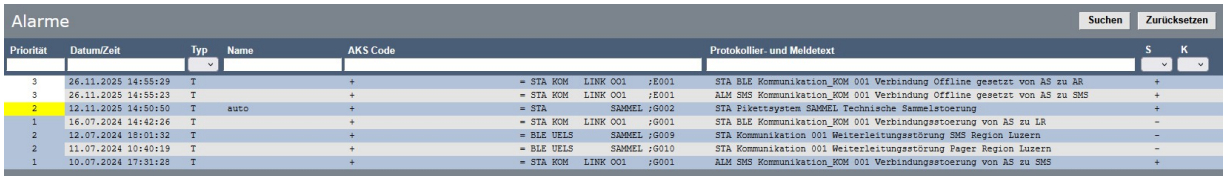


Figure 8-14: Alarm list (existing)

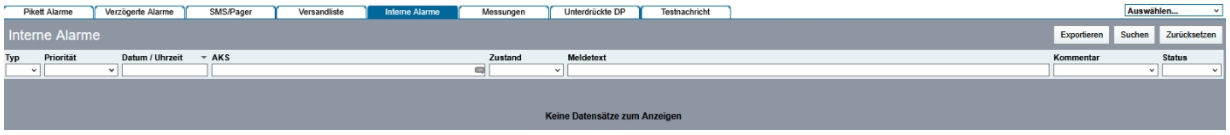


Figure 8-15: Alarm list

Enter filter criteria and press the *Search* button to start the query. You can search for the following properties:

Property	Description
Type	Type of message: • B = Operational • T = Technical
Priority	Priority of the message: 1, 2, or 3.
Date/time	Time at which the alarm occurred.
AKS	AKS Code of the data point.
Status	Status of the message: • Active: The alarm entry is active and unacknowledged • Acknowledged: The alarm entry is active and acknowledged • Inactive: The alarm entry is not active and has not been acknowledged
Message text	Message text for the data point.

Property	Description
Comment	Indicates whether a comment has been written for the alarm.
Status	Status of the alarm: • + corresponds to an active alarm entry • – corresponds to an inactive alarm entry

Table 8-6 Properties of an alarm list

8.6 Measurements

The list of measurements displays all current values of the data points for which the user has read access.

Right-clicking on an entry allows you to navigate to the detailed view of the measurement or display additional information about the data point.

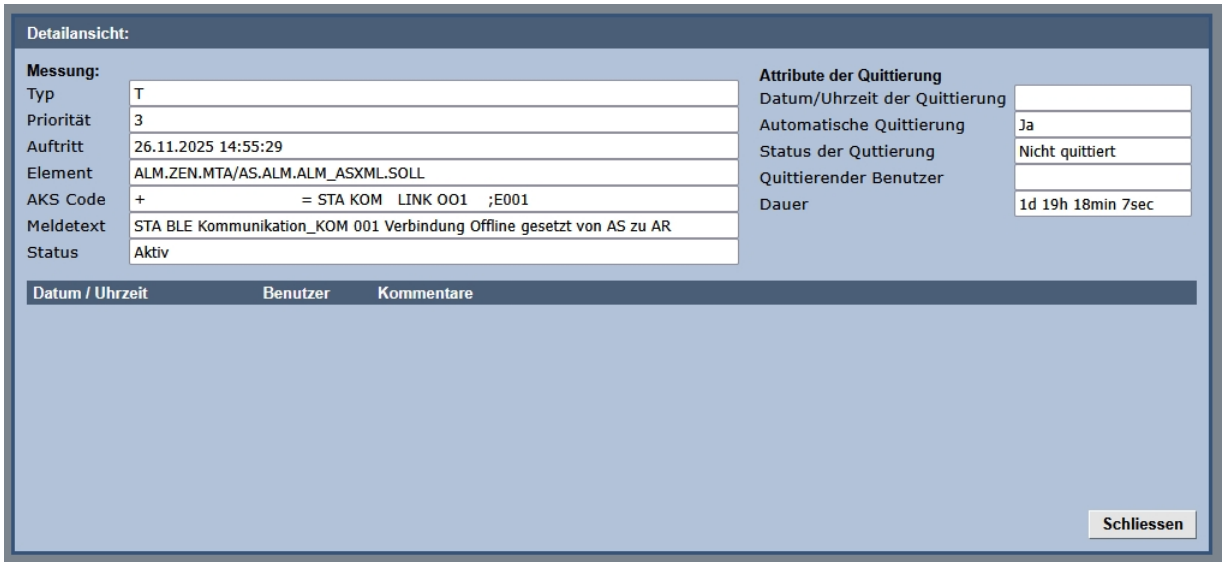


Figure 8-16: Data point information (existing)

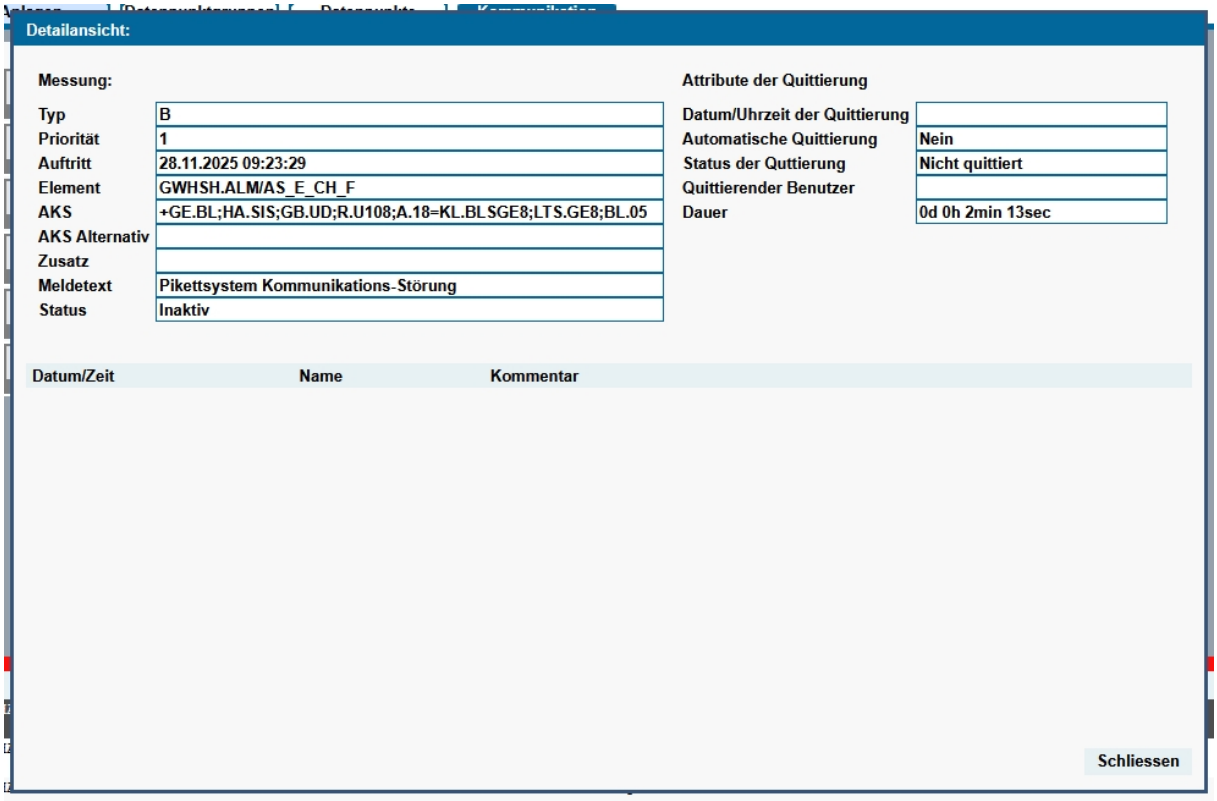


Figure 8-17: Data point information

In addition to the technical identification, information about the second AKS code according to SA-CH and the status of the data point (whether it is known or unknown, or whether it is suppressed or not) can be displayed.

Any alarms on the data point, including priorities, are also displayed.



Figure 8-18: Measurements (existing)

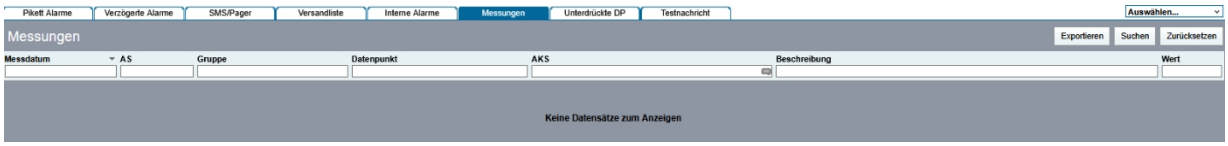


Figure 8-19: Measurements

Enter filter criteria and press the *Search* button to start the query. You can search for the following properties:

Property	Description
Measurement date	Time of measurement.
System	Asset of the data point.
Group	Group of the data point.
Data point	Data point ID
AKS	AKS Code of the data point.
Notification text	Message text of the data point.

Value	Value of the data point.

Table 8-7 Properties of a measurement

8.7 Suppressed DP

The Suppressed DP list shows all suppressed data points of the respective system for which the user has read access.




Figure 8-20: Suppressed data points (existing)




Figure 8-21: Suppressed data points

Right-clicking on an entry reactivates a suppressed data point.

Enter filter criteria and press the *Search* button to start the query. You can search for the following properties:

Property	Description
System	Asset of the data point.
Data point	DataPointID
AKS	AKS Code of the data point.
Message text	Message text of the data point.
Suppression reason	Reason for suppression.

Table 8-8 Properties of a suppressed DP

8.8 Test message

The Test message navigation node contains the screen for sending a message to a selected region.

To do this, the user selects the relevant region and enters the text for the message in the text field.

The message is now sent to all active alerting media of the currently responsible on-call participant.



Figure 8-22: Send message (existing)



Figure 8-23: Send message

The maximum length of an SMS/pager message is limited to 154 characters. The on-call system adds the transmission time to this message text. This results in a maximum length of 160 characters per SMS.

9 Evaluation view

Only the on-call system-specific evaluations are explained below. General evaluations are specified in the UeLS-zentras documentation.

The following lists are available on the on-call system:

- Overall planning
- On-call region
- On-call participants

The report is selected via the tab, and options can be entered in the right-hand area (see following chapters).

There are two export options:

- CSV export, which can be opened in Excel.
- XML export, which is displayed directly in the browser.

9.1 Overall planning

In the *Overall Planning* tab, the user accesses the input mask for creating an overall on-call plan evaluation.

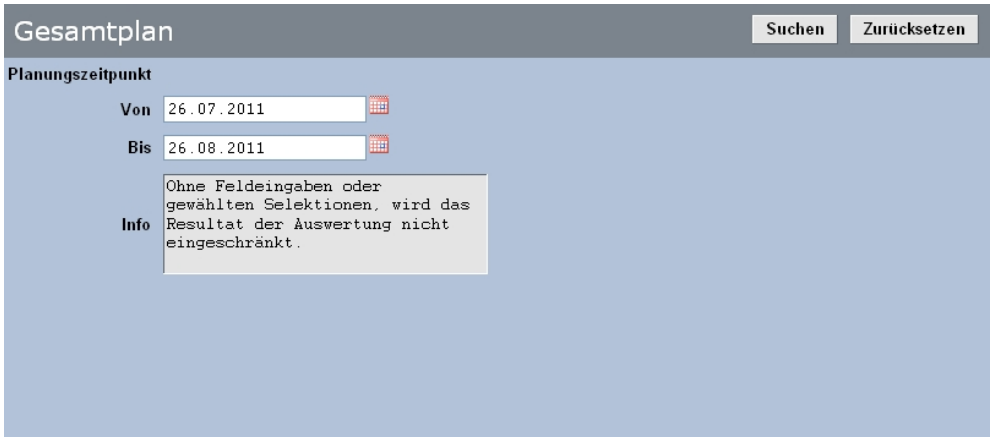


Figure 9-1: Overall plan (existing)



Figure 9-2: Overall planning

The overall plan shows, in a day-based view from the selected *From* to the selected *To* time, which on-call regions and which on-call participants are planned.

This gives the user a quick overview of the on-call schedule that has been created. The following properties must be selected for the overall schedule:

Feature	Description
From	Start time for the evaluation
To	End time for the evaluation
Info	Static information for the user

Table 9-1: Overall plan properties

Each row in the export is a day. The columns show the on-call regions and the cell shows the person on duty.

Conflicts are shown in red and multiple pickets in orange.

Gesamtplanung

01.01.2017 - 28.02.2017

Datum	Basel-Land	Jura
So 01.01.2017	ddeja	mlue
Mo 02.01.2017	ddeja	mlue
Di 03.01.2017	ddeja	mlue
Mi 04.01.2017	ddeja	mlue
Do 05.01.2017	ddeja	mlue
Fr 06.01.2017	ddeja	mlue
Sa 07.01.2017	ddeja	mlue
So 08.01.2017	ddeja, mlue	mlue, rwig
Mo 09.01.2017	mlue	rwig
Di 10.01.2017	mlue	rwig
Mi 11.01.2017	mlue	rwig
Do 12.01.2017	mlue	rwig
Fr 13.01.2017	mlue	rwig
Sa 14.01.2017	mlue	rwig
So 15.01.2017	mlue, rwig	rwig, ssid
Mo 16.01.2017	rwig	ssid
Di 17.01.2017	rwig	ssid
Mi 18.01.2017	rwig	ssid
Do 19.01.2017	rwig	ssid
Fr 20.01.2017	rwig	ssid
Sa 21.01.2017	rwig	ssid
So 22.01.2017	rwig, ssid	mlue, ssid
Mo 23.01.2017	ssid	mlue
Di 24.01.2017	ssid	mlue
Mi 25.01.2017	ssid	mlue
Do 26.01.2017	ssid	mlue
Fr 27.01.2017	ssid	mlue
Sa 28.01.2017	ssid	mlue
So 29.01.2017	ddeja, ssid	ddeja, mlue
Mo 30.01.2017	ddeja	ddeja
Di 31.01.2017	ddeja	ddeja

Figure 9-3: Export overall plan

9.2 On-call region

The *On-Call Region* tab takes the user to the input screen for creating a duty roster for a selected region.



Figure 9-4: Planning Region (existing)



Figure 9-5: On-call region

The evaluation of the region shows in a day-based view from the selected *From* to the selected *To* time which on-call participants are planned for the on-call service of the selected region.

The following properties must be selected for the planning region:

Property	Description
From	Start time for the evaluation
To	End time for the evaluation
Regions Name	Name of the region for which the deployment plan is to be created.
Info	Static information for the user

Table 9-2: Planning Region Properties

Each row is a day. The columns show the employees on duty. The cell shows which on-call roster the employee on duty is assigned to. If absences are also planned at the same time, this is shown in the cell.

Conflicts are shown in red and multiple on-call shifts in orange.

Einsatzplanung der Pikett Region Basel-Land

01.01.2017 - 28.02.2017

Datum	ddeja	mlue	rwig	ssid
So 01.01.2017	Basel-Land Ferien			
Mo 02.01.2017	Basel-Land Ferien			
Di 03.01.2017	Basel-Land Ferien			
Mi 04.01.2017	Basel-Land Ferien			
Do 05.01.2017	Basel-Land Ferien			
Fr 06.01.2017	Basel-Land Ferien			
Sa 07.01.2017	Basel-Land Ferien			
So 08.01.2017	Basel-Land	Basel-Land		
Mo 09.01.2017		Basel-Land		
Di 10.01.2017		Basel-Land		
Mi 11.01.2017		Basel-Land		
Do 12.01.2017		Basel-Land		
Fr 13.01.2017		Basel-Land		
Sa 14.01.2017		Basel-Land		
So 15.01.2017		Basel-Land	Basel-Land	
Mo 16.01.2017			Basel-Land	
Di 17.01.2017			Basel-Land	
Mi 18.01.2017			Basel-Land	
Do 19.01.2017			Basel-Land	
Fr 20.01.2017			Basel-Land	
Sa 21.01.2017			Basel-Land	
So 22.01.2017			Basel-Land	
Mo 23.01.2017				
Di 24.01.2017				
Mi 25.01.2017				
Do 26.01.2017				
Fr 27.01.2017				
Sa 28.01.2017				
So 29.01.2017	Basel-Land			
Mo 30.01.2017	Basel-Land			
Di 31.01.2017	Basel-Land			

Figure 9-6: Export on-call duty region

9.3 On-call participant

The *On-Call Participants* tab takes the user to the input mask for creating a duty roster for a selected on-call participant.



Figure 9-7: On-call participant (existing)



Figure 9-8: On-call participant

The on-call participant planning shows which on-call assignments are planned for the selected on-call participant.

The following properties must be selected for participant planning:

Property	Description
From	Start time for the evaluation
To	End time for evaluation
Log	Login Name of the on-call participant for whom the evaluation is to be generated
Info	Static information for the user

Table 9-3: On-call participant properties

Each row shows a related period. The columns show fixed "from," "to," "on-call," and "Conflicts".

The cell indicates whether it is an on-call duty or a conflict.

Absences are displayed in yellow.

Einsatzplanung des Pikett Teilnehmers ddeja

01.01.2017 - 28.02.2017

Von	Bis	Pikett	Konflikt
So, 01.01.2017	So, 08.01.2017	Basel-Land	Konflikt
So, 01.01.2017	Sa, 07.01.2017	Ferien	Konflikt
So, 15.01.2017	Di, 17.01.2017	Ferien	
So, 29.01.2017	So, 05.02.2017	Jura	Mehrfachpikett
So, 29.01.2017	So, 05.02.2017	Basel-Land	Mehrfachpikett
So, 19.02.2017	So, 26.02.2017	Jura	
So, 26.02.2017	So, 05.03.2017	Jura	

Figure 9-9: Export on-call participants

9.4 Color selection for region

In the administration screen for regions (see chapter 6.1), a background color and font color can be selected for each region. The region is then displayed with this color selection in the evaluations.

10 System configuration view

The system configuration view is used to change or enter images, attachments, data points, communications, etc. The following screens are available:

- **Objects:** Allows you to create, edit, and delete new sections. Sections can be of the type region, route section, or tunnel.
- **System computers:** Allows you to create, edit, and delete system computers. This is used for the integration of new AR and AS. Data point lists can be loaded for system computers.
- **Assets:** Allows you to create, edit, and delete assets. Assets are assigned to asset computers.
- **Data point groups:** Allows you to create, edit, and delete data point groups. Data point groups represent, among other things, typicals.
- **Data points:** Allows you to create, edit, and delete alarms for data points. Each data point is assigned to a data point group.
- **Communication:** Allows individual communication connections to be set to online or offline.

The configuration screens are basically structured in the same way as in UeLS-zentras.



Figure 10-1: Configuration screen

All configured entities are listed in the left-hand area. The entries can be sorted by left-clicking on the column header. A partial text search can be performed above each column.

The *Search* and *Reset* buttons refer to the table and filter. The *Export* button allows you to export the filtered list as a CSV file.

The right-hand section contains the edit fields for a selected list entry. The entry is checked when you save it. If there are any plausibility errors, a symbol ( ) is displayed next to the input field. The corresponding pop-up describes the error.

The buttons in the upper area have the following functions:

- **Save:** Checks and saves a new or modified entry.
- **New:** Clears all fields and makes the input available for a new entry.
- **Delete:** Deletes a list entry after a confirmation prompt.
- Res**et:** Resets the input fields to the currently saved values when changing an existing entry.

The dividing bar between the left and right mask areas can be moved. This allows the readability of the list to be improved depending on the screen resolution.

Further explanations can be found at a later stage in the UeLS-zentra documentation.

11 Document view

The document view displays the documents stored in the help area. You can choose to store either a single document or multiple documents here. It is a good idea to store the user manual for the on-call system here.

12 Appendix

12.1 List of figures

Figure 2-1: Overview of the on-call system and UeLS-zentras 7
Figure 2-2: Object model of the on-call system 8
Figure 3-1: Image layout 11
Figure 4-1: Metaframe (existing) 13
Figure 4-2: Meta area 13
Figure 4-3: Dispatcher dialog (existing) 14
Figure 4-4: Dispatcher dialog 15
Figure 4-5: Log in (existing) 16
Figure 4-6: Log in 16
Figure 4-7: Settings 17
Figure 4-8: System Information 18
Figure 4-9: Navigation structure (existing) 18
Figure 4-10: View selection 18
Figure 4-11: Tab selection in the planning view 19
Figure 5-1: Schematic representation of a basic on-call schedule 21
Figure 5-2: Creating a basic plan (existing) 22
Figure 5-3: Creating a floor plan 22
Figure 5-4: Editing a floor plan (existing) 23
Figure 5-5: Editing the floor plan 23
Figure 5-6: Adjusting the handover time (existing) 24
Figure 5-7: Adjusting the handover time 24
Figure 5-8: Extend/shorten basic plan (existing) 25
Figure 5-9: Extend/shorten basic plan 25
Figure 5-10: Copying a floor plan (existing) 26
Figure 5-11: Copying a floor plan 26
Figure 5-12: On-call periods (existing) 27
Figure 5-13: On-call periods 27
Figure 5-14: Info box (existing) 28
Figure 5-15: Info box 28
Figure 5-16: Info field (existing) 29
Figure 5-17: Info field 29
Figure 5-18: Edit periods (existing) 30
Figure 5-19: Editing periods 30
Figure 5-20: Merge period (existing) 31
Figure 5-21: Merge period 31
Figure 5-22: Warning message: different on-call participants (existing) 31
Figure 5-23: Warning message: different on-call participants 31
Figure 5-24: Split period (existing) 32
Figure 5-25: Split period 32
Figure 5-26: Adjust transfer time (existing) 33
Figure 5-27: Adjust transfer time 33
Figure 6-1: On-call region (existing) 34
Figure 6-2: On-call region 34
Figure 6-3: Pause 35
Figure 6-4: Switch-on times (existing) 36
Figure 6-5: Auto pause 36
Figure 6-6: Alarm delay 37
Figure 6-7: Alarm delay 38
Figure 6-8: Regional plants (existing) 39
Figure 6-9: Selection of plants for a region (existing) 39
Figure 6-10: Groups -> Regions – Region selection and group selection 40
Figure 6-11: Plant forwarding (existing) 40
Figure 6-12: Plant activation 40

Figure 6-13: On-call participants (existing) 41
Figure 6-14: On-call participants 41
Figure 6-15: Alarm media (existing) 42
Figure 6-16: Alarm media 43
Figure 7-1: Absence planning (existing) 44
Figure 7-2: Absence planning 44
Figure 7-3: Public holidays 45
Figure 7-4: Importing holidays 46
Figure 8-1: On-call alarm list (existing) 47
Figure 8-2: On-call alarm list 47
Figure 8-3: On-call alarm context menu (existing) 48
Figure 8-4: On-call alarm context menu 48
Figure 8-5: List of delayed alarms 48
Figure 8-6: List of SMS/Pager Messages (Existing) 49
Figure 8-7: List of SMS/pager messages 49
Figure 8-8: SMS/pager messages context menu (existing) 50
Figure 8-9: SMS/pager messages context menu 50
Figure 8-10: Mailing list (existing) 51
Figure 8-11: Shipping list 51
Figure 8-12: Shipping list context menu (existing) 51
Figure 8-13: Shipping list context menu 51
Figure 8-14: Alarm list (existing) 53
Figure 8-15: Alarm list 53
Figure 8-16: Data point information (existing) 54
Figure 8-17: Data point information 55
Figure 8-18: Measurements (existing) 55
Figure 8-19: Measurements 55
Figure 8-20: Suppressed data points (existing) 56
Figure 8-21: Suppressed data points 56
Figure 8-22: Send message (existing) 56
Figure 8-23: Send message 57
Figure 9-1: Overall plan (existing) 58
Figure 9-2: Overall planning 58
Figure 9-3: Export overall plan 59
Figure 9-4: Planning region (existing) 59
Figure 9-5: On-call region 60
Figure 9-6: Export on-call service region 60
Figure 9-7: On-call participants (existing) 61
Figure 9-8: On-call participants 61
Figure 9-9: Export on-call participants 61
Figure 10-1: Configuration screen 63

12.2 Table of contents

Table 1-1: Structure of the document 5
Table 4-1: Quick access icons 14
Table 4-2: Navigation tree 20
Table 5-1 Standby basic plan properties 22
Table 5-2 Functions for editing the basic plan 23
Table 5-3 Pikett period properties 28
Table 5-4 Functions for editing a period 29
Table 6-1 Region Properties 35
Table 6-2 Switch-on time properties 36
Table 6-3 Switch-on time Properties 37
Table 6-4 Switch-on time properties 38
Table 6-5 System forwarding properties 41

Table 6-6 On-call participant properties 42
Table 6-7 Alarm Medium Properties 43
Table 7-1 Absence Planning Properties 45
Table 7-2 Holiday Properties 45
Table 8-1 Properties of an on-call alarm 48
Table 8-2 Attributes of a delayed alarm 49
Table 8-3 SMS/Pager Messages Context Menu 50
Table 8-4 Properties of an SMS/pager message 50
Table 8-5 Properties of a mailing list 53
Table 8-6 Properties of an alarm list 54
Table 8-7 Properties of a measurement 56
Table 8-8 Properties of a suppressed DP 56
Table 9-1: Overall plan Properties 58
Table 9-2: Planning region properties 60
Table 9-3: On-call participant properties 61