Quick Start


Welcome to the Magical Forest, pilot!
Find a wide open space to learn how to fly the K30. Let's begin!








First, charge and install the K30's battery.

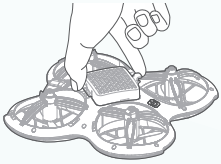



Prepare three AAA batteries (not provided) and insert them into the remote.

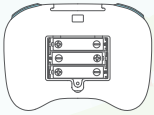


Power on both devices by pressing and holding their respective ⏻ buttons.

Place the K30 on a flat surface and give it a moment. Has it been successfully activated?




To initiate takeoff, follow the method below or simply press and hold the ⇅ button on the remote for 1s.

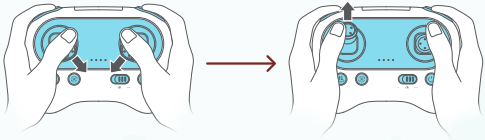

Move the **Left Control Stick** to make the drone go up and down; move the **Right Control Stick** to make the drone go forward and backward. Give it a go!

Try changing K30's lights to see if it attracts any new friends in the Magical Forest.

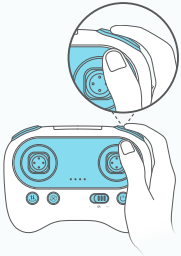

Press the button a few times and see what happens.


If your K30 has taken a fall and is having trouble taking off, try placing it on a flat surface and perform a reset using the remote, which will fix most problems.





Try using your mobile phone to experience the world through K30's eyes!



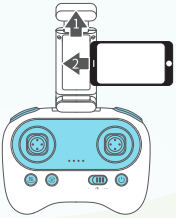



Use your mobile phone to scan the QR code below and download the **SNAPTAIN FPV** app.

For Android 8.0 and later

For iOS 8.0 and later



Go to the WiFi setting on your phone and connect to **SNAPTAIN-K30-XXXXXX** WiFi. Then, launch the **SNAPTAIN FPV** app, and tap **FUNCTION DISPLAY**.



Good job, pilot!
I believe you are ready for an exciting adventure in the Magical Forest!

* To know more about the K30, please check out the **User Manual** or scan the QR codes below to access the video tutorial.

www.snaptain.com

@snaptainofficial