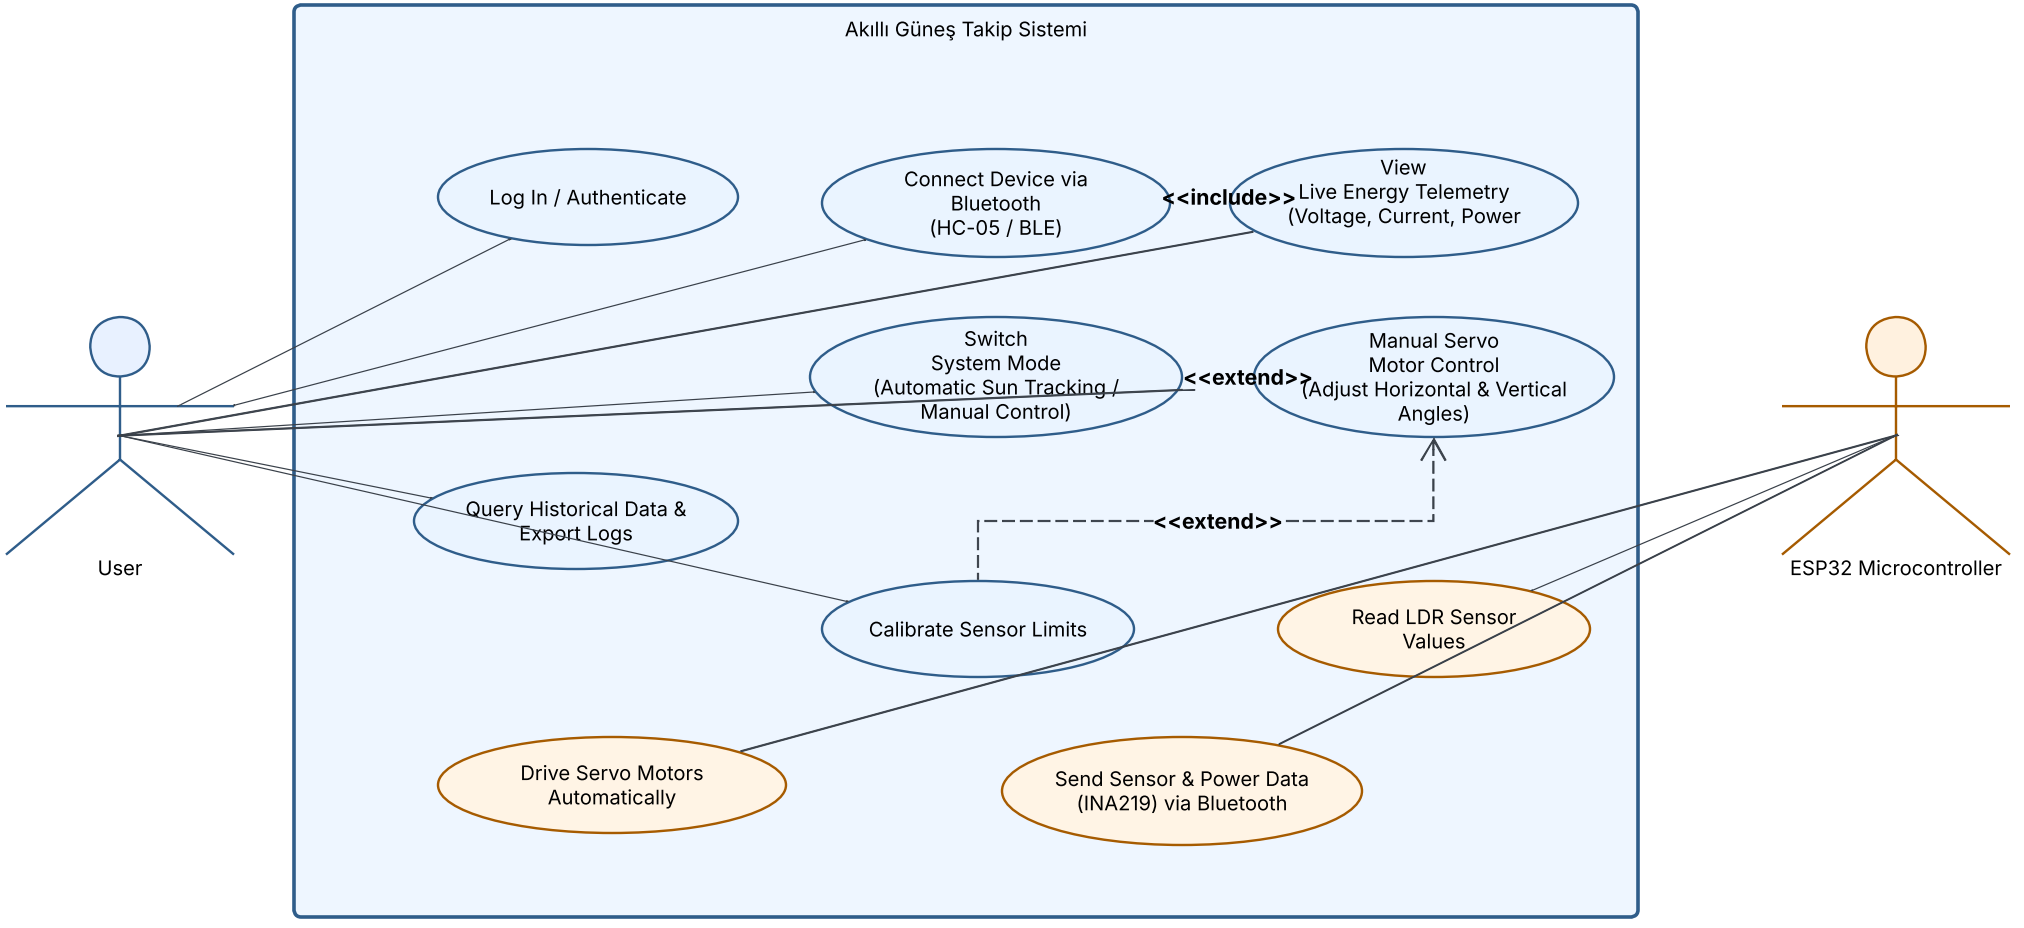
Akıllı Güneş Takip Sistemi
Log In / Authenticate
Connect Device via Bluetooth (HC-05 / BLE)
<<include>>
View Live Energy Telemetry (Voltage, Current, Power
Switch System Mode (Automatic Sun Tracking / Manual Control)
<<extend>>
Manual Servo Motor Control (Adjust Horizontal & Vertical Angles)
Query Historical Data & Export Logs
<<extend>>
Calibrate Sensor Limits
Read LDR Sensor Values
Drive Servo Motors Automatically
Send Sensor & Power Data (INA219) via Bluetooth
User
ESP32 Microcontroller