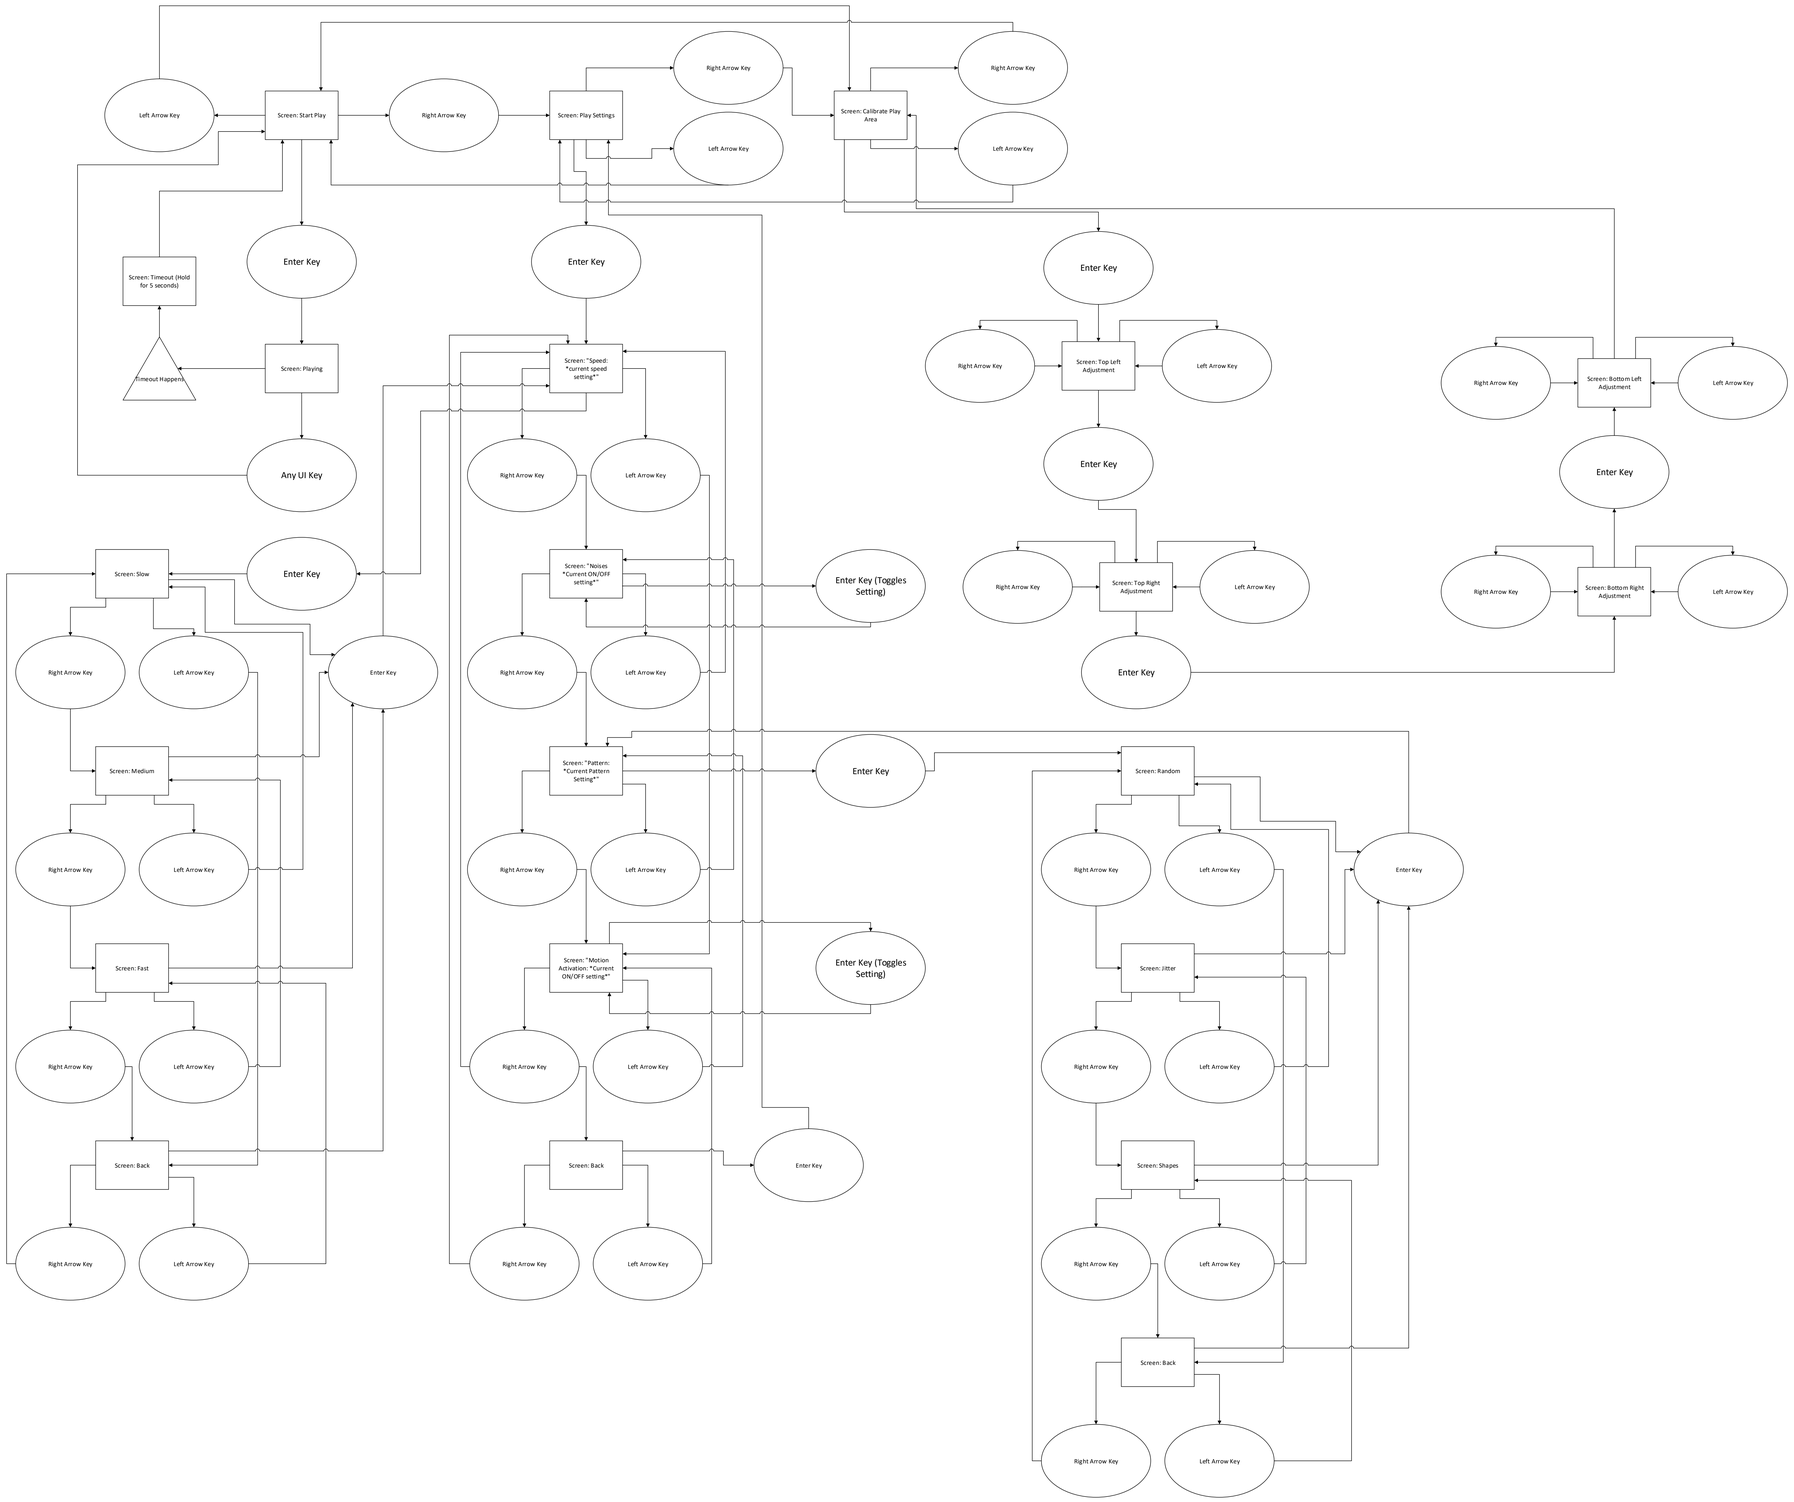

Left Arrow Key
Screen: Start Play
Right Arrow Key
Screen: Play Settings
Right Arrow Key
Left Arrow Key
Screen: Calibrate Play Area
Right Arrow Key
Left Arrow Key
Screen: Timeout (Hold for 5 seconds)
Timeout Happens
Enter Key
Screen: Playing
Any UI Key
Enter Key
Screen: "Speed: "current speed setting""
Right Arrow Key
Left Arrow Key
Enter Key
Right Arrow Key
Screen: Top Left Adjustment
Left Arrow Key
Enter Key
Right Arrow Key
Screen: Top Right Adjustment
Left Arrow Key
Enter Key
Right Arrow Key
Screen: Bottom Left Adjustment
Left Arrow Key
Enter Key
Right Arrow Key
Screen: Bottom Right Adjustment
Left Arrow Key
Screen: Slow
Enter Key
Right Arrow Key
Left Arrow Key
Enter Key
Screen: Medium
Right Arrow Key
Left Arrow Key
Screen: Fast
Right Arrow Key
Left Arrow Key
Screen: Back
Right Arrow Key
Left Arrow Key
Screen: "Noises "Current ON/OFF setting""
Enter Key (Toggles Setting)
Right Arrow Key
Left Arrow Key
Screen: "Pattern: "Current Pattern Setting""
Enter Key
Right Arrow Key
Left Arrow Key
Screen: "Motion Activation: "Current ON/OFF setting""
Enter Key (Toggles Setting)
Right Arrow Key
Left Arrow Key
Screen: Back
Enter Key
Right Arrow Key
Left Arrow Key
Screen: Random
Right Arrow Key
Left Arrow Key
Enter Key
Screen: Jitter
Right Arrow Key
Left Arrow Key
Screen: Shapes
Right Arrow Key
Left Arrow Key
Screen: Back
Right Arrow Key
Left Arrow Key