

26'x16' PE Budget Party Tent (B) Model

Assembly Instructions

CORRECT VERSION

Please read the assembly instructions
and warnings carefully before setting up
the tent.

Please follow the care instructions so you
enjoy your tent for a long time.

ASSEMBLY INSTRUCTIONS AND WARNINGS

!!!! PLEASE READ THIS LEAFLET CAREFULLY!! IMPORTANT TO KEEP FOR FUTURE REFERENCE

Dear Customer,

Thank you for choosing our product, as well as for the confidence you have placed in us.

We recommend reviewing these instructions carefully so that you may enjoy your pavilion for a long time.

- Your pavilion must be erected in accordance to the assembly instructions. Make sure that the corners of the roof are carefully pulled over the corner joints.
- Your pavilion must always also be anchored with the included tension rope and earth stakes. When using the pavilion at an unattended location (recreational property, private property, cottage, campground, or similar...) the roof, and if present, the side panels, must be removed. Otherwise, there is danger that the entire pavilion, despite proper set up, may be damaged or destroyed by wind / wind gusts.
- Protect your pavilion from the wind by using all the specified fastening and bracing options. Be sure to use the pegs to fasten the foot rods with the footplate to the ground. The same applies to the sides. You must secure and tighten down the roof with the included tension rope **The pavilion must be dismantled if there are strong winds or wind gusts.**
- PE tarpaulins, in contrast to PVC tarpaulins, are in no way weather resistant in the long term and therefore, are only suitable for occasional and short-term use. PVC pavilions must be stored for 24 hours prior to set up at room temperature so the material becomes supple and assembly is therewith easier. PE pavilions, as well as PVC pavilions may not be set up at temperatures under +4°C as the material becomes very hard and inflexible at low temperatures and this can lead to breakage.
The pavilion is not weather proof. If left unattended, possible damages could occur.
-
- Under **no circumstances** may liability be claimed for all weather-related damage such as from wind, wind gusts, rain, snow loads or ice.
- Never use open flames near or inside the tent. Unit is **NOT** fire retardant.
- Your pavilion primarily serves as protection from the sun, rain and as a privacy screen. The pavilion may not be left unattended during heavy rain as water pockets may form, which can be avoided by draining of the rain water by, e.g. lifting it slightly with a broom so that the water can drain.

Wear-and-tear parts such as tension ropes, stretch cords, straps, anchoring parts or eyelets are excluded from the warranty. Improper use of the pavilion and failing to observe these instructions eliminates any liability claims.

If you observe the above-mentioned instructions, we are convinced that you will enjoy your pavilion for a long period of time.

CARE INSTRUCTIONS

!! PLEASE READ THIS LEAFLET CAREFULLY!! IMPORTANT TO KEEP FOR FUTURE REFERENCE




Dear Customer,


Thank you for choosing our product, as well as for the confidence you have placed in us.

We recommend observing these instructions carefully so that you may enjoy your pavilion for a long time.

- Please note that if a perforation occurs at the seams of the pavilion, which is due to the suturing of the roof parts, this could lead to water droplets penetrating the seams. The seams can be resealed with a professional seam sealer. Upon reappearance, repeat process again.
- If, over the course of time, small rust spots appear on your pavilion frame, these can be covered quickly and easily with a commercially available rust coverage paint. Rust on rods or eyelets do not infer a defect.
- Mold or mildew spots can be removed with a mild chlorine solution. Always test the chlorine solution on an inconspicuous spot to ensure that there is no discolouration.
- Clean your pavilion with a mild soap cleanser. Acids, alkaline solutions, cleaning with steam cleaners or abrasive brushes can cause severe damage to the pavilion.
- Only store your pavilion when clean and thoroughly dried.

If you observe the above-mentioned instructions, we are convinced that you will enjoy your pavilion for a long period of time.

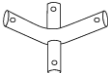Parts	Description	Parts Design	Amount
			26x16
1.	Cross Poles		22
2.	Leg Poles		10
3.	Rafter Poles		10
5.	Leg Connecting Pole		4
6.	Reinforcement Pole		2
A.	3-way Corner Connector		4
B.	4-way Side Connector		6
C.	3-way Roof Connector		2
D.	4-way Peak Connector		3
E.	E – Roof Connecting Pole		10
F.	F- Corner Connector		8
G.	G – Foot Plate		10
H.	H- Top Connector 30°		4

J.	Guy Line		4
K.	Long Bungee		104
L.	Spiral Stake		4
M.	L-Stake		20
N.	U-Stake		20
P.	Roof		1
Q.	Window Wall		8
R.	End Panel		2
S.	Hook		13
T.	45mm Bolt/Wingnut	 6x45mm	10

PRIOR TO ASSEMBLY

Keep children away during assembly.

They can choke on plastic parts and there is the risk of suffocation by the plastic packaging.

Choose a suitable location for the assembly of the tent:

- The tent should be assembled on a flat, safe and in wind-sheltered area.
- Prevent damage by placing the tent far enough away from pointed objects, e.g. branches, parts of buildings, etc.
- Set the tent up far enough away from open fire **[NOT FLAME RESISTANT/RETARDANT]**.

STEP 1

- Place all the poles and connection elements on the ground according to the drawing.




STEP 2


Assemble the Roof Construction:

- Refer to the provided diagram for guidance.
- Piece together the roof components according to the illustration.

Secure the Poles:

- Pay close attention to the push buttons on the poles.
- Ensure that the push buttons completely click into the connectors.
This secure connection will prevent the poles from coming out during use.

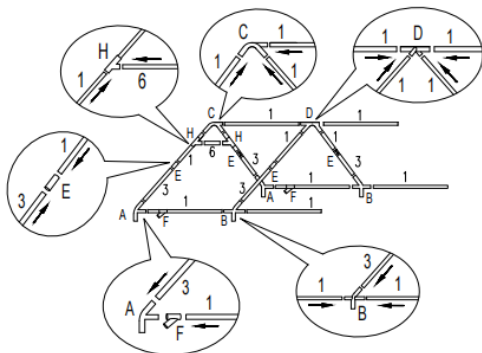

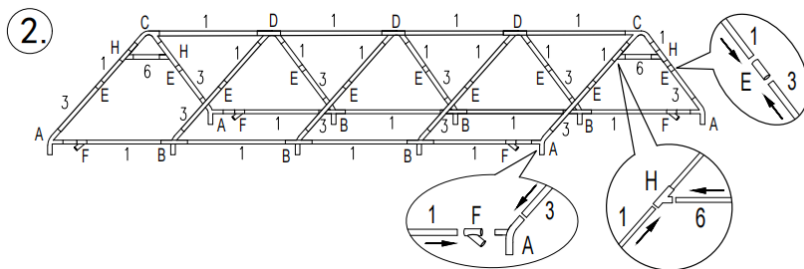

Assembly Instructions of Reinforcement Poles #6:

- Insert the #6 Reinforcement pole into the H- Top Connector 30° at the #1 pole and lock it in place.
- Slide the H- Top Connector 30° on the #1 cross pole to the appropriate position to accommodate the #6 Reinforcement pole. You may need to adjust the angle of the #6 Reinforcement pole slightly up and down until the push button pops up.


STEP 3

Pull the Roof (P) Over the Poles:

- Gently pull the roof (P) over the poles.
- Ensure that the roof is not damaged at the corners due to excessive tension.

Ideal Weather Conditions:

- It is recommended to perform these steps when there is little to no wind. This will help ensure a smooth and safe assembly process.

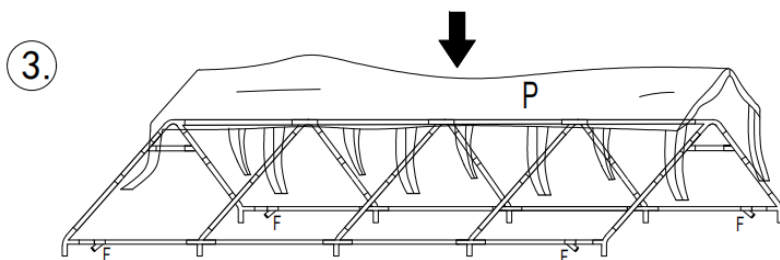

STEP 4

Connect the Bottom of Pole (#2) and Foot Base (G):

- Use a 6X45MM screw to attach the bottom of pole (#2) to the foot base (G). Ensure a secure connection.

Place the Corner Connector (F) onto the (#2) Poles:

- Position the corner connector (F) onto the poles (#2) as shown in diagram.

Position the Poles with Foot Plates (#2):


- Lift one side of the tent.
- Place the poles with foot plates (#2) according to the provided drawing.
- Ensure that the poles are upright and aligned.
- You will need to have one person per plate foot pole for lifting and insertion.

Secure the Roof Cover on the Frame:

- Use long bungees (K) to secure the roof cover to the framework.
- Place the bungees in a zigzag pattern to ensure a tight fit.

Attach the Roof Tarpaulin Leg Covers:

- Use the hooks (S) to secure the roof tarpaulin leg covers onto the leg poles (#2).

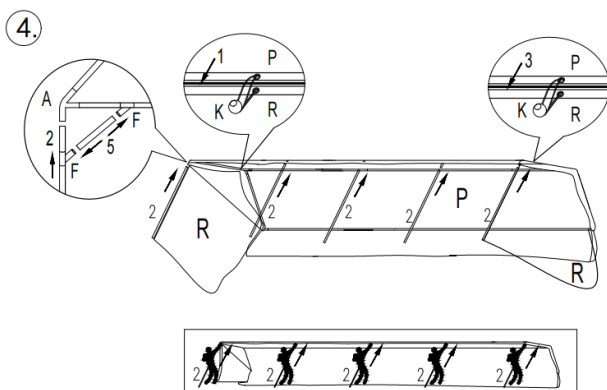

Note:

Assembly Instructions of Support Poles #5:

- Insert the #5 connecting pole into the F connector at the #2 leg pole and lock it in place.
- Slide the F connector on the #1 cross pole to the appropriate position to accommodate the #5 connecting pole. You may need to adjust the angle of the #5 connecting pole slightly up and down until the push button pops up.

Disassembly Instructions of Support Poles #5:

- Release the #5 connecting pole from the F connector at the #1 cross pole.
- Simultaneously push down on the F connector at the #2 leg pole and push the F connector at the #1 cross pole away from the corner. This will allow the #5 connecting pole to come out from the F connector at the #1 cross pole.
- Finally, detach the #5 connecting pole from the F connector at the #2 leg pole.

STEP 5

Lift the other side of Tent:

- Gather enough people to lift the tent.
- Follow the instructions from Step 4 to secure the leg poles.

Ensure Upright and Aligned Poles:


- As you lift the tent, make sure the poles are upright and aligned. Proper alignment is crucial for stability.

Secure Foot Plates with U-Stakes (N):

- Immediately after lifting, secure some of the foot plates with the U-stakes (N). This will help keep the unit in alignment and prevent shifting.

Attach Roof Tarpaulin Leg Coverings:

- Use the remaining hooks provided to secure the roof tarpaulin leg coverings onto the leg poles (#2) as shown in the below illustration. .

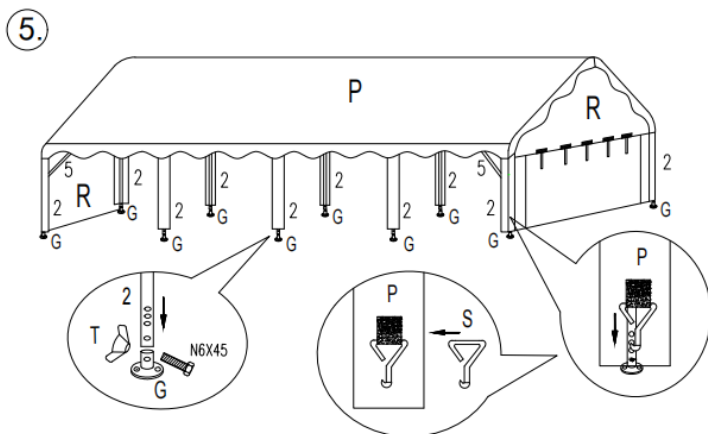

STEP 6 & 7

Attach Window Walls and End Panels:

- Attach the window walls and end panels with the roof tarpaulin using the included Long Bungees to secure them in place.


Secure Ground Overhang for Window and End Panels:

- Use the L-Stake (M) to secure the ground overhang of the window and end panels to the ground.
- This will help keep them stable and prevent movement.


Secure the Legs with Remaining U-Stakes (N):

- Refer to Step 5 for guidance on securing the legs.
- Use the remaining U-Stakes (N) to ensure the stability of the entire structure.

6.

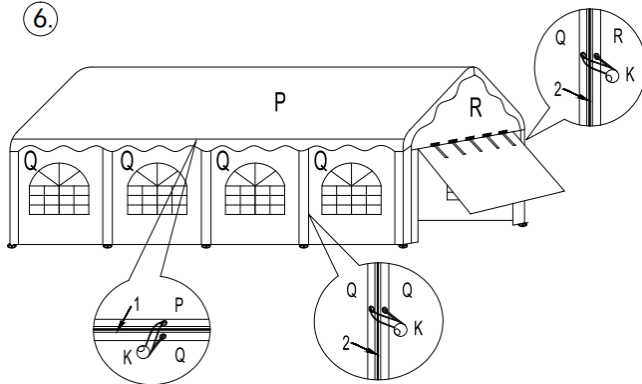

7.

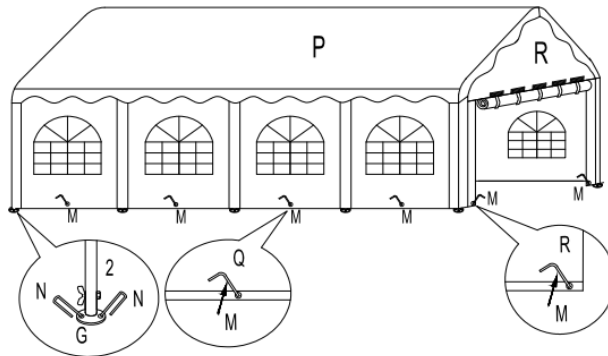

STEP 8

Secure the Tent Poles with Guy Lines (J):

- Attach the guy lines (J) to the tent poles.
- Tie the ropes to the corner connectors (A).

Feed the Rope Underneath the Roof Tarpaulin:


- Pass the rope underneath the corner of the roof tarpaulin, extending it outward at a 45-degree angle.

Secure the Rope to the Ground:

- Use the Spiral stake (L) to anchor the rope securely to the ground. This will help stabilize the tent and prevent movement.

Note:

The use of additional heavy-duty stakes and rope are as needed (not included in this package). This is recommended especially during windy conditions or after rain.

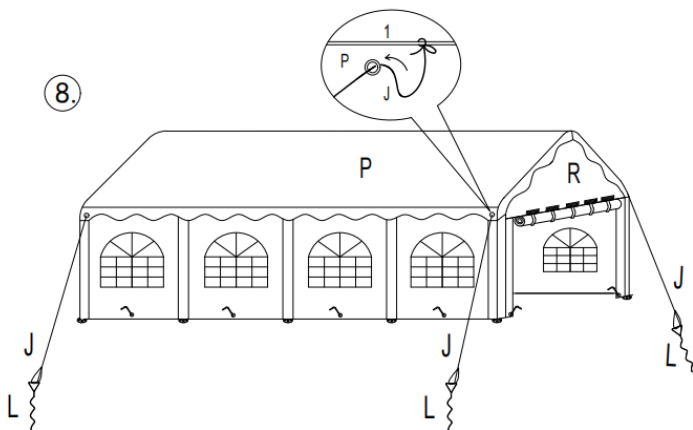

This is a TEMPORARY anchoring system.

****Not intended for permanent use.****

All images used are for illustration purposes only
and may not represent an individual product. Manufacture
update parts to fit each model.

Note:

PROPER ANCHORING OF THE FRAME IS THE RESPONSIBILITY OF THE CONSUMER. During windy conditions and/or inclement weather, the use of heavy-duty stakes are necessary (Not included with unit).

Choose the proper anchoring system FOR YOUR NEEDS. Heavy duty anchors, such storm straps and ground stakes are sold separately and are not included in this product.

TENT PURCHASES ONLY!!

PLEASE READ – IMPORTANT FACTS:

Because we cannot be there to set this up for you, and we have no control over your local weather, wind, or soil conditions, it is ultimately up to you to determine if your assembly and anchoring of this canopy is sufficient. This canopy is intended to protect against the effects of sun, light rain, light snow, etc.

Choose a calm day to set up your tent. We are not responsible for damage to the unit or the contents from acts of nature. It is *ALWAYS* recommended that you secure your tent properly with storm straps and ground pegs when you put up the structure. Any temporary shelter that is not anchored securely has the potential to fly away causing damage. We are not responsible for any shelter that blows away.

Proper Anchoring system selection is your responsibility. Heavy duty Anchors can be bought separately and are not included in these products. It is highly recommended that additional anchors are purchased and used with your unit.

We are not responsible for damage(s) to the unit sustained while erected in windy or other adverse weather conditions such as rain, snow, etc. Please note as with all products of this type, it is not recommended to be left up in the wind. If it you deem it necessary to keep the unit assembled (not recommended) in a windy day, please remove sidewalls as the wind pressure will put stress on the walls and may lead to them ripping. We advise customers *NEVER* to leave them up overnight, particularly with the roof and side panels on because gusts of winds and unforeseen adverse weather can damage the unit. We cannot be held responsible for such damage(s). ANY temporary shelter of this kind can be damaged due to them being left up in adverse weather. We are not responsible for any shelter that is damaged by the above actions. Customer is responsible to purchase replacement parts.

Immediately remove any accumulated water, snow, or ice from the roof structure with a broom, mop, or other soft-sided instrument. If you fail to do so, the weight of water, snow or ice will lead to the collapse of the canopy. It is not designed to hold the loads that can accompany wind, rain, snow, or ice storms. Be advised; do not remain under the structure if adverse weather is happening. This structure is not tested for specific snow, rain, and wind loads. Allow canopy to dry completely before storing. If not, it will mildew. Manufacture is not responsible for ANY damages caused by the above actions. The owner of the tent has the sole responsibility for payment of the replacement parts if any of the above occurs with the purchase.

Please contact our company if you need any assistance with your purchase. We can be reached at (214) 491-6991. Our office hours are Monday - Friday 9am – 4pm CST.

Limited 30-Day Warranty