


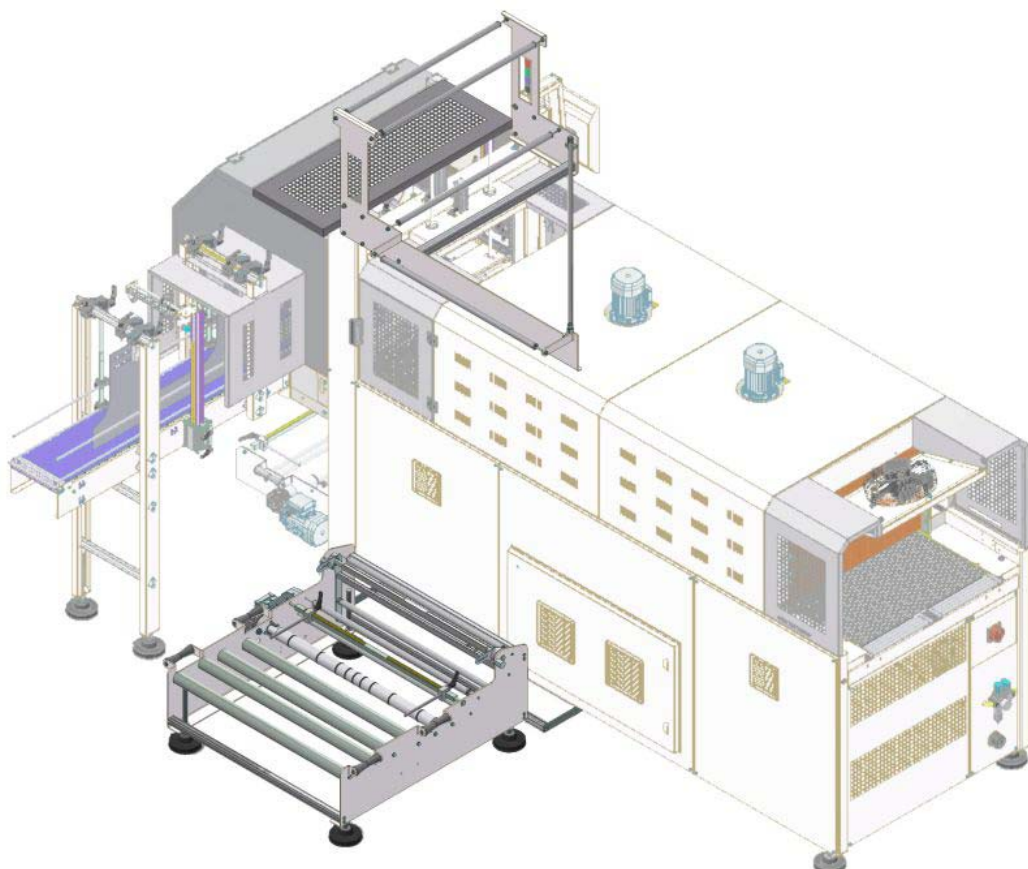

External reel-holder

Manual

Translation from the original

Manual code: DM200178

Revision: A

Rev.	Date revision
0	04.09.2017
A	29.10.2020

1 - External reel-holder for bottom loading

This manual should be used when installing the shrinkwrapper machine with the external reel-holder for easy bottom loading instead of the upper reel-holder. The following table shows the main components.

1	Reel-holder	4	Reel-holder motor
2	Tensioning bar unit	5	Tensioning bar sensor
3	Upper film return unit	6	Reel end photocell (when it is present)

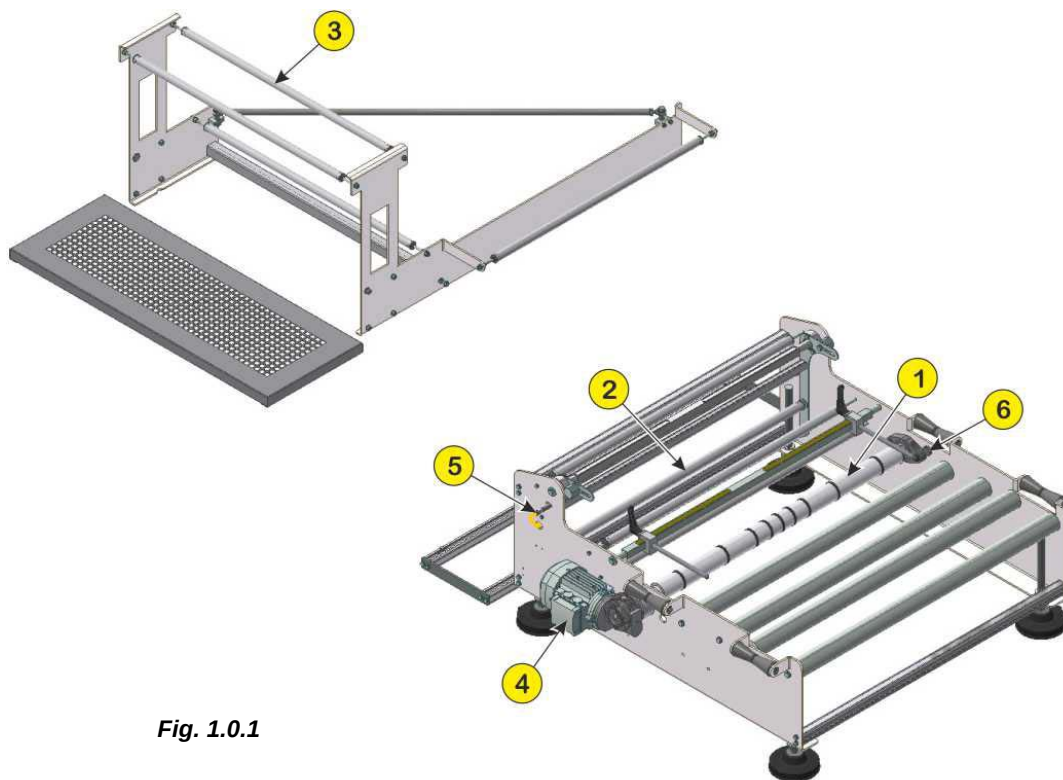


Fig. 1.0.1

1.1 Weigth and dimensions of packed reel-holder

X (mm)	Y (mm)	H (mm)
1225	1340	625


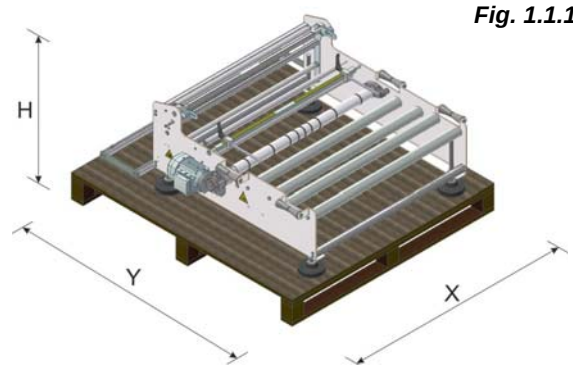


Fig. 1.1.1

1.2 Weigth and dimensions of reel-holder


Fig. 1.2.1

X (mm)	Y (mm)	H (mm)
1170	1220	485 ÷ 640

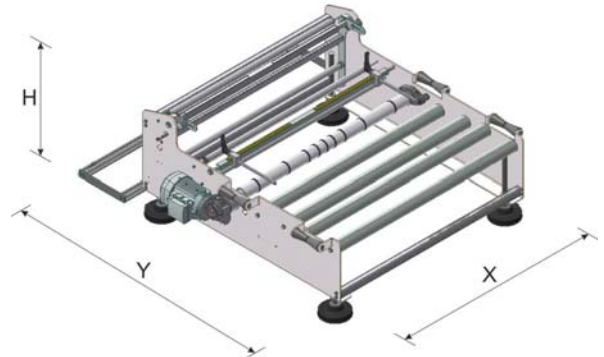

1.3 Trasport and logistic

Handle with care when transporting and positioning the external reel-holder. The carrier is liable for damage sustained during transportation. Be careful not to damage the exposed parts when unpacking the unit.

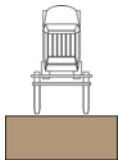

The machine module must be handled from beneath. Due to the type of packaging, systems that work from above cannot be used. Lift the machine in the middle from the longest side and adjust the position of the lift forks at the greatest centred position possible.

4



ATTENTION!

Before handling, always make sure that the lifting device is suitable to lift the load.

1.4 Unpacking reel-holder operations

Remove the 4 supports (1) which fix the reel-holder to the pallet and then adjust the height of the support feet based on the height adjusted in the shrinkwrapper machine. It is recommend to use a level to verify that the reel-holder is placed perfectly in a flat position. When this operation is finished block the support feet screwing the counter-nuts (2) back on.

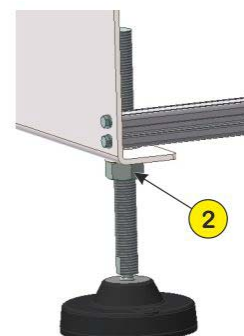
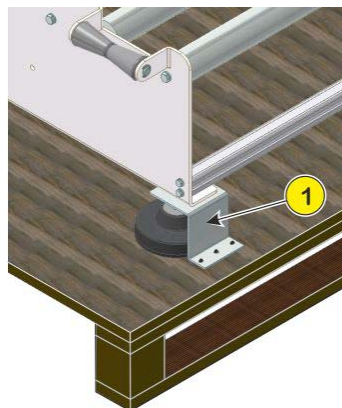


Fig. 1.4.1

1.5 Positioning of external reel holder

The shrinkwrapper can be configured with an external reel holder installed on the left side (Sx) or on the right side (Dx).

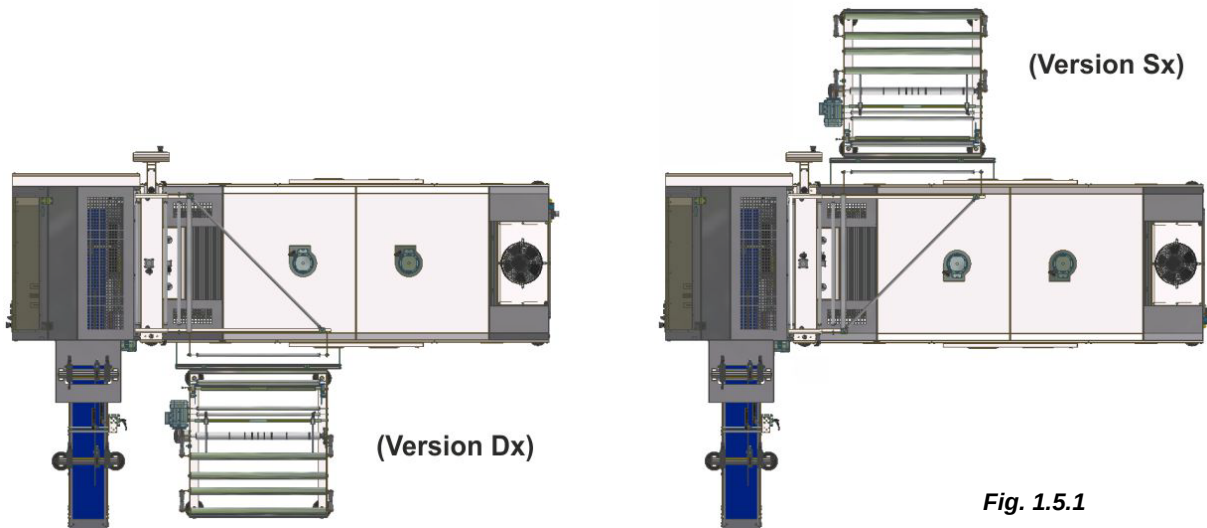


Fig. 1.5.1

Remove the sheet metal guards (3) and (4) so that the external reel holder can be fixed to the machine as shown in the following figure.

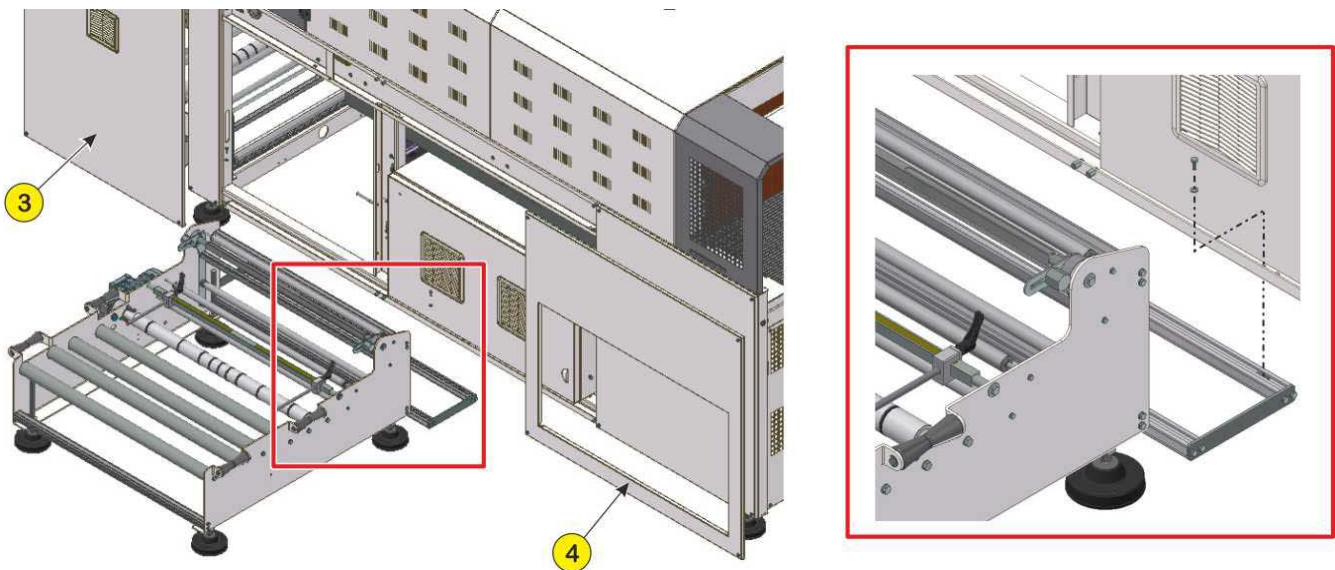


Fig. 1.5.2

Perform the wiring described below and then remount the removed sheet metal guards before using the machine.

1.6 Electrical connections of the reel-holder with the shrinkwrapper machine

Electrically connect the photocell **50.SQ.4** designed to control the end of the reel (if included, being an optional) and the sensor **51.B** designed to unwind the film reel using the specific connectors coming from the zone **(A)** of the shrinkwrapper.

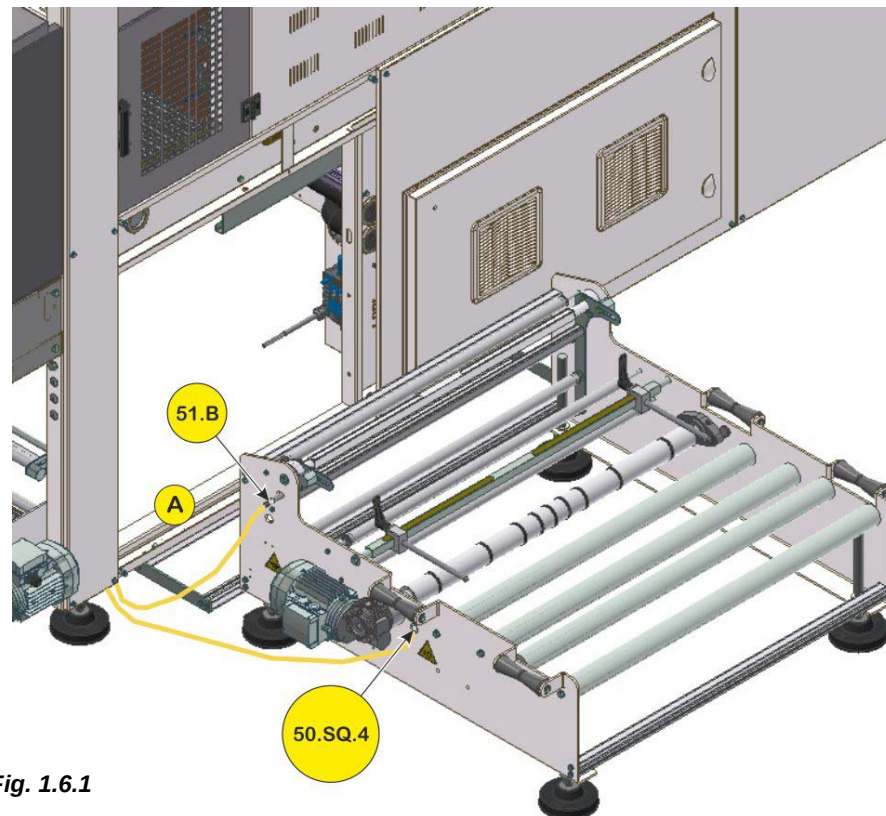


Fig. 1.6.1

Electrically connect the gearmotor **32.M.1** of the reel holder. Open the box of the gear motor and make the connection (three-phase + earth).

ATTENTION! Make sure that the connection of the motor is carried out in such a way that the rotation of the rollers of the tensioning bar unit is as shown in the figure 1.9.1.

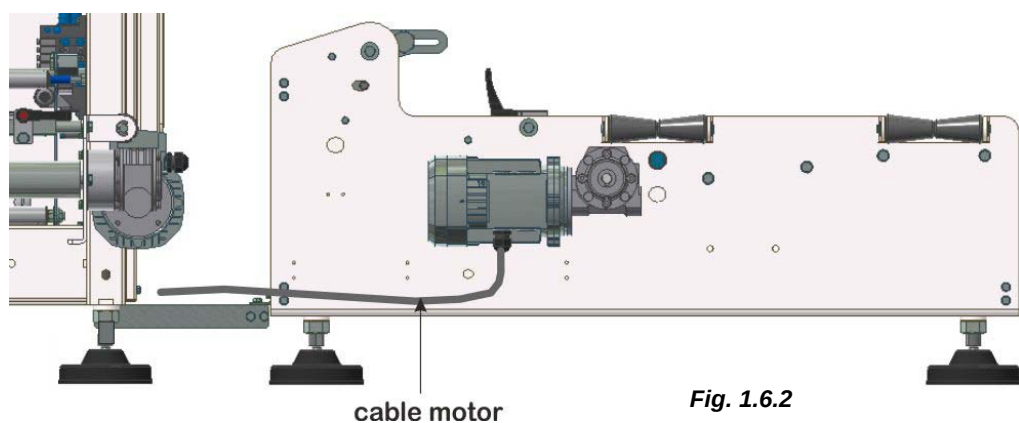


Fig. 1.6.2

1.7 Hazardous areas on the reel-holder

The following table shows the areas of the reel-holder where the operator shall have to be careful.

Zone A	Risks: Risk of crushing during the reel loading phase due to the possibility of the roller supporting them rotating because of a movement of the tensioning bars. Prescribed standards of conduct: The operator must wear suitable clothes that cannot remain entangled in moving mechanical parts and wear safety shoes. Reel loading shall be performed by at least 2 operators if its weight is: >15 kg if it is handled by a woman >25 kg if it is handled by a man
Zone B	Risks: Risk of entanglement of clothing and possible entrainment and/or crushing in the event of operating on the tensioning bars during the film unwinding phase. Prescribed standards of conduct: Do not touch tensioning bars during machine operation.

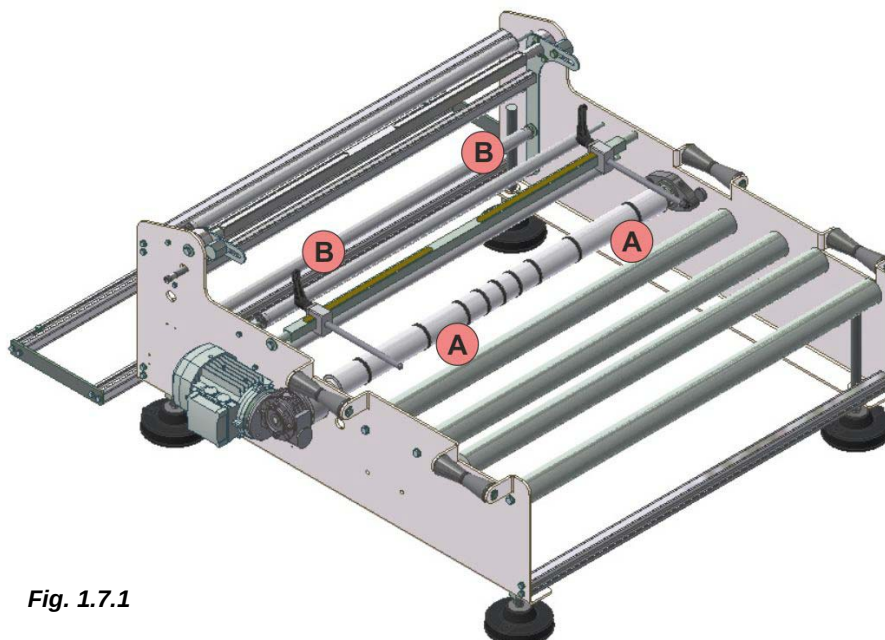


Fig. 1.7.1

1.8 Positioning the film reel

The film reel must be placed above the rollers (R) shown in the figure. The sliding rollers (D) facilitate the positioning of the reel.

Unblock the stops (C), moving them outwards, to facilitate handling the film reel and centre it compared to the reel-holder. The presence of the millimetre ruler (Q) facilitates this operation.

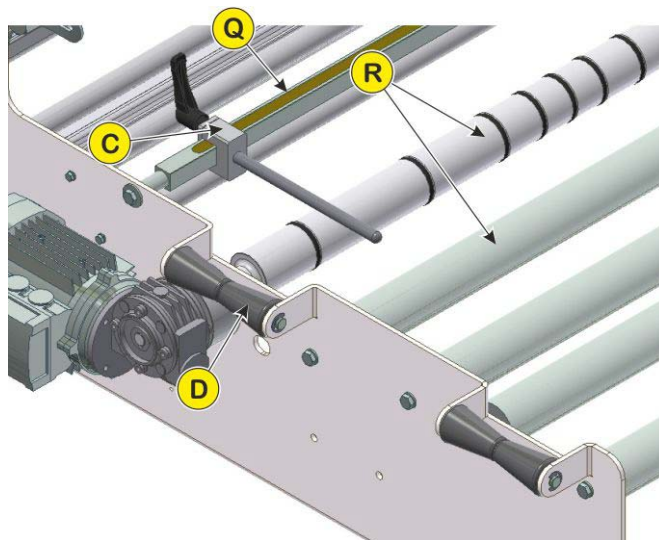


Fig. 1.8.1

When the operation is complete, block the stops (C) leaving a few mm of space from the film reel so that the dragging of the film is correctly.

1.9 Loading the ride film reels

The following figure represents the ride of the film when the shrinkwrapper machine is used and configured with the optional reel-holder.

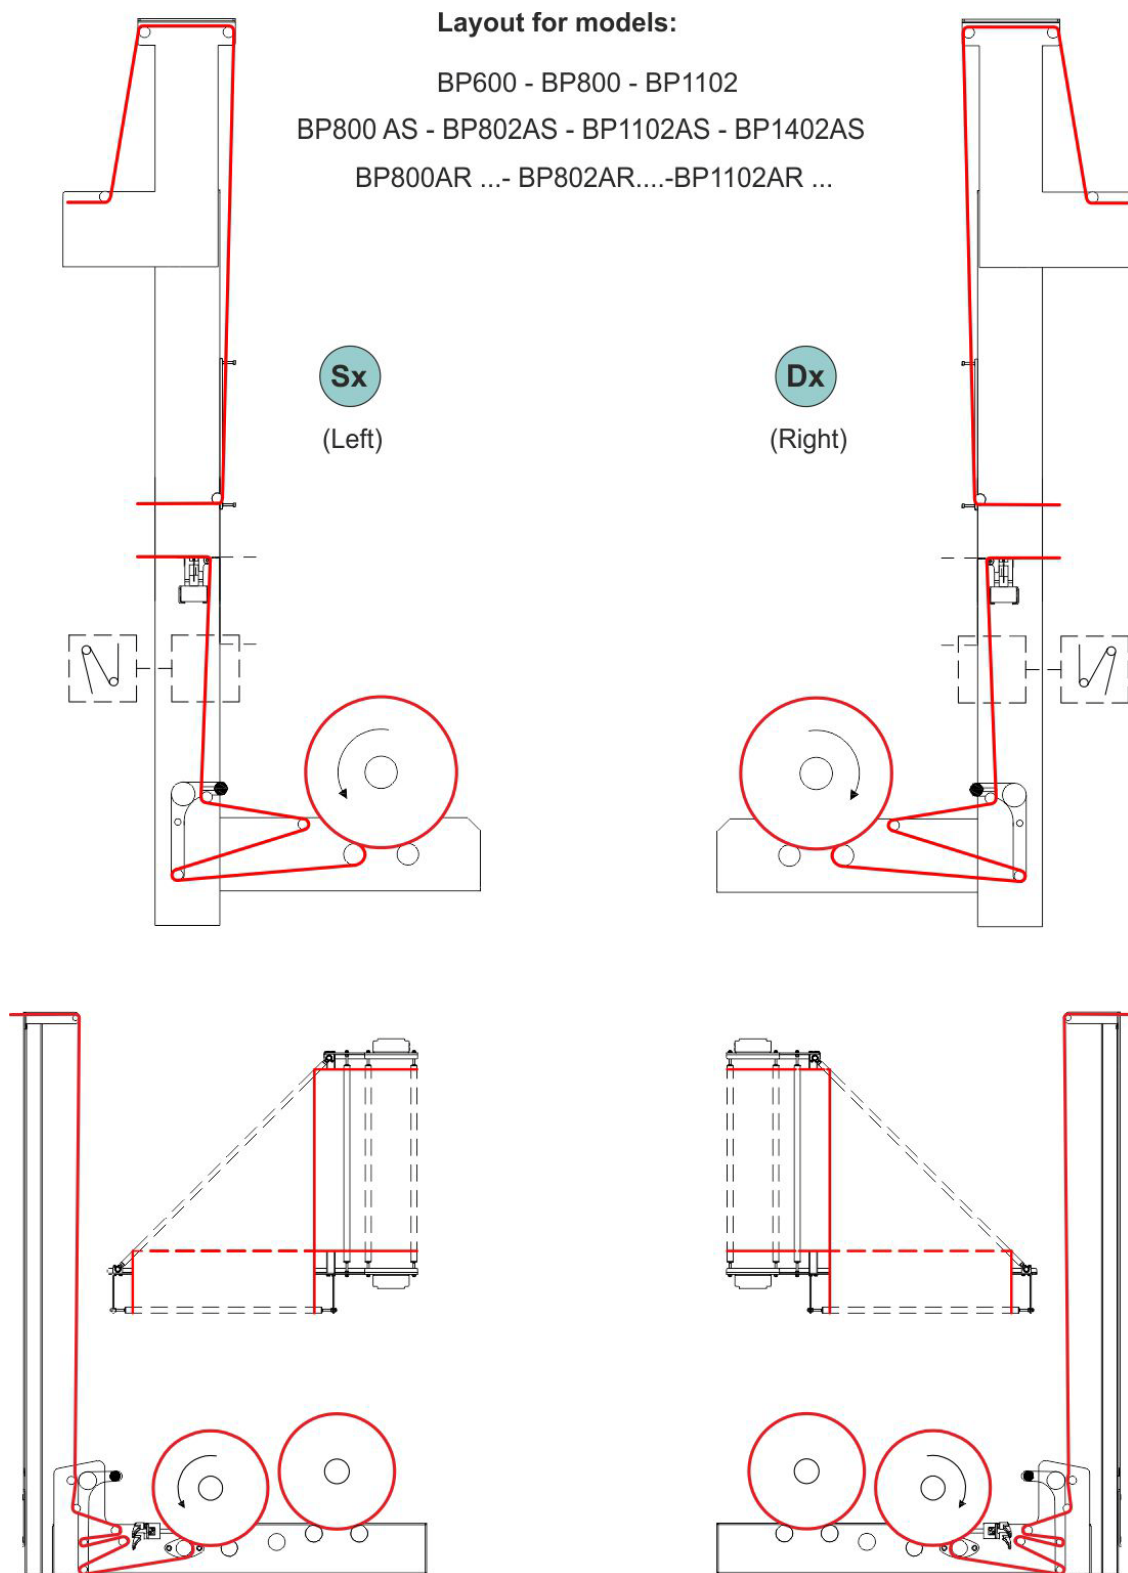


Fig. 1.9.1

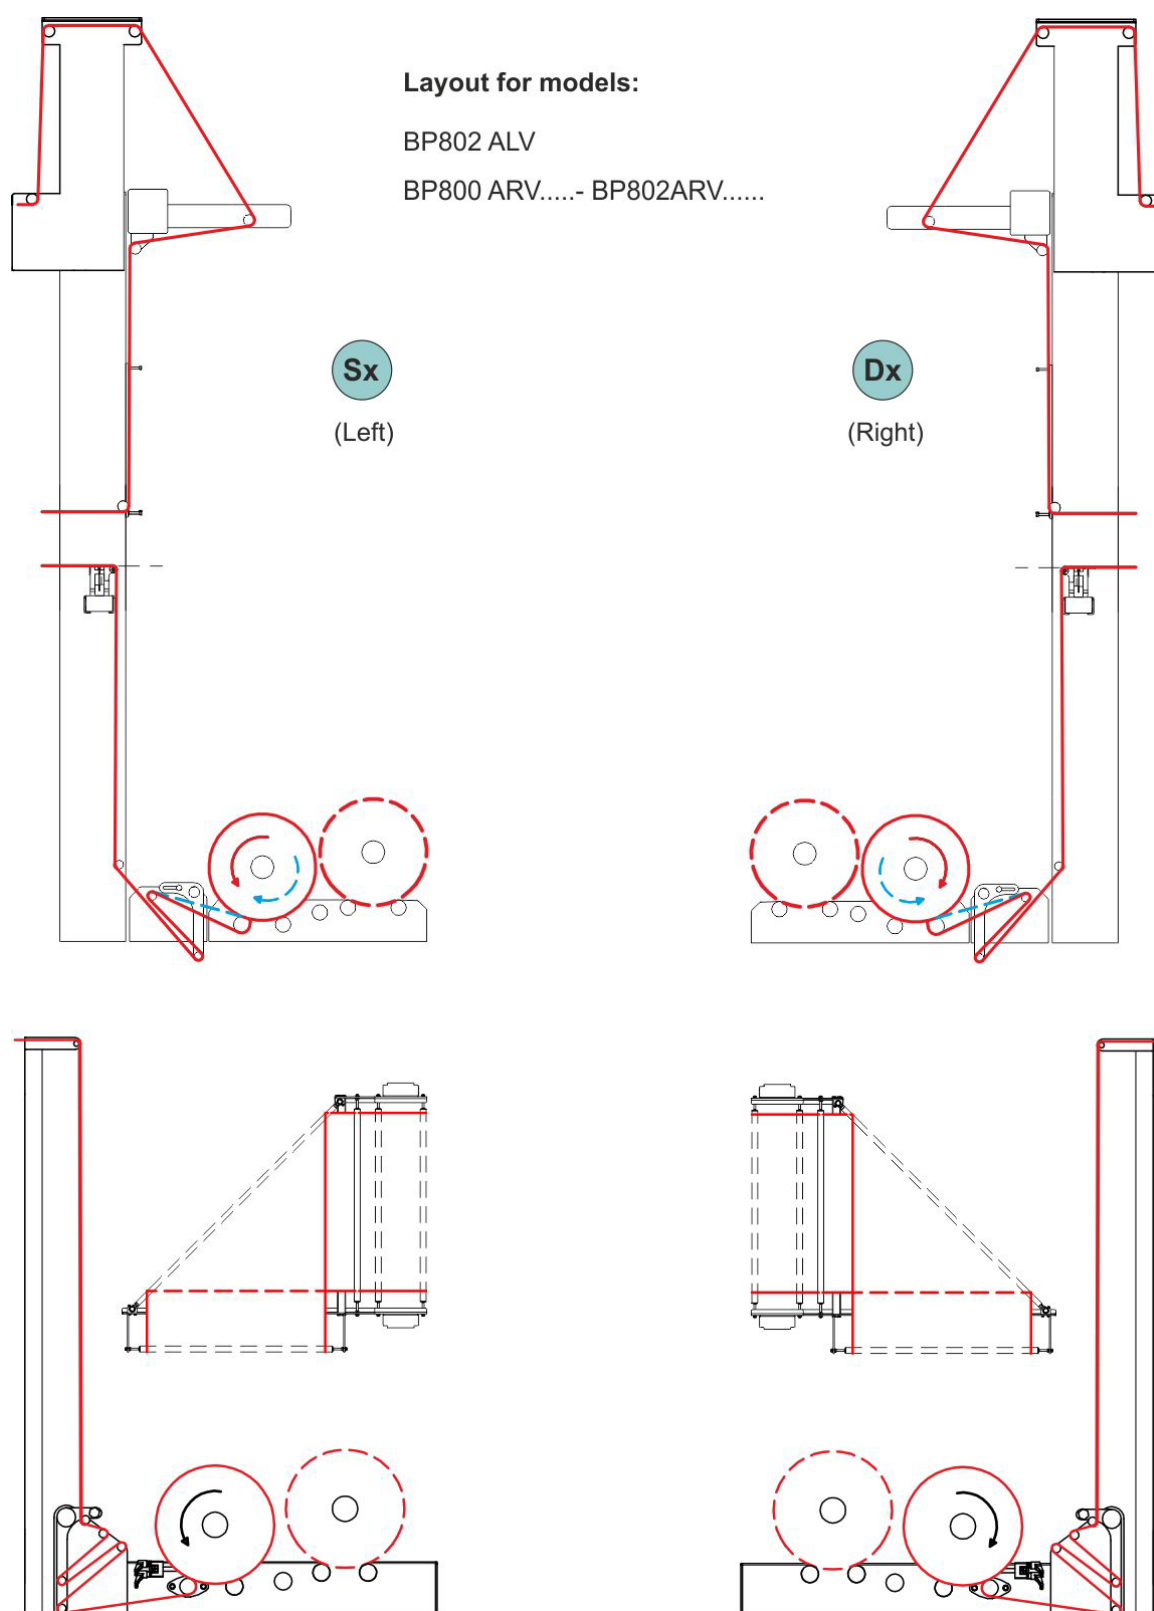


Fig. 1.9.2

1.10 Regulation of film unwinding

The operation of the film unwinding is carried out by a special tensioning bar which in normal conditions need no special adjustments.

It is recommend adding the counterweights (1) only if there is difficulty to unwind the film in order to have a greater tensioning. If required, increase the weight by acting on the lever until the film unwinding problem is resolved.

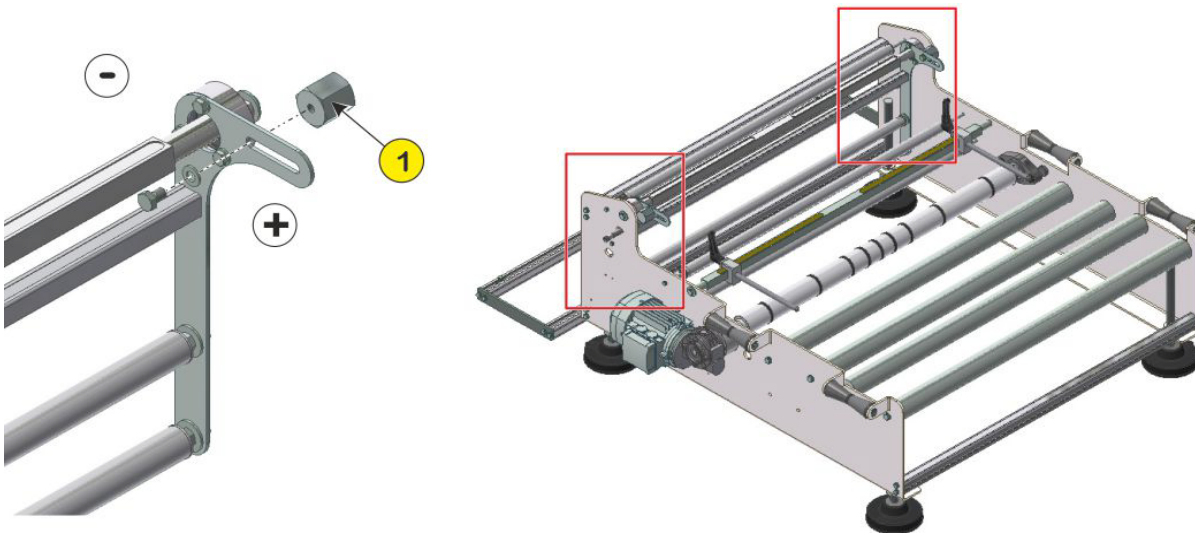


Fig. 1.10.1

1.11 Overturning the upper film return unit for the maintenance operations

In order to facilitate the eventually maintenance operations in the thermal chamber, when is necessary disassemble the upper protection (S) it is possible, after to remove the screws (7) from both sides, turn the upper film return unit around the two pins (8) shown in figure.


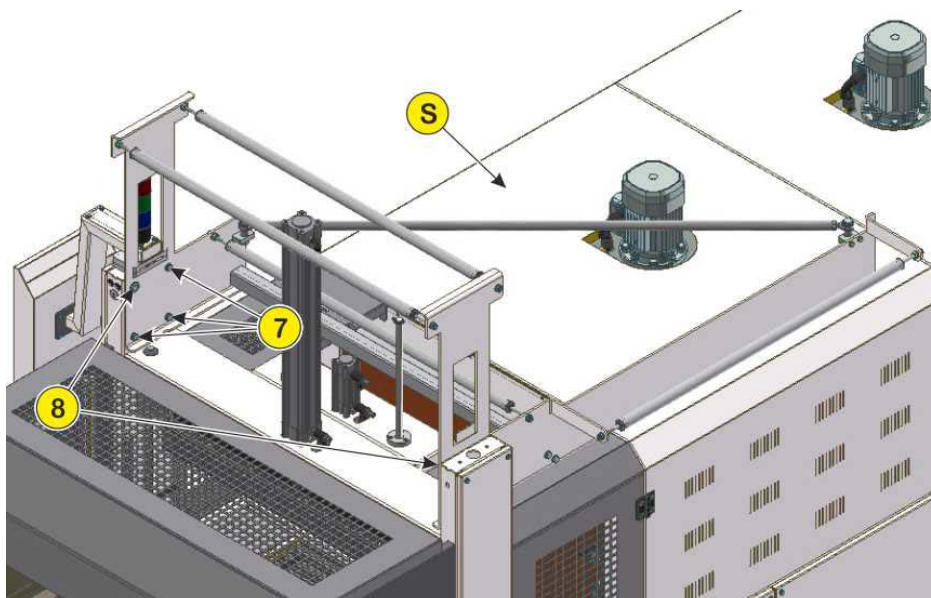


Fig. 1.11.1



ATTENTION! It is helpful to prepare a cardboard over the sheet metal (9) to protect it. At the same time the device should be fixed so that it can not tilt to forward. This safety condition can be obtained by binding the device appropriately to the sheet (9) or reinserting the screws (7) so that to prevent its rotation.

Fig. 1.11.2

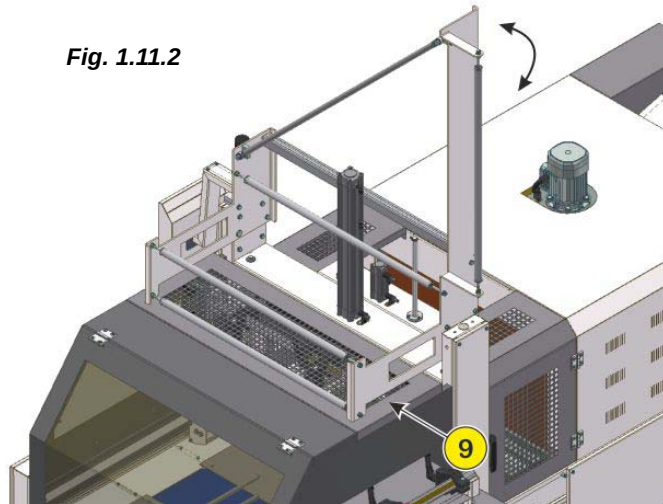



SMIPACK S.p.A. - Via Piazzalunga, 30 - 24015 S. Giovanni Bianco (BG) - ITALY

Tel. +39.0345.40400 - Fax +39.0345.40409 - www.smipack.it